


NetAXS-123 supported configurations in WEB mode

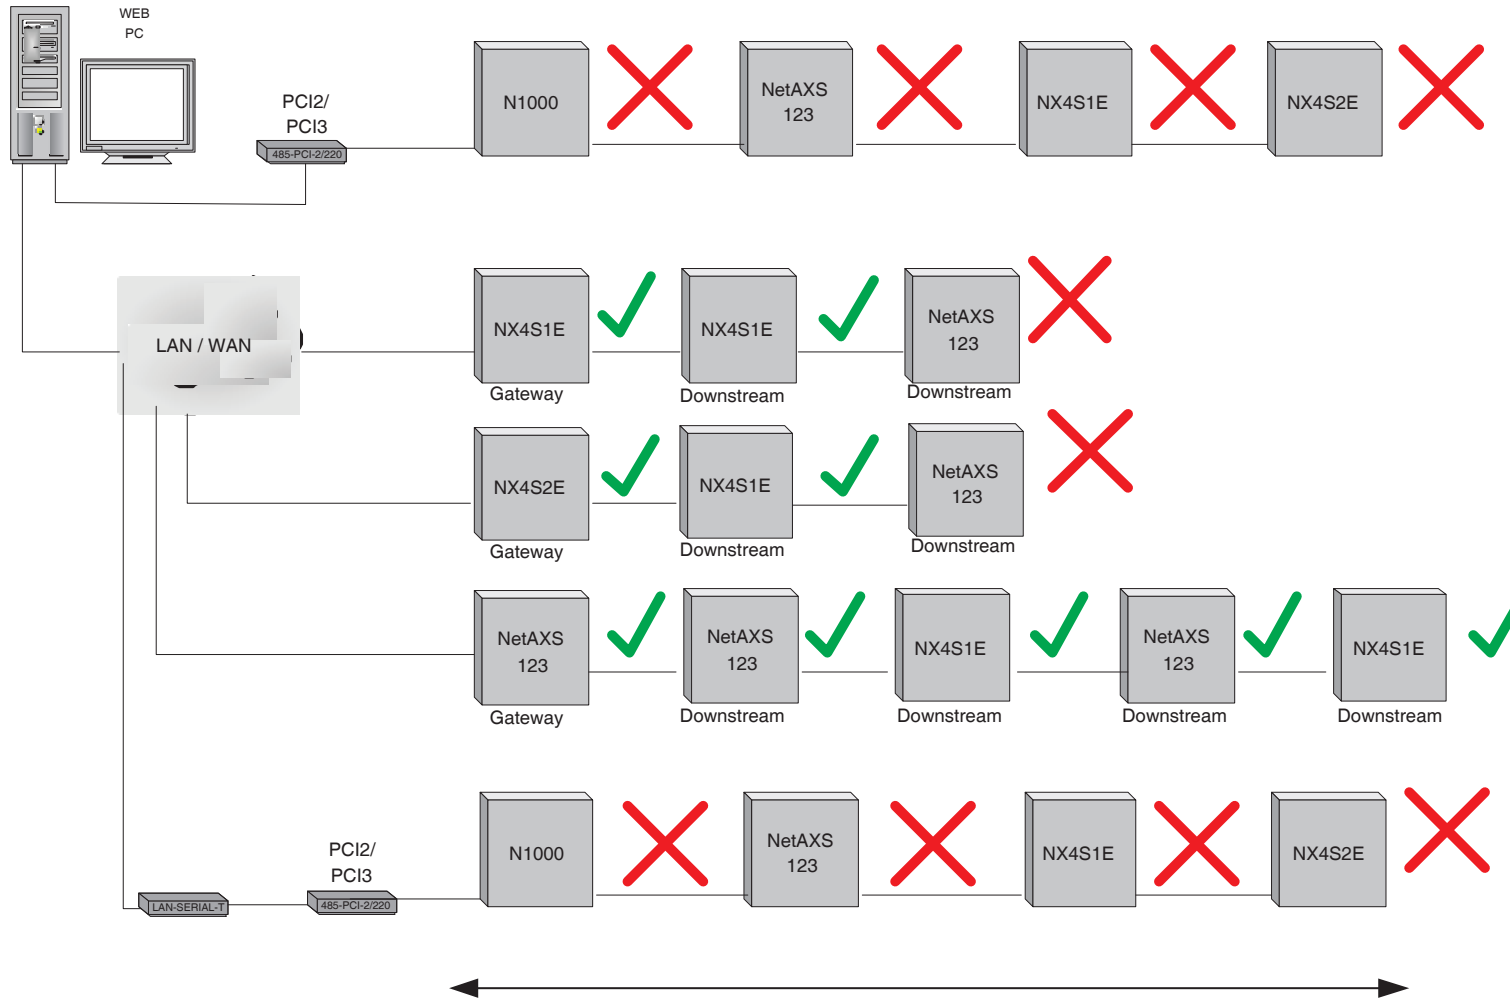

The first panel on any one given loop is called the Gateway. All other panels on that loop are called Downstream panels.

If NX4S1E or NX4S2E is used as the Gateway, NetAXS-123 CANNOT be deployed downstream.

If NetAXS-123 is used as the Gateway, both NX4S1E and NetAXS-123 CAN be deployed downstream.

N1000 can never be used in WEB mode.

Up to 31 panels per loop.
Up to 1500m when using Belden 9842 or equivalent.

NetAXS-123 compatibility with WIN-PAK®



NetAXS-123 supports all readers currently used with N-1000 EXCEPT MAGSTRIPE

MAGSTRIPE IS ONLY SUPPORTED ON N-1000

Up to 31 panels per loop.
Up to 1500m when using Belden 9842 or equivalent.