

by Honeywell

SK-5217 Zone Expander Installation Instructions

The following instructions are a quick reference guide, refer to the control panel installation manual for detailed system information.

The Model SK-5217 provides the SK-5208 with ten additional class B (style A) zones. The SK-5217 connects to the SK-5208 control panel via the SBUS as shown in Figure 1.

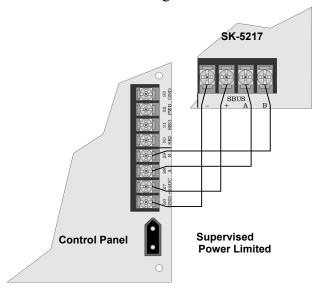


Figure 1: SBUS Connections

Zone Inputs

Figure 2 shows how to wire the SK-5217. Use a 4.7k end of line resistor for each class B circuit. The EOL must be wired in parallel with the normally open contact farthest from the panel.

Maximum circuit Resistance - 50 ohms Maximum Total alarm current for all class B (style A) zones: 1 A Maximum Standby Current per Zone:3.0 mA Maximum Alarm Current per Zone:95 mA Input Voltage: 17.5 –27.4 VDC Standby Current: 60 Ma Detector Compatibility ID:24J

For a list of compatible detectors, refer to the SK-5208 installation manual (PN 151240).

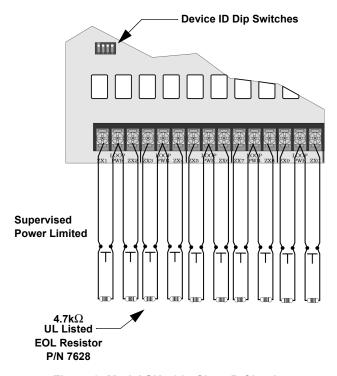


Figure 2: Model SK-5217 Class B Circuits

Mounting Instructions

The SK-5217 into a metal bracket and standoffs in the SK-5208 cabinet or into SK-2190 accessory cabinet.

Mounting the SK-5217 into SK-5208 Cabinet

Follow these steps to properly mount the SK-5217 zone expander into the SK-5208 cabinet:

- 1. Remove power from the control panel.
- 2. Mount the SK-5217 onto the standoffs and bracket located in the cabinet. See Figure 3.

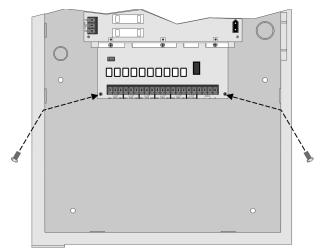


Figure 3: Installing the 5217 Into the 5208 Cabinet

- 3. Connect the SK-5217 to the SK-5208 control panel as shown in Figure 1.
- 4. Wire the zone inputs to the zone expander as shown in Figure 2.
- 5. Reconnect power to the control panel.

Mounting the SK-5217 into the SK-2190 Accessory Cabinet.

Follow these steps to properly mount the SK-5217 zone expander into the SK-2190 cabinet:

- 1. Mount the remote cabinet using the cabinet mounting holes. See Figure 4.
- 2. Remove power from the control panel.
- 3. Mount the SK-5217 onto the standoffs and bracket located in the cabinet. See Figure 4.

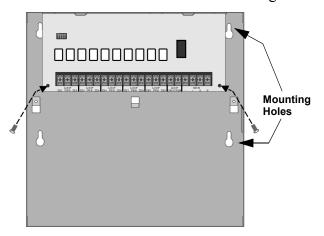


Figure 4: Model SK-5217 Remote Installation

- 4. Connect the SK-5217 to the SK-5208 control panel as shown in Figure 1.
- 5. Wire the zone inputs to the zone expander as shown in Figure 2.



by Honeywell

7550 Meridian Circle Maple Grove, MN 55369-4927 763-493-6455 or 800-328-0103 Fax: 763-493-6475 www.silentknight.com