




SILENT KNIGHT

by Honeywell

FFT-FPJ Installation Instructions

The following instructions are a quick reference guide, for more information refer to the IFP-FFT installation manual PN 54708 or the SK-FFT installation manual PN 54711.

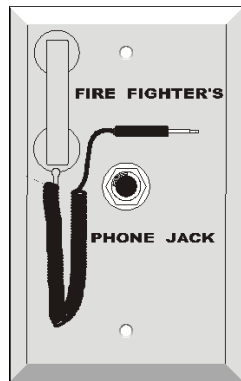

FFT-FPJ Remote Phone Jack



FFT-RHS Fire Fighter's Remote Hand Set

Mounting

The FFT-FPJ Fire Fighter's Phone Jack mounts to a single-gang electrical box (4 x 2-1/8 x 2-1/2), or when the addressable mini-monitor module is installed with it, a deep single-gang electrical box (4" x 2-1/8" x 3-1/4").

All circuits are power-limited and supervised.

Contact EOL is set to connected
See Figure 2 for EOL Example

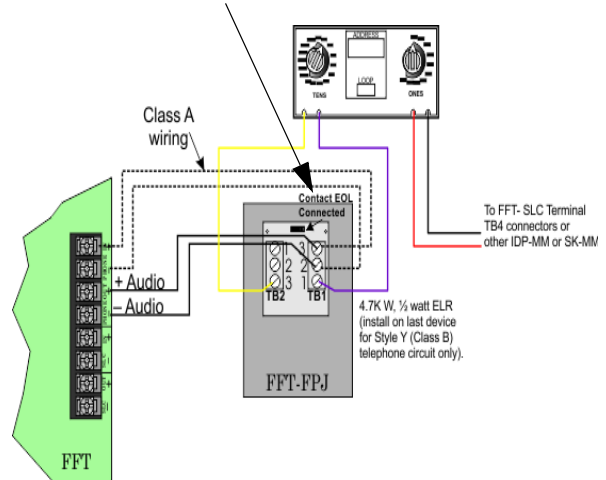


Figure 1: FFT to FFT-FPJ connection



Connected



Not Connected

Figure 2: EOL Example

FFT-FPJ Operation

To make a call to the main panel, insert the remote handset plug into the FFT-FPJ phone jack.

When call is complete, remove the remote handset from the jack



SILENT KNIGHT

by Honeywell

12 Clintonville Road
Northford, CT 06472-1610 USA
203-484-7161
Fax: 203-484-7118
www.silentknight.com

© 2011 Honeywell International Inc.

P/N 54418 Rev A
ECN 11-0003