



M500DMR1A Multiple Module with Two Relay Outputs and Two Monitor Inputs

6581 Kitimat Road, Unit 6
Mississauga (Ontario) L5N 3T5
Tel. 905-812-0767 Fax. 905-812-0771
www.systemsensor.ca

SPECIFICATIONS

Normal Operating Voltage:	15 to 32 VDC
Maximum Current Draw:	24 mA (4 LEDs on)
Average Operating Current:	1.3mA, 1 communication every 5 seconds
Temperature Range:	0C to 49C (32F to 120F)
Humidity:	10% to 93% Non-condensing
Addressing:	Module base address=Relay Output #1, Module base address +1=Monitor Input #1, Module base address +2=Relay Output #2, Module base address +3=Monitor Input #2
Dimensions :	4.675 H x 4.275 W x 1.4 D (Mounts to a 4 square by 2 1/8 deep box.)
Accessories :	SMB500 Electrical Box; EA-CB Barrier
Relay Contact Rating:	3A at 30 VDC
EOL Resistance:	47K Ohms (monitor inputs only)
Maximum IDC wiring resistance:	1500 Ohms
Maximum IDC Voltage:	10.2 Volts
Maximum IDC Current:	450µA

RELAY CONTACT RATINGS:

CURRENT RATING	MAXIMUM VOLTAGE	LOAD DESCRIPTION	APPLICATION
2 A	25 VAC	PF = 0.35	Non-coded
3 A	30 VDC	Resistive	Non-coded
2 A	30 VDC	Resistive	Coded
0.46 A	30 VDC	(L/R = 20 ms)	Non-coded
0.7 A	70,7 VAC	PF = 0.35	Non-coded
0.9 A	125 VDC	Resistive	Non-coded
0.5 A	125 VAC	PF = 0.75	Non-coded
0.3 A	125 VAC	PF = 0.35	Non-coded

BEFORE INSTALLING

This information is included as a quick reference installation guide. Refer to the control panel installation manual for detailed system information. If the modules will be installed in an existing operational system, inform the operator and local authority that the system will be temporarily out of service. Disconnect power to the control panel before installing the modules. **NOTICE:** This manual should be left with the owner/user of this equipment.

GENERAL DESCRIPTION

The M500DMR1A multi output-input module is intended for use in intelligent, two-wire systems, where the individual address of each module is selected using the built-in rotary decade switches. It is capable of replacing two individual relay control modules and two Class B monitor modules. Each relay output is intended for Form C switching applications which do not require wiring supervision for the load circuit. Each monitor input is intended to interface between a fire alarm control panel and one or more devices. Each relay output has its own green LED. Each monitored input has its own bi-color LED, which can be controlled by the control panel.

The module address is selected by means of rotary decade address switches (See Figure 1). These can be accessed from the front of the module. A screw-driver should be used to rotate the wheels to select the desired addresses. Each module can use up to four (4) addresses. The base address selected via the rotary address switches will be assigned to relay output #1 from 00 to 96. The module will automatically assign the next three addresses as appropriate to monitored input #1, relay output #2, and monitored input #2.

If relay output #2 or monitored input #2 are not used, please switch the corresponding DIP switch to the 'OFF' position with the screwdriver (See Figure 1A). These two addresses will then be free to be used for other devices on the loop. **NOTE:** If relay output #2 is disabled and monitored input #2 is enabled, the address for monitored input #2 will be module base address +3. Module base address +2 (reserved for relay output #2) will then be open for other devices.

COMPATIBILITY REQUIREMENTS

To ensure proper operation, these modules shall be connected to listed compatible system control panels only.

WIRING

NOTE: All wiring must conform to applicable local codes, ordinances, and regulations.

1. Install module wiring in accordance with the job drawings and appropriate wiring diagrams.
2. Set the address on the module per job drawings.
3. Secure module to electrical box (supplied by installer), as shown in Figure 2.

FIGURE 1. CONTROLS AND INDICATORS:


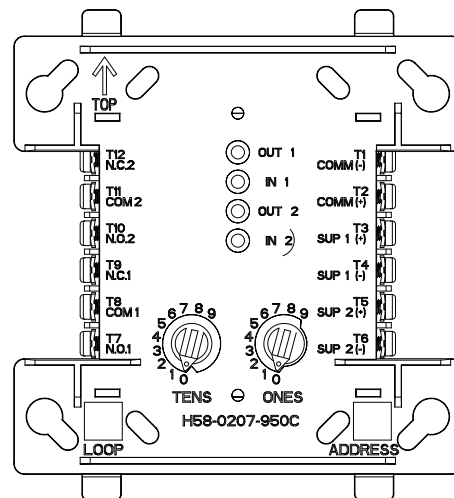


FIGURE 1A. DISABLING OUTPUT #2 AND INPUT #2

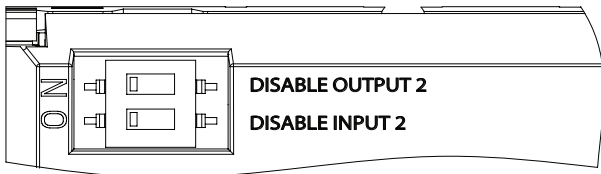

MOUNTING

The module mounts directly to 4-inch square electrical boxes (see Figure 2). The box must have a minimum depth of 21/8 inches. Surface mounted electrical boxes (SMB500) are available from System Sensor.

FIGURE 2. MODULE MOUNTING


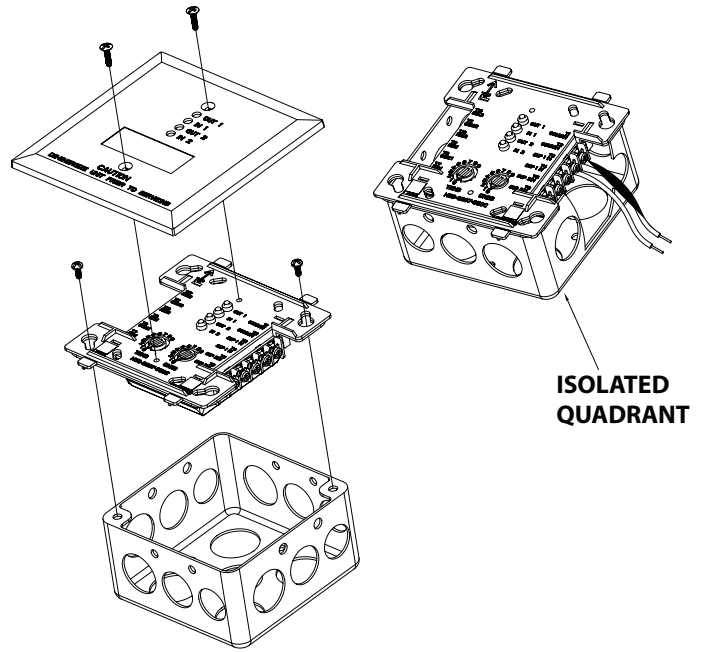


FIGURE 3. TYPICAL 2-WIRE INITIATING CIRCUIT CONFIGURATION, NFPA STYLE B:

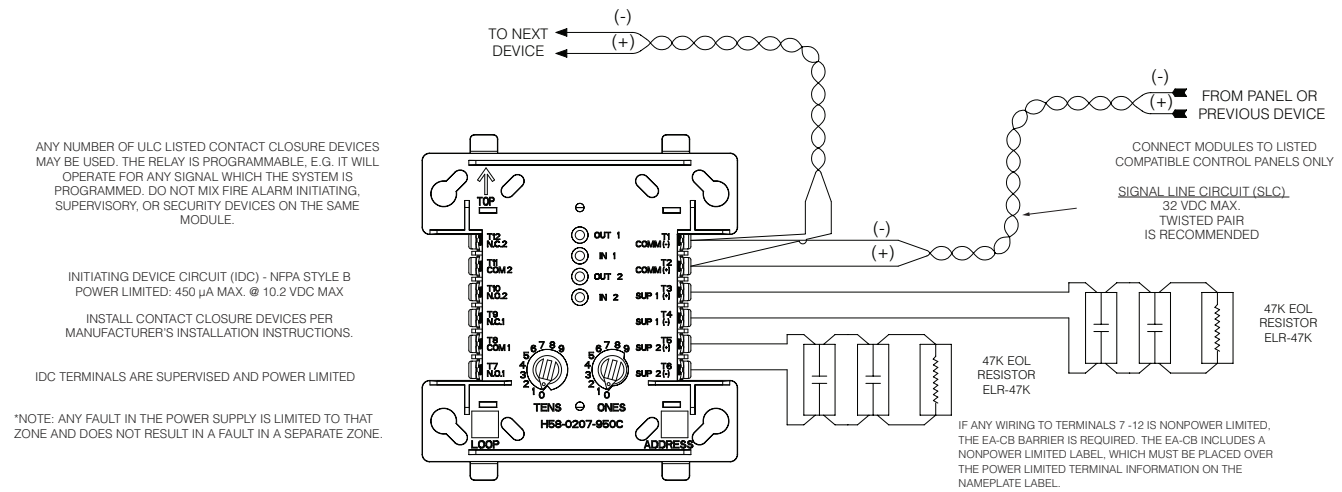

WARNING

All relay switch contacts are shipped in the standby (open) state, but may have transferred to the activated (closed) state during shipping. To ensure that the switch contacts are in their correct state, modules must be made to communicate with the panel before connecting circuits controlled by the module.

THREE-YEAR LIMITED WARRANTY

System Sensor Canada warrants its enclosed product to be free from defects in materials and workmanship under normal use and service for a period of three years from date of manufacture. System Sensor Canada makes no other express warranty for the enclosed product. No agent, representative, dealer, or employee of the Company has the authority to increase or alter the obligations or limitations of this Warranty. The Company's obligation of this Warranty shall be limited to the repair or replacement of any part of the product which is found to be defective in materials or workmanship under normal use and service during the three year period commencing with the date of manufacture. After phoning System Sensor Canada for a Return Authorization number and faxing a copy of the filled CUSTOMER RETURNS, with RA# to System Sensor Canada, send defective units with a copy of the form postage prepaid to: System Sensor Canada, 6581 Kitimat Rd., Unit

#6, Mississauga, Ontario, L5N 3T5. Ph. 905-812-0767, Fax. 905-812-0771. Please include a note describing the malfunction and suspected cause of failure. The Company shall not be obligated to repair or replace units which are found to be defective because of damage, unreasonable use, modifications, or alterations occurring after the date of manufacture. In no case shall the Company be liable for any consequential or incidental damages for breach of this or any other Warranty, expressed or implied whatsoever, even if the loss or damage is caused by the Company's negligence or fault. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights under common law.