#### **Application Note AN4028**

# Specification and Operation of 100-hour Burn-in Parameter


- 1. The factory default is 'disabled'; the installer should enable it manually after installation using the infrared programming tool as described below.
- During the burn-in period, all dimming operations (automatic by photocell, manual switch, infrared remote control) are inhibited until the burn-in period has expired.
- During the burn-in period, the programmed maximum output (Lamp Cap) is ineffective.
- During the burn-in period, presence detection will be fully operational and will switch the lights on and off as normal.
- 5. Burn-in progress is stored in non-volatile memory in the product with a granularity of one hour, therefore if power is lost during the burn-in period, it will resume from where it left off when power is restored.

1

# Using the Quick Set Pro (QSP) Programming tool


## For Lightspot HD Products – LS3xxxx series

 Burn can be selected directly from the product wide Parameters. To select, scroll down to the menu to 'Burn-in period'.

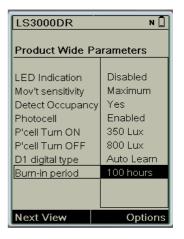

- 2. Press the left arrow to highlight 'Burn-in period'.
- Press 'OK'.
  A tick appears next to the text.

The burn in period set to 100 hours by default.

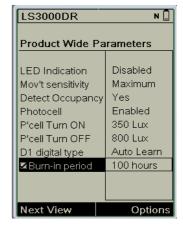


- If you want to change this time, press the right arrow and then press OK.
   A scroll bar of times from 50 hours to 200 hours will appear.
- Scroll to the desired burn in time using the UP or DOWN arrows and press OK to select.

The setting are now ready to be uploaded to the detector.

#### For all other compatible detectors

- Operator must be in Super User mode (notified by 'S' next to battery symbol).
- Download product details using the Quick-SetPro. Common parameters are displayed.

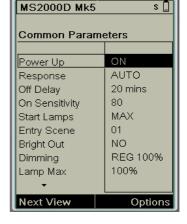

LS3000DR

Product Wid

LED Indication

Mov't sensitiv

P'cell Turn Of

P'cell Turn Of

D1 digital typ€

⊠Burn-in peri

Photocell

Detect Occup 90 hours

50 hours.

60 hours

70 hours

80 hours

110 hours

120 hours


130 hours

140 hours 150 hours

Options

N 🗍

 Press 'top left soft key' for 'Next View'. This takes you into the 'Secret Parameters'.
 Navigating down to 'Burn In Hrs' allows you to modify the burn in period.

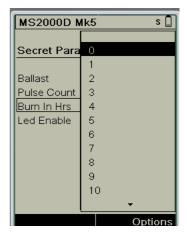

# Additional functionality for Lightspot HD products (LS3XXX Series) - Super Users only


In Super User Mode the following functions are available

#### Quick Burn In

This function keeps the lamps ON at full brightness for 100 hours continuously. That means, they do not switch off when the presence detectors timeout.


To enable this feature:

 In the 'Product Wide Parameters' menu, scroll down to 'Quick burn-in'.

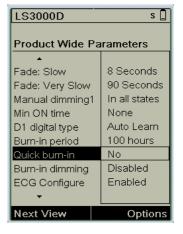

2. Press the right Soft key and select 'Yes'.

The setting is now ready for uploading to the detector.

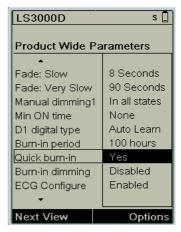


3 AN4028C

### Burn-in dimming

The Burn-in process can be briefly suspended to allow the dimming capability of the system to be tested.


To enable this feature:

 In the 'Product Wide Parameters' menu scroll down to 'Burn-in dimming'

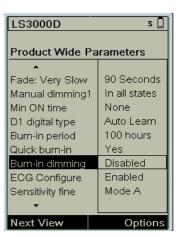

2. Press the right soft key and select 'Enabled'.

The setting is now ready for uploading to the detector.

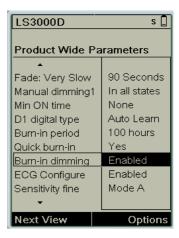

AN4028C

4