

Automatic Fire Alarm Warden Station Series TRIM RING, PLATE, DOOR and BACKBOX

PRODUCT INSTALLATION DRAWING

Document 50766 Revision A

ECN 97-139 10/23/97

Installation Instructions for Trim Ring, Plate, Door and Backbox

1. Install plate as follows:

- Slide plate into the two slots near the top of the trim ring (see **Figure 1a**). Front of plate should face front of door.
- Push the plate down into the slot and toward the trim ring (see **Figure 1b**) until it sits firmly in the slots (see **Figure 1c**).

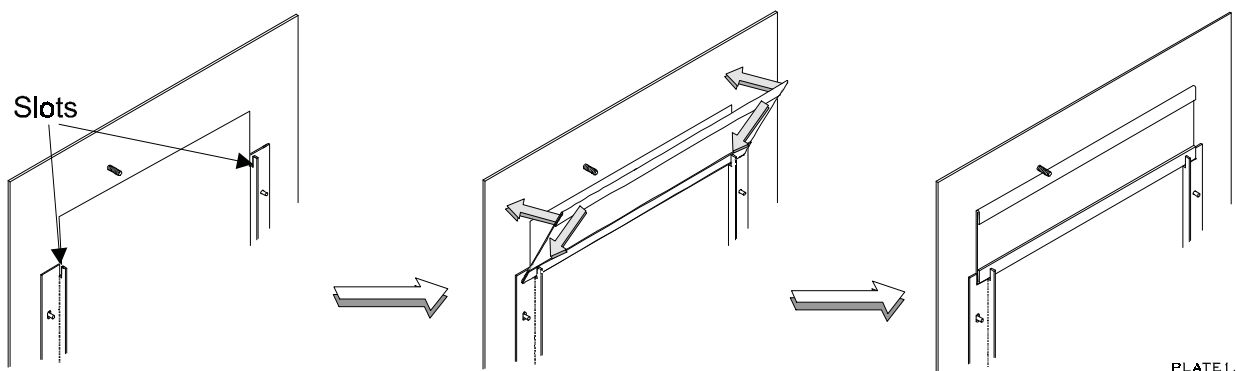


Figure 1a

Figure 1b

Figure 1c

Figure 1
Plate Installation

2. Install trim ring on backbox with 6-32 wing nuts (see **Figure 2** for hole positions). Do not tighten.
3. Slide door assembly into the space between the trim ring and backbox (see **Figure 3**). The two slots at the bottom of the door should slide over the trim ring studs, and the hinge knuckle should rest on the trim ring. Tighten wing nuts.
4. Mount the assembled box in a readily-accessible area approximately five feet above the floor using the holes on the back wall of the box. Refer to **Figure 4** for backbox dimensions.

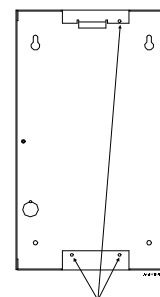


Figure 2
Trim Ring Hole
Positions on
Backbox

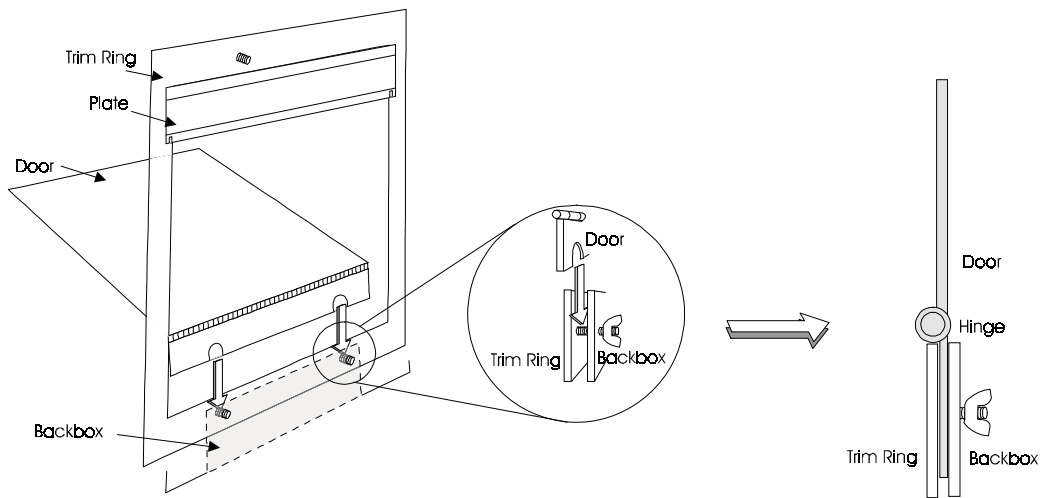


Figure 3
Door Installation

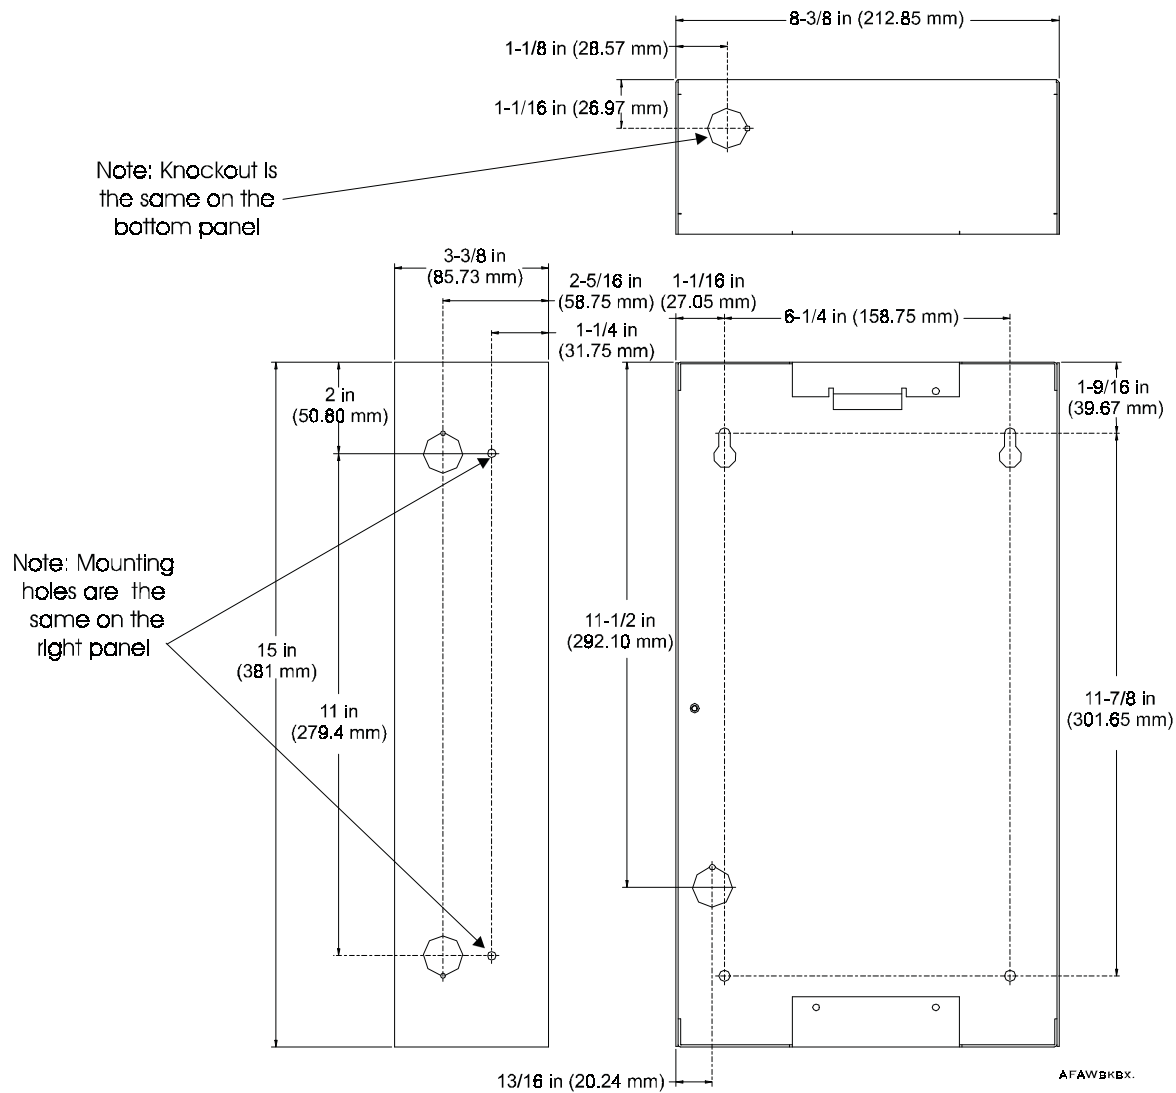


Figure 4 Backbox Dimensions