



NOTIFIER[®]
by Honeywell

12 Clintonville Road
Northford, CT 06472-1610 USA
203-484-7161 • FAX 203-484-7118
www.notifier.com

ONYXWorks Workstation Software Product Installation Document

P/N 52346:B 10/17/2016 16-0585

1. Purpose

These instructions are intended to be used for the installation of the ONYXWorks Workstation software application and associated user manuals on a Windows[®] compatible computer.

2. Product Part Numbers

Part Number	Description
OW-SWKIT-US-3	ONYXWorks [®] Software Kit
Gateways:	
NFN-GW-EM-3	Embedded NFN Gateway
NFN-GW-PC-W and NFN-GW-PC-F	PC NFN Gateway
NFN-GW-PC-HNMF, NFN-GW-PC-HNSF, and NFN-GW-PC-HNW	High-Speed PC NFN Gateway

3. Workstation Computer Requirements

The minimum requirements for the workstation computer are as follows:

- Windows 7, 64-bit Professional
- Intel i5 Processor or better
- 16 GB RAM
- 240 GB Hard Drive
- Monitor, Minimum resolution of 1280x1024 Landscape Mode
- Microsoft[®] compatible mouse
- 104-key keyboard
- USB Connector
- TCP/IP Ethernet Network Adapter Card
- Speakers
- Uninterruptible Power Supply (UPS) highly recommended



NOTE: The workstation PC should be solely dedicated to facilities monitoring. Software applications running in the background may adversely affect your PC's operating speed. It is highly recommended to ensure optimal facilities monitoring performance by this dedicated facilities monitoring PC that pertinent ONYXWorks System software applications be the only software applications installed and running.

4. Software Installation Procedure

Install the ONYXWorks Workstation software as follows:

1. Insert the software USB drive, labeled OWSWUSB, into the PC.
2. Using Windows Explorer, browse to the USB drive and double-click the compressed (.zip) file with the filename **OWX.YY.ZZZ** where:
 X is the major version number,
 YY is the minor version number, and
 ZZZ is the build number.
3. Open the **setup** application. An allow changes to computer message displays.
4. Click **Yes**.
5. Follow the on-screen prompts to allow the software installation to proceed. Accept all software licensing agreements.

Additional installation wizards may appear during the installation that may include:

- HASP Run-time Installation Wizard - Click **Finish** to proceed.
 - Microsoft Access Database Engine Installation Wizard - Click **OK** to proceed.
 - Facilities Monitoring - InstallShield Wizard - Click **Finish** to proceed. A computer restart message displays.
6. Click **Yes**. The computer restarts.
 7. Using Windows Explorer, browse to the USB drive and double-click the EXE file with a filename that begins with “**OWDOCS**” to install user manuals from the USB drive onto the PC at **C:\Facilities Monitoring 3.0\Documentation**.
 8. Connect the included ONYXWorks USB key (P/N ONYXWORKS-KEY) to the computer.

5. Workstation Application Start-up

To start the workstation application, go to **Start>All Programs>Facilities Monitoring>Workstation**.