

## EA-CB Wiring Barrier

The EA-CB barrier is used to separate power limited and non-power limited wiring in a junction box.

Prior to installing the barrier into the junction box, peel off the label which says *SIGNALING LOOP CIRCUIT TERMINALS ARE POWER LIMITED. OTHERS ARE NOT.* Affix this label over that portion of the module on the back of the module which says *ALL CIRCUITS ARE POWER LIMITED.*

Additional instructions on the installation of this barrier can be found in the installation manual for the module.

