

Wireless Light Sensor R718G User Manual

Copyright©Netvox Technology Co., Ltd.

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice

Table of Content

- 1. Introduction.....2
- 2. Appearance.....2
- 3. Main Features3
- 4. Set up Instruction4
- 5. Data Report.....5
- 6. Installation9
- 7. Information about Battery Passivation 10
- 8. Important Maintenance Instruction 11

1. Introduction

The R718G is a Wireless Light Sensor for Netvox ClassA type devices based on the LoRaWAN open protocol and is compatible with the LoRaWAN protocol. It can detect illuminance anywhere, ex. sunlight, outdoor area.

LoRa Wireless Technology:

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the communication distance. Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

LoRaWAN:

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

2. Appearance



3. Main Features

- Compatible with LoRaWAN protocol.
- Powered by 2 x ER14505 3.6V Lithium AA battery
- Illuminance detection (Range: 3~65000 Lux / 3~130000Lux / 3-220000Lux)
- IP rating IP65 / IP67 (optional)
- Compatible with LoRaWAN™ Class A
- Frequency hopping spread spectrum
- Configuration parameters can be configured via a third-party software platform, data can be read and alerts can be set via SMS text and email (optional)
- Applicable to third-party platforms: Actility/ThingPark, TTN, MyDevices/Cayenne
- Improved power management for longer battery life

Battery Life:

- Please refer to web: http://www.netvox.com.tw/electric/electric_calc.html
- At this website, users can find battery life time for variety models at different configurations.
 1. Actual range may vary depending on environment.
 2. Battery life is determined by sensor reporting frequency and other variables.

4. Set up Instruction

On/Off

| | |
|--|---|
| Power on | Insert batteries. (users may need a screwdriver to open) |
| Turn on | Press and hold the function key for 3 seconds till the green indicator flashes once. |
| Turn off (Restore to factory setting) | Press and hold the function key for 5 seconds till green indicator flashes for 20 times. |
| Power off | Remove Batteries. |
| Note | <ol style="list-style-type: none"> 1. Remove and insert the battery; the device is at off state by default. 2. On/off interval is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components. 3. At 1st -5th second after power on, the device will be in engineering test mode. |

Network Joining

| | |
|--|---|
| Never joined the network | <p>Turn on the device to search the network to join.</p> <p>The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p> |
| Had joined the network (not at factory setting) | <p>Turn on the device to search the previous network to join.</p> <p>The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p> |

Function Key

| | |
|------------------------------|---|
| Press and hold for 5 seconds | <p>Restore to factory setting / Turn off</p> <p>The green indicator flashes for 20 times: success</p> <p>The green indicator remains off: fail</p> |
| Press once | <p>The device is in the network: green indicator flashes once and sends a report</p> <p>The device is not in the network: green indicator remains off</p> |

Sleeping Mode

| | |
|-------------------------------------|--|
| The device is on and in the network | <p>Sleeping period: Min Interval.</p> <p>When the reportchange exceeds setting value or the state changes: send a data report according to Min Interval.</p> |
|-------------------------------------|--|

Low Voltage Warning

| | |
|-------------|------|
| Low Voltage | 3.2V |
|-------------|------|

5. Data Report

The device will immediately send a version packet report along with an uplink packet including illuminance and battery voltage.

The device sends data in the default configuration before any configuration is done.

Default setting:

MaxTime : Max Interval = 15 min = 900s

MinTime : Min Interval = 15 min = 900s

BatteryChange: 0x01 (0.1V)

IlluminanceChange:0x0032 (50 Lux)

Illuminance detection range:

0x00 3~65000 Lux (default)

0x01 3~130000 Lux

0x02 3-220000 Lux

Note:

The device report interval will be programmed based on the default firmware which may vary.

The interval between two reports must be the minimum time.

Please refer Netvox *LoRaWAN Application Command document* and *Netvox Lora Command Resolver*

<http://www.netvox.com.cn:8888/page/index> to resolve uplink data.

Data report configuration and sending period are as following:

| Min Interval (Unit:second) | Max Interval (Unit:second) | Reportable Change | Current Change \geq Reportable Change | Current Change $<$ Reportable Change |
|-------------------------------|-------------------------------|-------------------|--|---|
| Any number between 1~65535 | Any number between 1~65535 | Can not be 0. | Report per Min Interval | Report per Max Interval |

Example of Report configuration

FPort: 0x07

| | | | |
|-------|-------|------------|-------------------|
| Bytes | 1 | 1 | Var(Fix =9 Bytes) |
| | CmdID | DeviceType | NetvoxPayLoadData |

CmdID– 1 bytes

DeviceType– 1 byte – Device Type of Device

NetvoxPayLoadData– var bytes (Max=9bytes)

| Description | Device | Cmd ID | Device Type | NetvoxPayLoadData | | | |
|----------------------------|--------|--------|-------------|--|----------------------------|------------------------------------|--|
| ConfigReportReq | R718G | 0x01 | 0x1E | MinTime (2bytes Unit:s) | MaxTime (2bytes Unit:s) | BatteryChange (1byte Unit:0.1v) | Illuminancechange (4bytes Unit: 1Lux) |
| ConfigReportRsp | | 0x81 | | Status (0x00_success) | | Reserved (8Bytes,Fixed 0x00) | |
| ReadConfig ReportReq | | 0x02 | | Reserved (9Bytes,Fixed 0x00) | | | |
| ReadConfig ReportRsp | | 0x82 | | MinTime (2bytes Unit:s) | MaxTime (2bytes Unit:s) | BatteryChange (1byte Unit:0.1v) | Illuminancechange (4bytes Unit: 1Lux) |
| SetSunlight SampleRangeReq | | 0x03 | | RangeSetting (1byte) 0x00:3~65000 Lux 0x01:3~130000 Lux 0x02:3-220000 Lux | | Reserved (8Bytes,Fixed 0x00) | |
| SetSunlight SampleRangeRsp | | 0x83 | | Status (0x00_success) | | Reserved (8Bytes,Fixed 0x00) | |
| GetSunlight SampleRangeReq | | 0x04 | | Reserved (9Bytes,Fixed 0x00) | | | |
| GetSunlight SampleRangeRsp | | 0x84 | | RangeSetting (1byte) 0x00:3~65000 Lux 0x01:3~130000 Lux 0x02:3-220000 Lux | | Reserved (8Bytes,Fixed 0x00) | |

(1) Command Configuration:

MinTime = 1min、MaxTime = 1min、BatteryChange = 0.1v、IlluminanceChange = 100 Lux

Downlink: 011E003C003C0100000064 003C(H_{ex})=60 (D_{ec}), 64(H_{ex})=100 (D_{ec})

Response:

811E0000000000000000000000000000 (Configuration success)

811E0100000000000000000000000000 (Configuration failure)

(2) Read Configuration:

Downlink: 021E00000000000000000000

Response:

821E003C003C0100000064 (Current configuration)

(3) Setting light sensor illuminance range:

For example, SunlightSampleRange = 0x02 (3-220000 Lux)

Downlink: 031E02000000000000000000

Response:

831E00000000000000000000 (Configuration success)

831E01000000000000000000 (Configuration failure)

(4) Read light sensor illuminance range:


Downlink: 041E00000000000000000000

Response:

841E02000000000000000000 (Current configuration)


Example for MinTime/MaxTime logic:

Example#1 based on MinTime = 1 Hour, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange=0.1V

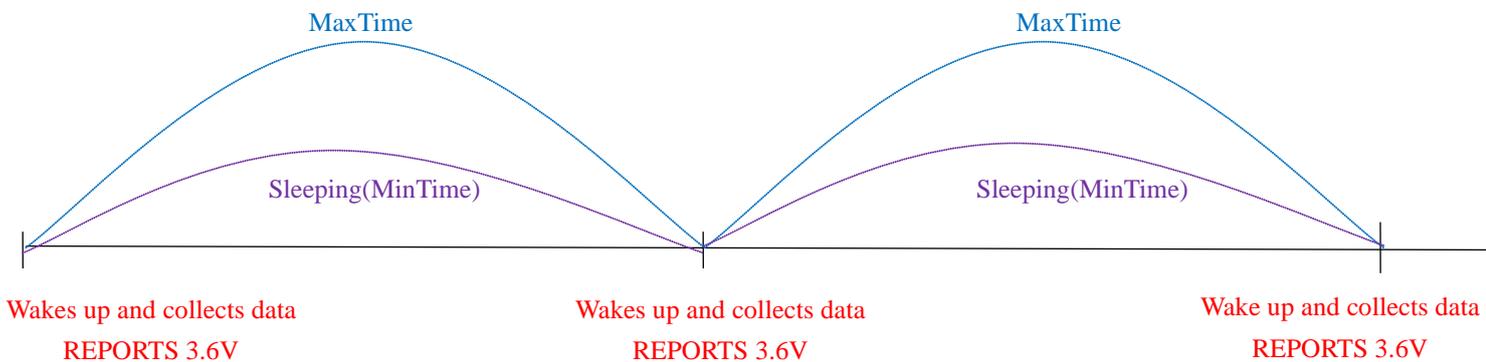


Note: MaxTime=MinTime. Data will only be report according to MaxTime (MinTime) duration regardless BatteryVoltageChange value.

Example#2 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

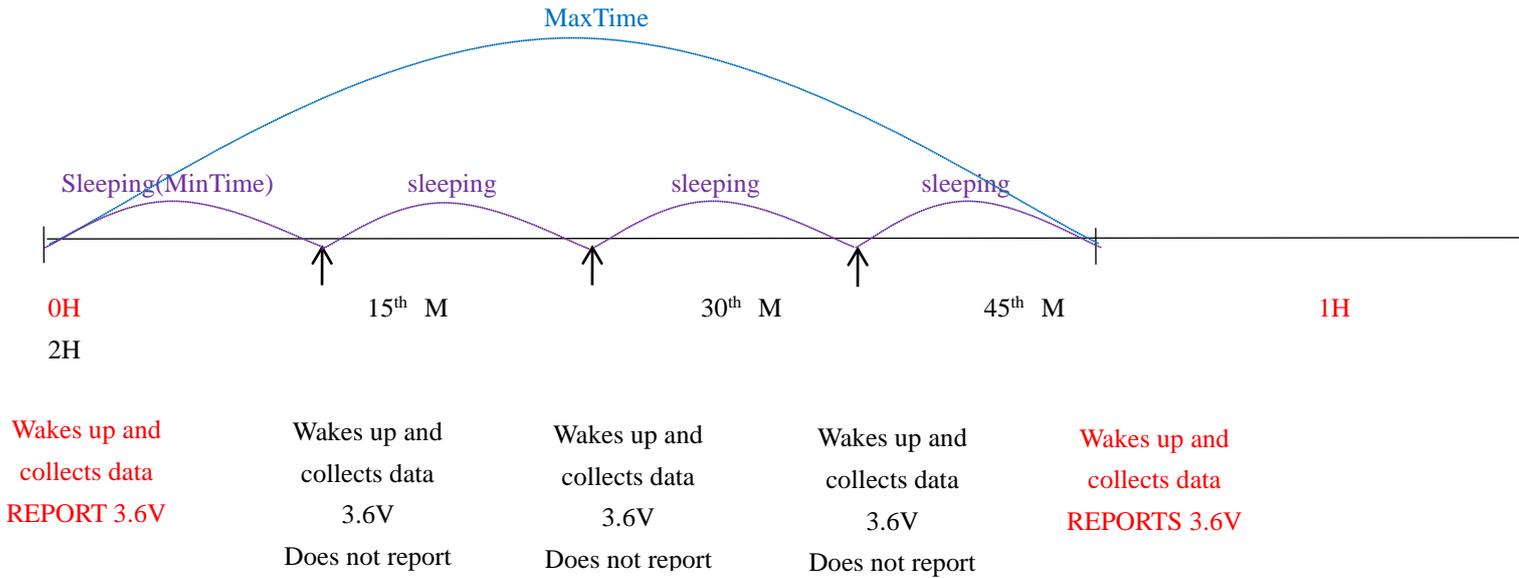

Example#3 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

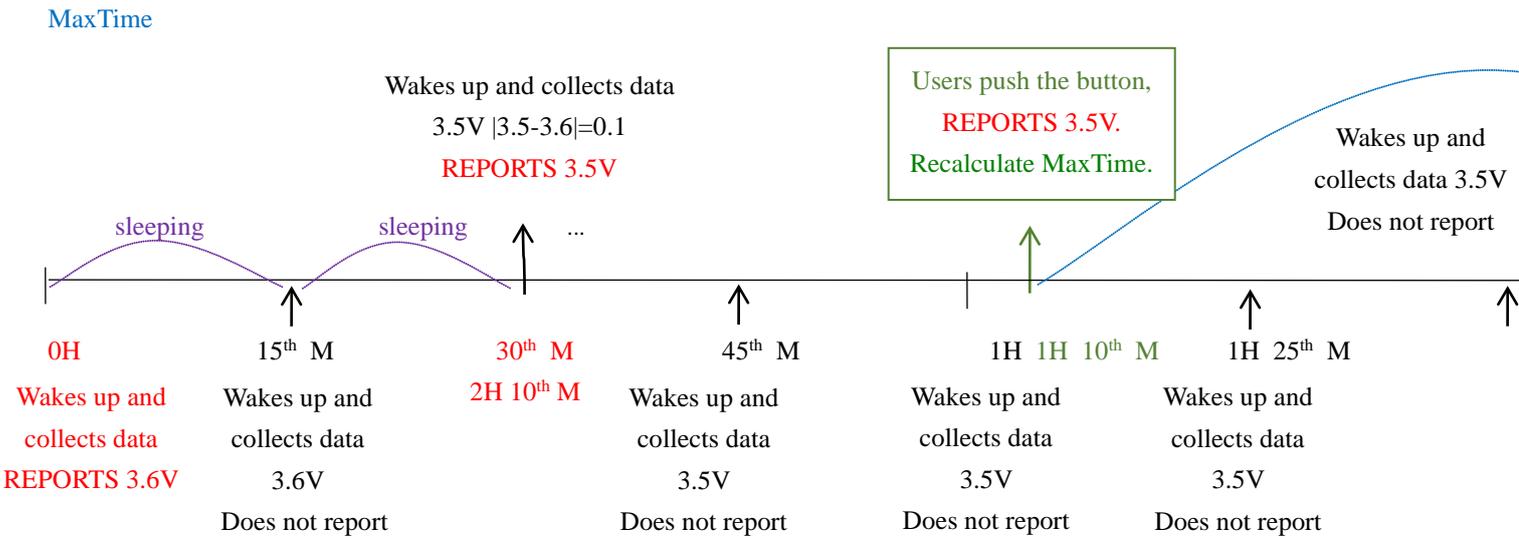

Note:

- 1) The device only wakes up and performs data sampling according to MinTime Interval. When it is sleeping, it does not collect data.
- 2) The data collected is compared with the last data reported. If the data variation is greater than the ReportableChange value, the device reports according to MinTime interval. If the data variation is not greater than the last data reported, the device reports according to MaxTime interval.

- 3) We do not recommend to set the MinTime Interval value too low. If the MinTime Interval is too low, the device wakes up frequently and the battery will be drained soon.
- 4) Whenever the device sends a report, no matter resulting from data variation, button pushed or MaxTime interval, another cycle of MinTime/MaxTime calculation is started.


6. Installation

This product comes with waterproof function. When using it, the back of it can be adsorbed on the iron surface, or the two ends can be fixed to the wall with screws.

1. Light Sensor (R718G) has a built-in magnet (see Figure 1 below), When installed, the back of it can be adsorbed on the iron surface, or the two ends can be fixed to the wall with screws (should be purchased) to secure the unit to a wall or other surface (see Figure 2 below).

Note

Do not install the device in a metal shielded box or in an environment with other electrical equipment around it to avoid affecting the wireless transmission of the device.

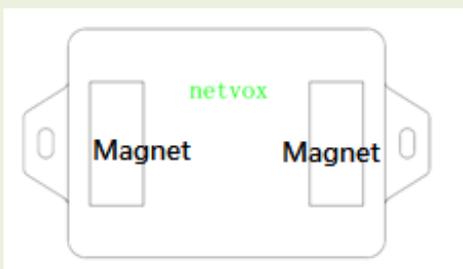

2. Compare the illumination value detected by the illumination sensor with the set illumination value. The detected value exceeds the set value (default 50 Lux), the currently detected illumination value is sent.

Light Sensor (R718G) is suitable for the following scenarios:

- Family
- School
- Storage room
- Hospital
- Bar
- Stairs
- Agricultural greenhouse

To detect the illumination value.

Note:

Please do not disassemble the device unless it is required to replace the batteries.

Do not touch the waterproof gasket, LED indicator light, function keys when replacing the batteries.

Please use suitable screwdriver to tighten the screws (if using an electric screwdriver, it is recommended to set the torque as 4kgf) to ensure the device is impermeable.

7. Information about Battery Passivation

Many of Netvox devices are powered by 3.6V ER14505 Li-SOCl₂ (lithium-thionyl chloride) batteries that offer many advantages including low self-discharge rate and high energy density.

However, primary lithium batteries like Li-SOCl₂ batteries will form a passivation layer as a reaction between the lithium anode and thionyl chloride if they are in storage for a long time or if the storage temperature is too high. This lithium chloride layer prevents rapid self-discharge caused by continuous reaction between lithium and thionyl chloride, but battery passivation may also lead to voltage delay when the batteries are put into operation, and our devices may not work correctly in this situation.

As a result, please make sure to source batteries from reliable vendors, and the batteries should be produced within the last three months.

If encountering the situation of battery passivation, users can activate the battery to eliminate the battery hysteresis.

***To determine whether a battery requires activation**

Connect a new ER14505 battery to a 68ohm resistor in parallel, and check the voltage of the circuit.

If the voltage is below 3.3V, it means the battery requires activation.

***How to activate the battery**

- 1) Connect a battery to a 68ohm resistor in parallel
- 2) Keep the connection for 6~8 minutes
- 3) The voltage of the circuit should be $\geq 3.3V$

8. Important Maintenance Instruction

Kindly pay attention to the following in order to achieve the best maintenance of the product:

- Keep the device dry. Rain, moisture, or any liquid, might contain minerals and thus corrode electronic circuits. If the device gets wet, please dry it completely.
- Do not use or store the device in dusty or dirty environment. It might damage its detachable parts and electronic components.
- Do not store the device under excessive heat condition. High temperature can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store the device in places that are too cold. Otherwise, when the temperature rises to normal temperature, moisture will form inside, which will destroy the board.
- Do not throw, knock or shake the device. Rough handling of equipment can destroy internal circuit boards and delicate structures.
- Do not clean the device with strong chemicals, detergents or strong detergents.
- Do not apply the device with paint. Smudges might block in the device and affect the operation.
- Do not throw the battery into the fire, or the battery will explode. Damaged batteries may also explode.

All of the above applies to your device, battery and accessories. If any device is not working properly, please take it to the nearest authorized service facility for repair.