

# Bracket Assembly & Adapter Bracket

Models: DH-19-MILLER/, DH-AB-MILLER/

## Description

The DH-19-MILLER is a ready to use assembly of the DH-19 and DH-AB-Miller bracket. This assembly is required to mount all Miller winches to the DH-3 One Piece Adjustable Mast.

The DH-AB-Miller bracket is assembled to the DH-19 bracket to allow mounting of all Miller winches to the DH-3 One Piece Adjustable Mast. It can also be used with the DH-AP-10 to mount all Miller winches to the DH-AP-1 Portable Fall Arrest Post.

## Materials

<b>General Construction:</b>	Extruded Aluminum
<b>Finish (aluminum):</b>	Black Powder Coat, Clear Anodize
<b>Hardware:</b>	Gr.5, Gr.8 - Zinc Plated

## Technical


<b>Working Load:</b>	450lbs (204kg)
<b>Tensile Strength:</b>	5,000lbs (22kN)
<b>DH-19-MILLER</b>	
<b>Weight:</b>	3.1lbs (1.4kg)
<b>DH-AB-MILLER</b>	
<b>Weight:</b>	1.5lbs (.7kg)

## Certification

Meets applicable ANSI Z359.1, A10.32 and OSHA 1910.146, 1926.502 requirements.



**DH-19-MILLER**

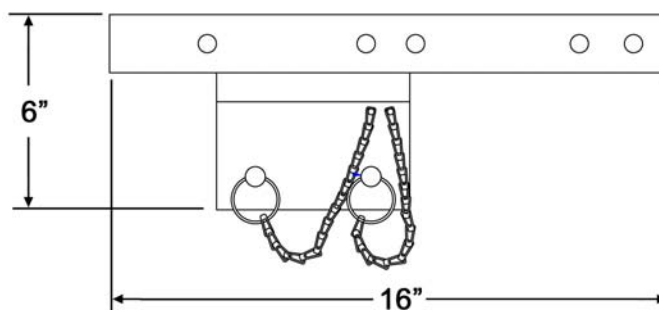

**DH-AB-MILLER**



by Honeywell

Toll Free 800.873.5242 (press 4) • [hsptechsupport@honeywell.com](mailto:hsptechsupport@honeywell.com) • [www.millerfallprotection.com](http://www.millerfallprotection.com)

**WARNING!** THIS DOCUMENT PROVIDES AN OVERVIEW OF FALL PROTECTION PRODUCTS AVAILABLE FROM HONEYWELL AND CARE HAS BEEN TAKEN TO ASSURE THE ACCURACY OF THE DATA. IT DOES NOT PROVIDE IMPORTANT PRODUCT WARNINGS AND INSTRUCTIONS. HONEYWELL RECOMMENDS ALL USERS OF FALL PROTECTION EQUIPMENT UNDERGO THOROUGH TRAINING, AND THAT ALL WARNINGS AND INSTRUCTIONS PROVIDED WITH THE PRODUCTS BE THOROUGHLY READ AND UNDERSTOOD PRIOR TO EACH USE. FAILURE TO READ AND FOLLOW ALL PRODUCT WARNINGS AND INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.