

Sensor push-button as cancel push-button



Part-No.: 71185D2

Sensor push-button as a cancel push-button with LED orientation lamp and reassurance lamp (green) and 4 mm brass front panel, chromium-plated, \varnothing 70 mm and 3 hex socket head screws for fastening front panel.

Accessories:

89450B

Switch box for sensor push-button