

# Gas Recovery Unit and Other O&G Drilling Applications

### BACKGROUND

Explosion-proof limit switches are used in many places along or around oil and gas operations. These hazardous-area switches are used for monitoring and shutoff switches on BOP stacks (blow-out preventers), pressure controllers, gas recovery units, and other accessories found on down-hole drilling and/or platform sites.

BOPs are used to control blow-out, and are installed on top of the well. Valves that open and shut with explosive natural gas and other gas product vapors are controlled, monitored or harvested as a by-product or oil drilling. Many recovery units are installed near or around highly corrosive brine, marine or chemical environments limiting their durability.

### SOLUTION

MICRO SWITCH™ BX2 hazardous-area switches provide the corrosion resistance desired by designers of gas control, monitoring, and/or recovery equipment. Some portable monitoring units are made from stainless steel to insure they will be a durable investment and used for many years by gas and petrochemical companies. The BX2 stainless steel housing is designed for use in highly corrosive environments where salt, harsh environment, or other chemical agents may cause excessive corrosion. The stainless steel housing can provide corrosion resistance up to four times longer than standard housing switches. Fewer product replacements over time may reduce total installed cost by 50 % through lower labor and material costs. MICRO SWITCH™ BX2 Series switches are easy to install, mount, and wire in the multiple locations required in these oil and gas units.


### MICRO SWITCH™ BX2

The MICRO SWITCH™ BX2 Series delivers corrosion resistance and can provide both cost and time savings to the end user. The stainless steel housing helps protect the switch mechanism from corrosion often present in chemical processing plants, off-shore/near shore sites, and other hazardous areas. To comply with explosion-proof switching requirements, the flame path within the switch housing is designed to contain and cool escaping hot gases/fumes which could cause an explosion outside of the switch. (See Table 1.)

Figure 1. Gas Recovery Unit




Figure 2. MICRO SWITCH™ BX Series Application

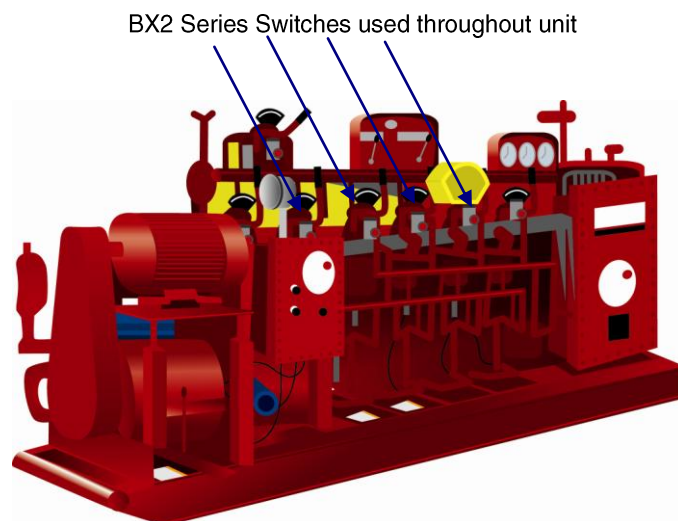

# Gas Recovery Unit and Other O&G Drilling Applications

Table 1. MICRO SWITCH BX2 Series

BX2 Series	Features	Benefits
	<ul style="list-style-type: none"> <li>• New 316L stainless steel body</li> <li>• Optional conduit selection allows for 20mm metric conduit or imperial conduit ½ in NPT</li> <li>• Tracking interchangeability with existing MICRO SWITCH™ Hazardous Area Switches (LSX &amp; BX) for drop in replacement</li> <li>• Variety of heads and non-sparking actuators</li> <li>• Power-duty load switching through 10A continuous carry electrical rating</li> <li>• Choice of silver or gold contacts (provide enhanced electrical performance) when switching low energy loads</li> <li>• To comply with explosion-proof requirements, the BX/BX2 has flame paths within the housing, which cool exploding gases below the ignition temperature before they reach explosive gases surrounding the housing</li> <li>• Certified for global use: UL, CSA, ATEX, IEC Ex approvals</li> <li>• Both internal and external grounding screw to comply with international standards</li> <li>• Weather sealed ratings: NEMA 1, 3, 4, 6, 7, 9, 13 and IP67 to ensure that product can survive outdoors</li> </ul>	<ul style="list-style-type: none"> <li>• Improved durability due to better resistance in corrosive marine, brine, or chemical environments through full stainless steel body</li> <li>• Global Conduit Connectivity options</li> <li>• Global Explosion Proof Compliance and Approvals</li> <li>• Ease/compatibility of installation</li> <li>• Heavy duty continuous carry switching load</li> <li>• Low energy contact options</li> <li>• Variety of application actuation options</li> </ul>

# Gas Recovery Unit and Other O&G Drilling Applications

## WARNING

### IF USED IN APPLICATIONS CONCERNING HUMAN SAFETY

- Use only NC direct opening (“positive opening”/“positive break”) contacts, identified by the symbol.
- Do NOT use flexible/adjustable actuators. Only use actuators designed for safety applications.
- Do NOT defeat, tamper, remove, or bypass this switch.
- Hazardous voltage, disconnect power before servicing
- Strictly adhere to all installation and maintenance instructions
- Consult with local safety agencies and their requirements when designing a machine-control link, interface and all control elements that affect safety.

**Failure to comply with these instructions could result in death or serious injury.**

### WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell’s standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. **The foregoing is buyer’s sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.**

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

Sensing and Control  
Honeywell  
1985 Douglas Drive North  
Golden Valley, MN 55422  
[www.honeywell.com/sensing](http://www.honeywell.com/sensing)

## WARNING

### MISUSE OF DOCUMENTATION

- The information presented in this application note is for reference only. Do not use this document as a product installation guide.
- Complete installation, operation, and maintenance information is provided in the instructions supplied with each product.

**Failure to comply with these instructions could result in death or serious injury.**

### SALES AND SERVICE

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact your local sales office or:

**E-mail:** [info.sc@honeywell.com](mailto:info.sc@honeywell.com)

**Internet:** [www.honeywell.com/sensing](http://www.honeywell.com/sensing)

#### Phone and Fax:

Asia Pacific	+65 6355-2828 +65 6445-3033 Fax
Europe	+44 (0) 1698 481481 +44 (0) 1698 481676 Fax
Latin America	+1-305-805-8188 +1-305-883-8257 Fax
USA/Canada	+1-800-537-6945 +1-815-235-6847 +1-815-235-6545 Fax

# Honeywell