

IFP-300/IFP-300ECS

Addressable Fire Alarm Control Panel

Manual

Fire Alarm & Emergency Communication System Limitations

While a life safety system may lower insurance rates, it is not a substitute for life and property insurance!

An automatic fire alarm system—typically made up of smoke detectors, heat detectors, manual pull stations, audible warning devices, and a fire alarm control panel (FACP) with remote notification capability—can provide early warning of a developing fire. Such a system, however, does not assure protection against property damage or loss of life resulting from a fire.

An emergency communication system—typically made up of an automatic fire alarm system (as described above) and a life safety communication system that may include an autonomous control unit (ACU), local operating console (LOC), voice communication, and other various interoperable communication methods—can broadcast a mass notification message. Such a system, however, does not assure protection against property damage or loss of life resulting from a fire or life safety event.

The Manufacturer recommends that smoke and/or heat detectors be located throughout a protected premises following the recommendations of the current edition of the National Fire Protection Association Standard 72 (NFPA 72), manufacturer's recommendations, State and local codes, and the recommendations contained in the Guide for Proper Use of System Smoke Detectors, which is made available at no charge to all installing dealers. This document can be found at <http://www.systemsensor.com/appguides/>. A study by the Federal Emergency Management Agency (an agency of the United States government) indicated that smoke detectors may not go off in as many as 35% of all fires. While fire alarm systems are designed to provide early warning against fire, they do not guarantee warning or protection against fire. A fire alarm system may not provide timely or adequate warning, or simply may not function, for a variety of reasons:

Smoke detectors may not sense fire where smoke cannot reach the detectors such as in chimneys, in or behind walls, on roofs, or on the other side of closed doors. Smoke detectors also may not sense a fire on another level or floor of a building. A second-floor detector, for example, may not sense a first-floor or basement fire.

Particles of combustion or "smoke" from a developing fire may not reach the sensing chambers of smoke detectors because:

- Barriers such as closed or partially closed doors, walls, chimneys, even wet or humid areas may inhibit particle or smoke flow.
- Smoke particles may become "cold," stratify, and not reach the ceiling or upper walls where detectors are located.
- Smoke particles may be blown away from detectors by air outlets, such as air conditioning vents.
- Smoke particles may be drawn into air returns before reaching the detector.

The amount of "smoke" present may be insufficient to alarm smoke detectors. Smoke detectors are designed to alarm at various levels of smoke density. If such density levels are not created by a developing fire at the location of detectors, the detectors will not go into alarm. Smoke detectors, even when working properly, have sensing limitations. Detectors that have photoelectronic sensing chambers tend to detect smoldering fires better than flaming fires, which have little visible smoke. Detectors that have ionizing-type sensing chambers tend to detect fast-flaming fires better than smoldering fires. Because fires develop in different ways and are often unpredictable in their growth, neither type of detector is necessarily best and a given type of detector may not provide adequate warning of a fire.

Smoke detectors cannot be expected to provide adequate warning of fires caused by arson, children playing with matches (especially in bedrooms), smoking in bed, and violent explosions (caused by escaping gas, improper storage of flammable materials, etc.).

Heat detectors do not sense particles of combustion and alarm only when heat on their sensors increases at a predetermined rate or reaches a predetermined level. Rate-of-rise heat detectors may be subject to reduced sensitivity over time. For this reason, the rate-of-rise feature of each detector should be tested at least once per year by a qualified fire protection specialist. Heat detectors are designed to protect property, not life.

IMPORTANT! Smoke detectors must be installed in the same room as the control panel and in rooms used by the system for the connection of alarm transmission wiring, communications, signaling, and/or power. If detectors are not so located, a developing fire may damage the alarm system, compromising its ability to report a fire.

Audible warning devices such as bells, horns, strobes, speakers and displays may not alert people if these devices are located on the other side of closed or partly open doors or are located on another floor of a building. Any warning device may fail to alert people with a disability or those who have recently consumed drugs, alcohol, or medication. Please note that:

- An emergency communication system may take priority over a fire alarm system in the event of a life safety emergency.
- Voice messaging systems must be designed to meet intelligibility requirements as defined by NFPA, local codes, and Authorities Having Jurisdiction (AHJ).
- Language and instructional requirements must be clearly disseminated on any local displays.
- Strobes can, under certain circumstances, cause seizures in people with conditions such as epilepsy.
- Studies have shown that certain people, even when they hear a fire alarm signal, do not respond to or comprehend the meaning of the signal. Audible devices, such as horns and bells, can have different tonal patterns and frequencies. It is the property owner's responsibility to conduct fire drills and other training exercises to make people aware of fire alarm signals and instruct them on the proper reaction to alarm signals.
- In rare instances, the sounding of a warning device can cause temporary or permanent hearing loss.

A life safety system will not operate without any electrical power. If AC power fails, the system will operate from standby batteries only for a specified time and only if the batteries have been properly maintained and replaced regularly.

Equipment used in the system may not be technically compatible with the control panel. It is essential to use only equipment listed for service with your control panel.

Alarm Signaling Communications:

- **IP connections** rely on available bandwidth, which could be limited if the network is shared by multiple users or if ISP policies impose restrictions on the amount of data transmitted. Service packages must be carefully chosen to ensure that alarm signals will always have available bandwidth. Outages by the ISP for maintenance and upgrades may also inhibit alarm signals. For added protection, a backup cellular connection is recommended.
- **Cellular connections** rely on a strong signal. Signal strength can be adversely affected by the network coverage of the cellular carrier, objects and structural barriers at the installation location. Utilize a cellular carrier that has reliable network coverage where the alarm system is installed. For added protection, utilize an external antenna to boost the signal.
- **Telephone lines** needed to transmit alarm signals from a premise to a central monitoring station may be out of service or temporarily disabled. For added protection against telephone line failure, backup alarm signaling connections are recommended.

The most common cause of life safety system malfunction is inadequate maintenance. To keep the entire life safety system in excellent working order, ongoing maintenance is required per the manufacturer's recommendations, and UL and NFPA standards. At a minimum, the requirements of NFPA 72 shall be followed. Environments with large amounts of dust, dirt, or high air velocity require more frequent maintenance. A maintenance agreement should be arranged through the local manufacturer's representative. Maintenance should be scheduled as required by National and/or local fire codes and should be performed by authorized professional life safety system installers only. Adequate written records of all inspections should be kept.

Limit-F-2020

Installation Precautions

Adherence to the following will aid in problem-free installation with long-term reliability:

WARNING - Several different sources of power can be connected to the fire alarm control panel. Disconnect all sources of power before servicing. Control unit and associated equipment may be damaged by removing and/or inserting cards, modules, or inter-connecting cables while the unit is energized. Do not attempt to install, service, or operate this unit until manuals are read and understood.

CAUTION - System Re-acceptance Test after Software Changes:

To ensure proper system operation, this product must be tested in accordance with NFPA 72 after any programming operation or change in site-specific software. Re-acceptance testing is required after any change, addition or deletion of system components, or after any modification, repair or adjustment to system hardware or wiring. All components, circuits, system operations, or software functions known to be affected by a change must be 100% tested. In addition, to ensure that other operations are not inadvertently affected, at least 10% of initiating devices that are not directly affected by the change, up to a maximum of 50 devices, must also be tested and proper system operation verified.

This system meets NFPA requirements for operation at 0-49° C/32-120° F and at a relative humidity 93% ± 2% RH (non-condensing) at 32°C ± 2°C (90°F ± 3°F). However, the useful life of the system's standby batteries and the electronic components may be adversely affected by extreme temperature ranges and humidity. Therefore, it is recommended that this system and its peripherals be installed in an environment with a normal room temperature of 15-27° C/60-80° F.

Verify that wire sizes are adequate for all initiating and indicating device loops. Most devices cannot tolerate more than a 10% I.R. drop from the specified device voltage.

Like all solid state electronic devices, this system may operate erratically or can be damaged when subjected to lightning induced transients. Although no system is completely immune from lightning transients and interference, proper grounding will reduce susceptibility. Overhead or outside aerial wiring is not recommended, due to an increased susceptibility to nearby lightning strikes. Consult with the Technical Services Department if any problems are anticipated or encountered.

Disconnect AC power and batteries prior to removing or inserting circuit boards. Failure to do so can damage circuits.

Remove all electronic assemblies prior to any drilling, filing, reaming, or punching of the enclosure. When possible, make all cable entries from the sides or rear. Before making modifications, verify that they will not interfere with battery, transformer, or printed circuit board location.

Do not tighten screw terminals more than 9 in-lbs. Over-tightening may damage threads, resulting in reduced terminal contact pressure and difficulty with screw terminal removal.

This system contains static-sensitive components. Always ground yourself with a proper wrist strap before handling any circuits so that static charges are removed from the body. Use static suppressive packaging to protect electronic assemblies removed from the unit.

Units with a touchscreen display should be cleaned with a dry, clean, lint free/microfiber cloth. If additional cleaning is required, apply a small amount of Isopropyl alcohol to the cloth and wipe clean. Do not use detergents, solvents, or water for cleaning. Do not spray liquid directly onto the display.

Follow the instructions in the installation, operating, and programming manuals. These instructions must be followed to avoid damage to the control panel and associated equipment. FACP operation and reliability depend upon proper installation.

Precau-D2-11-2017

FCC Warning

WARNING: This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual may cause interference to radio communications. It has been tested and found to comply with the limits for class A computing devices pursuant to Subpart B of Part 15 of FCC Rules, which is designed to provide reasonable protection against such interference when devices are operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user will be required to correct the interference at his or her own expense.

Canadian Requirements

This digital apparatus does not exceed the Class A limits for radiation noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

Fahrenheit™ is a trademark; and Flexput®, Honeywell®, JumpStart®, Silent Knight® and SWIFT® are registered trademarks of Honeywell International Inc. Microsoft® and Windows® are registered trademarks of the Microsoft Corporation. Chrome™ and Google™ are trademarks of Google Inc. Firefox® is a registered trademark of The Mozilla Foundation.

©2022 by Honeywell International Inc. All rights reserved. Unauthorized use of this document is strictly prohibited.

Software Downloads

In order to supply the latest features and functionality in fire alarm and life safety technology to our customers, we make frequent upgrades to the embedded software in our products. To ensure that you are installing and programming the latest features, we strongly recommend that you download the most current version of software for each product prior to commissioning any system. Contact Technical Support with any questions about software and the appropriate version for a specific application.

Documentation Feedback

Your feedback helps us keep our documentation up-to-date and accurate. If you have any comments or suggestions about our online Help or printed manuals, you can email us.

Please include the following information:

- Product name and version number (if applicable)
- Printed manual or online Help
- Topic Title (for online Help)
- Page number (for printed manual)
- Brief description of content you think should be improved or corrected
- Your suggestion for how to correct/improve documentation

Send email messages to:

FireSystems.TechPubs@honeywell.com

Please note this email address is for documentation feedback only. If you have any technical issues, please contact Technical Services.



This symbol (shown left) on the product(s) and / or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, contact your local authorities or dealer and ask for the correct method of disposal.

Electrical and electronic equipment contains materials, parts and substances, which can be dangerous to the environment and harmful to human health if the waste of electrical and electronic equipment (WEEE) is not disposed of correctly.

Table of Contents

| | |
|--|-----------|
| Section 1: Introduction | 10 |
| 1.1: Basic System Overview | 10 |
| 1.1.1: Hardware Features | 10 |
| 1.1.2: Network System Hardware Features | 10 |
| 1.1.3: Software Features | 10 |
| 1.1.4: IFP-300ECS Features | 10 |
| 1.1.5: Terms Used in this Manual | 11 |
| 1.2: Compatible Products | 11 |
| 1.3: Related Documentation | 13 |
| Section 2: Agency Listings, Approvals, and Requirements | 14 |
| 2.1: Federal Communications Commission (FCC) | 14 |
| 2.2: Underwriters Laboratories (UL) | 14 |
| 2.2.1: Requirements for All Installations | 14 |
| 2.2.2: UL 864 9th and 10th Edition | 15 |
| 2.2.3: Requirements for Central Station Fire Alarm Systems | 15 |
| 2.2.4: Requirements for Local Protected Fire Alarm Systems | 15 |
| 2.2.5: Requirements for Remote Station Protected Fire Alarm Systems | 15 |
| 2.2.6: Requirements for the Installation of Carbon Monoxide (CO) Detection and Warning Equipment, NFPA 720 | 15 |
| 2.2.7: NFPA Requirements | 15 |
| Section 3: Prerequisites for Installation | 17 |
| 3.1: Inventory | 17 |
| 3.2: Environmental Specifications | 17 |
| 3.3: Software Downloads | 17 |
| 3.4: Electrical Specifications | 17 |
| 3.5: Calculating Current Draw and Standby Battery | 18 |
| 3.5.1: Worksheet Requirements | 18 |
| 3.5.2: Current Draw Worksheet for IDP SLC Devices | 19 |
| 3.5.3: Current Draw Worksheet for SK SLC Devices | 23 |
| 3.5.4: Current Draw Worksheet for SD SLC Devices | 26 |
| 3.5.5: Maximum Battery Standby Load | 29 |
| Section 4: Control Panel Installation | 30 |
| 4.1: Mounting the Control Panel Cabinet | 30 |
| 4.1.1: Preventing Water Damage | 30 |
| 4.1.2: Removing the IFP-300 Assembly from the Housing | 30 |
| 4.1.3: Ethernet Connection | 30 |
| 4.2: Board Layout | 31 |
| 4.3: Wiring Specifications | 31 |
| 4.4: AC Connection | 33 |
| 4.5: Battery Power | 33 |
| 4.5.1: RBB Accessory Cabinet | 34 |
| 4.6: Wiring Specifications | 35 |
| 4.6.1: Length Limitations | 35 |
| 4.6.2: Calculating Wiring Distance for SBUS Modules | 35 |
| 4.6.3: Wiring Configurations | 37 |
| 4.7: RA-100 Remote Annunciator Installation | 37 |
| 4.7.1: Mounting the RA-100 | 39 |
| 4.7.2: RA-100 Connection to the Panel | 40 |
| 4.8: RA-1000 Remote Annunciator Installation | 40 |
| 4.8.1: Mounting the RA-1000 | 41 |
| 4.9: RA-2000 Remote Annunciator Installation | 43 |
| 4.9.1: Mounting the RA-2000 | 43 |
| 4.9.2: RA-2000 Connection to the Panel | 45 |
| 4.10: 5815XL Installation | 45 |
| 4.10.1: 5815XL Connection to the Panel | 46 |
| 4.11: 6815 Installation | 46 |
| 4.11.1: 6815 Connection to the Panel | 47 |
| 4.12: 5824 Serial/Parallel Printer Interface Module Installation | 47 |
| 4.12.1: Selecting 5824 Options | 48 |
| 4.13: 5880 LED I/O Module | 48 |

| | |
|--|-----------|
| 4.13.1: 5880 Board Layout | 49 |
| 4.13.2: 5880 Connection to Panel | 49 |
| 4.13.3: LED Wiring | 49 |
| 4.13.4: Dry Contact Wiring | 50 |
| 4.14: 5865-3 / 5865-4 LED Annunciator Installation | 51 |
| 4.14.1: 5865 Connection to Panel | 51 |
| 4.14.2: 5865 Mounting | 52 |
| 4.15: Configuring SBUS Modules | 52 |
| 4.15.1: Assigning SBUS Module IDs | 52 |
| 4.15.2: SBUS Bandwidth Considerations | 53 |
| 4.15.3: Communication Protocol | 53 |
| 4.15.4: End-of-Line Resistor | 53 |
| 4.16: Telephone Connection | 54 |
| 4.17: Notification Appliance/Auxiliary Power Circuits | 54 |
| 4.17.1: Conventional Notification Appliance | 54 |
| 4.17.2: Auxiliary Power Installation | 55 |
| 4.18: Onboard Relays (Conventional) | 56 |
| 4.18.1: Trouble Relay | 56 |
| 4.18.2: Programmable Relays | 56 |
| 4.19: Remote Station Applications | 56 |
| 4.19.1: Keltron Model 3158 Installation | 56 |
| 4.19.2: City Box Connection Using the 5220 Module | 57 |
| 4.19.3: Using the Addressable Relay Module for City Box Connection | 58 |
| 4.19.4: NFPA 72 Polarity Reversal | 59 |
| 4.19.5: Transmitter Activated by Dry Contacts | 63 |
| Section 5: Networking | 64 |
| 5.1: Network System Hardware Features | 64 |
| 5.1.1: Networked Sites | 64 |
| 5.2: Network Wiring | 64 |
| 5.2.1: Wiring Options/Requirements to Connect Networked Panels | 64 |
| 5.3: SK-NIC Wiring Options | 65 |
| 5.3.1: Fiber Loop Modules | 65 |
| 5.3.2: SK-NIC Mounting Kits | 66 |
| 5.4: SK-NIC Installation | 66 |
| 5.4.1: SK-NIC Remote Mounting | 67 |
| 5.4.2: Wiring | 67 |
| 5.5: Setting the Network ID for Each Panel | 69 |
| Section 6: Network Management | 70 |
| 6.1: Network Diagnostics | 70 |
| 6.1.1: Ping Panel | 70 |
| 6.1.2: Data Network Status | 70 |
| 6.1.3: Voice Network Status | 70 |
| 6.2: Network Programming | 70 |
| 6.2.1: Learn Network | 70 |
| 6.2.2: Edit Network Names | 70 |
| 6.2.3: Edit Panel ID | 71 |
| 6.2.4: Computer Access | 71 |
| 6.2.5: Access Codes | 71 |
| 6.2.6: Communicator Options | 71 |
| 6.3: Voice Options | 72 |
| 6.3.1: Edit Timers | 72 |
| 6.3.2: Edit Voice Commands | 73 |
| 6.4: Sync Network Options | 74 |
| 6.5: Network Management Quick Reference | 74 |
| Section 7: Programming Overview | 76 |
| 7.1: JumpStart Auto-programming | 76 |
| 7.1.1: Input Points | 76 |
| 7.1.2: Output Points | 76 |
| 7.1.3: Running JumpStart Auto-programming | 76 |
| 7.2: Mapping Overview | 77 |

| | |
|---|------------|
| 7.2.1: Input Point Mapping | 78 |
| 7.2.2: Output Circuit Mapping | 78 |
| 7.2.3: Event Mapping | 79 |
| 7.2.4: Mapping LED Points | 81 |
| 7.2.5: Mapping LED Points for a Networked System | 81 |
| 7.3: Programming Using the HFSS Software Suite | 81 |
| 7.4: Programming Using an Annunciator | 82 |
| 7.4.1: Entering / Exiting Panel Programming | 82 |
| 7.4.2: Moving through the Menus | 82 |
| 7.4.3: Selecting Options and Entering Data | 82 |
| 7.5: Programming Menu Quick Reference | 83 |
| Section 8: Programming | 94 |
| 8.1: UL 864 / UL 2572 Programming Requirements | 94 |
| 8.2: Modules | 94 |
| 8.2.1: Edit Modules | 94 |
| 8.2.2: Adding a Module | 95 |
| 8.2.3: Deleting a Module | 95 |
| 8.2.4: View Module List | 96 |
| 8.3: Zone | 96 |
| 8.3.1: Edit Zone | 96 |
| 8.3.2: View Zone Points | 99 |
| 8.4: Group | 99 |
| 8.4.1: Edit Group | 99 |
| 8.4.2: View Group Points | 100 |
| 8.4.3: Edit OPG (Output Group) Template | 100 |
| 8.5: Point | 100 |
| 8.5.1: Point Programming for a 5815XL Module | 102 |
| 8.5.2: Point Programming for a 6815 Module | 105 |
| 8.5.3: Point Programming For Internal or External Power Module (RPS-1000) | 107 |
| 8.5.4: Point Programming for 5880 or 5865 Modules | 109 |
| 8.5.5: Point Programming for the 5496 | 109 |
| 8.5.6: Point Programming for ECS Amplifiers | 110 |
| 8.5.7: Point Programming for ECS-VCM, ECS-NVCM, and ECS-RVM Modules | 110 |
| 8.6: System Options | 110 |
| 8.6.1: Communication Options | 110 |
| 8.6.2: Daytime/Nighttime Sensitivity | 113 |
| 8.6.3: Holiday Days | 113 |
| 8.6.4: Time Options | 113 |
| 8.6.5: Miscellaneous Options | 114 |
| 8.6.6: Daylight Savings Options | 115 |
| 8.6.7: Edit Banner | 115 |
| 8.6.8: SLC Family | 116 |
| 8.7: JumpStart Auto-Programming | 116 |
| 8.8: Restore Defaults | 116 |
| 8.9: Voice Options | 116 |
| 8.9.1: VCM Maintenance | 116 |
| 8.9.2: Voice Settings | 116 |
| Section 9: System Operation | 117 |
| 9.1: Annunciator Description | 117 |
| 9.1.1: LCD Display | 117 |
| 9.1.2: Banner | 117 |
| 9.2: Menu System | 118 |
| 9.2.1: Panel Login Menu | 118 |
| 9.2.2: Main Menu Overview | 119 |
| 9.2.3: Using the Menus | 119 |
| 9.3: Basic Operation | 120 |
| 9.3.1: Setting Time and Date | 120 |
| 9.3.2: Disable / Enable a Point | 120 |
| 9.3.3: View Event History | 120 |
| 9.3.4: Conduct a Fire Drill | 120 |
| 9.3.5: Conduct an Indicator Test | 121 |

| | |
|---|------------|
| 9.3.6: Conduct a Walk Test | 121 |
| 9.3.7: Conduct a Communicator Test | 121 |
| 9.3.8: Manual AlarmNet Registration..... | 121 |
| 9.3.9: Silence Alarms or Troubles | 121 |
| 9.3.10: Reset Alarms..... | 122 |
| 9.3.11: Check Detector Sensitivity Through Point Status | 122 |
| 9.3.12: View Status of a Point | 123 |
| 9.3.13: View Alarms or Troubles | 123 |
| 9.3.14: System Information | 123 |
| 9.4: Event Priority..... | 124 |
| 9.4.1: System Control | 124 |
| 9.4.2: System Override | 124 |
| 9.4.3: Event Priority..... | 124 |
| 9.4.4: Priority Rules..... | 125 |
| 9.4.5: Other Priority Considerations..... | 125 |
| 9.5: Panel Operating Modes..... | 125 |
| 9.5.1: Multi-Site Annunciator and Multi-Site User Access..... | 128 |
| 9.6: Releasing Operations | 128 |
| 9.6.1: Single Interlock Zone Releasing..... | 129 |
| 9.6.2: Double Interlock Zone Releasing | 129 |
| 9.7: Smoke Alarm Verification | 130 |
| 9.8: Function Keys..... | 130 |
| 9.8.1: Recording an F-Key Macro | 130 |
| 9.8.2: Aborting an F-Key Macro Recording Session..... | 130 |
| 9.8.3: Erasing an F-Key Macro..... | 131 |
| 9.8.4: Using a Recorded F-Key Macro | 131 |
| 9.8.5: F-Key Status Event..... | 131 |
| 9.8.6: F-Key Map Inhibit | 131 |
| Section 10: Emergency Communication System Operation | 132 |
| 10.1: Overview..... | 132 |
| 10.2: LOC Functionality | 132 |
| 10.2.1: Keys and LEDs | 132 |
| 10.2.2: Gaining ECS Control..... | 133 |
| 10.2.3: Manual ECS..... | 133 |
| 10.2.4: Fire Page Mode..... | 134 |
| 10.2.5: Message Mode | 134 |
| 10.2.6: Custom ECS Event | 135 |
| 10.2.7: Passing ECS Control..... | 135 |
| 10.2.8: Exit ECS Control Menu | 135 |
| 10.2.9: Relinquish ECS Control | 135 |
| 10.2.10: ECS Reset | 136 |
| 10.3: ECS Super User | 136 |
| 10.4: ECS Point Functionality | 136 |
| 10.4.1: ECS Point Activations | 136 |
| 10.4.2: ECS-VCM, ECS-NVCM, and ECS-RVM Points | 136 |
| 10.5: Amplifier Programming..... | 136 |
| 10.5.1: Adding an Amplifier..... | 136 |
| 10.5.2: Editing an Amplifier | 137 |
| 10.6: LOC Programming | 137 |
| 10.6.1: Adding an LOC..... | 137 |
| 10.6.2: Editing an LOC..... | 137 |
| 10.7: Using the Microphone | 138 |
| 10.7.1: Microphone Functionality | 138 |
| 10.7.2: Custom ECS Event | 138 |
| 10.7.3: Fire Page | 138 |
| 10.7.4: Emergency Page | 138 |
| 10.7.5: Paging | 138 |
| 10.8: Recording Custom Messages..... | 139 |
| 10.8.1: Recording Messages 1-15 Using Aux Audio Input..... | 139 |
| 10.8.2: Recording Messages 1-15 Using the Microphone..... | 140 |
| 10.8.3: Erasing User Messages..... | 141 |

| | |
|--|------------|
| 10.8.4: Using HFSS Voice Message Load Software | 141 |
| 10.9: Network Paging | 142 |
| 10.9.1: Priority | 142 |
| 10.9.2: Configuration | 142 |
| Section 11: Reporting | 143 |
| 11.1: Receivers Compatible with the Control Panel | 143 |
| 11.2: SIA - Panels PI Modifier Reporting..... | 152 |
| 11.3: SIA – Panel Communicator | 152 |
| Section 12: Testing and Troubleshooting..... | 154 |
| 12.1: Troubleshooting | 154 |
| 12.1.1: Common Problems | 154 |
| 12.2: Periodic Testing and Maintenance | 154 |
| 12.3: Event History | 155 |
| 12.4: Built-in Troubleshooting and Testing Tools | 155 |
| 12.4.1: SLC Device Locator | 155 |
| 12.4.2: SLC Multiple Device Locator | 155 |
| 12.4.3: I/O Point Control | 156 |
| 12.4.4: Earth Fault Resistance | 156 |
| Section 13: Installation Records | 157 |
| 13.1: Detector and Module Point Record | 157 |
| 13.2: Additional SLC Devices | 159 |
| 13.3: Conventional Output Point Record..... | 160 |
| Appendix A: Editing Text Using the Built-In Programmer..... | 161 |
| A.1: Characters Used for Editing Text..... | 161 |
| A.2: Example Name Edit | 161 |
| Appendix B: Expanded Receiver/Panel Relationship | 162 |
| Appendix C: Cadence Patterns | 163 |
| Appendix D: Panel Security..... | 164 |
| Model IFP-300 Basic Operating Instructions | 165 |
| Model IFP-300ECS Basic Operating Instructions..... | 167 |
| Keypad and LED Indicators..... | 169 |
| ECS Control | 171 |

Section 1: Introduction

The IFP-300 (red), IFP-300B (black), IFP-300ECS (red), and IFP-300ECSB (black) are analog addressable fire alarm control panels (FACP), that meet the requirements of UL 864.

The IFP-300ECS and IFP-300ECSB are intelligent fire alarm control panels combined with an Emergency Communication System that meet the requirements for Mass Notification as described in UL 864 and UL 2572.



NOTE: All references to IFP-300 within this manual are applicable to the IFP-300, IFP-300B, IFP-300ECS, and IFP-300ECSB unless specified.

1.1 Basic System Overview

The IFP-300 is an addressable panel with a built-in annunciator that can also be used to program the system.

1.1.1 Hardware Features

- The basic IFP-300 panel contains one built in signaling line circuit (SLC), which supports up to 159 IDP or SK sensors and 159 IDP or SK modules or 127 SD SLC devices. Additional SLC loops can be added to increase overall point capacity.
- Additional 6815 SLC expanders supports 159 IDP/SK sensors and 159 IDP/SK modules for a maximum of 300 points per control panel.
- Additional 5815XL SLC expander supports only SD Protocol for a maximum of 254 points per IFP-300 control panel.
- 6.0A of output power is available through 4 sets of terminals for notification appliance circuits or auxiliary applications. Each circuit is power-limited per UL 864 and can source up to 3.0A (total output power for all 4 circuits must not exceed 6.0A). The constant auxiliary power load must not exceed 3A for normal standby.
- Built-in dual phone line, digital alarm communicator/transmitter (DACT), IP or optional cellular technologies.
- Reports events to central station by point or by zone.
- UL Listed for pre-action and deluge releasing systems.
- Two general purpose Form C programmable relays.
- One Form C Trouble Relay.
- Can be used with up to 16 model RA-100, RA-1000, or RA-2000 remote annunciators in any combination (sold separately).
- Can be used with model 5865-3, 5865-4, and 5880 in any combination for a total of eight devices on one control panel. See Section 4.13 and Section 4.14 for additional information on these models.
- Printing of event log available through the Model 5824 serial/parallel printer interface module.
- 250 software zones, 250 output groups.
- Add six Flexput circuits with each RPS-1000 power supply.
- Add four NAC circuits with each 5496 NAC expander.



NOTE: The system can include a maximum of 16 intelligent power modules, 5496 or RPS-1000, combined.

1.1.2 Network System Hardware Features

- The default network setup can contain up to 32- IFP-300 panels connected.
- Network support for up to 32 sites
- Each building is referred to as a “site”.
- Panels can be interconnected using a CLASS B or CLASS A topology.
- To network panels together use the SK-NIC network card. Copper wire or fiber-optic cable panel connectivity can be used within the same networked system.
- The network architecture provides true peer to peer capability allowing network survivability for all hardware that remains operational in the event of partial system failure.

1.1.3 Software Features

- Advanced smoke detector features:
 - Automatic drift compensation
 - Automatic day/night sensitivity adjustment
 - Maintenance alert region
 - Point status meets calibrated smoke test requirements for NFPA 72
- “JumpStart” feature for easy programming
- Non-volatile event history stores 1000 events
- A choice of output patterns available for notification outputs, including ANSI 3.41 temporal signal
- Built-in synchronization appliance support for AMSECO[®], Gentex[®], System Sensor[®], and Wheelock[®]

1.1.4 IFP-300ECS Features

- Can select ECS message as priority over fire alarm
- 15 recordable messages that can be mapped to eight ECS buttons
- Supports up to seven ECS-LOC consoles
- Support for one ECS-VCM or ECS-NVCM
- Programmable trigger inputs from an external source, such as a Monaco system, to either the ECS-VCM, ECS-NVCM, ECS-RVM, 5880 or any SLC input module

- Fire alarm and ECS combined in one easy to program system
- Supports up to eight ECS-50W, ECS-125W, ECS-INT50W, or ECS-DUAL50W addressable amplifiers for a maximum of 1000 watts per system
- Support for dual channel and backup audio using the ECS-DUAL50W amplifier and ECS-50WBU back-up amplifier

1.1.5 Terms Used in this Manual

The following terminology is used with the IFP-300 system:

| Term | Description |
|----------------------------------|--|
| SLC | Signaling Line Circuit |
| Module | The term module is used for all hardware devices except for SLC addressable devices and notification appliances. This includes the IFP-300 panel itself. |
| Input Point | An addressable sensing device, such as a smoke or heat detector or a contact monitor device. |
| Input Zone | A protected area made up of input points. |
| Output Point (or Output Circuit) | A notification point or circuit for notification appliances. Relay circuits and auxiliary power circuits are also considered output points. |
| Output Group (OPG) | A group of output points. Operating characteristics are common to all output points in the group. |
| Output (or "Cadence") Pattern | The pattern that the output will use, for example, Constant, March Code, ANSI 3.41. Applies to zones and special system events. See Appendix C for additional information. |
| Mapping | Mapping is the process of specifying which outputs are activated when certain events occur in the system. Section 7.2 explains mapping in detail. |
| ECS | Emergency Communication System |
| Networking | Up to 32 panels can be networked. |
| Network System | Consist of any combination of 32 panels of these model numbers: IFP-75, IFP-300, IFP-300ECS, IFP-2100, and IFP-2100ECS. |
| SWIFT | Smart Wireless Integrated Fire Technology |

1.2 Compatible Products

The chart below lists the products available from Honeywell for use with the IFP-300.

| Type of Device | Model | Description |
|-----------------------------|-------|---|
| SWIFT Wireless SLC Devices | | For a list of compatible devices, refer to the <i>Device Compatibility Document</i> . |
| IDP Addressable SLC Devices | | |
| SK Addressable SLC Devices | | |
| SD Addressable SLC Devices | | |

Table 1.1 IFP-300 Compatible Products

| Type of Device | Model | Description | | |
|----------------|---|--|---|--|
| Other Modules | 5824 Serial/Parallel Printer Interface Module | Allows a printer to be attached for the system for on-site event logging. Four maximum per system. | | |
| | 5815XL (Rev H or above) SLC Expander | Allows up to 127 SD devices to be added to the system. The number of 5815XL modules that can be added to the system is limited only by the maximum number of SBUS devices. However the maximum point count is limited to 254 per panel. Supports SD protocol devices only. | | |
| | 6815 SLC Expander | Supports System Sensor Devices (IDP or SK) only. Each 6815 supports up to 159 IDP or SK sensors and 159 IDP or SK modules. Maximum point count is 300 per panel. | | |
| | RPS-1000 (Rev F or higher) Intelligent Power Supply | Provides additional power, six Flexput circuits, and two Form C relays. | RPS-1000 and 5496 modules can be used in any combination, up to a total of 16 on one system. | |
| | 5496 (Rev F or above) NAC Expander | Add 4 Notification/Auxiliary power circuits with each 5496 Intelligent Power Module | | |
| | RA-2000 Remote LCD Annunciator | 4x 40 Remote LCD annunciator, can be used in any combination, up to a total of 16 devices on one panel. | | |
| | RA-100 Remote LCD Annunciator | 4 x 20 Remote LCD annunciator, can be used in any combination, up to a total of 16 devices on one panel. | | |
| | RA-1000 Remote LCD Annunciator | 4 x 20 Remote LCD annunciator, can be used in any combination, up to a total of 16 devices on one panel. | | |
| | 5860TG and 5860TR Trim Ring Kits | trim ring kits for surface mounting the RA-1000 annunciator. 5860TG is gray; 5860TR is red. | | |
| | 5865-3 and 5865-4 LED Annunciator | LED annunciator can display up to 30 LEDs (15 red and 15 yellow). 5865-4 has key switches for silence and reset, and a system trouble LED. | 5865-3, 5865-4, and 5880 can be used in any combination, up to a total of eight devices on one panel. | |
| | 5880 (Rev C or above) LED I/O Module | Driver for up to 40 LEDs. Interfaces with customized annunciator boards. In addition the 5880 has eight generic switch input points. | | |
| | 5883 General Purpose Relay Module | Provides 10 Form C relays. Designed to be driven by the 5880. Up to four, 5883 modules can be used with each 5880 module. | | |
| | SK-NIC | Network Interface Card | Refer to LS10172-001SK-E | |
| ECS Modules | ECS-NVCM | Network Voice Control Module | Refer to the <i>ECS Series Installation Manual</i> P/N 151455 for more information on these accessories. | |
| | ECS-VCM | Voice Control Module | | |
| | ECS-SW24 | 24 switch expander | | |
| | ECS-50W | 50 watt audio amplifier | | |
| | ECS125W | 125 watt audio amplifier | | |
| | ECS-CE4 | Provides 4 additional audio circuits for the ECS-50W or ECS-125W. | | |
| | ECS-RVM | Remote Voice Module | | |
| | ECS-DUAL50W | Dual Channel amplifier | | |
| | ECS-50WBU | Backup daughter card | | |
| | ECS-INT50W | 50 wall internal amplifier | | |
| ECS-LOC | Local Operating Console | | | |
| Wireless | WIDP-WGI/WSK-WGI | Wireless Gateway | Refer to the <i>SWIFT Wireless Installation Manual</i> P/N LS10036-000FH-E for more information on these accessories. | |
| | WIDP-PHOTO/WSK-PHOTO | Wireless Photoelectric Smoke Detector | | |
| | WIDP-ACCLIMATE | Wireless multi-criteria photoelectric smoke detector | | |
| | WIDP-HEAT-ROR/WSK-HEAT-ROR | Wireless Rate of Rise Heat Detector | | |
| | WIDP-HEAT/WSK-HEAT | Wireless 135° Fixed Heat Detector | | |
| | WIDP-MONITOR/WSK-MONITOR | Wireless Addressable Monitor Module | | |
| | WIDP-RELAY/WSK-RELY | Wireless Addressable Relay Module | | |
| | B210W | 6" wireless base | | |

Table 1.1 IFP-300 Compatible Products (Continued)

| Type of Device | Model | Description | |
|----------------|------------------------------------|---|--------------------------|
| Miscellaneous | HFSS Honeywell Fire Software Suite | For communication and panel programming with a Windows-based computer. Enables remote viewing of detector status and event history. | |
| | 7860 Telephone Cord | RJ31X cord for connecting a phone line to the IFP-300. | |
| | RBB | Remote Battery Box for mounting backup batteries that are too large to fit into the main control panel cabinet. Dimensions: 16" W x 10" H x 6" D (40.64 cm W x 25.4 cm H x 15.24 cm D). | |
| | CELL-MOD | Cellular board with Plastic Enclosure | Refer to LS10182-001SK-E |
| | CELL-CAB-SK | Cellular board with Metal Enclosure, lock & key | |

Table 1.1 IFP-300 Compatible Products (Continued)

1.3 Related Documentation

Refer to the following documents for more information.

| Title | Document Number |
|---|-----------------|
| SLC Wiring Manual | LS10179-000FH-E |
| Device Compatibility Document | LS10167-003FH-E |
| 5824 Printer Interface Module Install Sheet | 151392 |
| RPS-1000 Power Supply Manual | 151153 |
| 5496 NAC Expander Manual | 151276-L8 |
| RA-100 Annunciator Install Sheet | 151283 |
| RA-1000R LCD Annunciator Install Sheet | 151154 |
| RA-2000 LCD Annunciator | 151443 |
| 5865-3 and 5865-4 LED Annunciator | 151088 |
| 5880 LED Driver Module | 150972 |
| 5883 General Purpose Relay Module | 151194 |
| ECS Series Manual | 151455 |
| ECS-RVM Install Sheet | 151451 |
| ECS-SW24 Install Sheet | 151452 |
| ECS-VCM Install Sheet | 151454 |
| ECS-CE4 Install Sheet | 151456 |
| ECS-RCU Install Sheet | 151457 |
| ECS-INT50W Install Sheet | LS10120-001SK-E |
| ECS-RPU Install Sheet | LS10152-001SK-E |
| ECS-NVCM Install Sheet | LS10169-001SK-E |
| ECS-LOC Install Sheet | LS10187-001SK-E |
| ECS-LOC2100 Install Sheet | LS10188-001SK-E |
| ECS-EMG Install Sheet | LS10191-001SK-E |
| SK-NIC Install Sheet | LS10172-001SK-E |
| SK-FML/FSL Install Sheet | LS10178-001SK-E |
| MRD-1 Releasing Disconnect | LS10231-000GE-E |

Table 1.2 Related Documentation

Section 2: Agency Listings, Approvals, and Requirements

2.1 Federal Communications Commission (FCC)

The following information must be provided to the telephone company before the IFP-300 can be connected to the phone lines:

| | |
|---------------------------|------------------------|
| Manufacturer: | Honeywell |
| Model Number: | IFP-300 and IFP-300ECS |
| FCC registration number: | US: HS9AL10A2100 |
| Ringer equivalence: | 1.0A |
| Type of jack: | RJ31X |
| Facility Interface Codes: | Loop Start: 02LS2 |
| Service Order Code: | 9.0F |

This equipment complies with Part 68 of the FCC rules and the requirements adopted by ACTA. On the inside cover of this equipment is a label that contains, among other information, a product identifier. If requested, this information must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord (not provided) and modular jack must be utilized with this product. It is designed to be used with a modular jack that is also compliant.

The REN (ringer equivalence number) provided on this installation sheet is used to determine the number of devices that may be connected to the public switched telephone network. This number must not exceed 5.0. Since this product has an REN of 1.0A, the number of devices is limited. The REN number is embedded in the FCC registration number as 10A.

If the IFP-300 causes harm to the telephone network, the telephone company will notify you in advance that the temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with the IFP-300, for repair or warranty information, please contact Honeywell customer service at 800.328.0103 or www.farehnyt.com. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the IFP-300 until the problem has been resolved.

This product cannot be adjusted or repaired in the field. It must be returned to the factory for service.

This equipment is not designed for use with party line service. Connection to party line service is subject to state tariffs. You may contact the state public utility commission, public service commission or corporation commission for information.

Since the IFP-300 is a commercial fire alarm panel, it must be connected upstream of all other equipment utilizing the phone lines. If you have questions about the installation, contact your telephone company or a qualified installer.



CAUTION: INSTALLATION AND TEST

TO ENSURE PROPER OPERATION, THIS EQUIPMENT MUST BE INSTALLED ACCORDING TO THE ENCLOSED INSTALLATION INSTRUCTIONS. TO VERIFY THAT THE EQUIPMENT IS OPERATING PROPERLY AND CAN SUCCESSFULLY REPORT AN ALARM, THIS EQUIPMENT MUST BE TESTED IMMEDIATELY AFTER INSTALLATION, AND PERIODICALLY THEREAFTER, ACCORDING TO THE ENCLOSED TEST INSTRUCTIONS.



CAUTION: LINE IN USE

IN ORDER FOR "ALARM DIALING EQUIPMENT" TO BE ABLE TO SEIZE THE PHONE LINE TO REPORT AN ALARM OR OTHER EVENT WHEN OTHER CUSTOMER EQUIPMENT (TELEPHONE, ANSWERING SYSTEM, COMPUTER MODEM, ETC.) CONNECTED TO THE SAME LINE IS IN USE, "ALARM DIALING EQUIPMENT" MUST BE CONNECTED TO A PROPERLY INSTALLED RJ31X JACK. THE RJ31X JACK MUST BE CONNECTED IN SERIES WITH, AND AHEAD OF, ALL OTHER EQUIPMENT ATTACHED TO THE SAME PHONE LINE. SERIES INSTALLATION OF AN RJ31X JACK IS DEPICTED IN THE FIGURE BELOW. IF YOU HAVE ANY QUESTIONS CONCERNING THESE INSTRUCTIONS, CONSULT YOUR TELEPHONE COMPANY OR A QUALIFIED INSTALLER ABOUT INSTALLING THE NECESSARY JACK AND ALARM DIALING EQUIPMENT.

2.2 Underwriters Laboratories (UL)

2.2.1 Requirements for All Installations

General requirements are described in this section. When installing an individual device, refer to the specific section of the manual for additional requirements. The following subsections list specific requirements for each type of installation (for example, Central Station Fire Alarm systems, Local Protected Fire Alarm systems, and so on). See Section 9.6 for information on releasing operations.

1. All field wiring must be installed in accordance with the NFPA 70 National Electric Code.
2. Use addressable smoke detectors specified in the *SLC Wiring Manual* (P/N: LS10179-000FH-E and/or the conventional detectors listed in the *Device Compatibility Document* (P/N: LS10167-003FH-E).
3. Use UL listed notification appliances compatible with the IFP-300 from those specified in the *Device Compatibility Document* (P/N: LS10167-003FH-E).
4. A full system checkout must be performed any time the panel is programmed.

Restricted Options

- The loss of AC signal is defaulted to 3-hours however the system allows settings from 0 - 3 hours. For UL certified installations, this number must be set from 1 to 3 hours.
- The system allows the use of non-latching spot type smoke detectors. This feature may not be used in commercial applications whereby a general alarm is sounded. It is intended for elevator recall, door holding applications, and hotel/motel room applications.
- The system allows the Alarm Verification time to be set from 60 to 250 seconds. For UL certified installations, the setting must be a minimum of 60 seconds.
- The system allows the Auto-resound time to be set to 24 or 4 hours. For UL certified installations that are utilizing SWIFT devices, the value must be set to 4 hours.
- Call forwarding shall not be used.
- When the two-count feature is used, detector spacing shall be cut in half, you shall not use the Alarm Verification feature, and no delay shall be used.
- P.A.S (Positive Alarm Sequence) feature shall be used only with automatic detectors.

2.2.2 UL 864 9th and 10th Edition

- Per the UL Continuing Certification Program, UL 864 9th edition fire alarm control equipment will retain certification after the roll-out of UL 10th edition (12/2/2018).
- Installations of UL 864 10th Edition certified equipment are permitted to use UL864 9th Edition certified equipment when approved by the local Authority Having Jurisdiction (AHJ).

For product compliance, refer to the UL/ULC listing cards located on the UL online certification directory. <https://iq.ulprospector.com>

2.2.3 Requirements for Central Station Fire Alarm Systems

1. Use both phone lines. Enable phone line monitors for both lines.
2. You must program a phone number and a test time so that the IFP-300 shall automatically initiate and complete a test signal transmission sequence to its associated receiver at least once every 6 hours, using two phones or one phone line with Ethernet/cellular backup. The AC Loss Hours option must be set from 1-3 hours.
3. If using wired Ethernet or cellular, you must program the corresponding Account/Subscriber ID and a test time so that the FACP shall automatically initiate a Test Signal Transmission sequence to its associated receiver at least once every 6 hours.

The Automatic 6 hour Test Signal Transmission only applies if the secondary communication paths are utilized. If no secondary communication paths are utilized, the FACP shall automatically initiate a Test Signal Transmission sequence to associate the receiver at least once every 60 minutes.

2.2.4 Requirements for Local Protected Fire Alarm Systems

At least one UL listed supervised notification appliance must be used.

2.2.5 Requirements for Remote Station Protected Fire Alarm Systems

Minimum system requirements are one Honeywell addressable initiating device and either a 5220, Keltron 3158 or the built-in Digital Alarm Communicator Transmitter (DACT).

1. Do not exceed the current load restrictions shown in Section 3.5.5.
2. The AC Loss Hours option must be set from 1-3 hours.

2.2.6 Requirements for the Installation of Carbon Monoxide (CO) Detection and Warning Equipment, NFPA 720

When using carbon monoxide detection the system must be monitored by a Supervising Station with emergency response, both aspects meeting the Standard for the Installation of Carbon Monoxide (CO) Detection and Warning Equipment, NFPA 720.

2.2.7 NFPA Requirements

The following is the minimum configuration to meet the NFPA requirements.

| Model/Module | Description | Local | Releasing | Remote Station | Auxiliary | Central Station | Emergency Signaling |
|----------------------|---------------------------|-------|-----------|----------------|-----------|-----------------|---------------------|
| IFP-300 | Control Unit | Y | Y | Y | Y | Y | Y |
| 6861BIA/6861GIA | 4 x 40 display | Y | Y | Y | Y | Y | Y |
| 5815XL | SLC Expander | O | O | O | O | O | O |
| 6815 | SLC Expander | O | O | O | O | O | O |
| SK-NIC | Network card | O | O | O | O | O | O |
| SK-FML/ -FSL | Fiber module | O | O | O | O | O | O |
| 7644-L8 | Pol Rev device | N | N | Y | N | N | N |
| 5220 | City tie, Pol. Rev Device | N | N | Y | Y | N | N |
| Keltron 3158 | Reverse Polarity Module | N | N | Y | Y | N | N |
| CELL-MOD/CELL-CAB-SK | Cellular transmitter | N | N | Y ¹ | N | Y ¹ | N |
| HWF2A-COM/HWF2V-COM | Fire Communicators | N | N | Y ¹ | N | Y ¹ | N |

Table 2.1 NFPA Requirements for IFP-300

| Model/Module | Description | Local | Releasing | Remote Station | Auxiliary | Central Station | Emergency Signaling |
|-------------------------------|-------------|-------|-----------|----------------|-----------|-----------------|---------------------|
| Y = YES, N = NO, O = OPTIONAL | | | | | | | |

Table 2.1 NFPA Requirements for IFP-300 (Continued)

1 You must choose either the CELL-MOD, CELL-CAB'-SK, HWF2A-COM, or HWF2V-COM for the Remote Station and Central Station.

| Model/Module | Description | CS | Local | Auxiliary | Remote Station | EVAC ¹ | Mass Notification (In-Building) ¹ |
|---------------|------------------------------------|----|-------|-----------|----------------|-------------------|--|
| IFP-300ECS | Control Unit | Y | Y | Y | Y | Y | Y |
| 068600 | control unit operator interface | Y | Y | Y | Y | Y | Y |
| 00VIP-50CB | Amplifier Enclosure | O | O | O | O | Y | O |
| 00VIP-125CB | Amplifier Enclosure | O | O | O | O | Y | O |
| ECS-50W | 50W Amp ² | O | O | O | O | Y | Y |
| ECS-50WHV | 50W Amp ² | O | O | O | O | Y | Y |
| ECS-125W | 125W amp ² | O | O | O | O | Y | Y |
| ECS-125WHV | 125W Amp ² | O | O | O | O | Y | Y |
| ECS-INT50W | Internal 50W Amp ² | O | O | O | O | Y | Y |
| ECS-NVCM | Network Voice Card ³ | O | O | O | O | O | O |
| ECS-VCM | Voice Control Module ³ | O | O | O | O | Y | O |
| VIP-SW16 | Switch annunciator | O | O | O | O | O | O |
| ECS-SW24 | Switch annunciator | O | O | O | O | O | Y |
| ECS-CE4 | Speaker expander mod ⁴ | O | O | O | O | O | O |
| ECS-RVM | Remote Microphone Mod ⁵ | O | O | O | O | O | O |
| 5815XL | SLC Expander | O | O | O | O | O | O |
| 6815 | SLC Expander | O | O | O | O | O | O |
| SK-NIC | Network Card | O | O | O | O | O | O |
| SK-FML / -FSL | Fiber Module | O | O | O | O | O | O |

Y = YES, N = NO, O = OPTIONAL

Table 2.2 NFPA Requirements for IFP-300ECS

- 1 When configured for Emergency relocation and evacuation equipment, the system must meet Local configuration (IFP-300) with a minimum of one amplifier (VIP-50/125 or ECS-50W/ECS-125W, or ECS-INT50W) and one Voice Control Module (VIP-VCM/ECS-VCM or ECS-NVCM).
- 2 Maximum of eight 50/125 Watts Amplifiers for a maximum of 1000 Watts per ECS System.
- 3 Maximum of one voice control module per ECS System
- 4 Maximum of one speaker expander module per VIP-50/125 or ECS-50W/ECS-125W
- 5 Maximum of two remote microphone modules per ECS System

Section 3: Prerequisites for Installation

This section of the manual is intended to help you plan your tasks to facilitate a smooth installation. Please read this section thoroughly, especially if you are installing an IFP-300 panel for the first time.

3.1 Inventory

When an IFP-300 shipment is received, check that all the parts have been included in the shipment. The shipment consist of one of each of the following:

- main circuit board with display
- backbox with door.
- plastic bag containing two keys, screws, cables, and ten 4.7k ohm end-of-line resistors.
- manual

3.2 Environmental Specifications

It is important to protect the IFP-300 control panel from water. To prevent water damage, the following conditions should be followed when you install the units:

- Mount indoors in dry locations only
- Do not mount directly on exterior walls, especially masonry walls (condensation)
- Do not mount directly on exterior walls below grade (condensation)
- Protect from plumbing leaks
- Protect from splash caused by sprinkler system inspection ports
- Do not mount in areas with humidity-generating equipment (such as dryers, production machinery)

When selecting a location to mount the IFP-300 control panel, the unit should be mounted where it will NOT be exposed to temperatures outside the range of 32°F-120°F (0°C-49°C) or humidity outside the range of 10%-93% at 86°F (30°C) non-condensing.

3.3 Software Downloads

In order to supply the latest features and functionality in fire alarm and life safety technology to our customers, we make frequent upgrades to the embedded software in our products. To ensure that you are installing and programming the latest features, we strongly recommend that you download the most current version of software for each product prior to commissioning any system. Contact Technical Support with any questions about software and the appropriate version for a specific application. Software updates can be found at www.farenhyt.com

3.4 Electrical Specifications

Table 3.1 lists the terminal block on the IFP-300 and a description of the each individual terminal and their respective electrical rating.

| Terminal No. | Label | | Description | Rating | |
|------------------|----------|------------|------------------------------------|---------|--|
| | Group | Individual | | Voltage | Current |
| Terminal Block 1 | TELCO 1 | RING | Phone Line 1 Telco Ring | | |
| | | TIP | Phone Line 1 Telco Tip | | |
| | PHONE 1 | RING | Phone Line 1 Phone Ring | | |
| | | TIP | Phone Line 1 Phone Tip | | |
| | TELCO 2 | RING | Phone Line 2 Telco Ring | | |
| | | TIP | Phone Line 2 Telco Tip | | |
| | PHONE 2 | RING | Phone Line 2 Phone Ring | | |
| | | TIP | Phone Line 2 Phone Tip | | |
| Terminal Block 2 | SLC IN | - | Used for Class A installations | 32 VDC | 150 mA |
| | | + | | | |
| | SLC OUT | - | SLC terminals | 32 VDC | 150 mA |
| | | + | | | |
| | SLC PROG | - | Used for programming SLC Detectors | 32 VDC | 150 mA |
| | | + | | | |
| Terminal Block 3 | SBUS Out | B | SBUS Communication | 5 VDC | 100 mA |
| | | A | | | |
| | | + | SBUS Power | 24 VDC | 1.0 A |
| | | - | | | |
| Terminal Block 4 | BATTERY | + | To Positive battery terminal | 24 VDC | Up to 35 Ah (See Section 4.5 for details.) |
| | | - | To Negative battery terminal | | |

Table 3.1 Terminal Descriptions and Electrical Specifications

| Terminal No. | Label | | Description | Rating | |
|-------------------|-------------------------------------|---|---|--------------------------|--------------------------|
| | Group | Individual | | Voltage | Current |
| Terminal Block 5 | AC INPUT | B | AC input (hot) | 120 VAC, 60 Hz | 3.3 A |
| | | Earth | Earth Ground | N/A | N/A |
| | | W | AC input (neutral) | 120 VAC, 60 Hz | 3.3 A |
| Terminal Block 6 | TROUBLE | NC | Normally closed relay contact | 24 VDC | 2.5 A, resistive |
| | | COM | Common terminal | | |
| | | NO | Normally open relay contact | | |
| | RELAY 1 | NC | Normally closed relay contact | 24 VDC | 2.5 A, resistive |
| | | COM | Common terminal | | |
| | | NO | Normally open relay contact | | |
| | RELAY 2 | NC | Normally closed relay contact | 24 VDC | 2.5 A, resistive |
| | | COM | Common terminal | | |
| | | NO | Normally open relay contact | | |
| | NAC1 ¹ | - | Notification Appliance Circuit/Auxiliary power | 24 VDC | 3.0 Amp NAC or Aux power |
| | | + | | | |
| | NAC2 ¹ | - | Notification Appliance Circuit/Auxiliary power | 24 VDC | 3.0 Amp NAC or Aux power |
| | | + | | | |
| | NAC3 ¹ | - | Notification Appliance Circuit/Auxiliary power | 24 VDC | 3.0 Amp NAC or Aux power |
| | | + | | | |
| NAC4 ¹ | - | Notification Appliance Circuit/Auxiliary power | 24 VDC | 3.0 Amp NAC or Aux power | |
| | + | | | | |
| P8 | EXT. Comm Cellular Connection | B | Cellular Transmitter | 0Ω | |
| | | A | | | |
| | | S+ | | 55 mA, 95 mA | |
| | | S- | | | |
| P7 | Voice Network | | Used For ECS-NVCM | 24 VDC | 59 mA |
| P10 | Data Network | | Used for SK-NIC | 24 VDC | 21 mA |

Table 3.1 Terminal Descriptions and Electrical Specifications (Continued)

¹ Regulated/special application when used for releasing

3.5 Calculating Current Draw and Standby Battery

This section contains instructions and tables for calculating current draws and standby battery needs.

3.5.1 Worksheet Requirements

The following steps must be taken when determining IFP-300 current draw and standby battery requirements.

1. For the IFP-300, the worst case current draw is listed for the panel, addressable devices, and SLC expanders. Fill in the number of addressable devices and expanders that will be used in the system and compute the current draw requirements for alarm and standby.
2. Add up the current draw for all auxiliary devices and record in the table at Line B.
3. Add up all notification appliance loads and record in the table at Line C.
4. For notification appliances and auxiliary devices not mentioned in the manual, refer to the device manual for the current ratings.
5. Make sure that the total alarm current calculated, including current for the panel itself, does not exceed 6.0 A. This is the maximum alarm current allowable.

If the current is above 6.0A, you will need to use a notification power expander(s) such as, the 5496 NAC Expander. Use the expander(s) to distribute the power loads, so that the IFP-300 or the power expanders do not exceed their power rating.

Refer to the Current Draw Worksheets provided with the *5496 Manual* to identify the ratings that do not exceed their power requirements.

6. Alternatively, you may network the additional IFP-300 to get additional power.
7. Complete the remaining instructions in the appropriate Current Draw Worksheet for determining battery size requirements.

3.5.2 Current Draw Worksheet for IDP SLC Devices

Use Table 3.2 to determine the current requirements during the alarm/battery standby operation when IDP SLC devices are installed. You can install up to 300 IDP SLC devices, consisting of any combination of sensors and modules.

| Device | # of Devices | Current per Device | | Standby Current | Alarm Current |
|--|--------------|--|-------------------------------|-----------------|---------------------|
| For each device use this formula: This column X This column = Current per number of devices. | | | | | |
| Fire Panel (Current draw from battery) | 1 | Standby | 190 mA | 190 mA | |
| | | Alarm: | 250 mA | | 250 mA ¹ |
| Addressable SLC Detectors | | | | | |
| IDP-PHOTO | | Standby: Alarm: | 0.3 mA 6.5 mA ² | mA | mA |
| IDP-PHOTO-T | | | | mA | mA |
| IDP-PHOTO-R | | | | mA | mA |
| IDP-HEAT | | | | mA | mA |
| IDP-HEAT-HT | | | | mA | mA |
| IDP-HEAT-ROR | | | | mA | mA |
| IDP-ACCLIMATE | | | | mA | mA |
| IDP-PHOTO-W/-IV | | Standby: Alarm: | 0.2 mA 4.5 mA ² | mA | mA |
| IDP-PHOTO-T-W/-IVIV | | | | mA | mA |
| IDP-PHOTO-R-W/-IV | | | | mA | mA |
| IDP-HEAT-W/-IV | | | | mA | mA |
| IDP-HEAT-HT-W/-IV | | | | mA | mA |
| IDP-HEAT-ROR-W/-IV | | | | mA | mA |
| IDP-PHOTO-CO-W | | | | mA | mA |
| IDP-CO-W | | | | mA | mA |
| IDP-BEAM (without integral test) | | SLC | Standby/Alarm: 2 mA | mA | mA |
| | | Aux. Pwr | Standby: 2 mA | mA | |
| | | | Alarm: 8.5 mA | | mA |
| IDP-BEAM-T ³ (with integral test) | | SLC | Standby/Alarm: 2 mA | mA | mA |
| | | Aux. Pwr | Standby: 2 mA | mA | |
| | | | Alarm: 8.5 mA | | mA |
| OSI-RI-FH | | SLC | Standby/Alarm: 20 mA | mA | mA |
| | | Aux. Pwr | Standby: 22 mA | mA | |
| | | | Alarm: 20 mA | | mA |
| DNR/DNRW ⁴ (non-relay) | | None, included with IDP-PHOTO-R/-W/-IV | | | |
| DNR ⁴ (with relay) | | None, included with IDP-PHOTO-R/-W/-IV & IDP-RELAY | | | |
| IDP-FIRE-CO | | SLC | Standby: 0.30 mA | mA | |
| | | | Alarm: 7 mA | | mA |
| IDP-FIRE-CO-W/-IV | | SLC | Standby: 0.20 mA | mA | |
| | | | Alarm: 4.5 mA | | mA |
| IDP-PTIR-W/-IV | | SLC | Standby: 0.20 mA | mA | |
| | | | Alarm: 4.5 mA | | mA |
| Addressable SLC Modules | | | | | |
| IDP-MONITOR | | Standby/Alarm 0.375 mA | | mA | mA |
| IDP-MINIMON | | Standby/Alarm 0.375 mA | | mA | mA |
| IDP-PULL-SA/IDP-PULL-DA | | Standby/Alarm 0.3 mA | | mA | mA |
| IDP-MONITOR-2 | | Standby/Alarm: 0.75 mA | | mA | mA |
| IDP-MONITOR-10 | | Standby/Alarm: 3.5 mA | | mA | mA |
| IDP-CONTROL | | SLC | Standby 0.375 mA | mA | |
| | | | Alarm: 0.375 mA | | mA |
| | | Aux Pwr | Standby 1.7 mA | mA | |
| | | | Alarm: 6.5mA | | mA |

Table 3.2 Current Draw Worksheet for IDP SLC Devices

| Device | # of Devices | Current per Device | | Standby Current | Alarm Current | |
|--|--------------|--------------------------|-------------------|-----------------|---------------|----|
| IDP-CONTROL-6 | | SLC | Standby | 2.65 mA | mA | |
| | | | Alarm: | 35 mA | | mA |
| | | Aux Pwr | Standby | 8 mA | mA | |
| | | | Alarm: | 20 mA | | mA |
| IDP-RELAY | | Standby/Alarm: | | 0.255 mA | mA | mA |
| IDP-RELAY-6 | | Standby: | | 1.9 mA | mA | |
| | | Alarm: | | 32 mA | | mA |
| IDP-RELAYMON-2 | | Standby: | | 1.3 mA | mA | |
| | | Alarm: | | 24 mA | | mA |
| IDP-ZONE | | Aux Pwr | Standby | 12 mA | mA | |
| | | | Alarm: | 90 mA | | mA |
| | | SLC | Standby: | 0.27 mA | mA | |
| | | | Alarm: | 5.1 mA | | |
| IDP-ZONE-6 | | Aux Pwr | Standby | 50 mA | mA | |
| | | | Alarm: | 70 mA | | mA |
| | | SLC | Standby | 2.3 mA | mA | |
| | | | Alarm: | 40 mA | | mA |
| SLC Accessories | | | | | | |
| B200SR/-W/-IV Sounder Base | | Aux Pwr | Standby: | 0.5 mA | mA | |
| | | | Alarm: | 35 mA | | mA |
| | | SLC | Standby | 0.3 mA | mA | |
| B200S/-W/-IV Intelligent Sounder Base | | Aux Pwr | Standby: | 0.5 mA | mA | |
| | | | Alarm: (high vol) | 35 mA | | mA |
| | | SLC | Standby | 0.3 mA | mA | |
| B200SR-LF/-W/-IV Low Frequency Sounder Base | | Aux Pwr | Standby: | 1 mA | mA | |
| | | | Alarm: | 125 mA | | mA |
| B200S-LF/-W/-IV Intelligent Low Frequency Sounder Base | | Aux Pwr | Standby | 0.55 mA | mA | |
| | | | Alarm (high vol) | 140 mA | | mA |
| | | SLC | Standby | 0.30 mA | mA | |
| B224RB/-W/-IV Relay Base | | Standby/Alarm: | | 0.17 mA | mA | mA |
| RTS151 | | Alarm: | | 10 mA | | mA |
| RTS151KEY | | Alarm: | | 12 mA | | mA |
| RA100Z | | Alarm: | | 10 mA | | mA |
| SLC Isolator Devices | | | | | | |
| IDP-ISO (Isolator Module) | | Standby: | | 0.45 mA | mA | mA |
| | | Isolation: | | 17 mA | | |
| ISO-6 (6 Fault Isolator Module) | | Standby: (per circuit) | | 0.45 mA | mA | |
| | | Isolation: (per circuit) | | 17 mA | | mA |
| B224BI/-W/-IV Isolator Base | | Standby: | | 0.45 mA | mA | |
| | | Isolation: | | 15 mA | | mA |
| Accessories Modules ⁵ | | | | | | |
| 6815 SLC Loop Expander | | Standby: | | 78 mA | mA | |
| | | Alarm: | | 78 mA | | mA |
| RA-2000 Remote LCD Annunciator | | Standby: | | 35 mA | mA | |
| | | Alarm: | | 53 mA | | mA |
| RA-1000 Remote LCD Annunciator | | Standby: | | 58 mA | mA | |
| | | Alarm: | | 68 mA | | mA |
| RA-100 Remote LCD Annunciator | | Standby: | | 59 mA | mA | |
| | | Alarm: | | 92 mA | | mA |

Table 3.2 Current Draw Worksheet for IDP SLC Devices (Continued)

| Device | # of Devices | Current per Device | Standby Current | Alarm Current |
|---|--|------------------------------------|-----------------|---------------|
| 5824 Serial/Parallel Module | | Standby/Alarm: 45 mA | mA | mA |
| 5496 NAC Expander | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| RPS-1000 Power Supply | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| 5865-4 LED Annunciator (with reset and silence switches) | | Standby: 35 mA | mA | |
| | | Alarm: 145 mA | | mA |
| 5865-3 LED Annunciator Module | | Standby: 35 mA | mA | |
| | | Alarm: 145 mA | | mA |
| 5880 LED I/O Module | | Standby: 35 mA | mA | |
| | | Alarm: 200 mA | | mA |
| 5883 Relay Interface | | Standby: 0 mA | mA | |
| | | Alarm: (22 mA/relay) 220 mA | | mA |
| ECS-50W Voice Amplifier with/without ECS-CE4 | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| ECS-125W Voice Amplifier with/without ECS-CE4 | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| ECS-INT50W Internal Amplifier | | Standby: 52 mA | mA | |
| | | Alarm @ 25V: 275 mA | | mA |
| | | Alarm @ 70V: 310 mA | | mA |
| ECS-DUAL50W Dual Voice Amp | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| ECS-50WBU Back-Up Amplifier | | Standby/Alarm: 10 mA | mA | mA |
| ECS-VCM Voice Control Module | | Standby: 70 mA | mA | |
| | | Alarm: 100 mA | | mA |
| ECS-NVCM Voice Control Module | | Standby/Alarm: 59 mA | mA | mA |
| ECS-RVM Remote Voice Module | | Standby: 60 mA | | |
| | | Alarm: 80 mA | | |
| ECS-SW24 Switch Expander | | Standby: 10 mA | mA | |
| | | Alarm: 25 mA | | mA |
| ECS-RPU Remote Paging Unit | | Standby: 70 mA | mA | |
| | | Alarm: 100 mA | | mA |
| ECS-LOC Local Operating Console | | Standby: 93 mA | mA | |
| | | Alarm: 133 mA | | mA |
| ECS-LOC Local Operating Console with one ECS-SW24 | | Standby: 103 mA | mA | |
| | | Alarm: 158 mA | | mA |
| ECS-LOC2100 Local Operating Console | | Standby: 93 mA | mA | |
| | | Alarm: 133 mA | | mA |
| ECS-LOC2100 Local Operating Console with one ECS-SW24 Expander | | Standby: 103 mA | mA | |
| | | Alarm: 158 mA | | mA |
| ECS-LOC2100 Local Operating Console with two ECS-SW24 Expanders | | Standby: 113 mA | mA | |
| | | Alarm: 183 mA | | mA |
| Network Cards | | | | |
| SK-NIC Network Interface Card | | Standby/Alarm: 21 mA | mA | mA |
| SK-FML Fiber Optic Multi Mode | | Standby/Alarm: 53 mA | mA | mA |
| SK-FSL Fiber Optic Single Mode | | Standby/Alarm: 79 mA | mA | mA |
| Wireless Modules | | | | |
| WIDP-WGI Wireless Gateway | | Max current using ext supply 40 mA | mA | mA |
| | | Max current SLC Power 24 mA | mA | mA |
| A Total System Current | | | | |
| Auxiliary Devices | Refer to devices manual for current rating | | | |

Table 3.2 Current Draw Worksheet for IDP SLC Devices (Continued)

| | Device | # of Devices | Current per Device | Standby Current | Alarm Current |
|---|---|---|--------------------|-----------------|---------------|
| | IPDACT-2 IP Communicator | | Standby: 93 mA | mA | |
| | | | Alarm: 136 mA | | mA |
| | IPDACT-2UD IP Communicator | | Standby: 98 mA | mA | |
| | | | Alarm: 155 mA | | mA |
| | CELL-MOD/CELL-CAB-SK | | Standby: 55 mA | mA | |
| | | | Alarm: 100 mA | | mA |
| | HWF2-COM Series | | Standby: 210 mA | mA | |
| | | | Alarm: 290 mA | | mA |
| | | | Alarm/Standby: mA | mA | mA |
| | | | Alarm/Standby: mA | mA | mA |
| B | Auxiliary Devices Current ⁶ | | | | |
| | Notification Devices | Refer to device manual for current rating | | | |
| | 5495/5499 Power Supply | | Standby: 75 mA | | mA |
| | | | Alarm: 205 mA | | mA |
| | | | Alarm: mA | | mA |
| | | | Alarm: mA | | mA |
| | | | Alarm: mA | | mA |
| C | Notification Appliances Current | | | | mA |
| D | Total current ratings of all devices in system (line A + line B + C) | | | mA | mA |
| E | Total current ratings converted to amperes (line D x 0.001): | | | A | A |
| F | Number of standby hours | | | H | |
| G | Multiply lines E and F. Total standby AH | | | AH | |
| H | Alarm sounding period in hours. (For example, 5 minutes = 0.0833 hours) | | | | H |
| I | Multiply lines E and H. Total alarm AH | | | | AH |
| J | Add lines G and I. | | | AH | |
| | Multiply by the Derating Factor | | | 1.25 | |
| | Total ampere hours required ⁷ | | | AH | |

Table 3.2 Current Draw Worksheet for IDP SLC Devices (Continued)

- 1 The FACP can only support 5 devices with LEDs on. The current draw has been added to the panels alarm current.
- 2 Total does not include isolator devices or accessory bases.
- 3 The IDP-BEAM-T draws a maximum of 500mA from auxiliary power when the test feature is used. This should be considered when determining auxiliary power capacity but not calculated into current requirements for everyday operation.
- 4 The IDP-PHOTO-R/-W/-IV is sold separately from the DNR. Current draw for the DNR + IDP-PHOTO-R/-W/-IV is calculated by increasing the "Number of Devices" column for each IDP-PHOTO-R/-W/-IV used with a DNR.
- 5 Maximum SBUS address capacity is determined by the amount of SBUS bandwidth consumed by each SBUS module. Refer to Section 4.6.2 for SBUS limitations.
- 6 If there are door holders in the system, there is no need to consider door holder current for alarm/battery standby, because power is removed during that time. However, during normal operation, door holders draw current and must be included in the 1.8 A total current that can be drawn from the panel.
- 7 Use next size battery with capacity greater than required.

3.5.3 Current Draw Worksheet for SK SLC Devices

Use Table 3.3 to determine the current requirements during the alarm/battery standby operation when SK SLC devices are installed. You can install up to 300 SLC devices, consisting of any combination of sensors and modules.

| Device | # of Devices | Current per Device | | Standby Current | Alarm Current |
|---|--------------|--------------------|-------------------------------|-----------------|---------------------|
| For each device, use this formula: This column X This column = Current per number of devices. | | | | | |
| Fire Panel (Current draw from battery) | 1 | Standby | 190 mA | 190 mA | |
| | | Alarm: | 250 mA | | 250 mA ¹ |
| Addressable SLC Detectors | | | | | |
| SK-PHOTO | | | | mA | mA |
| SK-PHOTO-T | | | | mA | mA |
| SK-PHOTO-R | | | | mA | mA |
| SK-HEAT | | Standby: Alarm: | 0.3 mA 6.5 mA ² | mA | mA |
| SK-HEAT-HT | | | | mA | mA |
| SK-HEAT-ROR | | | | mA | mA |
| SK-ACCLIMATE | | | | mA | mA |
| SK-PHOTO-W | | | | mA | mA |
| SK-PHOTO-T-W | | | | mA | mA |
| SK-PHOTO-R-W | | | | mA | mA |
| SK-HEAT-W | | Standby: Alarm: | 0.2 mA 4.5 mA ² | mA | mA |
| SK-HEAT-HT-W | | | | mA | mA |
| SK-HEAT-ROR-W | | | | mA | mA |
| SK-PHOTO-CO-W | | | | mA | mA |
| SK-CO-W | | | | mA | mA |
| SK-BEAM (without integral test) | | SLC | Standby/Alarm: 2 mA | mA | mA |
| | | Aux. Pwr | Standby: 2 mA | mA | |
| | | | Alarm: 8.5 mA | | mA |
| SK-BEAM-T ³ (with integral test) | | SLC | Standby/Alarm: 2 mA | mA | mA |
| | | Aux. Pwr | Standby: 2 mA | mA | |
| | | | Alarm: 8.5 mA | | mA |
| OSI-RI-SK | | SLC | Standby/Alarm: 20 mA | mA | mA |
| | | Aux. Pwr | Standby: 22 mA | mA | |
| | | | Alarm: 20 mA | | mA |
| SK-FIRE-CO | | SLC | Standby: 0.30 mA | mA | |
| | | | Alarm: 7 mA | | mA |
| SK-FIRE-CO-W | | SLC | Standby: 0.20 mA | mA | |
| | | | Alarm: 4.5 mA | | mA |
| SK-PTIR-W | | SLC | Standby: 0.20 mA | mA | |
| | | | Alarm: 4.5 mA | | mA |
| Addressable SLC Modules | | | | | |
| SK-MONITOR | | | Standby/Alarm 0.375 mA | mA | mA |
| SK-MINIMON | | | Standby/Alarm 0.375 mA | mA | mA |
| SK-PULL-SA/SK-PULL-DA | | | Standby/Alarm 0.3 mA | mA | mA |
| SK-MONITOR-2 | | | Standby/Alarm: 0.75 mA | mA | mA |
| SK-MONITOR-10 | | | Standby/Alarm: 3.5 mA | mA | mA |
| SK-CONTROL | | SLC | Standby 0.375 mA | mA | |
| | | | Alarm: 0.375 mA | | mA |
| | | Aux Pwr | Standby 1.7 mA | mA | |
| | | | Alarm: 6.5mA | | mA |

Table 3.3 Current Draw Worksheet for SK SLC Devices

| Device | # of Devices | Current per Device | | Standby Current | Alarm Current | |
|--|--------------|--------------------------|-------------------|-----------------|---------------|----|
| SK-CONTROL-6 | | SLC | Standby | 2.65 mA | mA | |
| | | | Alarm: | 35 mA | | mA |
| | | Aux Pwr | Standby | 8 mA | mA | |
| | | | Alarm: | 20 mA | | mA |
| SK-RELAY | | Standby/Alarm: | | 0.255 mA | mA | mA |
| SK-RELAY-6 | | Standby: | | 1.9 mA | mA | |
| | | Alarm: | | 32 mA | | mA |
| SK-RELAYMON-2 | | Standby: | | 1.3 mA | mA | |
| | | Alarm: | | 24 mA | | mA |
| SK-ZONE | | Aux Pwr | Standby | 12 mA | mA | |
| | | | Alarm: | 90 mA | | mA |
| | | SLC | Standby: | 0.27 mA | mA | |
| | | | Alarm: | 5.1 mA | | |
| SK-ZONE-6 | | Aux Pwr | Standby | 50 mA | mA | |
| | | | Alarm: | 70 mA | | mA |
| | | SLC | Standby | 2.3 mA | mA | |
| | | | Alarm: | 40 mA | | mA |
| SLC Accessories | | | | | | |
| B200SR/-W/-IV Sounder Base | | Aux Pwr | Standby: | 0.5 mA | mA | |
| | | | Alarm: | 35 mA | | mA |
| | | SLC | Standby | 0.3 mA | mA | |
| B200S/-W/-IV Intelligent Sounder Base | | Aux Pwr | Standby: | 0.5 mA | mA | |
| | | | Alarm: (high vol) | 35 mA | | mA |
| | | SLC | Standby | 0.3 mA | mA | |
| B200SR-LF/-W/-IV Low Frequency Sounder Base | | Aux Pwr | Standby: | 1 mA | mA | |
| | | | Alarm: | 125 mA | | mA |
| B200S-LF/-W/-IV Intelligent Low Frequency Sounder Base | | Aux Pwr | Standby | 0.55 mA | mA | |
| | | | Alarm (high vol) | 140 mA | | mA |
| | | SLC | Standby | 0.30 mA | mA | |
| B224RB/-W/-IV Relay Base | | Standby/Alarm: | | 0.17 mA | mA | mA |
| RTS151 | | Alarm: | | 10 mA | | mA |
| RTS151KEY | | Alarm: | | 12 mA | | mA |
| RA100Z | | Alarm: | | 10 mA | | mA |
| SLC Isolator Devices | | | | | | |
| SK-ISO (Isolator Module) | | Standby: | | 0.45 mA | mA | mA |
| | | Isolation: | | 17 mA | | |
| ISO-6 (6 Fault Isolator Module) | | Standby: (per circuit) | | 0.45 mA | mA | |
| | | Isolation: (per circuit) | | 17 mA | | mA |
| B224BI/-W/-IV Isolator Base | | Standby: | | 0.45 mA | mA | |
| | | Isolation: | | 15 mA | | mA |
| Accessories Modules ⁴ | | | | | | |
| 6815 SLC Loop Expander | | Standby: | | 78 mA | mA | |
| | | Alarm: | | 78 mA | | mA |
| RA-2000 Remote LCD Annunciator | | Standby: | | 35 mA | mA | |
| | | Alarm: | | 53 mA | | mA |
| RA-1000 Remote LCD Annunciator | | Standby: | | 58 mA | mA | |
| | | Alarm: | | 68 mA | | mA |
| RA-100 Remote LCD Annunciator | | Standby: | | 59 mA | mA | |
| | | Alarm: | | 92 mA | | mA |

Table 3.3 Current Draw Worksheet for SK SLC Devices (Continued)

| Device | # of Devices | Current per Device | Standby Current | Alarm Current |
|---|--|------------------------------------|-----------------|---------------|
| 5824 Serial/Parallel Module | | Standby/Alarm: 45 mA | mA | mA |
| 5496 NAC Expander | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| RPS-1000 Power Supply | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| 5865-4 LED Annunciator (with reset and silence switches) | | Standby: 35 mA | mA | |
| | | Alarm: 145 mA | | mA |
| 5865-3 LED Annunciator Module | | Standby: 35 mA | mA | |
| | | Alarm: 145 mA | | mA |
| 5880 LED I/O Module | | Standby: 35 mA | mA | |
| | | Alarm: 200 mA | | mA |
| 5883 Relay Interface | | Standby: 0 mA | mA | |
| | | Alarm: (22 mA/relay) 220 mA | | mA |
| ECS-50W Voice Amplifier with/without ECS-CE4 | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| ECS-125W Voice Amplifier with/without ECS-CE4 | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| ECS-INT50W Internal Amplifier | | Standby: 52 mA | mA | |
| | | Alarm @ 25V: 275 mA | | mA |
| | | Alarm @ 70V: 310 mA | | mA |
| ECS-DUAL50W Dual Voice Amp | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| ECS-50WBU Back-Up Amplifier | | Standby/Alarm: 10 mA | mA | mA |
| ECS-VCM Voice Control Module | | Standby: 70 mA | mA | |
| | | Alarm: 100 mA | | mA |
| ECS-NVCM Voice Control Module | | Standby/Alarm: 59 mA | mA | mA |
| ECS-RVM Remote Voice Module | | Standby: 60 mA | | |
| | | Alarm: 80 mA | | |
| ECS-SW24 Switch Expander | | Standby: 10 mA | mA | |
| | | Alarm: 25 mA | | mA |
| ECS-RPU Remote Paging Unit | | Standby: 70 mA | mA | |
| | | Alarm: 100 mA | | mA |
| ECS-LOC Local Operating Console | | Standby: 93 mA | mA | |
| | | Alarm: 133 mA | | mA |
| ECS-LOC Local Operating Console with one ECS-SW24 | | Standby: 103 mA | mA | |
| | | Alarm: 158 mA | | mA |
| ECS-LOC2100 Local Operating Console | | Standby: 93 mA | mA | |
| | | Alarm: 133 mA | | mA |
| ECSLOC2100 Local Operating Console with one ECS-SW24 Expander | | Standby: 103 mA | mA | |
| | | Alarm: 158 mA | | mA |
| ECS-LOC2100 Local Operating Console with two ECS-SW24 Expanders | | Standby: 113 mA | mA | |
| | | Alarm: 183 mA | | mA |
| Network Cards | | | | |
| SK-NIC Network Interface Card | | Standby/Alarm: 21 mA | mA | mA |
| SK-FML Fiber Optic Multi Mode | | Standby/Alarm: 53 mA | mA | mA |
| SK-FSL Fiber Optic Single Mode | | Standby/Alarm: 79 mA | mA | mA |
| Wireless Modules | | | | |
| WIDP-WGI Wireless Gateway | | Max current using ext supply 40 mA | mA | mA |
| | | Max current SLC Power 24 mA | mA | mA |
| Total System Current | | | | |
| Auxiliary Devices | Refer to devices manual for current rating | | | |

Table 3.3 Current Draw Worksheet for SK SLC Devices (Continued)

| Device | # of Devices | Current per Device | Standby Current | Alarm Current |
|--|---|--------------------|-----------------|---------------|
| IPDACT-2 IP Communicator | | Standby: 93 mA | mA | |
| | | Alarm: 136 mA | | mA |
| IPDACT-2UD IP Communicator | | Standby: 98 mA | mA | |
| | | Alarm: 155 mA | | mA |
| CELL-MOD/CELL-CAB-SK | | Standby: 55 mA | mA | |
| | | Alarm: 100 mA | | mA |
| HWF2-COM Series | | Standby: 210 mA | mA | |
| | | Alarm: 290 mA | | mA |
| | | Alarm/Standby: mA | mA | mA |
| | | Alarm/Standby: mA | mA | mA |
| B Auxiliary Devices Current⁵ | | | | |
| Notification Devices | Refer to device manual for current rating | | | |
| 5495/5499 Power Supply | | Standby: 75 mA | | mA |
| | | Alarm: 205 mA | | mA |
| | | Alarm: mA | | mA |
| | | Alarm: mA | | mA |
| | | Alarm: mA | | mA |
| C Notification Appliances Current | | | | mA |
| D Total current ratings of all devices in system (line A + line B + C) | | | mA | mA |
| E Total current ratings converted to amperes (line D x 0.001): | | | A | A |
| F Number of standby hours | | | H | |
| G Multiply lines E and F. Total standby AH | | | AH | |
| H Alarm sounding period in hours. (For example, 5 minutes = 0.0833 hours) | | | | H |
| I Multiply lines E and H. Total alarm AH | | | | AH |
| J Add lines G and I. | | | AH | |
| Multiply by the Derating Factor | | | 1.25 | |
| Total ampere hours required⁶ | | | AH | |

Table 3.3 Current Draw Worksheet for SK SLC Devices (Continued)

- 1 The FACP can only support 5 devices with LEDs on. The current draw has been added to the panels alarm current.
- 2 Total does not include isolator devices or accessory bases.
- 3 The SK-BEAM-T draws a maximum of 500mA from auxiliary power when the test feature is used. This should be considered when determining auxiliary power capacity but not calculated into current requirements for everyday operation.
- 4 Maximum SBUS address capacity is determined by the amount of SBUS bandwidth consumed by each SBUS module. Refer to Section 4.6.2 for SBUS limitations.
- 5 If there are door holders in the system, there is no need to consider door holder current for alarm/battery standby, because power is removed during that time. However, during normal operation, door holders draw current and must be included in the 1.8 A total current that can be drawn from the panel.
- 6 Use next size battery with capacity greater than required.

3.5.4 Current Draw Worksheet for SD SLC Devices

Use Table 3.4 to determine current requirements during the alarm/battery standby operation when the SD SLC devices are installed. You can install up to 127 SD devices per panel, in any combination.

| Device | # of Devices | Current per Device | Standby Current | Alarm Current |
|---|--------------|--------------------|-----------------|---------------------|
| For each device, use this formula: This column X This column = Current per number of devices. | | | | |
| Fire Panel (Current draw from battery) | 1 | Standby 190 mA | 190 mA | |
| | | Alarm: 250 mA | | 250 mA ¹ |

Table 3.4 Current Calculation Worksheet for SD Devices

| Device | # of Devices | Current per Device | | Standby Current | Alarm Current |
|--|--------------|-------------------------------------|---|-----------------|---------------|
| SD500-AIM | | Standby/Alarm: 0.55 mA ² | | mA | mA |
| SD500-MIM | | | | mA | mA |
| SD500-PS | | | | mA | mA |
| SD500-ARM | | | | mA | mA |
| SD505-HEAT | | | | mA | mA |
| SD505-PHOTO | | | | mA | mA |
| SD500-ANM | | Aux. Pwr | Standby: 8 mA | mA | |
| | | | Alarm: 60 mA | | mA |
| | | SLC | Standby/Alarm: 0.55 mA | mA | mA |
| SD500-SDM | | SLC | Standby/Alarm: 0.55 mA | mA | mA |
| | | Aux. Pwr | Standby: 20 mA | mA | |
| | | | Alarm: 106 mA | | mA |
| SLC Accessory Base | | | | | |
| SD505-6RB | | Standby/Alarm: 0.082 mA | | mA | mA |
| SD505-6SB | | Aux. Pwr | Standby: 1 mA | mA | |
| | | | Alarm: 32 mA | | mA |
| | | SLC | Standby/Alarm: 0.082 mA | mA | mA |
| SD505-DUCTR | | Aux. Pwr | Standby: 20 mA ³ | mA | |
| | | | Alarm: 62 mA ³ | | mA |
| | | SLC | Standby/Alarm: 0.5 mA | mA | mA |
| SD505-DTS-K | | | None, included with SD505-DUCTR worst case. | | |
| SD505-DUCT | | SLC | Standby/Alarm 0.5 mA | mA | mA |
| SLC Isolator Devices | | | | | |
| SD505-LIM | | Standby/Alarm 0.092 mA | | mA | mA |
| SD505-6IB | | | | | |
| Accessories Modules ⁴ | | | | | |
| 5815XL SLC Expander | | Standby/Alarm: 55 mA | | mA | mA |
| RA-2000 Remote LCD Annunciator | | Standby: 35 mA | | mA | |
| | | Alarm: 53 mA | | | mA |
| RA-1000 Remote LCD Annunciator | | Standby: 58 mA | | mA | |
| | | Alarm: 68 mA | | | mA |
| RA-100 Remote LCD Annunciator | | Standby: 59 mA | | mA | |
| | | Alarm: 92 mA | | | mA |
| 5824 Serial/Parallel Module | | Standby/Alarm: 45 mA | | mA | mA |
| 5496 NAC Expander | | Standby/Alarm (SBUS): 10 mA | | mA | mA |
| RPS-1000 Power Supply | | Standby/Alarm (SBUS): 10 mA | | mA | mA |
| 5865-4 LED Annunciator (with reset and silence switches) | | Standby: 35 mA | | mA | |
| | | Alarm: 145 mA | | | mA |
| 5865-3 LED Annunciator Module | | Standby: 35 mA | | mA | |
| | | Alarm: 145 mA | | | mA |
| 5880 LED I/O Module | | Standby: 35 mA | | mA | |
| | | Alarm: 200 mA | | | mA |
| 5883 Relay Interface | | Standby: 0 mA | | mA | |
| | | Alarm: (22 mA/relay) 220 mA | | | mA |
| ECS-50W Voice Amplifier with/without ECS-CE4 | | Standby/Alarm (SBUS): 10 mA | | mA | mA |

Table 3.4 Current Calculation Worksheet for SD Devices (Continued)

| Device | # of Devices | Current per Device | Standby Current | Alarm Current |
|---|--------------|--|-----------------|---------------|
| ECS-125W Voice Amplifier with/without ECS-CE4 | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| ECS-INT50W Internal Amplifier | | Standby: 52 mA | mA | |
| | | Alarm @ 25V: 275 mA | | mA |
| | | Alarm @ 70V: 310 mA | | mA |
| ECS-DUAL50W Dual Voice Amp | | Standby/Alarm (SBUS): 10 mA | mA | mA |
| ECS-50WBU Back-Up Amplifier | | Standby/Alarm: 10 mA | mA | mA |
| ECS-VCM Voice Control Module | | Standby: 70 mA | mA | |
| | | Alarm: 100 mA | | mA |
| ECS-NVCM Voice Control Module | | Standby/Alarm: 59 mA | mA | mA |
| ECS-RVM Remote Voice Module | | Standby: 60 mA | | |
| | | Alarm: 80 mA | | |
| ECS-SW24 Switch Expander | | Standby: 10 mA | mA | |
| | | Alarm: 25 mA | | mA |
| ECS-RPU Remote Paging Unit | | Standby: 70 mA | mA | |
| | | Alarm: 100 mA | | mA |
| ECS-LOC Local Operating Console | | Standby: 93 mA | mA | |
| | | Alarm: 133 mA | | mA |
| ECS-LOC Local Operating Console with one ECS-SW24 | | Standby: 103 mA | mA | |
| | | Alarm: 158 mA | | mA |
| ECS-LOC2100 Local Operating Console | | Standby: 93 mA | mA | |
| | | Alarm: 133 mA | | mA |
| ECSLOC2100 Local Operating Console with one ECS-SW24 Expander | | Standby: 103 mA | mA | |
| | | Alarm: 158 mA | | mA |
| ECS-LOC2100 Local Operating Console with two ECS-SW24 Expanders | | Standby: 113 mA | mA | |
| | | Alarm: 183 mA | | mA |
| Network Cards | | | | |
| SK-NIC Network Interface Card | | Standby/Alarm: 21 mA | mA | mA |
| SK-FML Fiber Optic Multi Mode | | Standby/Alarm: 53 mA | mA | mA |
| SK-FSL Fiber Optic Single Mode | | Standby/Alarm: 79 mA | mA | mA |
| Wireless Modules | | | | |
| WIDP-WGI Wireless Gateway | | Max current using ext supply 40 mA | mA | mA |
| | | Max current SLC Power 24 mA | mA | mA |
| A Total System Current | | | | |
| Auxiliary Devices ⁵ | | Refer to devices manual for current rating | | |
| IPDACT-2 IP Communicator | | Standby: 93 mA | mA | |
| | | Alarm: 136 mA | | mA |
| IPDACT-2UD IP Communicator | | Standby: 98 mA | mA | |
| | | Alarm: 155 mA | | mA |
| CELL-MOD/CELL-CAB-SK | | Standby: 55 mA | mA | |
| | | Alarm: 100 mA | | mA |
| HWF2-COM Series | | Standby: 210 mA | mA | |
| | | Alarm: 290 mA | | mA |
| | | Alarm/Standby: mA | mA | mA |
| | | Alarm/Standby: mA | mA | mA |
| B Auxiliary Devices Current | | | | |
| Notification Devices | | Refer to device manual for current rating | | |

Table 3.4 Current Calculation Worksheet for SD Devices (Continued)

| | Device | # of Devices | Current per Device | Standby Current | Alarm Current |
|---|---|--------------|--------------------|-----------------|---------------|
| | 5495/5499 Power Supply | | Standby: 75 mA | | mA |
| | | | Alarm: 205 mA | | mA |
| | | | Alarm: mA | | mA |
| | | | Alarm: mA | | mA |
| | | | Alarm: mA | | mA |
| C | Notification Appliances Current | | | | mA |
| D | Total current ratings of all devices in system (line A + line B + C) | | | mA | mA |
| E | Total current ratings converted to amperes (line D x 0.001): | | | A | A |
| F | Number of standby hours | | | H | |
| G | Multiply lines E and F. Total standby AH | | | AH | |
| H | Alarm sounding period in hours. (For example, 5 minutes = 0.0833 hours) | | | | H |
| I | Multiply lines E and H. Total alarm AH | | | | AH |
| J | Add lines G and I. | | | AH | |
| | Multiply by the Derating Factor | | | 1.25 | |
| | Total ampere hours required ⁶ | | | AH | |

Table 3.4 Current Calculation Worksheet for SD Devices (Continued)

- 1 The FACP can only support 5 devices with LEDs on. The current draw has been added to the panels alarm current.
- 2 Total does not include isolator devices or accessory bases
- 3 If using 24 VDC aux power only. No standby or alarm current is needed for battery calculation if using 24 VAC or 120 VAC.
- 4 Maximum SBUS address capacity is determined by the amount of SBUS bandwidth consumed by each SBUS module. Refer to Section 4.6.2 for SBUS limitations.
- 5 If using door holders, you do not need to consider door holder current for alarm/battery standby, because power is removed during that time. However, during normal operation, door holders draw current and must be included in the 1.0A total current that can be drawn from the panel.
- 6 Use next size battery with capacity greater than required.

3.5.5 Maximum Battery Standby Load

Table 3.5 and Table 3.6 show the standby load calculations for the IFP-300 based on 24 and 90 hours of standby. The standby load calculations of line D in the Current Draw Calculation Worksheet must be less than the number shown in Table 3.5 and Table 3.6 for the selected battery size, standby hour and alarm time. The numbers below have a built in 20% de-rating factor for the battery amp-hour capacity.

| Rechargeable Battery Size | 24 hr Standby, 5 mins. Alarm | 24 hr Standby, 15 min alarm | 24 hr Standby, 20 min alarm |
|---------------------------|------------------------------|-----------------------------|-----------------------------|
| 17AH | 535mA | 473mA | 442mA |
| 18AH | 569mA | 506mA | 475mA |
| 24AH | 769 mA | 706mA | 675mA |
| 33AH | 1.07A | 1.01A | 975mA |
| 35AH | 1.14A | 1.07A | 1.04A |
| 40AH | 1.30A | 1.24A | 1.21A |
| 55AH | 1.80A | 1.74A | 1.71A |

Table 3.5 :Maximum Battery Standby Loads for 24 Hour Standby

| Rechargeable Battery Size | 90 hr Standby, 5 min alarm | 90 hr Standby, 15 min alarm | 90 hr Standby, 20 min alarm |
|---------------------------|----------------------------|-----------------------------|-----------------------------|
| 33 AH | N/A | N/A | N/A |
| 40 AH | 347mA | 331mA | 322mA |
| 55 AH | 480mA | 464mA | 456mA |

Table 3.6 Maximum Battery Standby Loads for 90 Hour Standby (FM Applications Only)



WARNING: BATTERY SIZE

FARENHYT DOES NOT SUPPORT THE USE OF BATTERIES SMALLER THAN THOSE LISTED IN TABLE 3.5 AND TABLE 3.6. IF YOU USE A BATTERY TOO SMALL FOR THE INSTALLATION, THE SYSTEM COULD OVERLOAD THE BATTERY RESULTING IN THE INSTALLATION HAVING LESS THAN THE REQUIRED 24 HOURS STANDBY POWER. USE TABLE 3.5 AND TABLE 3.6 TO CALCULATE THE CORRECT BATTERY AMP HOUR RATING NEEDED FOR YOUR INSTALLATION. IT IS RECOMMENDED THAT YOU REPLACE BATTERIES EVERY FIVE YEARS.

Section 4: Control Panel Installation

4.1 Mounting the Control Panel Cabinet

The IFP-300 cabinet can be surface or flush mounted. Cabinet base dimensions are 24.75"H x 14.5" W x 3.91"D. If you flush mount the cabinet, there should be 1.5" to 1.75" of cabinet extruding from the wall, this should be measured from either the top edge or bottom edge to the exterior side of the sheet rock. Do NOT flush mount in a wall designated as a fire break.

The IFP-300ECS cabinet can be surface or flush mounted. Cabinet base dimensions are 26.5"H x 20"W x 4.1"D. If you flush mount the cabinet, there should be 1.5" to 1.75" of cabinet extruding from the wall, this should be measured from either the top edge or bottom edge to the exterior side of the sheet rock. Do NOT flush mount in a wall designated as a fire break.

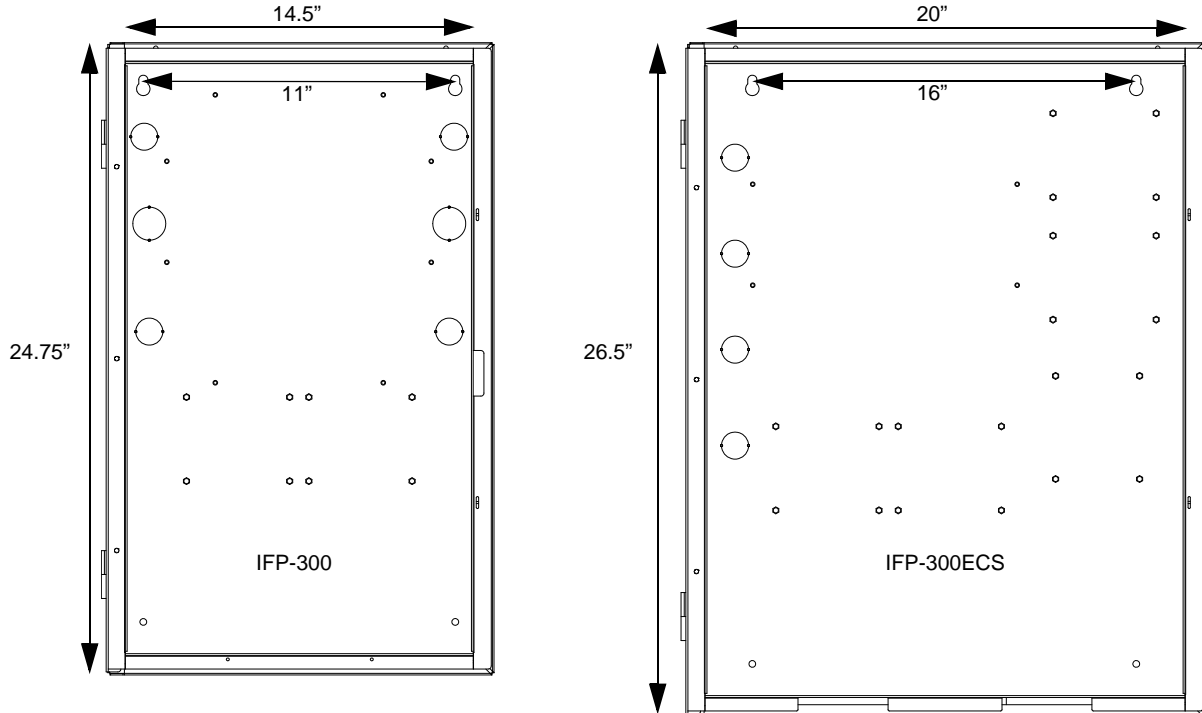


Figure 4.1 Cabinet Dimensions

4.1.1 Preventing Water Damage

Water damage to the fire system can be caused by moisture entering the cabinet through the conduits. Conduits that are installed to enter the top of the cabinet are most likely to cause water problems. Installers should take reasonable precautions to prevent water from entering the cabinet. Water damage is not covered under warranty.

4.1.2 Removing the IFP-300 Assembly from the Housing

If it should ever be necessary to remove the control panel assembly from the cabinet for repair, do so by removing the screws that hold the control panel in to the cabinet. Do not attempt to disassemble the circuit boards.

4.1.3 Ethernet Connection

The Ethernet connection is used for IP communication. For port location, see the figure below.

4.2 Board Layout

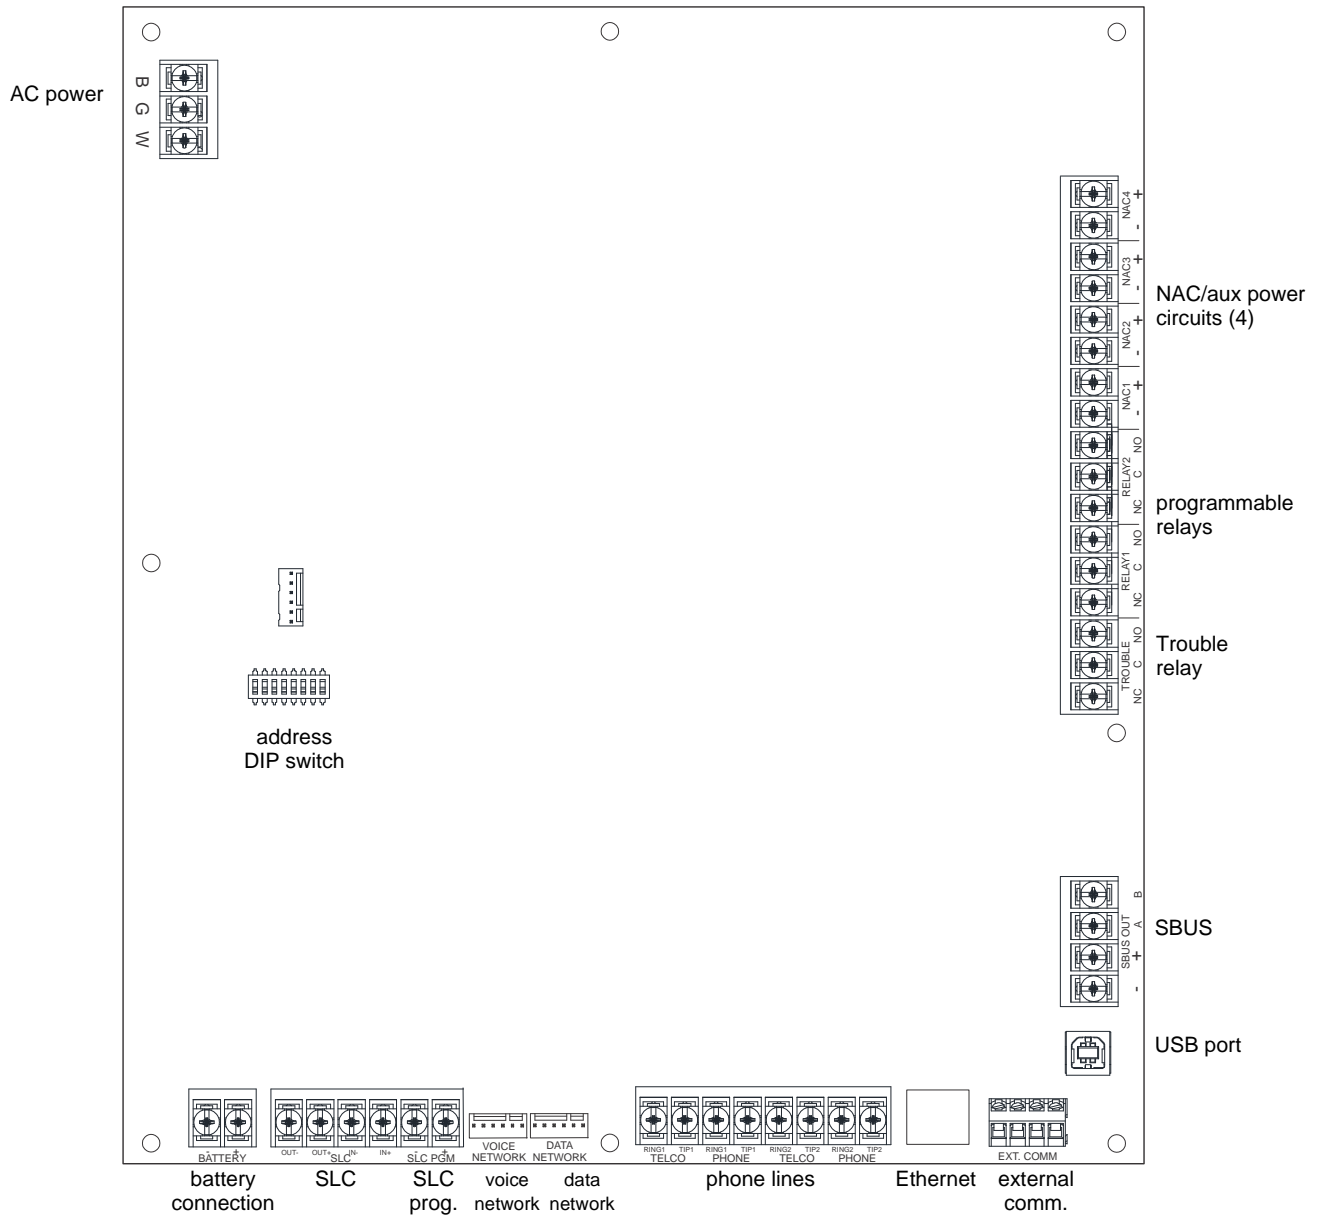


Figure 4.2 IFP-300 Board Layout

Figure 4.2 shows the circuit board that attaches the IFP-300 assembly to the cabinet. If you should need to remove the board assembly for repair, remove the nine mounting screws (six on the main circuit board and three on the heat-sink) which hold the assembly in the cabinet. Then lift the entire assembly out of the cabinet.

4.3 Wiring Specifications

Induced noise (the transfer of electrical energy from one wire to another) can interfere with telephone communication or cause false alarms. To avoid the induced noise, follow these guidelines:

- Isolate the input wiring from the high current output and power wiring. Do not pull one multi-conductor cable for the entire panel. Instead, separate the wiring as follows:

| | |
|------------------------------|--|
| High voltage: | AC power terminal |
| SLC loops: | SLC In/Out Terminals |
| POTS reporting input/output: | Phone line circuits, Ring Tip Telco, Phone Terminals |
| Notification circuits: | I/O1-I/O4 Terminals |
| SBUS: | SBUS In Terminals, Cellular communication |
| Relay circuits: | Trouble, Relay 1, Relay 2 Terminals |

Table 4.1 Wiring Specifications

- Do not pull wires from different groups through the same conduit. If you must run them together, do so for as short a distance as possible or use shielded cable. Connect the shield to earth ground at the panel. You must route high and low voltages separately.
- Route the wiring around the inside perimeter of the cabinet. It should not cross the circuit board where it could induce noise into the sensitive microelectronics or pick up unwanted RF noise from the high speed circuits. See Figure 4.3 for an example.
- High frequency noise, such as that produced by the inductive reactance of a speaker or bell, can also be reduced by running the wire through ferrite shield beads or by wrapping it around a ferrite toroid.

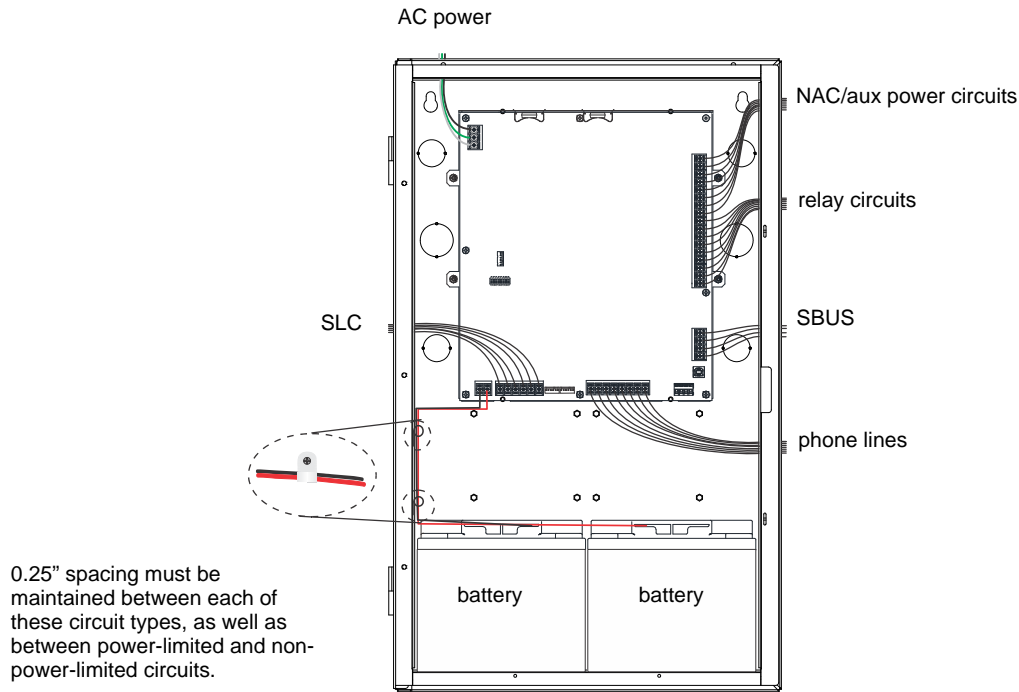


Figure 4.3 Wire Routing Example for IFP-300

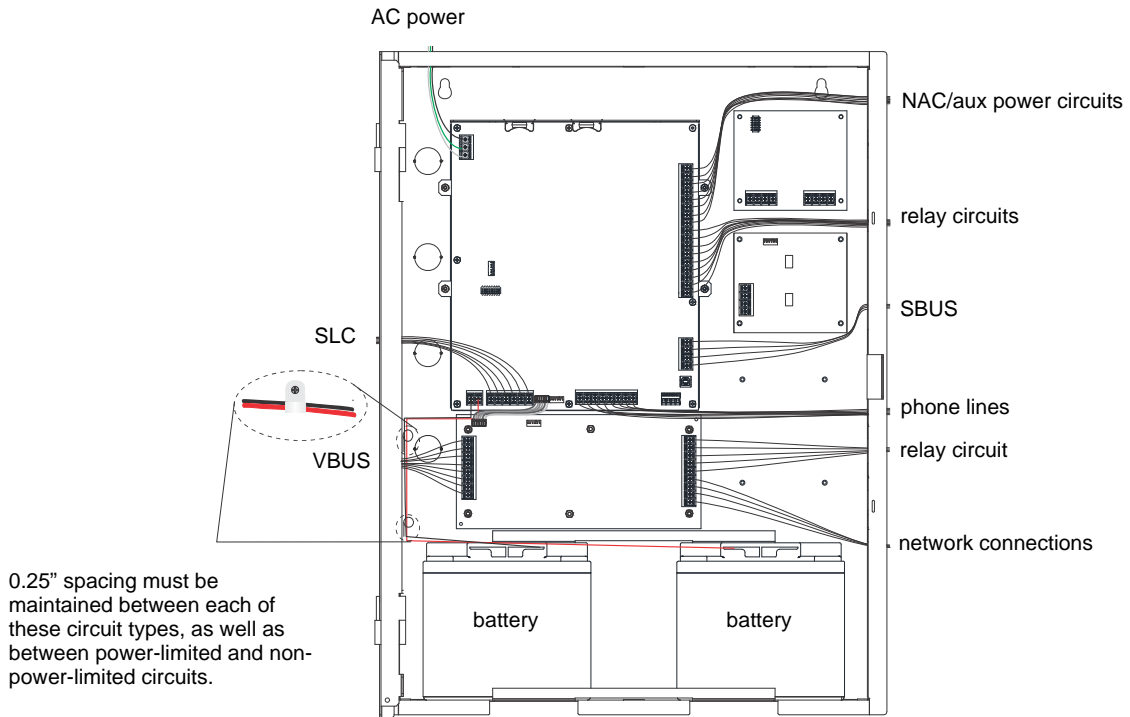


Figure 4.4 Wire Routing Example for IFP-300ECS

4.4 AC Connection

At installation, connect the AC terminals to the power source as shown in Figure 4.5. It may be necessary for a professional electrician to make this connection.



WARNING: RISK OF ELECTRICAL SHOCK AND EQUIPMENT DAMAGE

SEVERAL DIFFERENT SOURCES OF POWER CAN BE CONNECTED TO THIS PANEL. DISCONNECT ALL SOURCES OF POWER BEFORE SERVICING. THE PANEL AND ASSOCIATED EQUIPMENT MAY BE DAMAGED BY REMOVING AND/OR INSERTING CARDS, MODULES OR INTERCONNECTING CABLES WHILE THIS UNIT IS ENERGIZED.

The AC terminals are rated at 120 VAC, 60 Hz, 3.25A.

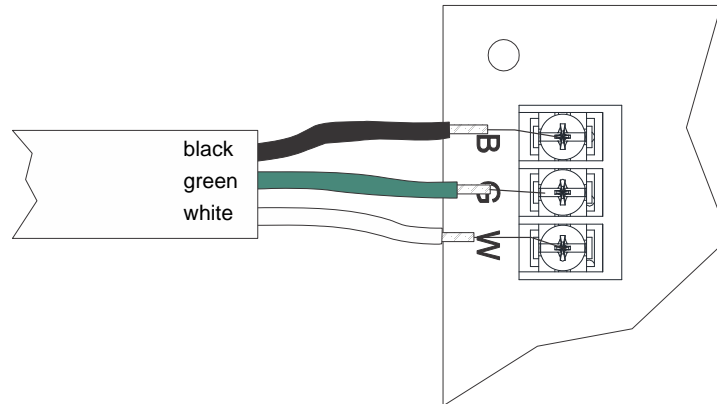


Figure 4.5 AC Power Connection

4.5 Battery Power

The batteries must be sealed lead acid type. Before connecting the batteries to the FACP, make certain that the interconnect cable between the batteries is not connected. Do not connect the battery jumper cable until the system is completely installed. Observe polarity when connecting the batteries.



WARNING: RISK OF PERSONAL INJURY

BATTERY CONTAINS SULFURIC ACID WHICH CAN CAUSE SEVERE BURNS TO THE SKIN AND EYES AND CAN DESTROY FABRICS. IF CONTACT IS MADE WITH SULFURIC ACID, IMMEDIATELY FLUSH THE SKIN OR EYES WITH WATER FOR 15 MINUTES AND SEEK IMMEDIATE MEDICAL ATTENTION.

The control panel battery charge capacity is 7.0 to 35 AH. The main control cabinet can house batteries up to 18 AH, larger capacity batteries can be housed in a RBB (see Section 4.5.1 for details). Use 12V batteries of the same AH rating. Determine the correct AH rating as per your current load calculation (see Section 3.5).

Wire batteries in series to produce a 24-volt equivalent. Do not parallel batteries to increase the AH rating. It is recommended that you replace batteries every five years.

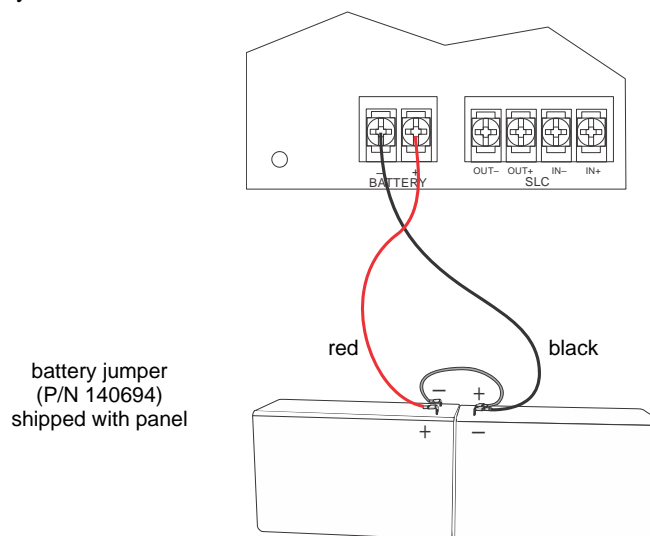


Figure 4.6 Battery Connection

4.5.1 RBB Accessory Cabinet

The RBB accessory cabinet can be used when your backup battery requirements use batteries that are too large to fit into the main control panel cabinet. The RBB cabinet holds up to the 35 AH batteries. RBB dimensions are 16" W x 10" H x 6" D (40.64 cm W x 25.4 cm H x 15.24 cm D).

Installing the RBB Accessory Cabinet and Batteries

To properly install the accessory cabinet and backup batteries, follow these steps:

To properly install the accessory cabinet and backup batteries, follow these steps:

1. Mount the accessory cabinet. See Figure 4.7 for the four cabinet mounting holes.
 - If mounting onto drywall the accessory cabinet must be mounted onto 3/4-inch plywood. This is necessary because the weight of the batteries inside the accessory cabinet could cause the cabinet to pull away from the drywall.
 - When mounting on concrete, especially when moisture is expected, attach a piece of 3/4-inch plywood to the concrete surface and then attach the RBB cabinet to the plywood.
 - If using the battery cable extenders provided (P/N 140643), mount the RBB cabinet no more than 18" away from the main control panel cabinet. This will ensure that the battery cables reach the battery terminals.

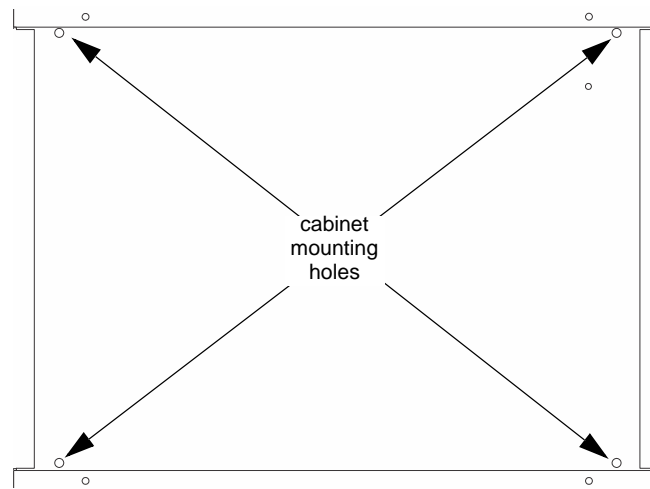


Figure 4.7 RBB Cabinet Mounting Holes

2. Connect the main control panel battery cables to the battery cable extenders as shown in Figure 4.8.

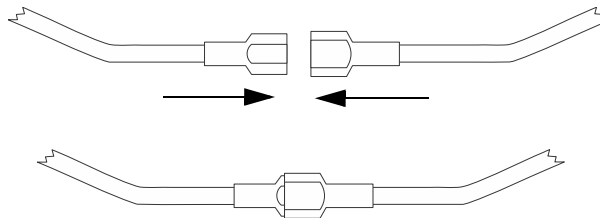


Figure 4.8 Splicing Control Panel Battery Cable to RBB Battery Cable Extenders

3. Run extended battery cable from control panel cabinet through conduit to RBB cabinet as shown below.
4. Connect battery leads to the backup battery terminals. Observe the proper polarity to prevent damage to the batteries or the control panel.

5. Insert the RBB cover screws into the cover mounting holes and screw down most of the way. Do not tighten.

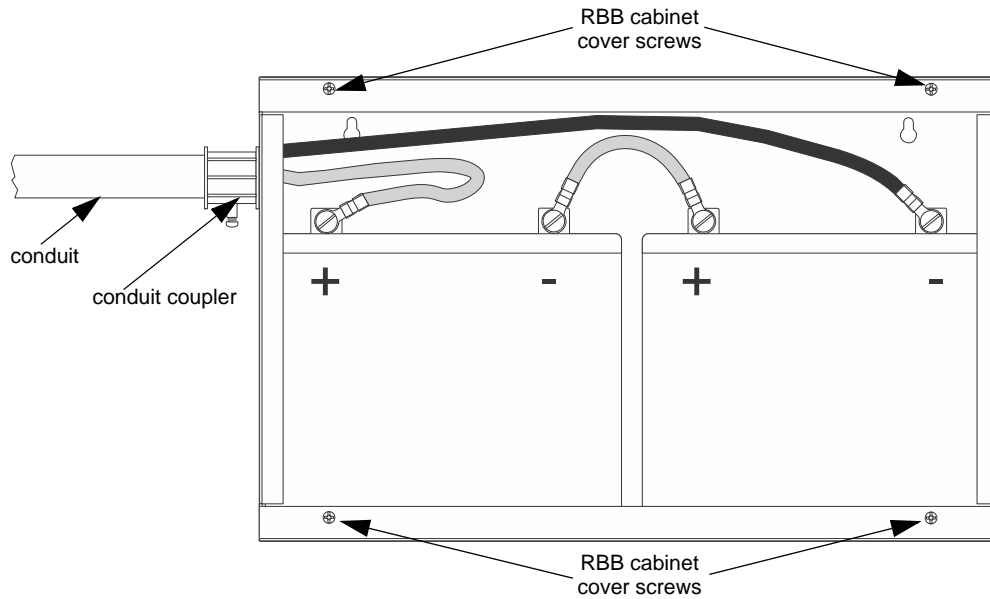


Figure 4.9 Battery Connections in the RBB Cabinet



NOTE: Figure 4.3 is an example of how the wire connections can be routed. However, any other cabinet knock-outs (on either the main control panel or the RBB cabinet), that are not previously being used may be utilized to connect conduit between the two cabinets.

6. Align the cover plate mounting keyhole over the cover mounting screws.
7. Slide the cover into place and tighten the cover mounting screws.

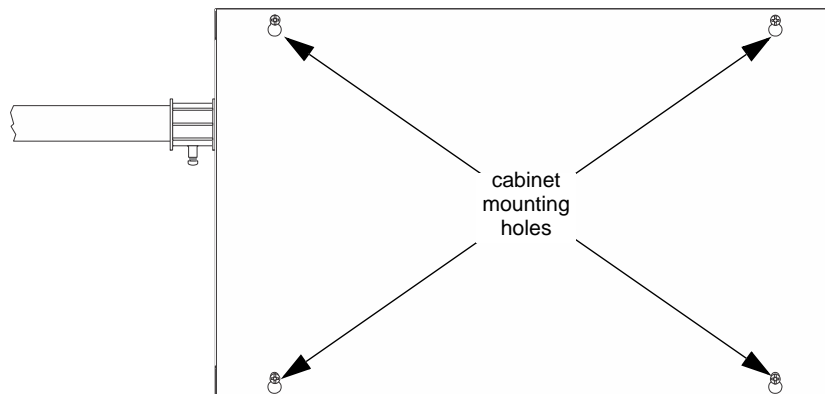


Figure 4.10 Cover Plate Mounting Keyholes and Cover Mounting Screws Alignment

4.6 Wiring Specifications

4.6.1 Length Limitations

This section contains information on calculating SBUS wire distances and the types of wiring configurations (Class A and B).

4.6.2 Calculating Wiring Distance for SBUS Modules

The following instructions will guide you in determining the type of wire and the maximum wiring distance that can be used with SBUS accessory modules.

To calculate the wire gauge that must be used to connect SBUS modules to the panel, it is necessary to calculate the total worst case current draw for all modules on a single 4-conductor bus. The total worst case current draw is calculated by adding the individual worst case currents for each module. The individual worst case values are shown in the table below.



NOTE: Total worst case current draw on a single SBUS cannot exceed 1 amp. If a large number of accessory modules are required and the worst case current draw will exceed the 1 amp limit, then the current draw must be distributed using RPS-1000 Power Expanders. Each RPS-1000 Power Expander provides an additional SBUS, with an additional 1 amp of SBUS current. Wiring distance calculations are done separately for each RPS-1000, and separately for the panel itself.

| Model Number | Worst Case Current Draw |
|---|---|
| RA-2000, RA-1000, RA-100 Fire Annunciators | 0.120 amps |
| 6815 SLC Loop Expander | 0.078 amps |
| 5815XL SLC Loop Expander | 0.150 amps |
| 5824 Serial/Parallel Printer Interface Module | 0.040 amps |
| 5880 LED I/O Module | 0.250 amps |
| 5865 LED Annunciator | 0.200 amps |
| RPS-1000 Intelligent Power Supply | 0.010 amps |
| 5496 NAC Expander | 0.010 amps |
| ECS-50W | 0.010 amps |
| ECS-125W | 0.010 amps |
| ECS-DUAL50W | 0.010 amps |
| ECS-DUAL50W with ECS-50WBU | 0.010 amps |
| ECS-VCM / ECS-VCM with ECS-SW24 ¹ | 0.115 amps per device/0.185 amps for last device |
| ECS-LOC with ECS-SW24 ¹ | 0.210 amps per device /0.325 amps for last device |
| ECS-NVCM Network Voice Control Module | 0.059 amps |
| ECS-EMG keypad | 0.06 amps |
| SK-NIC Network Interface Card | 0.021 amps |
| CELL-MOD/CELL-CAB-SK | 0.145 amps |
| SK-F485C Fiber Converter | 0.125 amps |

Table 4.2 SBUS Device Current Draw

1 All devices must use the same SBUS and VBUS.

After calculating the total worst case current draw, Table 4.3 specifies the maximum distance the modules can be located from the panel on a single wire run. The table insures 6.0 volts of line drop maximum. In general, the wire length is limited by resistance, but for heavier wire gauges, capacitance is the limiting factor.

These cases are marked in the chart with an asterisk (*). Maximum length can never be more than 6,000 feet, regardless of gauge used. (The formula used to generate this chart is shown in the chart below).

| Wiring Distance: SBUS Modules to Panel | | | | |
|--|----------|----------|------------|------------|
| Total Worst Case Current Draw (amps) | 22 Gauge | 18 Gauge | 16 Gauge | 14 Gauge |
| 0.100 | 1852 ft. | 4688 ft. | * 6000 ft. | * 6000 ft. |
| 0.200 | 926 ft. | 2344 ft. | 3731 ft. | 5906 ft. |
| 0.300 | 617 ft. | 1563 ft. | 2488 ft. | 3937 ft. |
| 0.400 | 463 ft. | 1172 ft. | 1866 ft. | 2953 ft. |
| 0.500 | 370 ft. | 938 ft. | 1493 ft. | 2362 ft. |
| 0.600 | 309 ft. | 781 ft. | 1244 ft. | 1969 ft. |
| 0.700 | 265 ft. | 670 ft. | 1066 ft. | 1687 ft. |
| 0.800 | 231 ft. | 586 ft. | 933 ft. | 1476 ft. |
| 0.900 | 206 ft. | 521 ft. | 829 ft. | 1312 ft. |
| 1.000 (Max) | 185 ft. | 469 ft. | 746 ft. | 1181 ft. |

Table 4.3 Wire Distances Per Wire Gauge

The following formulas were used to generate the wire distance chart

$$\text{Maximum Resistance (Ohms)} = \frac{6.0 \text{ Volts}}{\text{Total Worst Case Current Draw (amps)}}$$

$$\text{Maximum Wire Length (Feet)} = \frac{\text{Maximum Resistance (Ohms)}}{\text{Rpu}} \quad * 500$$

(6000 feet maximum)

where: Rpu = Ohms per 1000 feet for various Wire Gauges (see table below)

Table 4.4

| Wire Gauge | Ohms per 1000 feet (Rpu) |
|------------|--------------------------|
| 22 | 16.2 |
| 18 | 6.4 |
| 16 | 4.02 |
| 14 | 2.54 |

Table 4.5 Typical Wire Resistance Per 1000 ft.

Wiring Distance Calculation Example:

Suppose a system is configured with the following SBUS modules:

- 2 - RA-1000 Fire Annunciators
- 1 - 5496 Intelligent Power Expander
- 1 - 5865 LED Fire Annunciator
- 1 - 5824 Parallel/Serial Interface

The total worst case current is calculated as follows:

| | | |
|-------------------------------|------------------|--------------|
| RA-1000 Current Draw | = 2 x 0.100 amps | = 0.200 amps |
| RPS-1000 Current Draw | = 1 x .010 amps | = .010 amps |
| 5865 Current Draw | = 1 x 0.200 amps | = 0.200 amps |
| 5824 Current Draw | = 1 x 0.040 amps | = 0.040 amps |
| Total Worst Case Current Draw | | = 0.450 amps |

Table 4.6 Worst Case Current Draw

Using this value, and referring to the Wiring Distance table, it can be found that the available options are:

- 370 feet maximum using 22 Gauge wire
- 938 feet maximum using 18 Gauge wire
- 1493 feet maximum using 16 Gauge wire
- 2,362 feet maximum using 14 Gauge wire

4.6.3 Wiring Configurations

Figure 4.11 illustrates SBUS, Class B configuration.

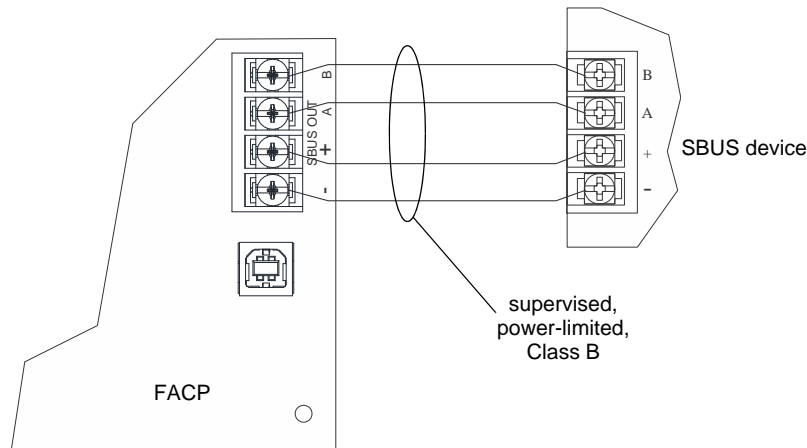


Figure 4.11 SBUS Class B Wiring

4.7 RA-100 Remote Annunciator Installation

The optional model RA-100 Remote Annunciator, is shown in Figure 4.12. The RA-100 can be surface or flush mounted. Up to 16 annunciators can be added to the IFP-300 system in any combination.

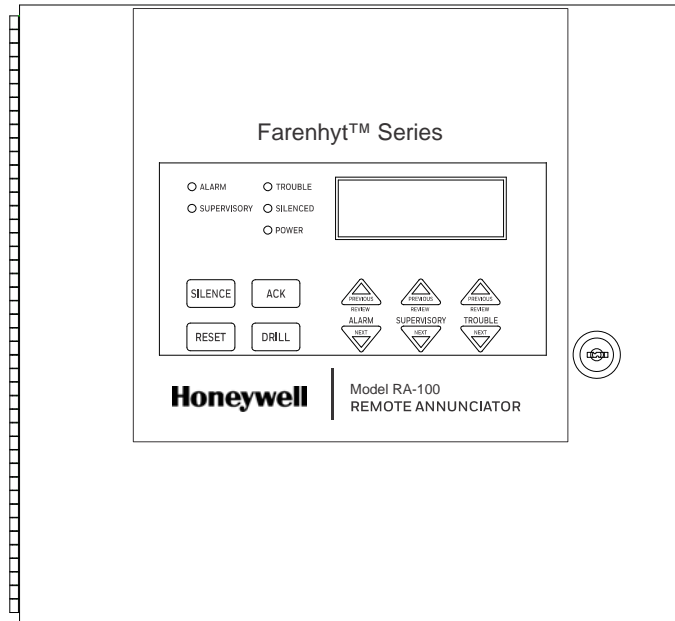


Figure 4.12 RA-100 Remote Annunciator

RA-100 installation involves the following steps:

1. Ensure power is off at the panel.
2. Mount the RA-100 in the desired location (see Section 4.7.1).
3. Connect the RA-100 to the panel (see Section 4.7.2).
4. Use the DIP switches on the back of the RA-100 to assign an ID#. (See Section Section 4.15.1.)
5. The new RA-100 module must be added to the system through programming. JumpStart Auto-Programming will add the module automatically (see Section 7.1). You can also add it manually (see Section 8.2.2). Select a name, if desired.

4.7.1 Mounting the RA-100

This section of the manual describes mounting the remote annunciator. The annunciator can be flush- or surface-mounted.

Flush Mounting

Backbox dimensions are 9-9/32" W x 8-3/8" H. Minimum depth is 2". The backbox can be mounted prior to the complete installation of the RA-100 using any of the mounting holes shown below.

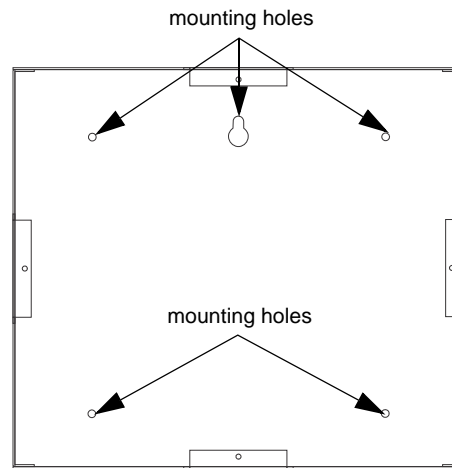


Figure 4.13 RA-100 Backbox Mounting

6. Remove knockout holes as needed for wires. There are 10 knockouts available, two on each side and two in the back of the cabinet.
7. Wire the annunciator board to the main control panel. Refer to Figure 4.16.
8. Attach the annunciator and door assembly to backbox as shown below using the supplied screws.

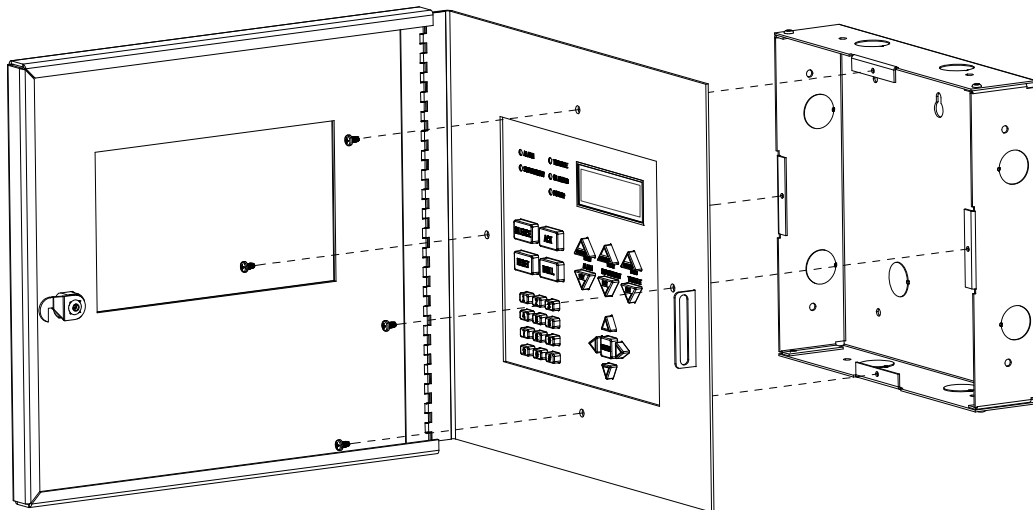


Figure 4.14 Attaching Annunciator/Door Assembly to Backbox

Surface Mounting

The optional Model RA-100TR Trim Ring Kit is available for use when surface mounting.

1. Remove the desired knockout.
2. Mark and pre-drill hole in the wall for the center top keyhole mounting bolt. Refer to Figure 4.13 for mounting hole locations.
3. Install center top fastener in the wall with the screw head protruding.
4. Place backbox over the top screw, level and secure.
5. Mark and drill the left and right upper and lower mounting holes.
6. Install remaining fasteners and tighten.
7. Run wires to the control panel. Refer to Figure 4.16.

- Place the trim ring over the back box as shown below.

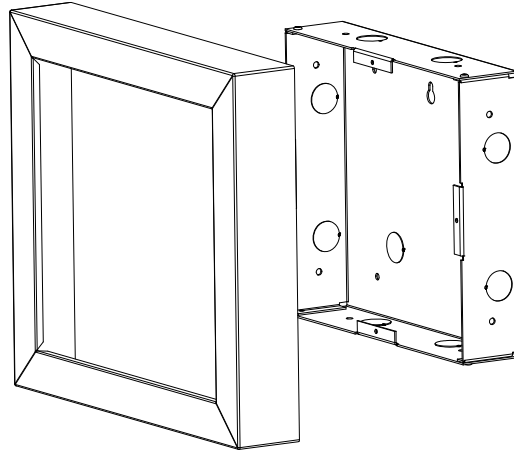


Figure 4.15 Installing Trim Ring

- Attach the door assembly to the backbox using the screws provided. Refer to Figure 4.14.

4.7.2 RA-100 Connection to the Panel

Connect the RA-100 to the panel as shown below.

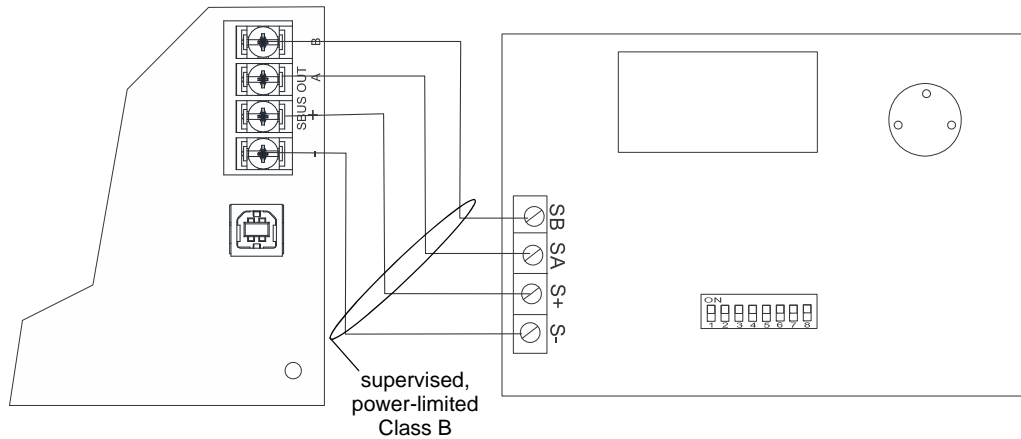


Figure 4.16 RA-100 Connection to the Panel

4.8 RA-1000 Remote Annunciator Installation

The RA-1000 is an optional remote annunciator. Up to 16 annunciators can be added to the IFP-300 system.

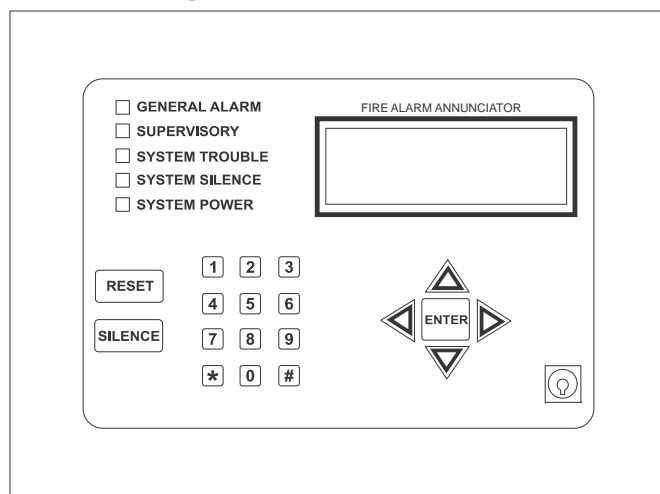


Figure 4.17 RA-1000 Remote Annunciator

RA-1000 installation involves the following steps:

1. Ensure the power is off at the panel.
2. Mount the RA-1000 in the desired location (see Section 4.8.1).
3. Connect the RA-1000 to the panel (see Figure 4.11).
4. Use the DIP switches on the back of the RA-1000 to assign an ID# to the annunciator (see Section 4.15.1).
5. The new RA-1000 module must be added to the system through programming. JumpStart will add the module automatically (see Section 7.1). You can also add it manually (see Section 8.2.2). Select a name, if desired.

4.8.1 Mounting the RA-1000

This section of the manual describes mounting the remote annunciator. The annunciator can be flush- or surface-mounted. Figure 4.18 shows the parts of the annunciator. Instructions for disassembling and mounting appear on the following pages.

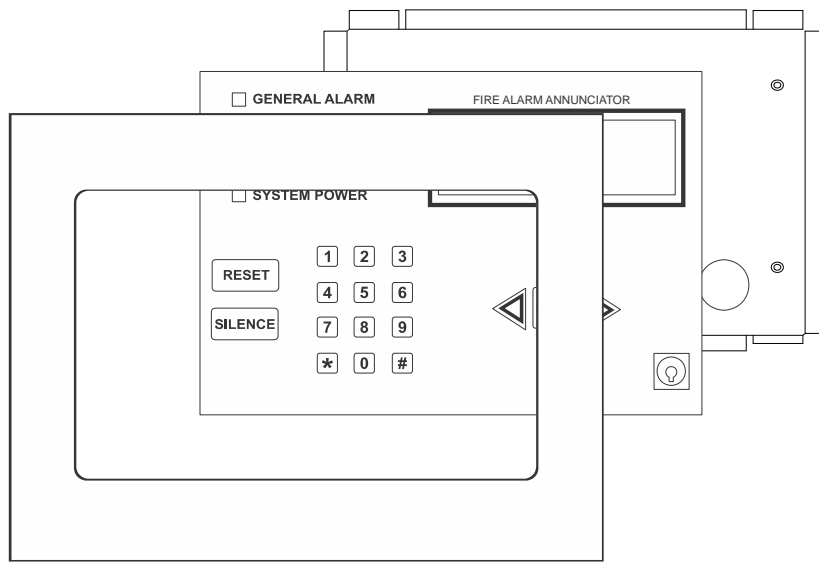


Figure 4.18 Annunciator Parts

The RA-1000 comes from the factory fully assembled. You must disassemble it for mounting. To disassemble the annunciator, use a 5/64 hex wrench to remove the set screws, located on the bottom of the annunciator bezel. (See Figure 4.19 for location of the set screws.)

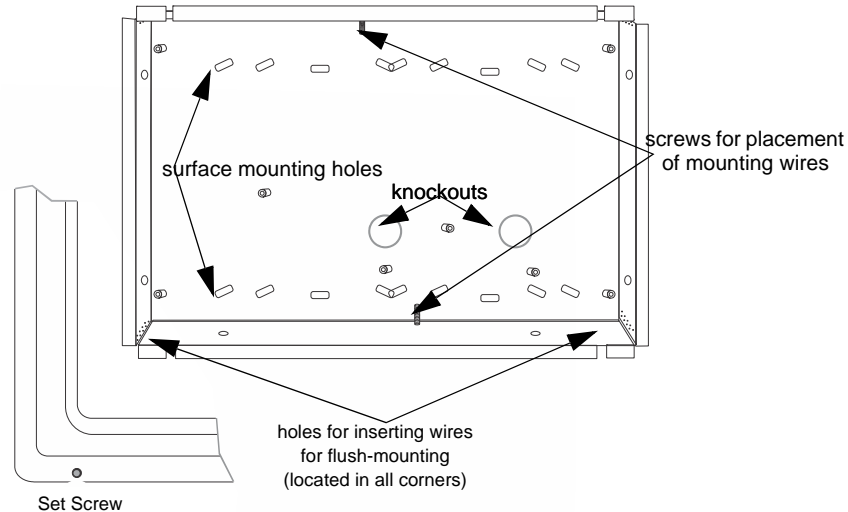


Figure 4.19 Annunciator Backbox and Bezel Details

Flush Mounting

This section of the manual describes flush mounting. You can flush-mount with or without an electrical box.

■ Flush Mounting with an Electrical Box

The RA-1000 annunciator can be used with the following types of electrical boxes: 4S, single-gang, and double-gang.

If an electrical box is used, the box must be 1-3/8" back from the face of the wall to accommodate the annunciator. Studs used with an electrical box must be 2x4" (or larger).

■ Flush Mounting Steps

1. Cut a hole in the sheet rock to the following dimensions: 8-1/4" W x 6-5/8"H. If an electrical box is used, the box must be 1-3/8" back from face of wall to accommodate the annunciator.
2. Remove knockout holes as needed for wires.
3. Fit the annunciator backbox into the hole and stabilize with mounting wires. Angle the mounting wires into the first hole past the sheet rock. Secure the wires behind the screws as shown in Figure 4.20. When all four wires are in place, the backbox should fit snugly into the hole in the sheetrock.
4. After the annunciator wiring to the panel has been completed (refer to Figure 4.11), replace the electronic assembly in the back box. Place the bezel over the back box and tighten the set screws on the bezel.

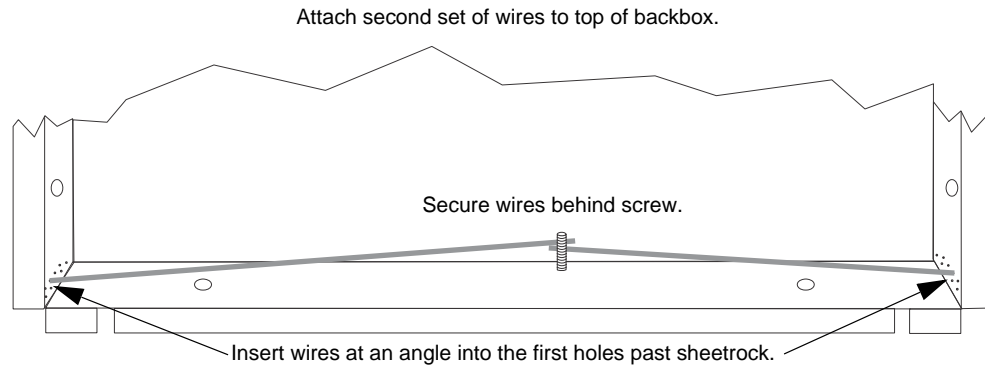


Figure 4.20 Flush Mounting the Backbox

Surface Mounting

The RA-1000 can be mounted directly to a surface or can be attached to a single, double, or four-square electrical box. Trim Ring Kit 5860TR/Gis available for use when surface mounting.

1. Drill holes in the surface to match the screw holes on the backbox. Refer to Figure 4.19 for locations.
2. Fit the trim ring over the backbox.
3. Attach the backbox to the wall using screws provided.
4. Wire the annunciator to the FACP as shown below.

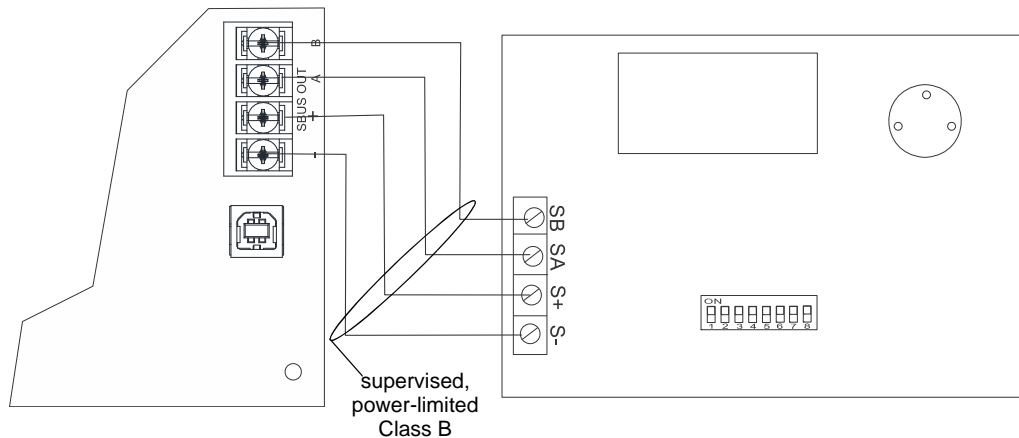


Figure 4.21 RA-1000 Connection to the Panel

5. Replace the electronic assembly in the backbox. Place the bezel over the backbox and tighten the set screws on the bezel. Refer to Figure 4.19 for location of set screws.

4.9 RA-2000 Remote Annunciator Installation

The optional RA-2000 Remote Annunciator can be surface or flush mounted. It is available in gray as RA-2000GRAY.

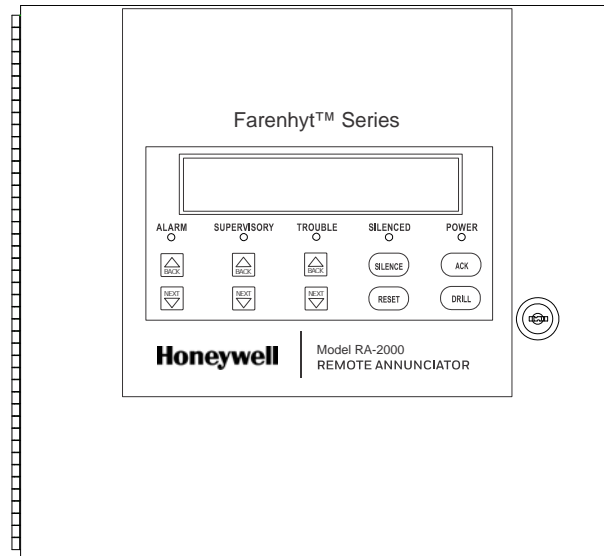


Figure 4.22 RA-2000 Remote Annunciator

RA-2000 installation involves the following steps:

1. Ensure power is off at the panel.
2. Mount the RA-2000 in the desired location (see Section 4.9.1).
3. Connect the RA-2000 to the panel (see Section 4.9.2).
4. Use the DIP switches on the back of the RA-2000 to assign an SBUS ID# (see Section 4.15.1).
5. The RA-2000 module must be added to the system through programming. JumpStart Auto-Programming will add the module automatically (see Section 7.1).

4.9.1 Mounting the RA-2000

This section of the manual describes mounting the remote annunciator. The annunciator can be flush or surface mounted.

Flush Mounting

This section of the manual describes flush mounting. Follow these steps to flush mount the RA-2000.

1. The back box dimensions are 9-1/4" W x 8-3/8" H. The minimum depth required is 2". The backbox can be mounted prior to the complete installation of the RA-2000 using any of the mounting holes shown below.

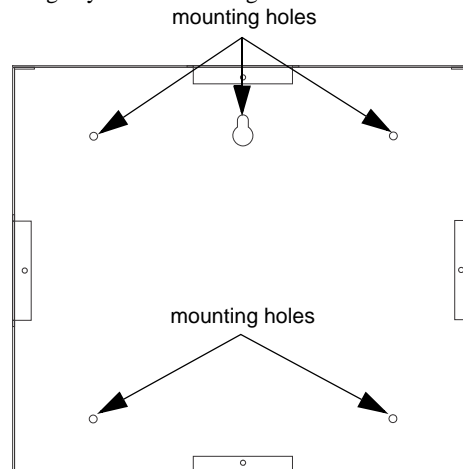


Figure 4.23 RA-2000 Backbox Mounting

2. Remove knockouts as needed for wires. There are 10 knockouts available, two on each side and two in the back of the cabinet.
3. Wire the annunciator board to the main control panel as shown in Figure 4.26.

- Attach the annunciator and door assembly to back box as shown below using the supplied screws.

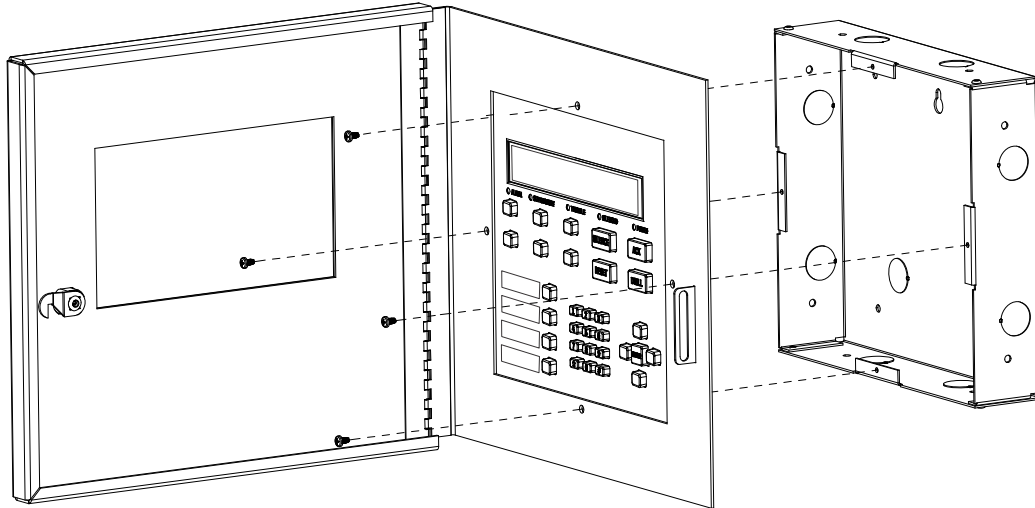


Figure 4.24 Attaching Annunciator / Door Assembly to Backbox

Surface Mounting

The RA-100TR Red Trim Ring kit and RA-100TG Gray Trim Ring kit are available for use when surface mounting the RA-2000.

- Remove the desired knockout.
- Mark and pre-drill hole in the wall for the center top keyhole mounting bolt. Refer to Figure 4.23 for mounting hole locations.
- Install center top fastener in the wall with the screw head protruding.
- Place backbox over the top screw, level and secure.
- Mark and drill the left and right upper and lower mounting holes.
- Install remaining fasteners and tighten.
- Run wires to the control panel. Refer to Figure 4.26.
- Place the trim ring over the back box as shown below.

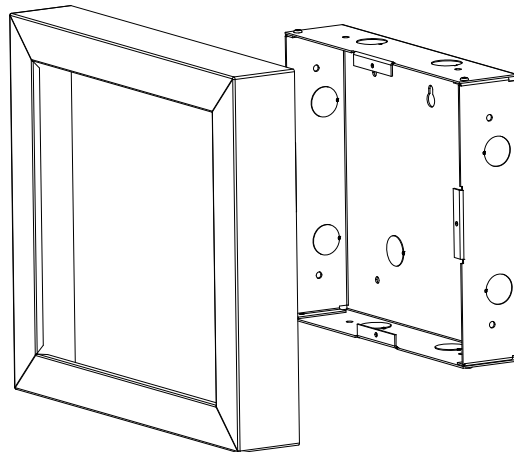


Figure 4.25 Installing Trim Ring

- Attach the door assembly to the backbox using the screws provided. Refer to Figure 4.24.

4.9.2 RA-2000 Connection to the Panel

Connect the RA-2000 to the panel as shown below.

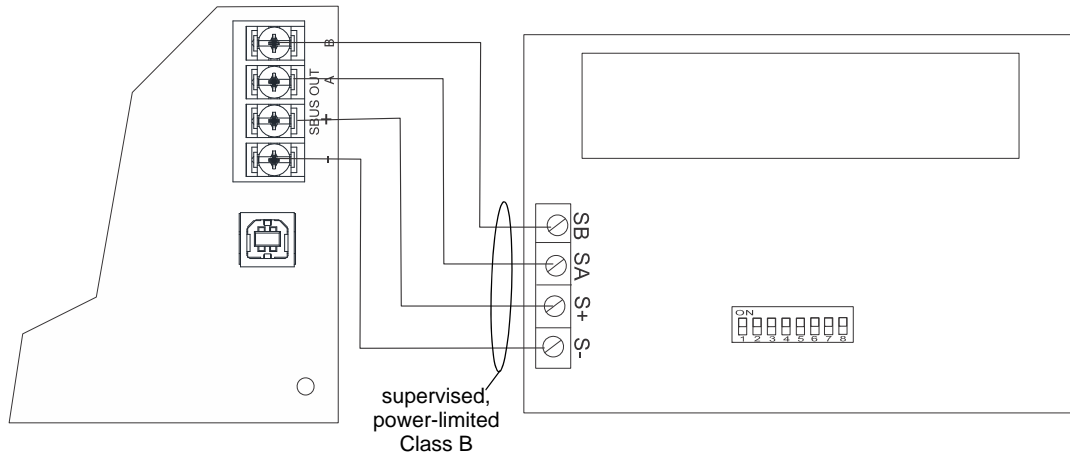


Figure 4.26 RA-2000 Connection to the Panel

4.10 5815XL Installation

The 5815XL SLC expander lets you add additional addressable SD devices. The maximum number of SD SLC devices per panel is 254. The number of 5815XL modules is limited by the maximum number of SBUS devices.



NOTE: 5815XL will only support SD protocol devices on this panel.

To install the 5815XL:

1. Make sure power is off at the panel.
2. Mount the 5815XL in the IFP-300 cabinet, or the 5815RMK remote mounting kit. Use the standoffs located under the control panel board assembly and secure with screws provided with the 5815XL. For additional information see the *RPS-1000 Installation Manual* (P/N 151153) or *5815RMK Remote Mounting Kit Installation Instructions* (P/N 151391).
3. Connect the 5815XL to the control panel. (See Section 4.10.1.)
4. Use onboard DIP switches to select an SBUS ID#. (See Section 4.15.1.)
5. Add the 5815XL module to the system through programming. JumpStart will add the module automatically (see Section 7.1). You can also add it manually (see Section 8.2.2). Select a name, if desired (See “Naming Modules” on page 95.).

You are now ready to connect SLC devices to the 5815XL. Refer to the *SLC Wiring Manual* for compatible devices.

Figure 4.27 is a drawing of the 5815XL board, showing the location of terminals and DIP switches.

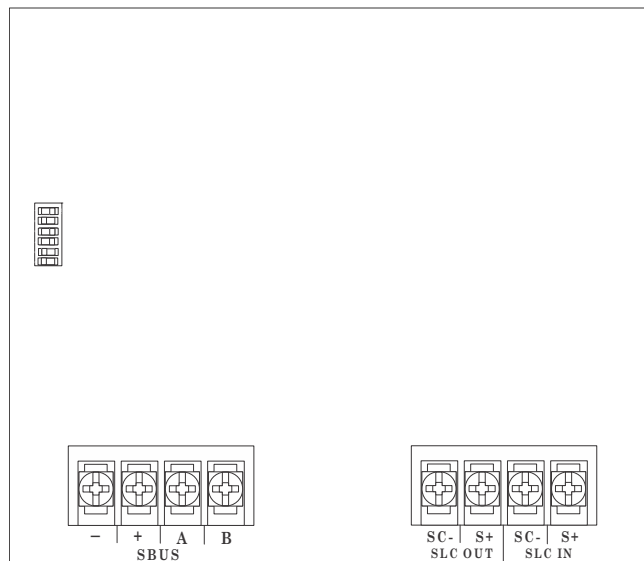


Figure 4.27 5815XL Board

4.10.1 5815XL Connection to the Panel

Connect the 5815XL to the control panel as shown below. After the 5815XL is connected to the panel, it must be added to the system. This programming steps are described in Section 8.2.2.

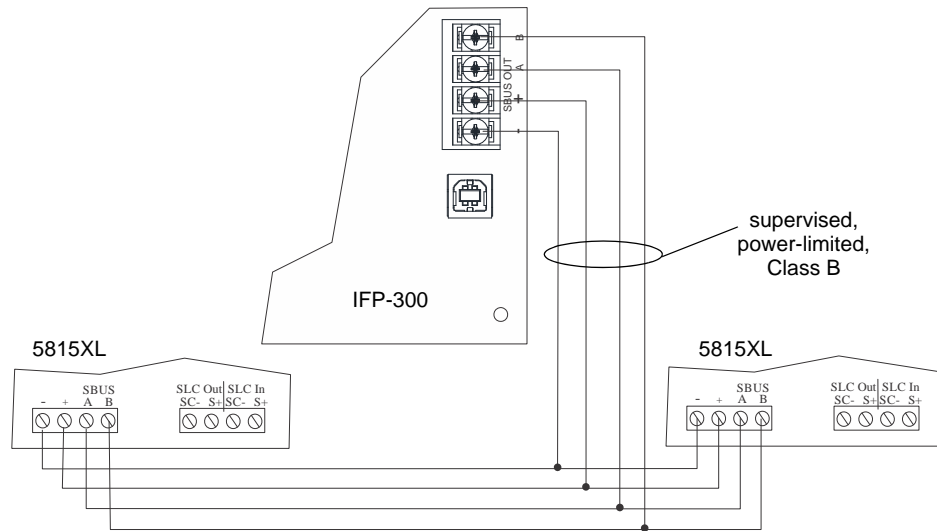


Figure 4.28 5815XL Connection to the IFP-300

4.11 6815 Installation

The 6815 SLC expander lets you add additional addressable devices. The maximum number of SLC devices per panel is 300. The number of 6815 modules is limited by the maximum number of SBUS devices.



NOTE: 6815 will support IDP, SK, and SWIFT wireless devices.

To install the 6815:

1. Make sure power is off at the panel.
2. Mount the 6815 in the IFP-300 cabinet, the RPS-1000 cabinet, or the 5815RMK remote mounting kit. Use the standoffs located under the control panel board assembly and secure with screws provided with the 6815. For additional information, see the *RPS-1000 Installation Manual* (P/N 151153) or *5815RMK Remote Mounting Kit Installation Instructions* (P/N 151391).
3. Connect the 6815 to the control panel. (See Section 4.11.1.)
4. Use onboard DIP switches to select an SBUS ID#. (See Section 4.15.1.)
5. Add the 6815 module to the system through programming. JumpStart will add the module automatically (see Section 7.1). You can also add it manually (see Section 8.2.2). Select a name, if desired (See “Naming Modules” on page 95.).

You are now ready to connect SLC devices to the 6815. Figure 4.29 is a drawing of the 6815 board, showing the location of terminals and DIP switches.

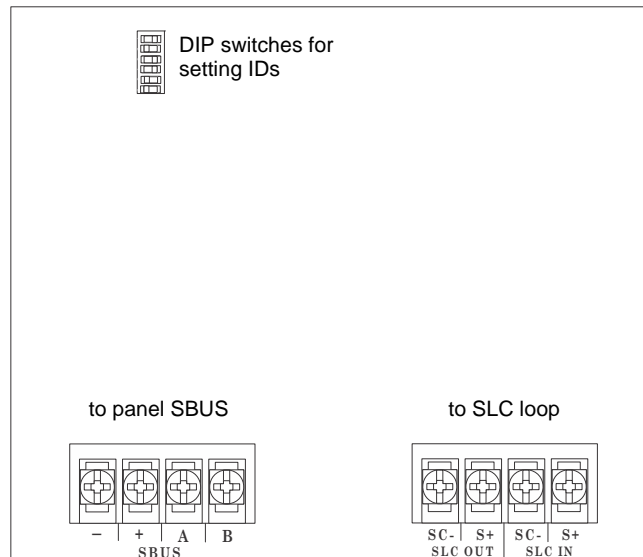


Figure 4.29 6815 Board

4.11.1 6815 Connection to the Panel

Connect the 6815 to the control panel as shown in Figure 4.30. After the 6815 is connected to the panel, it must be added to the system. This programming steps are described in Section 8.2.2.

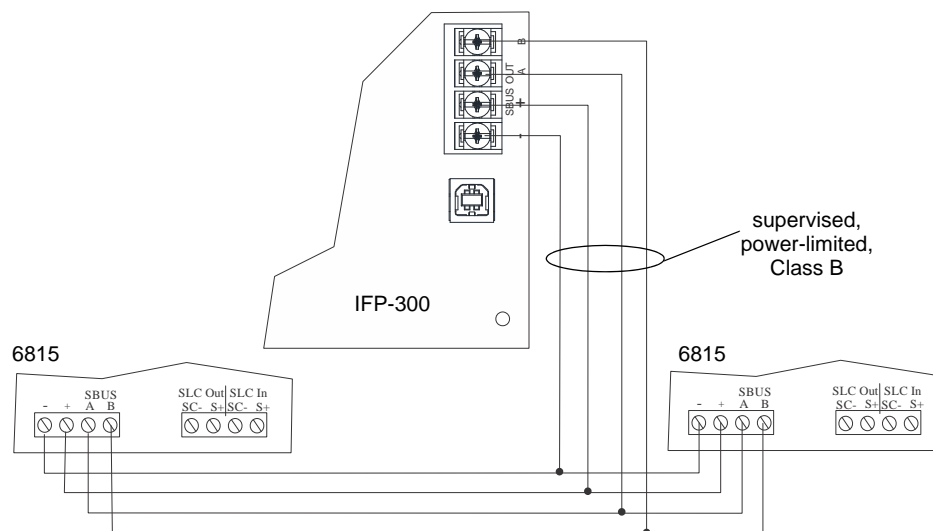


Figure 4.30 6815 Connection to IFP-300

4.12 5824 Serial/Parallel Printer Interface Module Installation

The 5824 serial/parallel printer interface module allows you to connect a printer to the panel, so you can print a real-time log of system events. Instructions for installing the 5824 appear below.

The 5824 and the printer connected to the 5824 Parallel port is ancillary, the serial port can be used for primary fire signaling. The printer must be a UL 864 listed printer.

5824 installation involves the following steps.

1. Ensure the power is off at the panel.
2. Connect the 5824 to the panel as shown in Figure 4.31.



NOTE: There is a maximum of four 5824 modules per panel.

3. Use the DIP switches on the back of the board to assign an ID# to the 5824 (see Section 4.15.1).
4. Configure the 5824 device through programming. See Section 4.12.1.

5. Connect a printer to the 5824 as shown below.

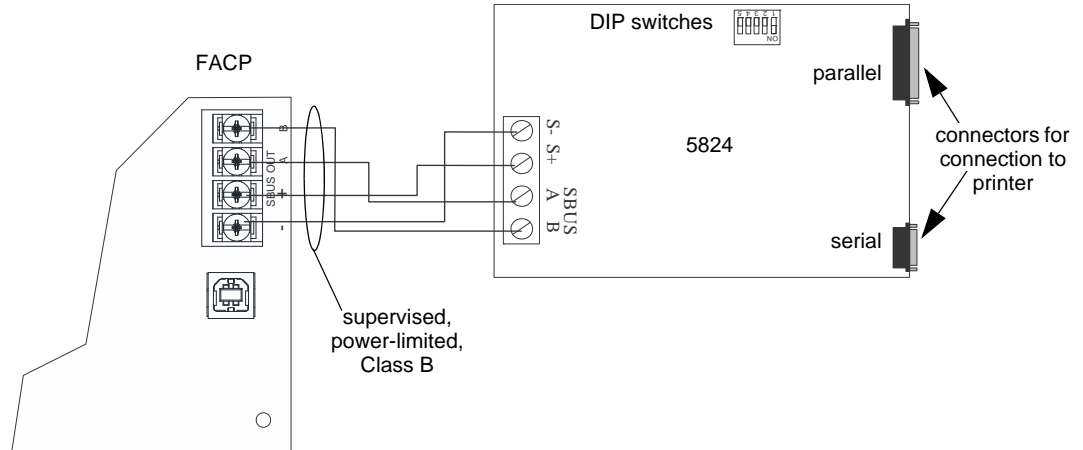


Figure 4.31 5824 Connection to the Panel

4.12.1 Selecting 5824 Options


Configuring the 5824 includes the following steps:

1. Add the module to the system. JumpStart will add the module automatically (see Section 7.1). You can also add it manually (see Section 8.2.2).
2. Select a name, if desired.
3. Select options for the printer and the output port. See below.

Printer and Output Port Options

The printer is for ancillary use only.

1. From the Main Menu, select 7 for Program Menu.
2. Select 1 for Module.
3. Select 1 for Edit Module.
4. From the list that displays, select the desired 5824 module.
5. Press ENTER to bypass the next two screens. A screen similar to the one shown below will display.

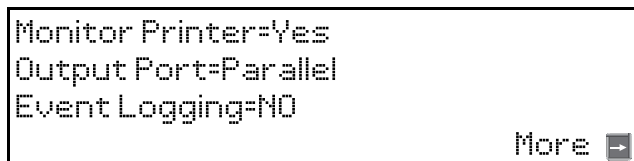

Select Yes if printer should be supervised for Out-of-Paper and Offline conditions.
Select type of printer, *Parallel* or *Serial*.

Figure 4.32 Selecting Printer and Output Port Options

6. Select options for the printer as needed for your installation. Most printers are parallel.
7. If you are using a serial printer, use the next screen to select serial port options as required for your printer. Refer to your printer manual if you need more information.

| Option | Choices |
|------------|-----------------|
| Baud Rate: | 75 - 19200 |
| Data Bits: | 5 - 8 |
| Stop Bits: | 0.5, 1, 2 |
| Parity: | None, Even, Odd |

Table 4.7 Serial Printer Options

4.13 5880 LED I/O Module

The 5880 is an LED driver board that can be used in a wide variety of applications, including as an interface with most customized floor plan annunciator boards. The 5880 can drive up to 40 LEDs and has one PZT controller. The 5880 also has eight inputs for dry contact monitoring. The following sub-sections describe hardware installation. Refer to Section 8 for programming information.

4.13.1 5880 Board Layout

Figure 4.33 is a picture of the 5880 board showing locations of screw terminals for connection to the panel and contact monitor wiring, pin connectors for connecting LEDs, and a DIP switch for selecting an SBUS ID number.

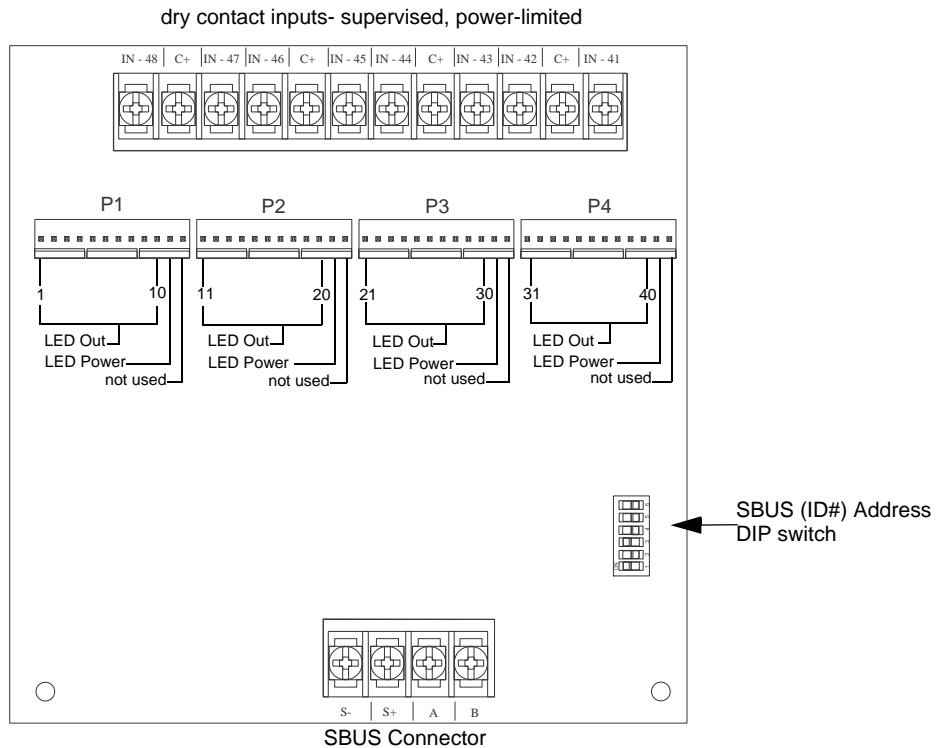


Figure 4.33 5880 Board Layout

4.13.2 5880 Connection to Panel

The 5880 connects to the panel via the SBUS. Make connections as shown below. After the 5880 is connected to the panel, it must be added to the system. This programming step is described in Section 8.

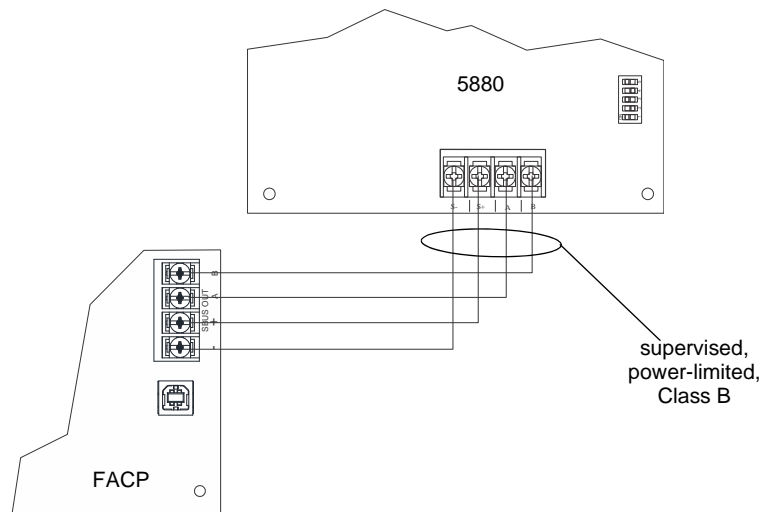


Figure 4.34 5880 Connection to IFP-300

4.13.3 LED Wiring

There are four 12-pin connectors on the 5880 board for connecting LEDs. Each LED gets its power from Pin 11. Internal resistors are sized so that there is approximately 10 mA of current for each LED, no series resistors are required. LED outputs can be mapped to output circuits. See Section 8 for programming details.

Wire the LEDs as shown below.

On connector P1, Pin 12 is a common open collector output for controlling a PZT. If used, the 5880 PZT will match the PZT pattern of the on-board or remote annunciator.



NOTE: The circuit connected to common “Open Collector Output” (last pin on P1) must be current limited so that no more than 100 mA of current is allowed to flow into the open collector transistor.

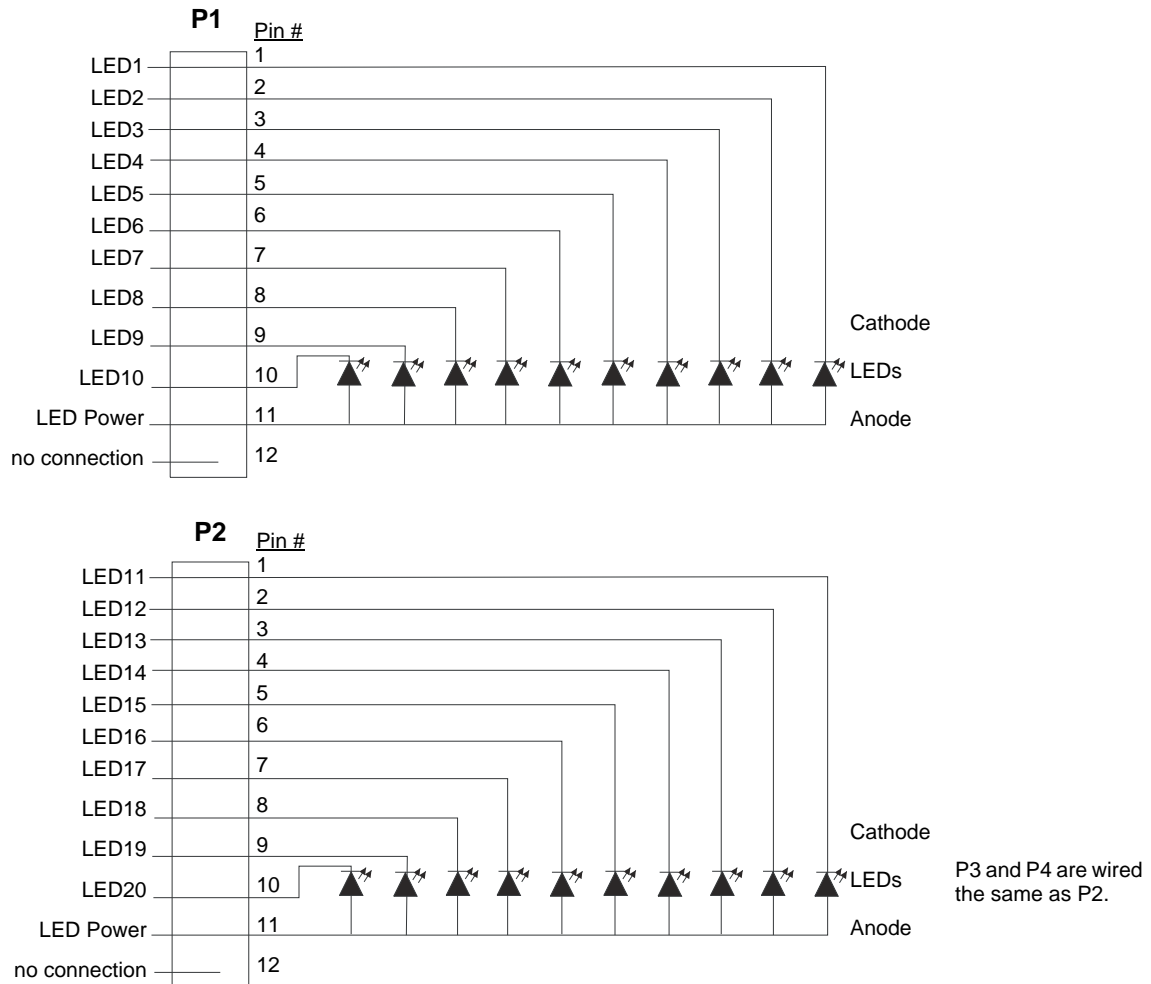


Figure 4.35 5880 Board Layout

4.13.4 Dry Contact Wiring

The 8 input circuits on the 5880 board are for monitoring switch inputs. Any type of switch supported by the control panel can be used with the 5880. For example, you can use a 5880 to monitor pull stations, water flow, tamper, reset, or silence switches.

Wire dry contacts as shown in Figure 4.36. Notice grouping of terminals; power terminals are shared by two inputs.

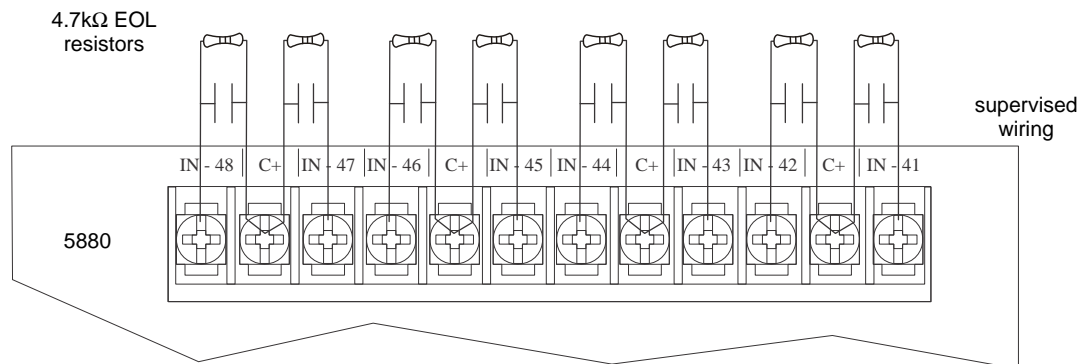


Figure 4.36 Dry Contact Wiring

4.14 5865-3 / 5865-4 LED Annunciator Installation

The 5865-3 and 5865-4 are LED annunciators. The 5865-4 has 30 mappable LEDs, remote silence and reset key switches, and a general system trouble LED. The 5865-3 has 30 mappable LEDs only. These are arranged as 15 pairs of red (typically used for alarm) and yellow (typically used for trouble) LEDs.

Installation of the 5865-3 and 5865-4 is identical. The key switches and the trouble LED follow the behavior of other system annunciators and do not require any programming. The following subsections describe how to install the 5865-3 and 5865-4 hardware. Refer to Section 8 for programming information.



NOTE: The term "5865" refers to both the 5865-3 and 5865-4 unless otherwise specified.

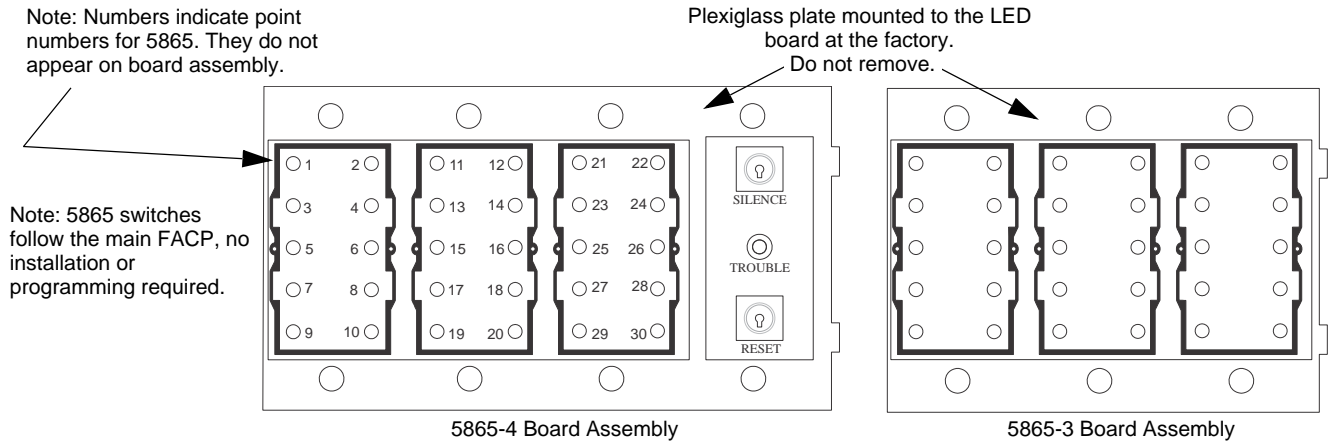


Figure 4.37 5865-3 and 5865-4 Assembly (Front View)

4.14.1 5865 Connection to Panel

The 5865 connects to the panel via the SBUS. Make connections as shown below. After the 5865 is connected to the panel, it must be added to the system. This programming step is described in Section 4.15.

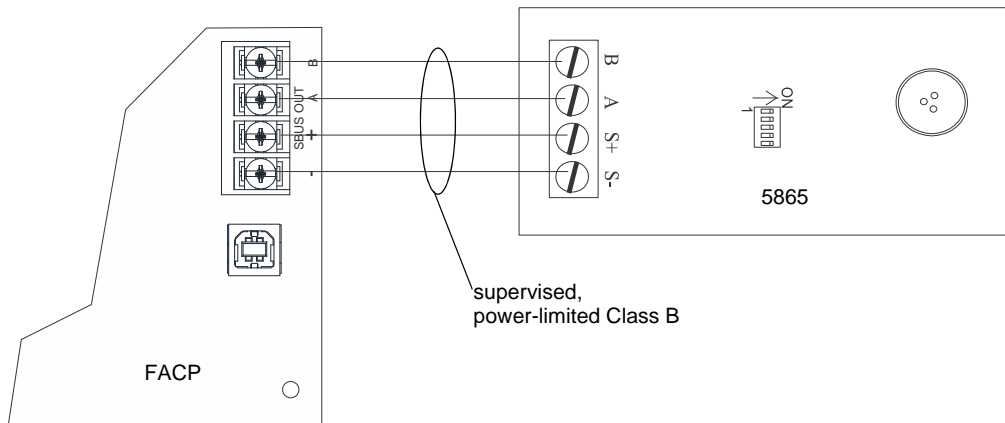


Figure 4.38 5865 Connection to the FACP

4.14.2 5865 Mounting

Mount the 5865-4 to a standard 4-gang electrical box. Mount the 5865-3 to a standard 3-gang electrical box. In Figure 4.39, the 5865-4 attached to a 4-gang box is used as an example.

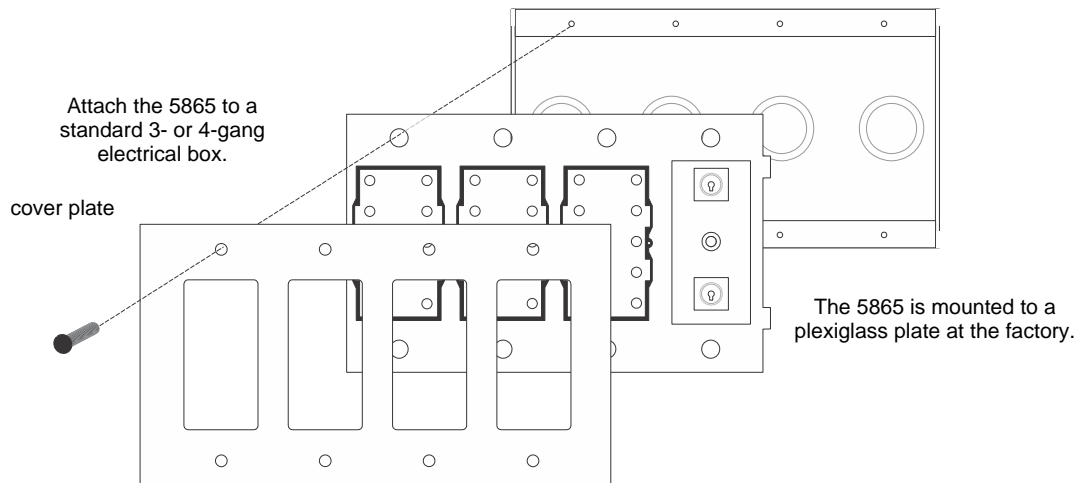


Figure 4.39 5865 Mounting Example

The 5865 ships with a set of zone description labels that can be inserted into the 5865 board assembly. These labels can be used in a typewriter or can be written on by hand. Slide the labels under the plexiglass as shown in Figure 4.40. The LEDs will show through the label when illuminated.

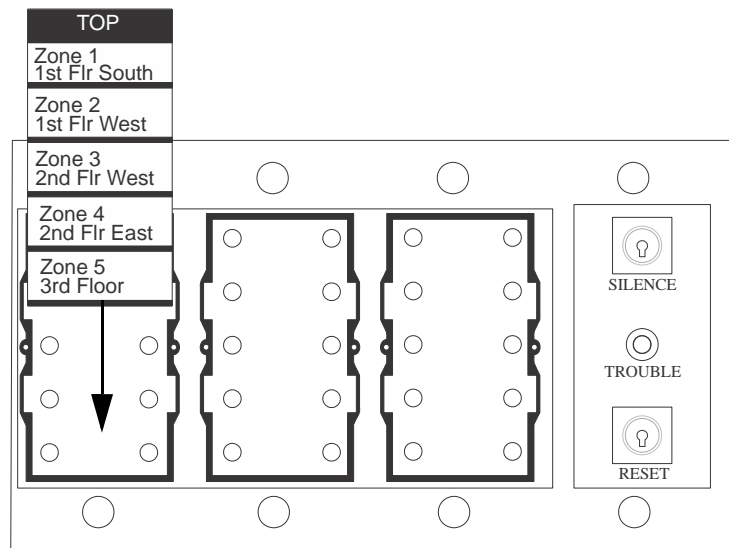


Figure 4.40 Inserting Zone Description Labels

4.15 Configuring SBUS Modules

This section describes how to configure any system hardware modules that have been added to the system.

4.15.1 Assigning SBUS Module IDs

When installing a hardware module (see Table 4.2 for list of compatible SBUS devices), you must use the DIP switches on the module to assign an ID# to the module. Figure 4.41 shows all possible DIP switch positions and their correlation to a numerical ID. Address 0 is an invalid address and cannot be used. For example, to select ID 2, place DIP switch 2 in the up position.

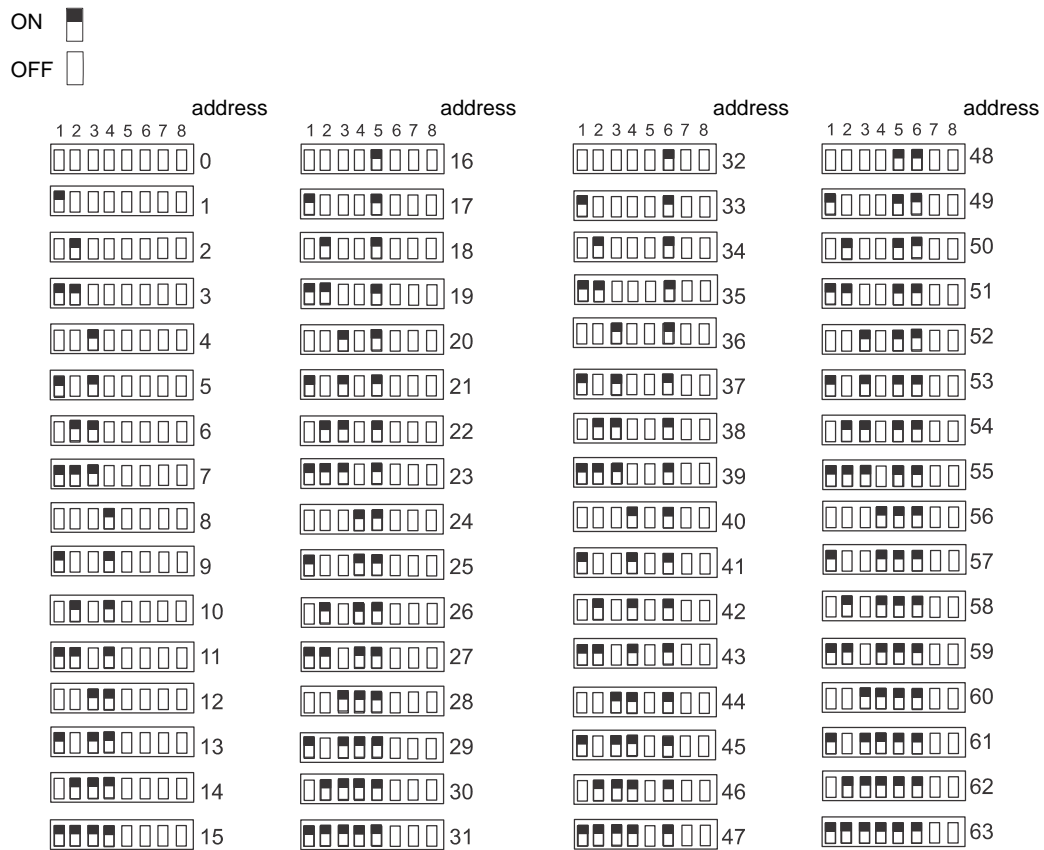


Figure 4.41 Possible SBUS Module Addresses

Refer to Section 8.2 to edit, add, delete, and view the module list.

4.15.2 SBUS Bandwidth Considerations

Each SBUS device generates a certain amount of traffic on the SBUS. Generally, the amount of traffic generated depends on the type of SBUS device. To help you figure out the SBUS bandwidth usage of a given collection of devices, a tool is available on the Farenhyt website (www.farenhyt.com). The tool will serve as a guide to help determine how heavily loaded an SBUS is with respect to bandwidth. We recommend you use this tool if you plan to have more than eight SBUS devices per SBUS. Remember to include devices that are on RPS-1000 SBUS repeaters in your list of devices for SBUS bandwidth calculations. See Section Section 4.6.2.

4.15.3 Communication Protocol

DIP switch 7 on the RA-2000/GRAY, RA-100, and RA-1000/R is used to determine the communication protocol of the device. Set DIP switch 7 to ON for SBUS protocol. This switch must stay in the ON position for proper functionality.



4.15.4 End-of-Line Resistor

The end-of-line termination resistor must be enabled at S1 DIP switch 8 on the last RA-2000/GRAY, RA-100, and RA-1000/R device on the communication circuit. All other annunciators should have these switches set to disable.



4.16 Telephone Connection

Connect the telephone lines as shown in Figure 4.42. The 7860 phone cord is available from Honeywell for this purpose. A number of programmable options are available for customizing telephone lines. These options are described in Section 8.6.

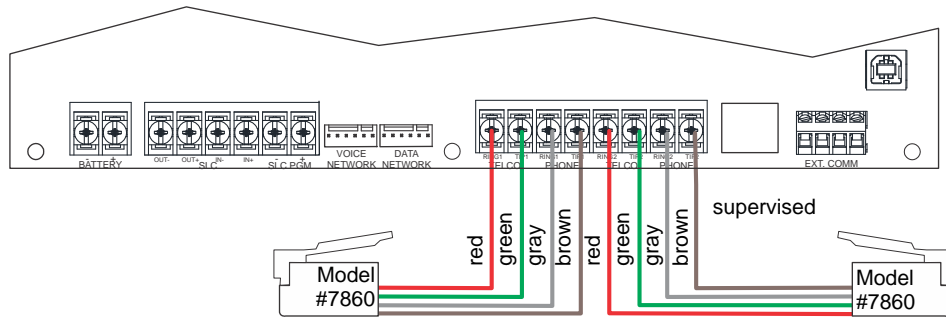


Figure 4.42 Connection of Telephone Lines

4.17 Notification Appliance/Auxiliary Power Circuits



NOTE: These circuits are considered regulated unless used for releasing type service, in which case they are considered special applications.

Four outputs are built-in to the IFP-300 FACP which can be programmed to be used as NACs (Class A or Class B) or as aux power. This section of the manual explains how to install conventional notification appliances and how these terminals can be used for auxiliary power.

4.17.1 Conventional Notification Appliance

This sub-section of the manual explains how to install conventional notification appliances for Class A and Class B configurations.

Class B Notification Wiring

You must use compatible appliances. For a list of compatible appliances, refer to the *Device Compatibility Document*.

To install a Class B notification appliance circuit:

1. Wire Class B Notification appliances as shown below.
2. Configure the circuit through programming (see Section 8.6).

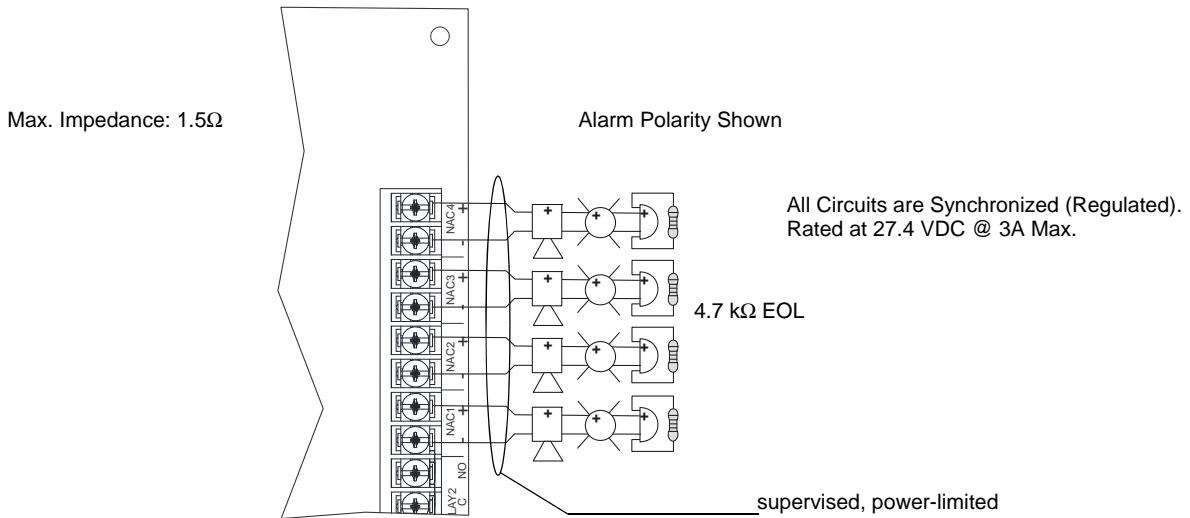


Figure 4.43 Class B Notification Appliance Circuit Wiring

Class A Notification Wiring

You must use compatible appliances. For a list of compatible appliances, refer to the *Device Compatibility Document*.

To install a Class A notification appliance circuit:

1. Wire the Class A notification appliances as shown below.



CAUTION: SYSTEM SUPERVISION

FOR PROPER SYSTEM SUPERVISION DO NOT USE LOOPED WIRE UNDER TERMINALS MARKED – AND + OF THE NAC CIRCUIT. BREAK WIRE RUNS TO PROVIDE SUPERVISION OF CONNECTIONS.

2. Configure the circuit for Class A in programming (see Section 8.5).

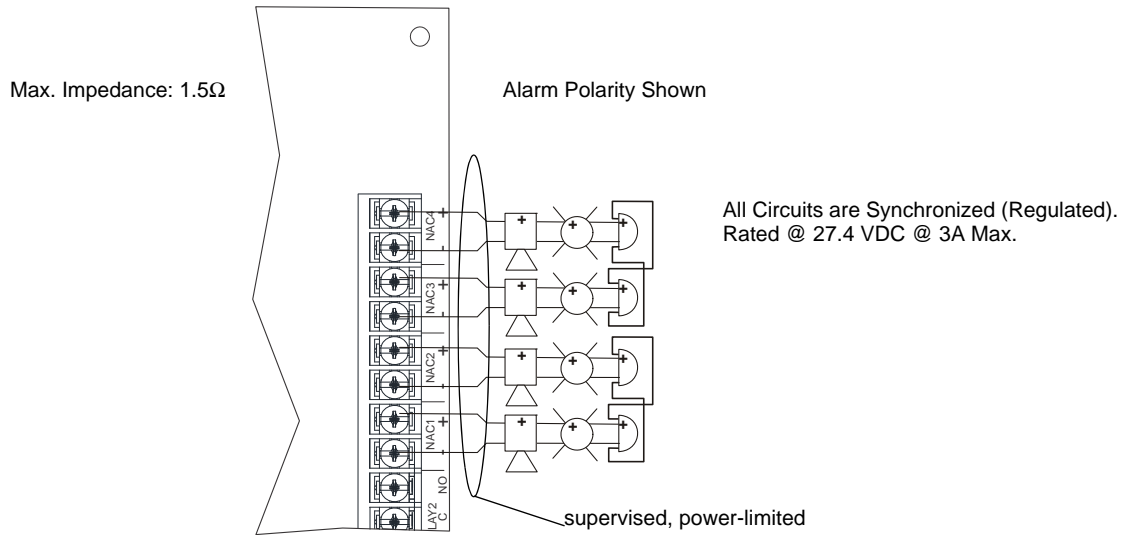


Figure 4.44 Class A Notification Appliance Circuit Configuration

Maximum voltage drop is 3V per Class A circuit.

| Current | Maximum Impedance |
|---------|-------------------|
| 1.0A | 3Ω |
| 1.5A | 2Ω |
| 2.0A | 1.5Ω |
| 2.5A | 1.2Ω |
| 3.0A | 1.0Ω |

Table 4.8 Maximum Impedance Class A

4.17.2 Auxiliary Power Installation

NAC Circuits 1-4 on the control panel can be used as auxiliary power circuits. The wiring class of the external power source must match the wiring class of the device being powered. The four types of auxiliary power available are:

- Door Holder
- Constant
- Resettable Power
- Sounder Sync Power

Auxiliary power circuits are power-limited. Each circuit can source up to 3A (total current for all NAC circuits must not exceed 6A).

To install an auxiliary power circuit:

1. Wire the NAC circuit(s) that will be used for auxiliary power.
2. Configure the auxiliary power output through programming (see section Section 8.5).

Door Holder Power

Door holder power is intended for fire door applications. When there are no alarms in the system and the panel has AC power, door holder circuits have 24-volt power present at their terminals. Any alarm will cause power to disconnect. Power will be re-applied when the system is reset. If AC power is off for more than 15 seconds, the auxiliary door holder power will be disconnected to conserve the battery backup. When AC power is restored, power is immediately restored to the door holder circuits.

Constant Power

Use constant power for applications that require a constant auxiliary power source. Power is always present at constant circuits.

Resettable Power

Resettable power is typically used to power beam detectors, flame detectors and conventional 4-wire smoke detectors. For circuits selected as Resettable, 24-volt power is always present at the terminals unless a system reset occurs. If a system reset occurs, power is disconnected from the terminals for 30 seconds, then re-applied.

Sounder Sync Power

Sounder Sync Power continuously outputs the System Sensor synchronization pattern and is intended for use with B200S Intelligent sounder bases.

4.18 Onboard Relays (Conventional)

The control panel has two built-in programmable relays and a built-in trouble relay. All relays are Form C rated at 2.5 A @ 24 VDC (resistive).

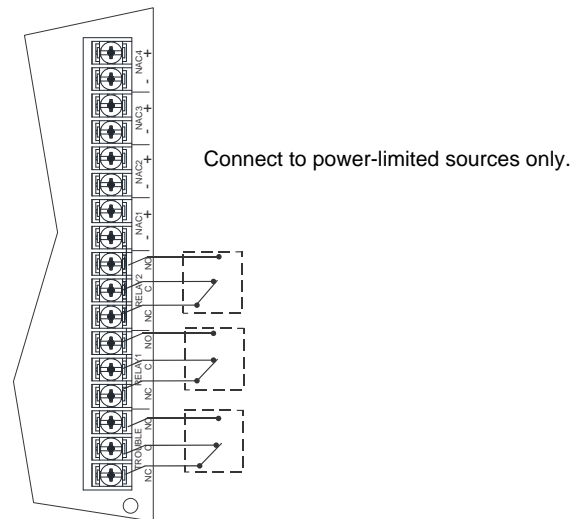


Figure 4.45 Conventional Relay Circuits



NOTE: The N.C. contact is the relay contact that is closed when the panel has power and there are no alarm or trouble conditions.

4.18.1 Trouble Relay

The control panel has a dedicated common Form C trouble relay labeled TROUBLE. The relay provides a normally open and a normally closed contact. The trouble relay will deactivate under any trouble condition.

4.18.2 Programmable Relays

The control panel has two Form C programmable relays labeled RELAY 1 and RELAY 2. Each relay provides a normally open and a normally closed contact.

To install one or two programmable relays:

1. Wire Relay 1 and/or Relay 2 as needed for your application. See Figure 4.2 for the location of the relay terminals.
2. Configure the relay through programming (see Section 8.5).

4.19 Remote Station Applications

4.19.1 Keltron Model 3158 Installation

The control panel is compatible with Keltron model 3158, used for direct connection to a Keltron receiver. The 3158 reports alarms, supervisorys, and troubles.

The steps for connecting the 3158 to the control panel. Refer to the 3158 installation instructions for complete information.

1. Wire the 3158 to the control panel as shown in the connection list and Figure 4.46.
2. Wire the 3158 within 20 feet (6.1m) of the control panel. Wiring must be enclosed in conduit.
3. Program control panel Relay 2 for alarm.
4. Program NAC circuit 2 for alarm.
5. Program NAC circuit 1 for supervisory non-latching.



NOTE: NACs must be programmed for continuous and non-silencing.

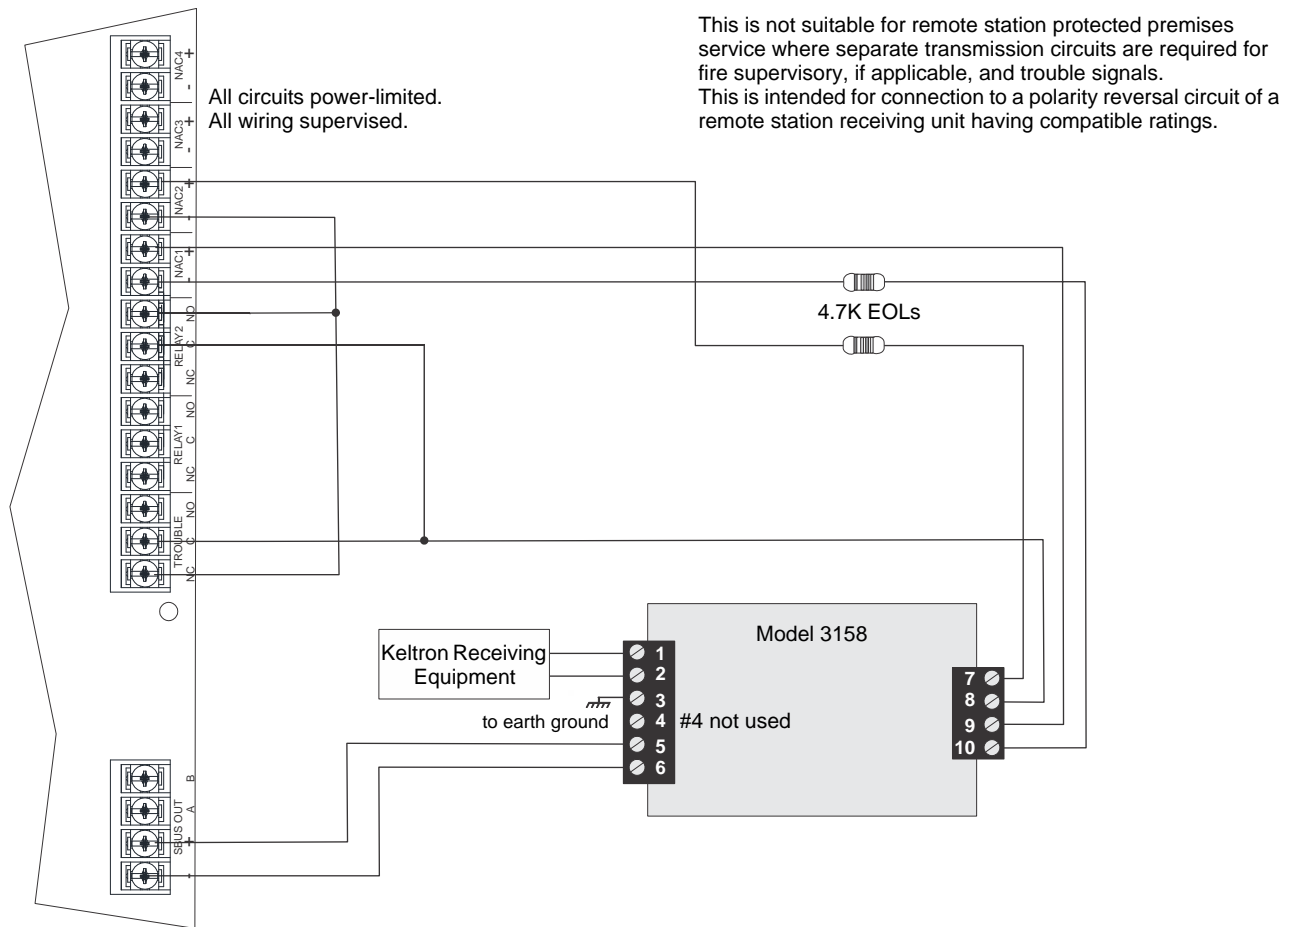


Figure 4.46 Keltron 3158 Connection to Control Panel

4.19.2 City Box Connection Using the 5220 Module

This section describes how to connect the control panel to a municipal fire alarm box or “city box” as required by NFPA 72 Auxiliary Protected Fire Alarm systems for fire alarm service. The city (master) box is an enclosure that contains a manually operated transmitter used to send an alarm to the municipal communication center which houses the central operating part of the fire alarm system.

City Box Standby Current: 0 (Notification supervision current accounted for in control panel draw.)

Alarm Current: 1 Amp for 1 second 27.2 VDC max.

The maximum coil and wire resistance (combined) must not exceed 30 ohms.

To install the 5220 for city box connection:

1. Use one of the knockouts on the right side of the control panel to connect the 5220 using a short piece of conduit. Conduit must not exceed 20 feet (6.1m) in length.
2. Wire the 5220 to the control panel as shown in Figure 4.47. This drawing also shows how to connect the city box coil to terminals 3 and 4 on the 5220. Do not install an EOL resistor in the terminals of the NAC circuit used for this application.
3. Connect earth ground wire to the 5220 chassis with mounting screw.
4. Program the NAC circuit used as a continuous and non-silencing. Refer to Section 8.5 for Point Programming, Section 8.4 for group settings, and Section 8.3 for zone settings and mapping. It is not possible to reset the remote indication until you clear the condition and reset the control panel.

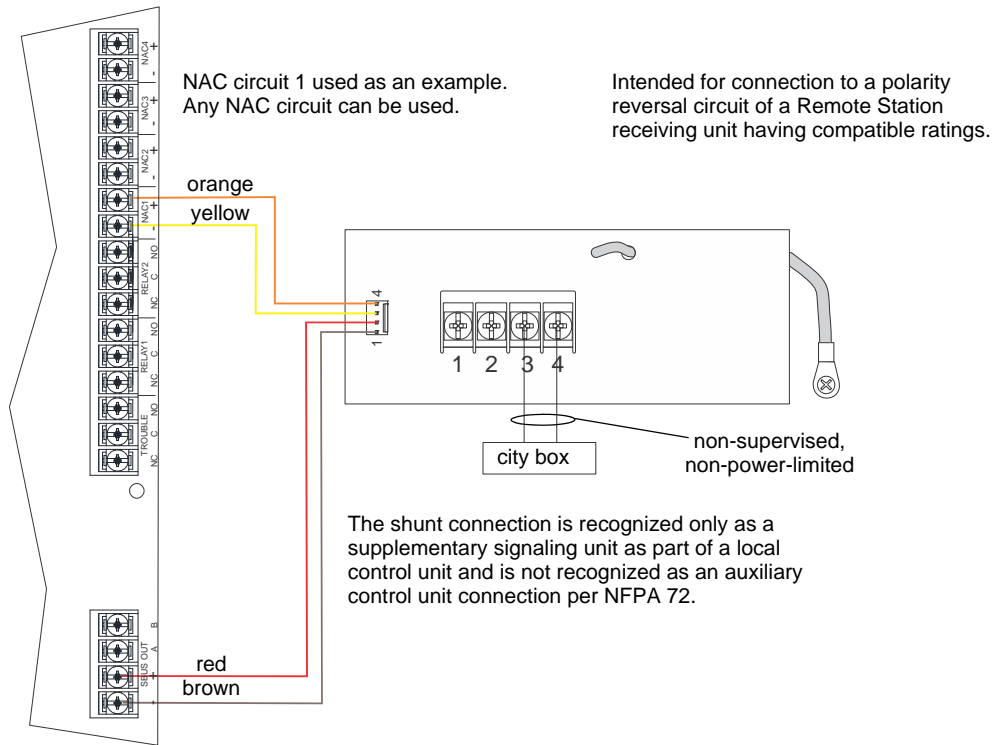


Figure 4.47 City Box Connection

4.19.3 Using the Addressable Relay Module for City Box Connection

Wire the IDP/SK-RELAY module as shown below.

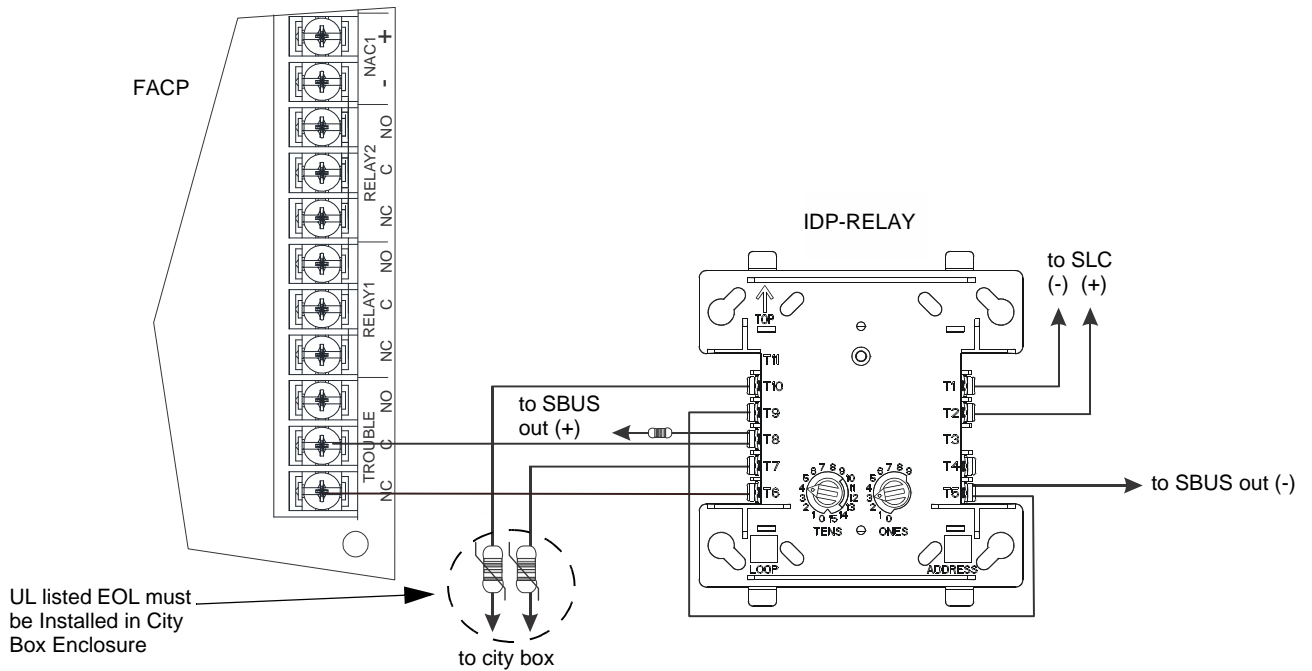


Figure 4.48 Relay Module for City Box Connection

4.19.4 NFPA 72 Polarity Reversal



NOTE: Intended for connection to a polarity reversal circuit of a control unit at the protected premises having compatible rating.

Using the 5220 Module

When the 5220 is wired and programmed for polarity reversal, it reports alarm and trouble events to a remote site. Alarms will override trouble conditions and it will not be possible to reset the remote indicator until the condition is cleared and the control panel is reset.

If an alarm condition occurs, the alarm relay will close, overriding the trouble condition.

Standby Current: 100 mA, 24 VDC

Alarm: 100 mA, 24 VDC

To install the 5220 for polarity reversal, follow the steps below:

1. Locate the knockout on the right side of the control panel cabinet to connect the 5220 using a short piece of conduit (must not exceed 20 feet in length).
2. Wire the 5220 to the control panel using the four-wire pigtail provided as shown in Figure 4.49. This diagram also shows how to connect the 5220 to the remote indicator. Do not install an EOL resistor in the terminals of the NAC circuit used for this application.
3. Connect earth ground wire to the 5220 chassis with mounting screw.
4. Program the NAC circuit used as continuous and non-silencing. Refer to Section 8.5 for point programming, Section 8.4 for group settings, and Section 8.3 for zone settings and mapping. It is not possible to reset the remote indication until you clear the condition and reset the control panel.
5. If necessary, adjust loop current using the potentiometer (R10) on the 5220 board. Normal loop current is 2-to-8 mA with a 1k ohm remote station protected premise unit. Maximum loop resistance is 3k ohm.

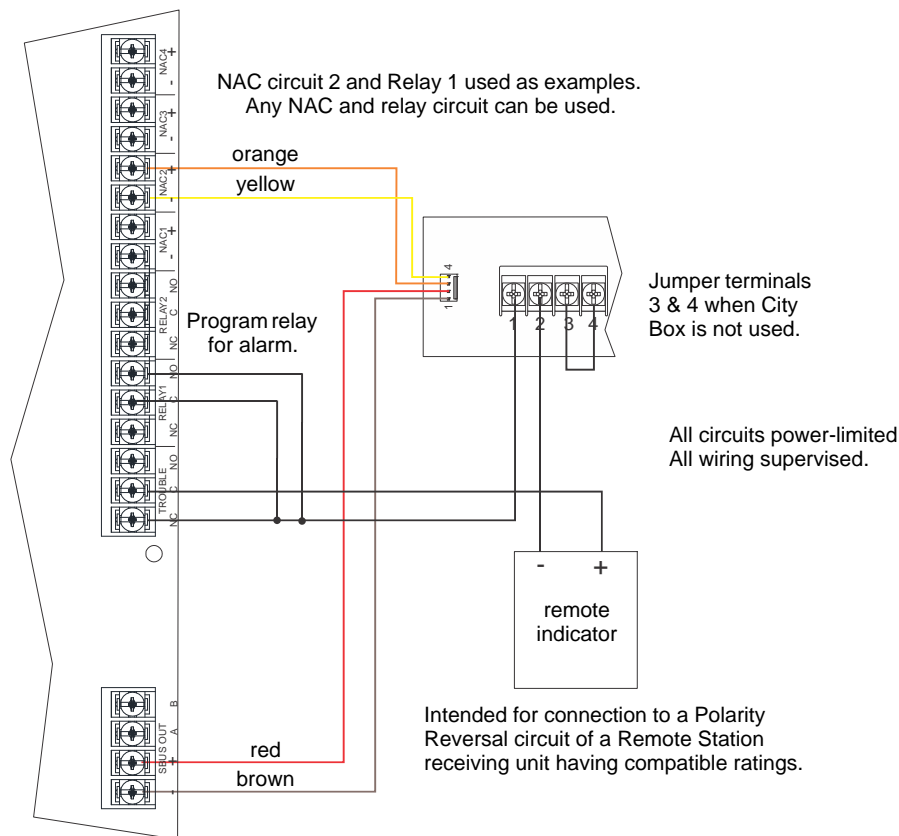


Figure 4.49 Polarity Reversal Connection Using the 5220 Module

Using the 7644-L8 Module

When the 7644-L8 is used for polarity reversal, it allows alarm and trouble events to be reported to a remote site. Alarms will override trouble conditions and it will not be possible to reset the remote indicator until the condition is cleared and the control panel is reset.

To install the 7644-L8 for Polarity Reversal:

1. Wire the 7644-L8 to the control panel as shown in Figure 4.50. Do not install an EOL resistor on the terminals of the NAC circuit used.



NOTE: Use only NAC circuits on the control panel for reverse polarity.

2. Program the NAC circuit as a notification circuit. See Section 8.5.

3. Map the group to activate constant on from the zone event.
4. Program the output group characteristics as non-silenceable and reverse polarity.

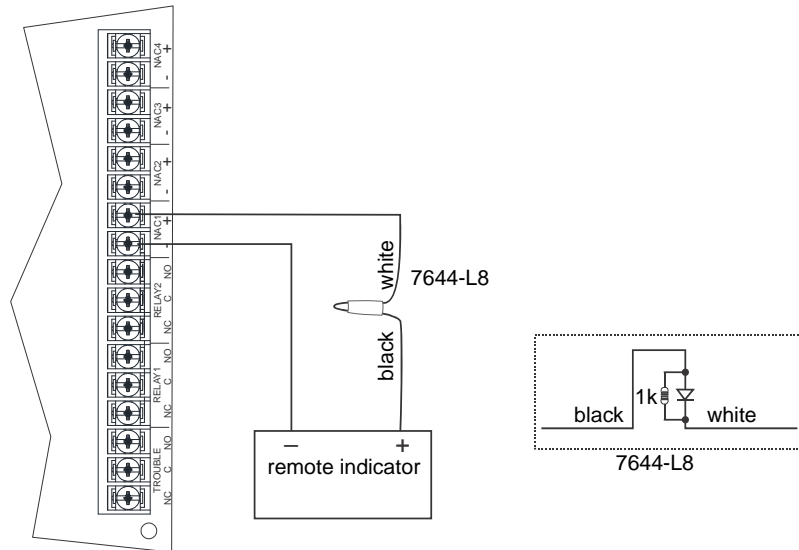


Figure 4.50 Polarity Reversal Connection Using the 7644-L8

Using the SD500-ARM Addressable Relay Module

When the SD500-ARM is wired for polarity reversal, it reports alarm and trouble events to a remote site. Alarms will override trouble conditions and it will not be possible to reset the remote indicator until the condition is cleared and the control panel is reset. Relay 2 must be programmed for Alarm (default).



NOTE: additional SD500-ARM modules must be added, if you need to transmit supervisories or trouble conditions. Use Relay 1 to transmit supervisory conditions. Use the trouble relay to transmit trouble conditions.

Wire the SD500-ARM as shown below.

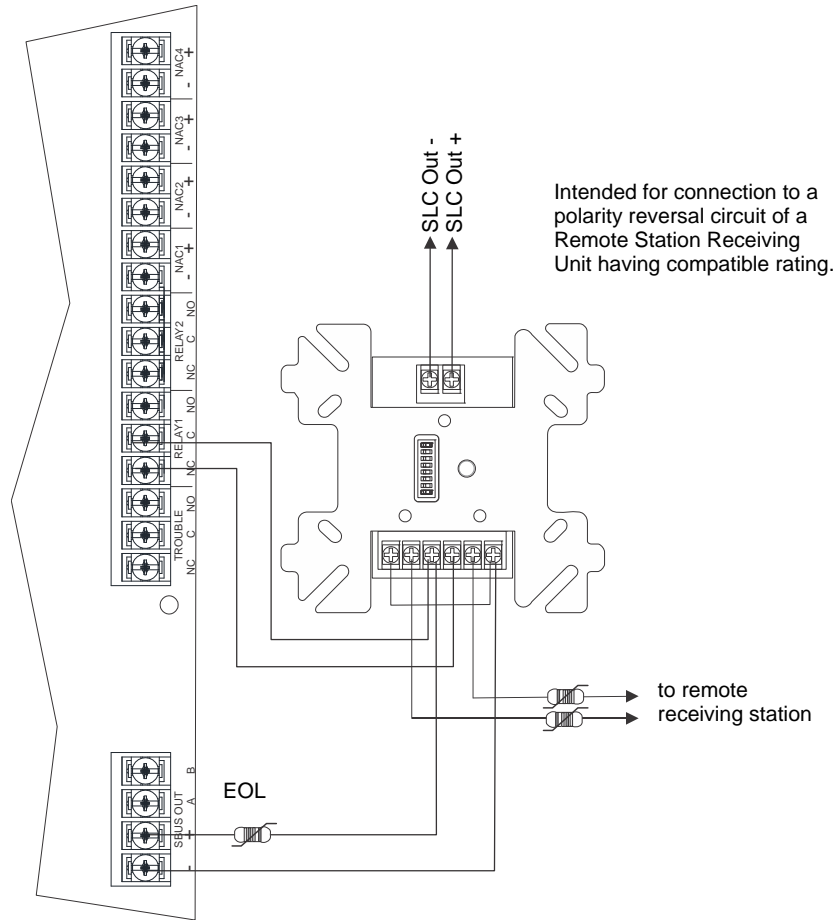


Figure 4.51 Polarity Reversal Connection Using the SD500-ARM Module

Using a MR-201/T Control Relay From Air Products

When the MR-201/T control relay is wired for polarity reversal, it reports alarm and trouble events to a remote site. Alarms will override trouble conditions and it will not be possible to reset the remote indicator until the condition is cleared and the control panel is reset. If an alarm condition occurs, the alarm relay will close, overriding the trouble condition.

- Current: 15 mA max.
- Operating Voltage: 24 VDC nominal
- Resistance: 4 KΩ

To install the MR-201/T for polarity reversal:

1. Wire the MR-201/T as shown below.

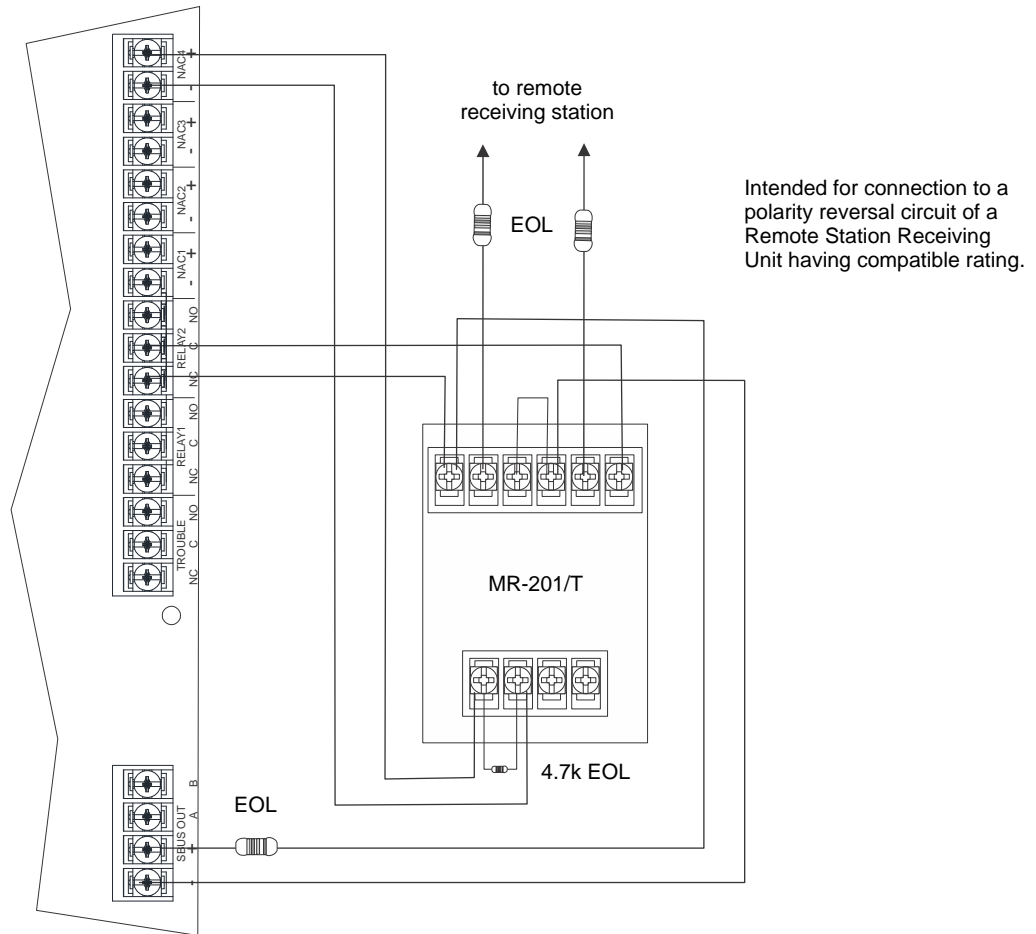


Figure 4.52 Polarity Reversal Connection Using the MR-201/T Relay

2. Program the NAC circuit for non silence NAC circuit.



NOTE: If you need to transmit supervisory or trouble conditions, additional relay modules must be added. Use relay 1 to transmit supervisory conditions. Use the trouble relay to transmit trouble conditions.

4.19.5 Transmitter Activated by Dry Contacts

This section describes the connection of a UL 864 listed remote station transmitter to the IFP-300 FACP dry contacts. The FACP contacts must be supervised by the remote station transmitter module using end-of-line resistors (ELRs) with a value determined by the transmitter manufacturer. Power is also provided by the remote station transmitter manufacturer. Refer to the remote station transmitter manufacturer's manual for details.

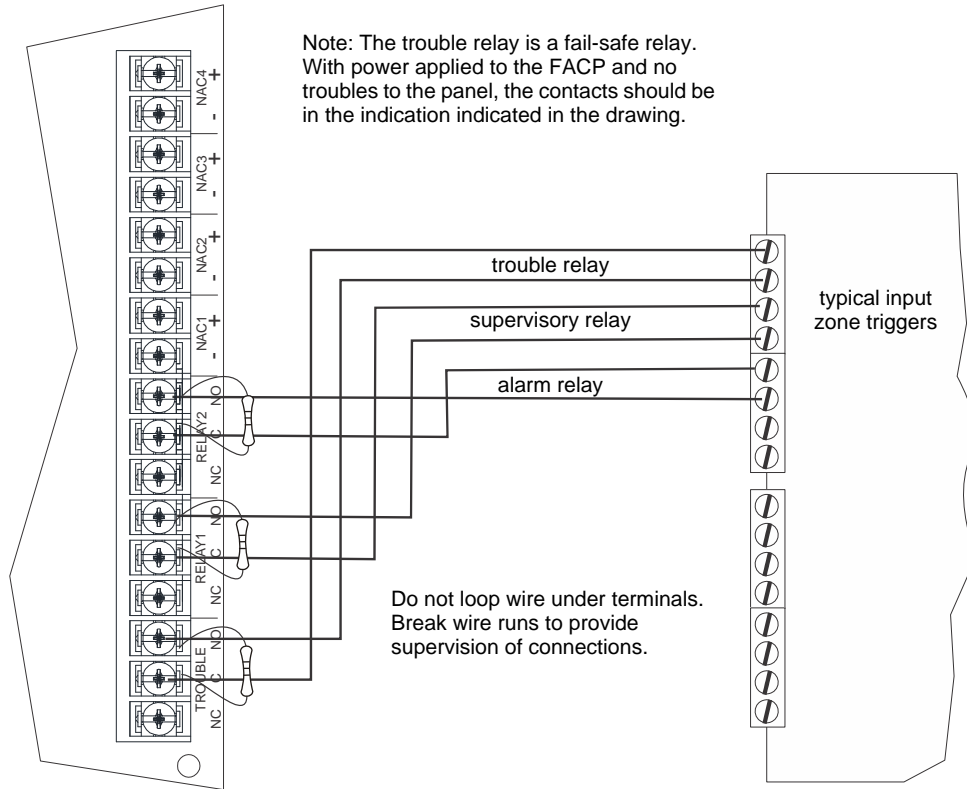


Figure 4.53 Remote Station Transmitter

Section 5: Networking

5.1 Network System Hardware Features

IFP-300 panels can be networked to create a virtual system that is larger than 300 addressable points. Each additional IFP-300 provides another 300 addressable points to the network total. For example, a network of 32 IFP-300 panels provides a maximum addressable point capacity of 9,600 points ($300 \times 32 = 9,600$).

5.1.1 Networked Sites

A networked site is a logical group of panels that behave as though the logical group is one large control panel. Each building is referred to as a “site.” All panels in a site operate as a single panel. The control functions like reset, silence and alarm activation operate across the entire site. There can be one or more logical sites within a networked system. The maximum number of sites within a network system is limited to 32 panels in the network with each site comprised of only one panel.

5.2 Network Wiring

When networking a group of IFP-300 you must use the SK-NIC to link the panels together. See Figure 5.1 and Figure 5.2, for Internal mounting or external mounting of SK-NIC options

5.2.1 Wiring Options/Requirements to Connect Networked Panels

1. Fiber-Optic Single Mode - Use the SK-NIC and SK-FSL for up to 30dB loss of signal separation. SK-FSL connects to the network using 9/125 micron single-mode fiber.
2. Fiber-Optic Multi-Mode - Use the SK-NIC and SK-FML for up to 8dB loss of signal separation. SK-FML connects to the network using 62.5/125 micron multi-mode fiber.
3. Twisted-Pair Copper Wire - must use the SK-NIC to provide up to 3,000 feet of separation.

All methods of panel connectivity can be used within the same networked system. The network architecture provides true peer-to-peer capability allowing network survivability for all hardware that remains operational in the event of partial system failure.

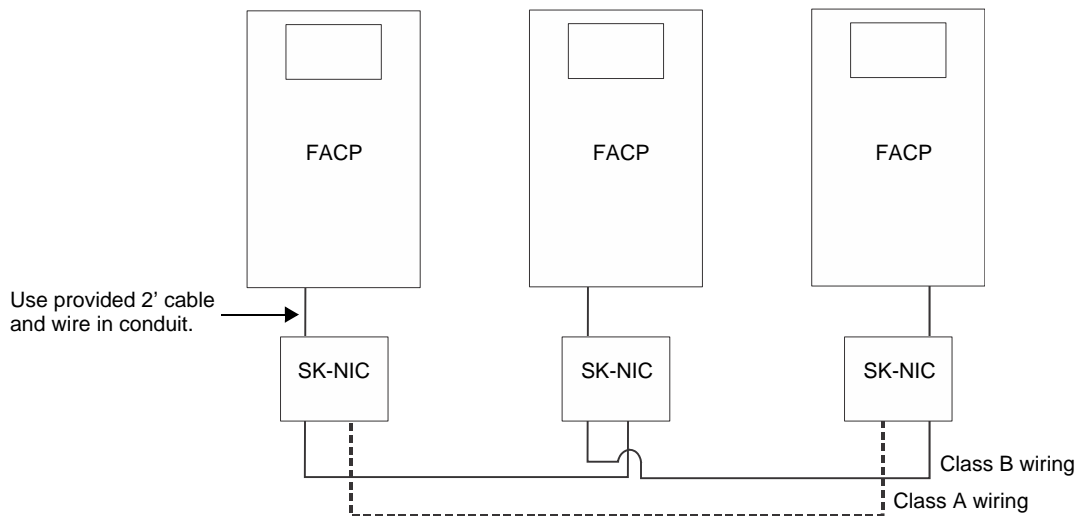


Figure 5.1 External SK-NIC Wiring Option

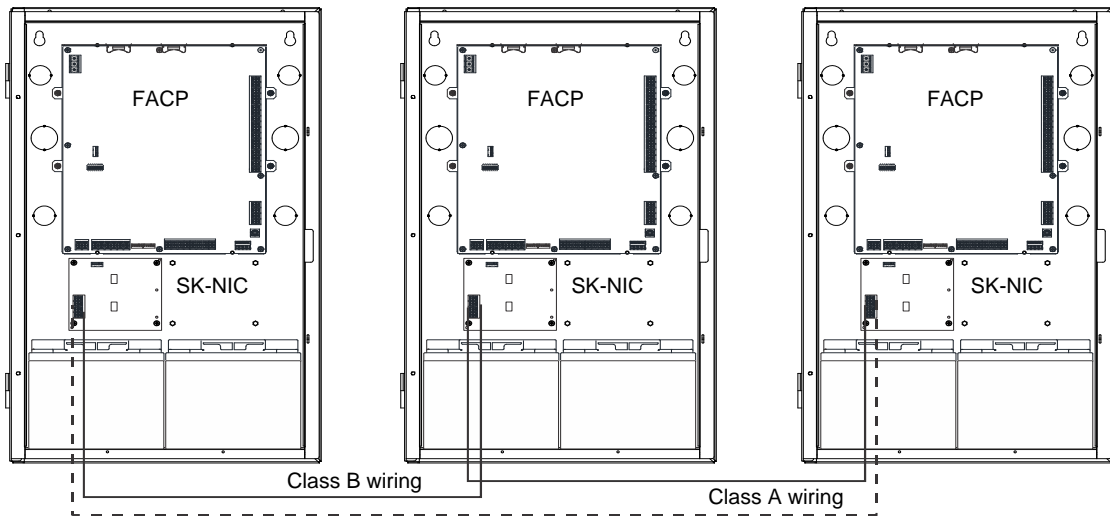


Figure 5.2 Internal SK-NIC Wiring Option

5.3 SK-NIC Wiring Options

Networking a group of IFP-300 panels requires the use of a network interface card with each panel. The SK-NIC connects to other networked units using unshielded, twisted-pair wiring or fiber-optic cable.

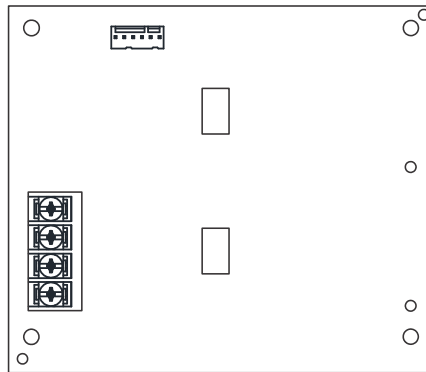


Figure 5.3 SK-NIC Network Interface Card

5.3.1 Fiber Loop Modules

Two types of fiber-optic modules are available to use to transmit and receive communication with the SK-NIC. For more information, see the *SK-FML/ SK-FSL Installation Instructions* P/N LS10178-001SK-E.

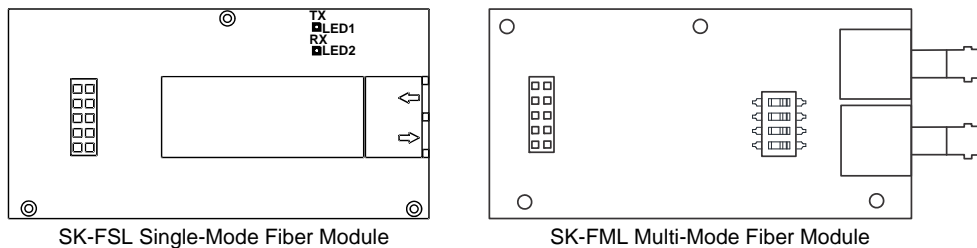


Figure 5.4 Types of Fiber Loop Modules

The SK-FML (Fiber-Optic Multi-Mode) and SK-FSL (Fiber-Optic Single-Mode) are plug-in fiber loop modules. The two types of fiber optic modules are used as one channel to transmit or receive communications with the SK-NIC, ARCNET communication circuit.

The following describe the two types of fiber optic modules.

- The SK-FML is a fiber module that allows the multi-mode fiber to network between nodes.
- The SK-FSL is a fiber module that allows the single-mode fiber to network between nodes.

Each fiber loop module can Transmit (TX) and Receive (RX) fiber-optic cable connecting to the SK-NIC. Up to two fiber loop cards can be added to the SK-NIC, and both cards may be combined in the same configuration.

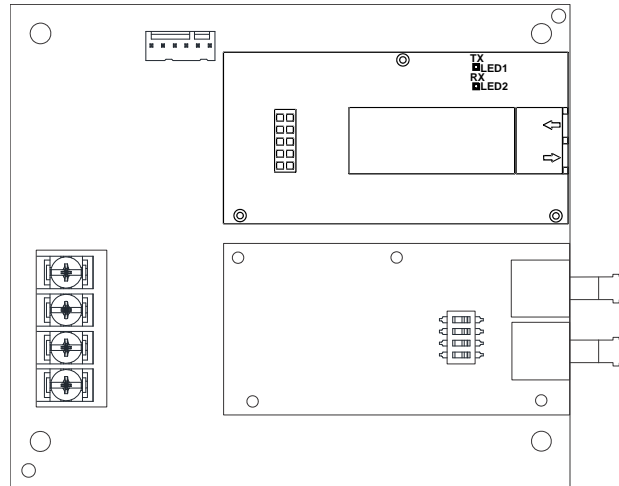


Figure 5.5 SK-NIC with Fiber Loop Modules

5.3.2 SK-NIC Mounting Kits

SK-NIC can be mounted in an accessory cabinet. An accessory kit is necessary to install the SK-NIC outside of the IFP-300 cabinet.

- The SK-NIC-KIT includes a SK-NIC, small cabinet with locking door, cable, and mounting hardware.
- The 5815RMK includes a small cabinet with locking door and mounting hardware.

5.4 SK-NIC Installation

The SK-NIC is designed to mount on one of the SLC standoff sets inside the cabinet or remotely using the accessory cabinet.

Use the following steps to properly mount the SK-NIC inside the IFP-300.

1. Align the SK-NIC over the standoffs on the back of the IFP-300 cabinet and secure with supplied screws. Refer to Figure 5.2 for location of standoffs.
2. Use the included 6-pin cable harness to connect the IFP-300 to the SK-NIC. Connect the SK-NIC to the pin connector on the control panel labeled, Data Network.

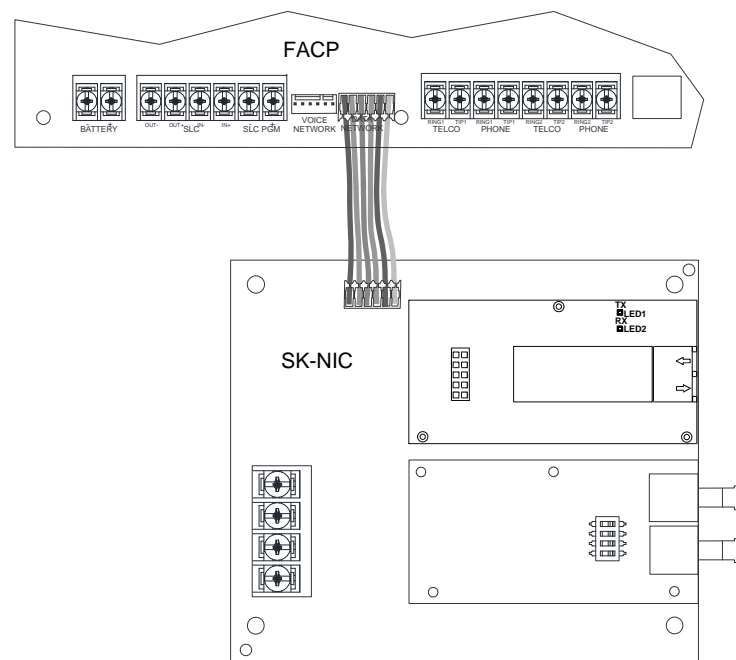


Figure 5.6 Panel to SK-NIC Connection

3. Each SK-NIC has the ability to monitor for earth ground faults on the twisted pairs connected to Port 1 of its terminal block, TB2. Earth fault detection for any wiring at Port 2 of TB2 is done at the next/previous SK-NIC due to these wiring connections being connected to Port 1 of TB2 at the next/previous SK-NIC.
4. Unused optic ports on fiber loop modules must have their dust caps placed on the port.
5. Based on the type of data medium chosen, run the twisted pair wiring/fiber optic cable to the next SK-NIC using a Class B or Class A wiring method. A combination of both medium types can be used. See Figure 5.7, Figure 5.8, Figure 5.9, and Figure 5.10 for SK-NIC wiring examples.

5.4.1 SK-NIC Remote Mounting

Follow the steps above except, the 6-pin cable that runs from the SK-NIC to the IFP-300 must be run in conduit. Refer to Figure 5.1.

5.4.2 Wiring

Unshielded Twisted Pair Wiring between Multiple Panels

Unshielded twisted-pair wiring between multiple panels is shown below in Figure 5.7. Class X wiring is shown with a dotted line.

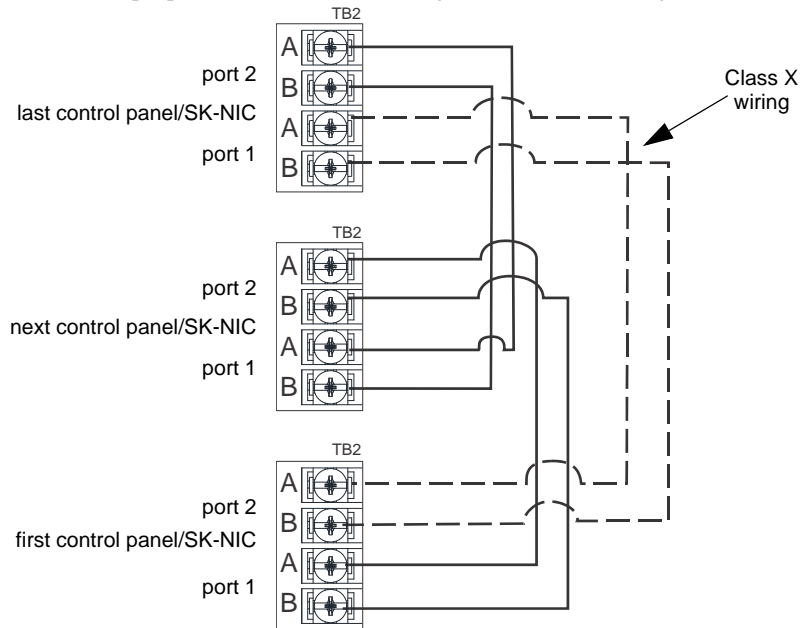


Figure 5.7 Twisted Pair Wiring Configuration

Fiber-Optic Multi-Mode Wiring between Multiple Panels

Fiber-optic cable between multiple panels is shown below in Figure 5.8 and Figure 5.9. Class X is shown with a dotted line.

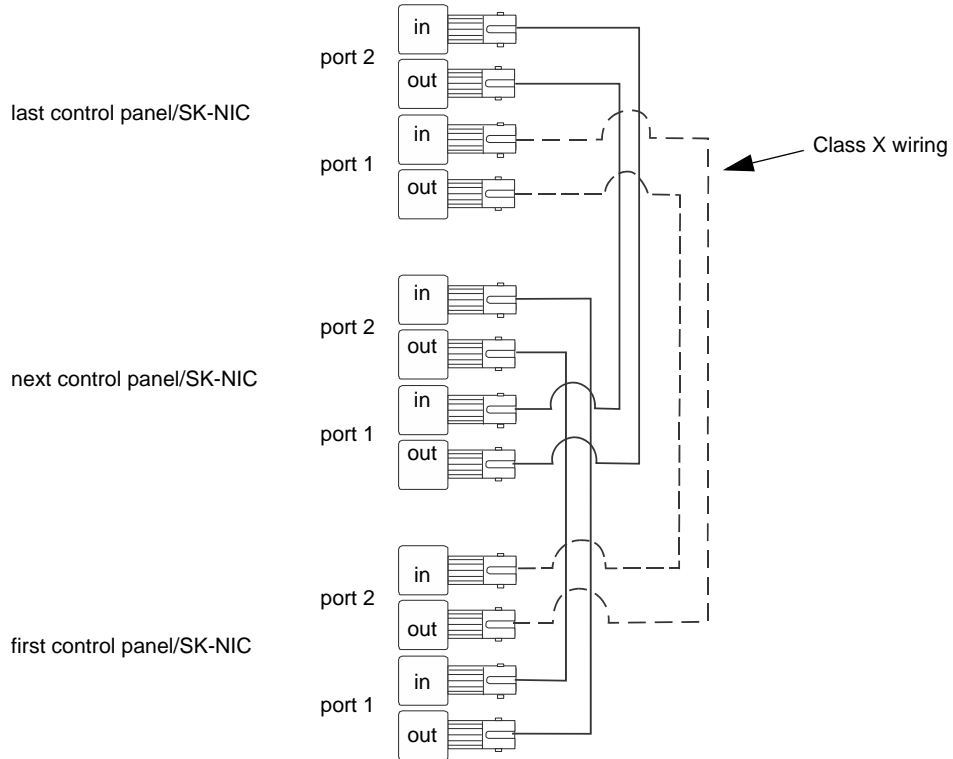


Figure 5.8 Fiber-Optic Wiring Multi-Mode Example

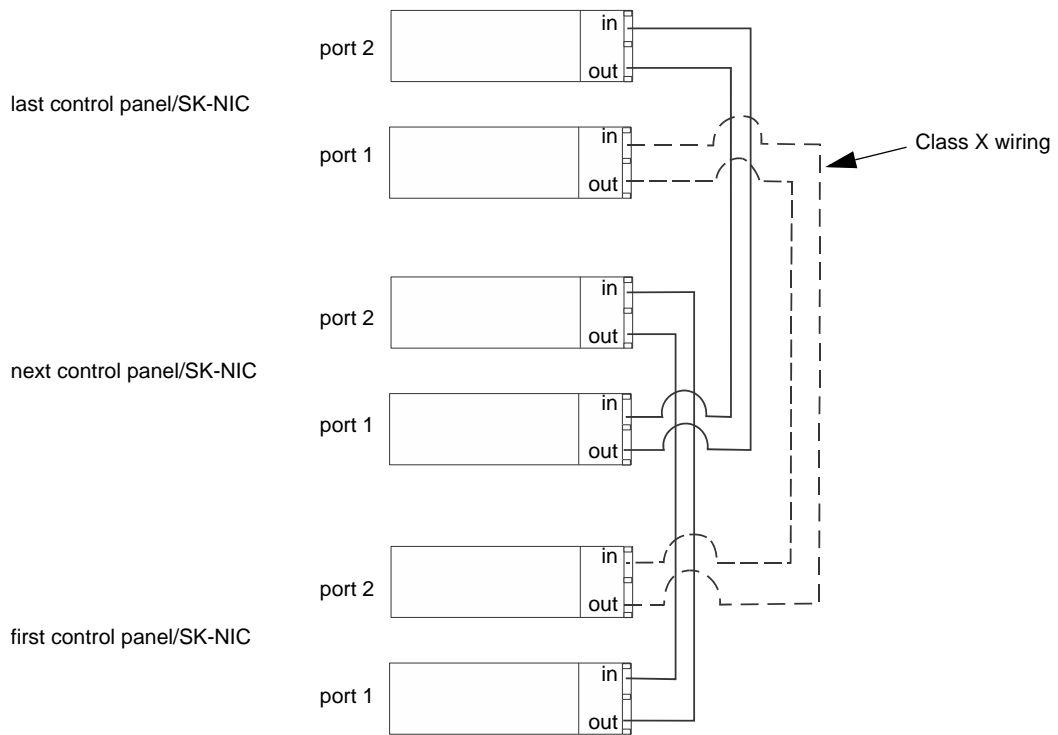


Figure 5.9 Fiber-Optic Wiring Single-Mode Example

Fiber-Optic and Twisted-Pair Wiring between Multiple Panels

A mixture of fiber-optic cable and twisted pair wiring between multiple panels is shown in Figure 5.10. Class X cabling is shown with dotted line.

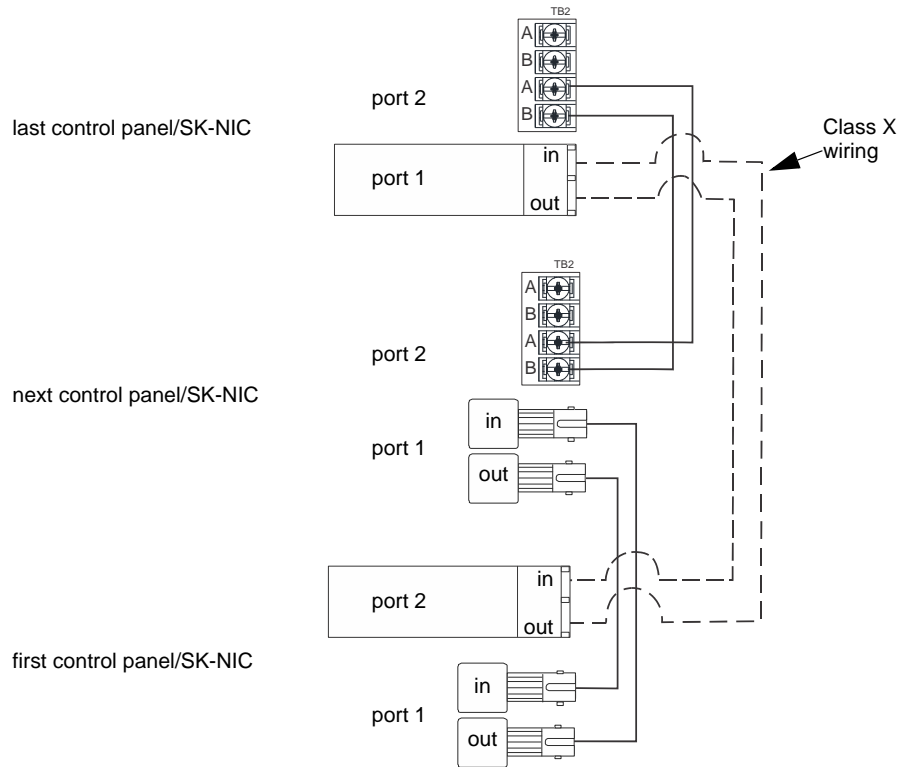


Figure 5.10 Twisted-Pair and Fiber-Optic Combination Wiring Example

5.5 Setting the Network ID for Each Panel



NOTE: It is important that much thought is given when choosing the network IDs for each panel. It is difficult to change the IDs once panel programming has begun.

Use the DIP switch positions 1 through 6 to set the network ID for each panel. Note that switches 7 and 8 are not used and should remain in the OFF position. See the figure below for possible DIP switch settings. Address 0 is an invalid address and cannot be used.

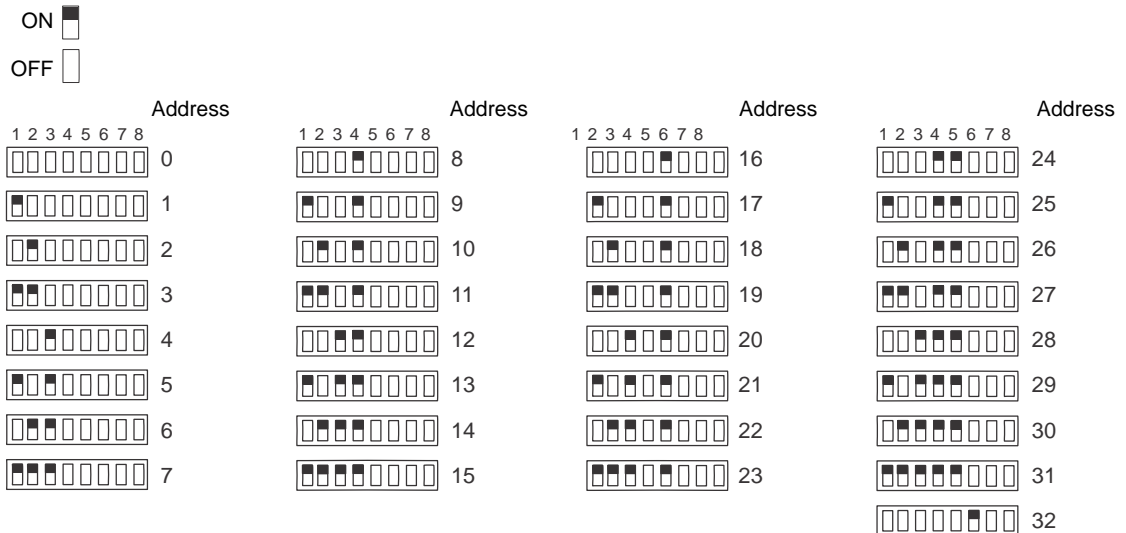


Figure 5.11 Network ID Settings

Section 6: Network Management

6.1 Network Diagnostics

6.1.1 Ping Panel

The Ping Panel Menu allows you to continually ping any panel programmed into the network. As the selected panel is being pinged, the Ping Panel screen will display the reply time, minimum and maximum reply times, and sent and received counters.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 5 for Network Diagnostics.
3. Press 1 to enter the Ping Panel Menu.
4. Press the up or down arrow key to select Network Panel ID. Press ENTER to Ping panel.

6.1.2 Data Network Status

The Data Network Status screen will display statistics that are indicators of Network performance.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 5 for Network Diagnostics.
3. Press 2 to enter the Data Network Status Menu.

6.1.3 Voice Network Status

The Voice Network Status screen will display statistics that are indicators of Network performance.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 5 for Network Diagnostics.
3. Press 3 to enter the Voice Network Status Menu.

6.2 Network Programming

This section of the manual describes how to program network options using the built-in annunciator. All options described in this section can be programmed using the HFSS Honeywell Fire Software Suite. HFSS must be used to edit site assignments.



NOTE: Off-site Event Troubles

These troubles appear when an event in another site activates Output Groups due to intra-site mapping. The following list of events may occur.

- Off-site Fire/Supervisory Event
- Off-site Advisory Event
- Off-site ECS Event

After the Alarm/Event is reset/restored in the site that caused it, these events restore automatically when the Output Group is set to OFF. Off-site events are logged in Event History.

6.2.1 Learn Network

The Learn Network Menu shows you all of the panels connected to the network. Any panel that has been programmed into the network will appear as a “member.” Any panel that is connected to the network but not programmed into the network will appear as a “guest.” You can add guest panels to the network by changing their status to member in this menu. Panels showing OK are currently responding on the network. Panels not showing OK have either been removed or are not responding due to networking problems. See Section 6.1 for Network Diagnostics.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 6 for Network Programming.
3. Press 1 to enter the Learn Network menu.
4. Press ENTER to add or remove panels connected to the network as member or guest.



NOTE: If adding panels to network, the system will automatically run the Sync Network Options. You will be required to select which panel to distribute network options from. See Section 6.4.

Incompatible Panel

If you try to add an incompatible panel as a member to the network, the Learn Network fails and an error message appears.

The incompatible panel remains a “guest”. To continue, remove the incompatible panel from the network.

6.2.2 Edit Network Names

The Edit Network menu allows you to edit the panel name and edit the panels site name.

Edit Panel Names

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 6 for Network Programming.
3. Press 2 to enter the Edit Network Names Menu.
4. Press 1 to Edit Panel Name. Choose Panel to edit.

Edit Site Names

5. Press 2 to Edit Site Name. Choose Site to edit.

See Appendix A for a list of available characters and their numeric designators.

6.2.3 Edit Panel ID

This menu option allows you to change the current Network Panel ID. It is best to carefully consider the network ID setting for each panel. Take into account any future panels that will be added to the network (future wiring of two buildings together). The Network Panel ID setting has to be unique for each panel on the network.

This menu will allow you to change the currently assigned Network Panel ID to the current Network ID DIP switch setting. The system will be down as the panel needs to reboot in order to complete the transition.

When using the PC configuration software to program the panels, the Network Panel ID will be locked from future editing. The only way to change it will be to restore defaults and use this menu again.

Edit the Network Panel ID

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 6 for Network Programming.
3. Press 3 to enter the Edit Panel ID menu.
4. If the Network Panel ID is changed and valid, the system will ask you to confirm the change. If it is not correct, you can change the DIP switches at this time.
5. Press up to select YES and press ENTER to confirm.

6.2.4 Computer Access

An installer at the panel site can initiate communications between the panel and a computer running the HFSS Honeywell Fire Software Suite (see also Section 7.3). In order for this communication to function properly, both the computer (running the software) and the control panel must have matching computer access numbers and computer codes.

To program computer access information:

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 6 for Network Programming.
3. Press 4 to enter the Computer Access menu.
4. Enter the computer access number (up to 6-digits), then press ENTER.
5. Enter the computer code, then press ENTER.
6. Enter the computer phone number, the panel will dial to connect to a downloading computer (up to 40-digits), then press ENTER.

6.2.5 Access Codes

Access codes provide the user access to the control panel functions. Each access code can be customized for each user. This feature allows some users the ability to access the programming and other higher level panel functions, while other users may only need access to the lower level functions (such as, performing fire drills or acknowledging trouble conditions). Access codes can only be assigned by someone with an Administrator profile. Refer to Section 9.2.1 on page 118 for more information on administrative permissions. Once an access code has been assigned by an administrator, a user has the ability to change it.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 6 to access the Network Programming Menu.
3. Select 5 to access the Access Codes.

The display reads: *Select Profile 01*
 Fire Fighter's Key
4. Press the up or down arrow key to select the Access Code you want to edit.
5. Then, press ENTER.

Profile Edit Menu

From the Profile Edit Menu, the user can change their name and access code only.

■ Edit Name

6. See Appendix A for a list of available characters and their numeric designators.
7. Then press ENTER to finish.

■ Edit Access Code

8. Enter new access code (minimum of 4 digits, maximum of 7 digit).
9. Press ENTER.
10. Enter code again. Press ENTER.

6.2.6 Communicator Options

Communicator options provide the configuration for reporting events to a Central Station.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 6 for Network Programming.
3. Press 6 to enter Communicator Options Menu.

Communicator Assignments

Each panel in the IFP-300 network specifies which network communicator is used for reporting. The network communicator capability of the IFP-300 system allows all panels to use the same communicator providing an economical solution for reducing the number of paths required for reporting purposes. A communicator is specified by panel number. The network communicators will be used to report events according to the communicator report table.

Communicator Miscellaneous

When using the SIA reporting format, the communicator sends information according to the SIA Reporting Type. The selections for this option are:

1. pi modifier (default)
2. Panel ID



NOTE: Only the SIA format sends the panel ID when reporting.

Receiver Configuration

The IFP-300 network can report events to as many as 68 receivers. See Appendix B for panel/receiver relationship numbers. Each receiver can be assigned reporting credentials. When using a format that supports phone numbers, it can be up to forty digits long.

1. From Login to the panel. The panel will automatically access the Main Menu.
2. Select 6 for Network Programming.
3. Press 6 to enter Communicator Options Menu.
4. Select 3 for Receiver Configuration.
5. Select Panel to Program and press ENTER.
6. Enter the receiver number that you want to report to. The receiver numbers available will correspond with what panel number you entered. Receiver numbers are populated based on panel number and audited to allow only the 4 appropriate receivers. See Appendix B for receiver number.

The available format choices are as follows.

- Contact ID
- SIA500
- SIA8
- SIA20
- Ethernet
- Cellular
- UNUSED

Communicator Reporting Table

The communicator Report Table specifies event reporting for each panel on the network. Each row in the table specifies a panel, event types to report, primary and backup receiver numbers, and report by point or zone. Associated with the receivers are account number and daily test option. The table can have up to 99 rows.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 6 for Network Programming.
3. Press 6 to enter Communicator Options Menu.
4. Select 4 for Communicator Reporting Table.
5. Press * to add rows, Press ENTER to edit data.

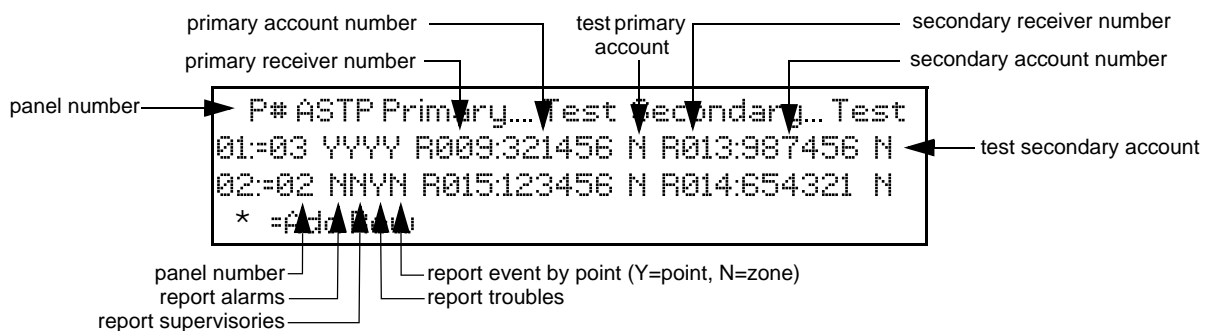


Figure 6.1 Communicator Reporting

6.3 Voice Options

6.3.1 Edit Timers

1. Login to the panel. The panel will automatically access the Main Menu.

2. Select 6 for Network Programming.
3. Select 7 for Voice Options.
4. Choose Site.
5. Select 1 for Edit Timers

Control Lockout

The Control Lockout countdown timer is set to the programmed value when an LOC gains ECS Control. The timer starts over upon any key press at the ECS Control LOC. While the Control Lockout timer is active, an LOC of equal priority must request ECS control. The Control Lockout timer is cleared when ECS Control is relinquished. The Control Lockout Timer does not apply to ECS Super User control.

- Select Immediate/Timer/Never
- Range 0-720 min/0-59 sec

Auto Reset ECS MIC Triggered Event

If you select the Timer, the Event will automatically reset after being active for the programmed time. If Event Disabled is selected, the event will not be allowed to be activated from an LOC Station. Selecting Never will require an Emergency System Reset to be performed to reset the event.

Select Never/Timer/Event Disabled, Range from 1-240 min.

| ECS Timer | Option |
|------------------------------------|----------------------------|
| Control Lockout | Immediate/Timer/Never |
| Auto Reset ECS MIC Triggered Event | Never/Timer/Event Disabled |
| Auto Reset ECS Event 1 | Never/Timer/Event Disabled |
| Auto Reset ECS Event 2 | Never/Timer/Event Disabled |
| Auto Reset ECS Event 3 | Never/Timer/Event Disabled |
| Auto Reset ECS Event 4 | Never/Timer/Event Disabled |
| Auto Reset ECS Event 5 | Never/Timer/Event Disabled |
| Auto Reset ECS Event 6 | Never/Timer/Event Disabled |
| Auto Reset ECS Event 7 | Never/Timer/Event Disabled |
| Auto Reset ECS Event 8 | Never/Timer/Event Disabled |

Table 6.1 Auto Reset ECS MIC Triggered Event Timer Menu

6.3.2 Edit Voice Commands

When a voice output group is selected to be activated by a zone, the cadence pattern choice does not apply. For voice output groups, one of six system wide voice commands will activate instead of the cadence pattern.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 6 for Network Programming Menu.
3. Select 7 for Voice Options.
4. Choose Site.
5. Select 2 for Edit Voice Commands.
6. Select the command you wish to edit:
 - Fire Alarm
 - Fire System Aux 1
 - Fire System Aux 2
 - Fire Zone Aux 1
 - Fire Zone Aux 2
 - Fire Prealarm
 - Emergency Communication 1
 - Emergency Communication 2
 - Emergency Communication 3
 - Emergency Communication 4
 - Emergency Communication 5
 - Emergency Communication 6
 - Emergency Communication 7
 - Emergency Communication 8
 - Fire Supervisory
 - System Alert 1-5
 - Trouble
 - Fire Interlock Release
 - Fire Interlock Alert
 - Custom Emergency Comm

- Emergency Supervisory
 - CO Alarm
 - CO Supervisory
7. Select whether a Message or Tone Only should be played. If Message is selected, choose the desired message for the command.
 8. Select the tone to be played between messages. (High-Lo, ANSI Whoop, Cont. Whoop, ANSI, March Code, California, Steady, Alert Tone, or No Tones).



NOTE: 520Hz tones are available when using the ECS-VCM, ECS-NVCM, ECS-INT50W, or ECS-DUAL50W amplifiers. These include ANSI 520, Temp 4 520, Steady 520. See the *Device Compatibility Document* for a list of compatible speakers.

9. Select how many times you wish the message to repeat. (None, 1 - 14, or Continuous).
10. Select the initial delay time (0, 3, 4, 8, 12, 16, 20, 24, 28).
11. Select the inter message delay time (4 to 32 seconds, in 4 second increments).
12. Select Y or N to allow message to continue to play after Mic release.
13. Select Y or N to allow message to restart on a new activation.

6.4 Sync Network Options

If after making changes to network programming, the distribution of network options fail, the system will report a trouble of network options out of sync. Use this menu to redistribute changed options to the rest of the network. The user will be required to choose a panel to source the options from. Scroll down through the informational message and press ENTER to view the Select Source screen.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 6 for Network Programming Menu.
3. Select 8 for Sync Network Options.
4. Select from which panel to source the options.

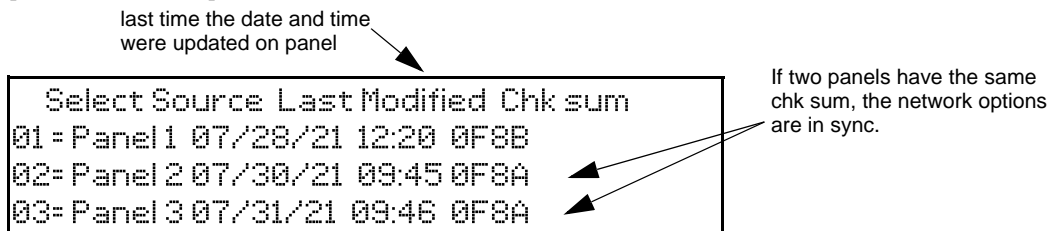


Figure 6.2 Sync Network Options



NOTE: If you try to sync with the network and an incompatible panel is found, an error message will display.

6.5 Network Management Quick Reference

| Menu | Options/Defaults | | | Comments |
|--------------------|--------------------------|---------------------------------------|------------------|--|
| Learn Network | Guest or member | Add or remove panels into the network | | See Section 6.2.1 |
| Edit Network Names | Panel Names | Network Panel ID | Edit Panel Names | See Section 6.2.2 |
| | Site Names | Edit Site Member | Edit Site Names | |
| Edit Panel ID | Change current panel ID | | | See Section 6.2.3 |
| Computer Access | Computer Access Number | *123456 | | See Section 6.2.4 |
| | Computer Code | *0 | | |
| Access Codes | Select Profile (01 - 20) | Edit Name | | Profile 1 is the profile that dictates what functions the Firefighter Key has access to. Because this is the profile for a keys, the user name and the access code can not be edited for this profile. |
| | | Edit Access Code | | |

Table 6.2 Network Management Quick Reference List

| Menu | Options/Defaults | | | Comments | |
|----------------------|-----------------------------------|-----------------------|------------------------------------|--|--|
| Communicator Options | Communicator Assignments | Select Panel | Primary | 0= unused | See Section 6.2.6 |
| | Communicator Miscellaneous | SIA Options | Enable pi SIA Modifier | | See "Communicator Miscellaneous" on page 72. |
| | Include Panel ID in SIA Reporting | | | | |
| | Receiver Configuration | Select Panel | Select Receiver | Receiver Number (1-4) | See "Receiver Configuration" on page 72. |
| | | | Receiver Format | Contact ID | |
| | | SIA500 | | | |
| | | SIA8 | | | |
| | | SIA20 | | | |
| | | Ethernet | | | |
| Cellular | | | | | |
| Receiver Credentials | | | | | |
| Communicator Options | Communicator Report Table | | Panel | See "Communicator Reporting Table" on page 72. | |
| | | | Report Alarms | | |
| | | | Report Supervisory | | |
| | | | Report Troubles | | |
| | | | Report Events by Point | | |
| | | | Primary Receiver | | |
| | | | Primary Account | | |
| | | | Test Primary Account | | |
| | | | Secondary Receiver | | |
| | | | Test Secondary Account | | |
| Voice Options | Choose Site | Edit Timers | Control Lockout | Immediate/Timer /Never | See Section 6.3.1. |
| | | | Auto Reset ECS Event 1-8 | Never/Timer/ Event Disabled | |
| | | | Auto Reset ECS MIC Triggered Event | | |
| | | Edit Voice Commands | Fire Alarm | See Section 6.3.2. | |
| | | | Fire System Aux 1 | | |
| | | | Fire System Aux 2 | | |
| | | | Fire Zone Aux 1 | | |
| | | | Fire Zone Aux 2 | | |
| | | | Fire Supervisory | | |
| | | | Fire Pre Alarm | | |
| | Custom Emergency Comm | | | | |
| | Emergency Communication 1-8 | | | | |
| | System Alert 1-5 | | | | |
| | Trouble | | | | |
| | Fire Interlock Release | | | | |
| Choose Site | | Fire Interlock Alert | See Section 6.3.2. | | |
| | | Emergency Supervisory | | | |
| | | CO Alarm | | | |
| | | CO Supervisory | | | |
| Sync Network Options | | | | See Section 6.4. | |

Table 6.2 Network Management Quick Reference List (Continued)

Section 7: Programming Overview

This section of the manual is to give you an overview of the programming process. Please read this section of the manual carefully, especially if you are programming the control panel for the first time.

The JumpStart Auto-programming feature automates many programming tasks and selects default options for the system. You will run JumpStart at least once when you are installing the system. See Section 7.1 for details. After you run JumpStart, you may need to do some additional programming depending on your installation. Section 8 of this manual covers manual programmable options in detail.

Programming the panel can be thought of as a four part process. You must program:

- Network options. This affects how all panels in the network work together. (see Section 6 for details).
- System options. These are options that affect general operation of the panel (see Section 8.6 for details).
- Options for input points and zones. These are primarily options that control detection behavior of devices (see Sections 8.3 and 8.5 for details).
- Options for output points and groups. This includes selecting characteristics for output groups and mapping output circuits to output groups (see Section 8.4 for details).

7.1 JumpStart Auto-programming

The JumpStart Auto-programming feature allows for faster system setup. When you run JumpStart Auto-programming, the panel searches for expanders and SLC devices not currently in the system. The new devices are added in their default configuration. At the end of JumpStart, you can choose to not accept the new devices and go back to the previous configuration. JumpStart saves the installer from having to program options for each device. Depending on the application, the installer may need to make some changes after JumpStart completes. See Section 7.1.3 for complete details about running JumpStart.

7.1.1 Input Points

The first JumpStart on the panel in default configuration will determine the number and type of input points (detectors or contact monitor modules) on each SLC loop. JumpStart Auto-Programming assigns the correct detector type (heat, ionization or photoelectric), so the installer does not need to edit the device type for detectors. Any contact monitor modules on the system will be assigned type “Manual Pull.” The installer will need to manually change the switch type if manual pull is not correct.

The first JumpStart Auto-programming creates one zone (Zone 1) and assigns all input points to Zone 1. Zone 1 is mapped to Output Group 1. After JumpStart completes, you can re-map to configure a multiple zone/output group system. For a general explanation of mapping, see Section 7.2.

7.1.2 Output Points

JumpStart Auto-programming creates three output groups and assigns output circuits as follows:

Circuits 1-4: Configured as Notification and assigned to Group 1. JumpStart Auto-programming automatically programs Zone 1 to activate Group 1 using constant on output when an alarm condition occurs.

Circuit 5 (Relay 1) Assigned to Group 249. JumpStart Auto-programming automatically programs Zone 1 to activate Group 249 using constant on output when a supervisory condition occurs.

Circuit 6 (Relay 2) Assigned to Group 250. JumpStart Auto-programming automatically programs Zone 1 to activate Group 250 using constant on output when an alarm occurs.

Addressable output points (Relay modules, NAC Modules, Sounder Bases, Relay Bases):

All addressable relay devices will be configured as “Output Pt” (general purpose output point) and assigned to Group 1.



NOTE: Relay output is constant even if the zone activating the relay is programmed with an output pattern.

7.1.3 Running JumpStart Auto-programming

Run JumpStart Auto-Programming immediately after you have addressed and connected all input devices (detectors, pull stations, etc.) and output devices (notification appliances, relays, etc.).



NOTE: If you need to install a few devices after you have run JumpStart, you can install them manually. Follow instructions in Section 8 for configuration.

To run JumpStart, follow these steps.

1. Login to the panel and access the main menu.
2. From the Main Menu Select 7 for the Program Menu.
3. From the next menu, select 6 for JumpStart.
4. When the message, “SLC FAMILY” message appears, select IDP, SK, or SD, depending on the type of SLC devices the panel is using, and press ENTER to accept.
5. A series of messages displays for the next several seconds. JumpStart scans the SLC loops for devices. This can take several minutes, depending on the number of devices attached.
6. When the message “Configuring System Done” displays, press any key to continue.

7. Select one of the following options from the menu that displays.

| | |
|-------------------------|---|
| 1- Review System | Press 1 if you need to review the JumpStart configuration. The Review System menu will appear. Press 1 to review Entire System or Press 2 for Changes Only. |
| 2- Repeat JumpStart | Press 2 if you need to rerun JumpStart for any reason. |
| 3- Accept Configuration | <ol style="list-style-type: none"> 1. If you are ready to make the JumpStart configuration permanent, select 3. 2. The system will ask you if the installation contains any Addressable Duct Detectors Used. If there are none, select 2 for No and skip to Step 8. If the system contains duct detectors, select 1 for Yes and continue with Step 3. 3. From the list that displays, select the SLC that contains the duct detectors. 4. The first photoelectric or ionization detector on the system will display. Select 1 for DUCT and 2 for NonDUCT. 5. Press up arrow to select the next detector. Select 1 for DUCT and 2 for NonDUCT. Continue until all duct detectors have been selected. (Note: You can move backwards through the list with down arrow). 6. When you reach the last detector on this device, press left arrow. 7. The system will ask you if there are any duct detectors used. If there are, select 1 for Yes and the message will ask, Have All Addressable Duct Detectors Been Identified? Left arrow for "No", Right arrow for "Yes". If there are no more duct detectors, continue with Step 8. 8. The system will restart with the saved JumpStart configuration. 9. After the system resets, it will use the new JumpStart configuration. |
| 4 - Discard Changes | If you want to discard the changes, and keep the configuration you had before running this JumpStart press 4. |

Table 7.1 JumpStart Programming Steps

7.2 Mapping Overview

This section of the manual is an overview of mapping. Details about how to select mapping options appear in the appropriate subsections in Section 8.

Mapping is an important concept with the control panel. In general terms, mapping is assigning or linking events to outputs that will activate when events occur. You do this by assigning input points to input zones, output points to output groups and then linking or mapping zones and output groups.

Figure 7.1 is a brief overview of the concept of mapping. The next several pages of the manual show these subjects in detail.

In its simplest application, mapping determines which outputs are activated by which inputs.

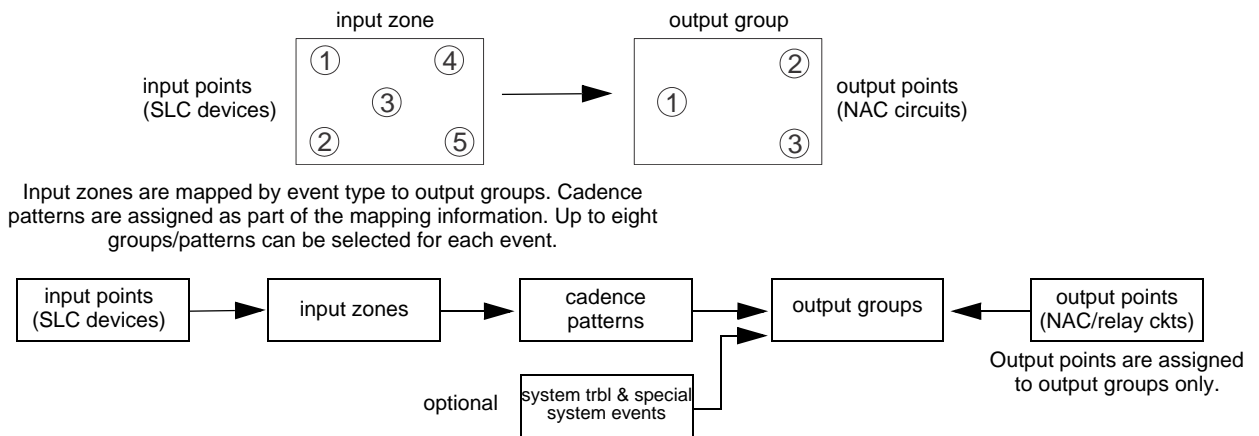


Figure 7.1 Mapping Overview



NOTE: Mapping cannot be programmed through the annunciators. It can only be programmed through the HFSS Honeywell Fire Software Suite.

7.2.1 Input Point Mapping

Input points are assigned to input zones. Any input point can be assigned to any input zone. (Input points can be assigned to one zone only. An input point can be designated as “Unused,” which means it has not been assigned to a zone.)

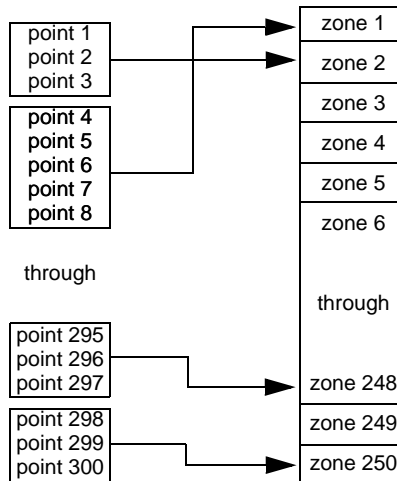


Figure 7.2 Input Point Assignment Example

7.2.2 Output Circuit Mapping

Figure 7.3 is a simple example showing how to assign notification and relay output circuits to groups. For an example of a simple floor above/floor below application, see Figure 7.5.

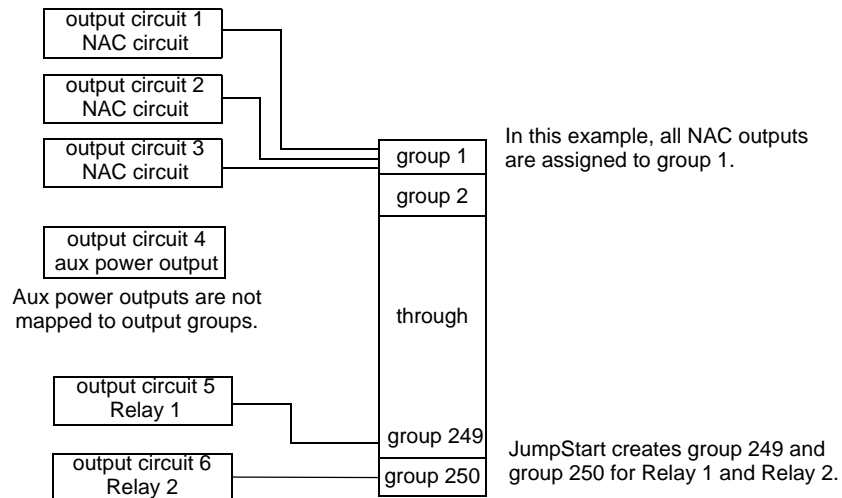


Figure 7.3 Assigning Output Circuits to Groups (Example)

7.2.3 Event Mapping

There are 11 types of Zone events, 14 types of Panel events, and 40 types of Site events that can be mapped. For each event type, you can activate the output groups with specific output patterns. Mapping examples are shown in Figures 7.4, 7.5, and 7.6.

| System | Zone | Panel | Site |
|----------|--|---------------------------|--------------------------|
| Fire | Manual Pull Alarm | System Aux 1 Alarm | Fire Drill |
| | Water Flow Alarm | System Aux 2 Alarm | General Fire Alarm |
| | Detector Alarm (heat or smoke detectors) | | General Fire Supervisory |
| | Zone Aux 1 Alarm | | General Fire Pre-Alarm |
| | Zone Aux 2 Alarm | | |
| | Interlock Alert | | |
| | Interlock Release | | |
| | Pre-Alarm | | |
| | Fire Supervisory | | |
| | Status Point | | |
| | CO Alarm | | |
| | CO Supervisory ¹ | | |
| | Emergency | | |
| | | | General ECS Alarm |
| | | | General ECS Supervisory |
| | | | Point ECS 1-8 Alarm |
| Advisory | Trouble | SBUS Expander Trouble | General Trouble |
| | Status Point Active | SBUS Class A Trouble | Site Silenced |
| | | SLC Loop Trouble | Voice Aux In 1-8 Alarm |
| | | AC Loss Trouble | F1 Key Active |
| | | Battery Trouble | F2 Key Active |
| | | Ground Fault Trouble | F3 Key Active |
| | | Phone Line Trouble | F4 Key Active |
| | | Reporting Account Trouble | Voice Aux in 1-2 |
| | | Printer Trouble | System Mic Active |
| | | Aux Power Trouble | Background Music |
| | | System Switch Trouble | |
| | Output Group Trouble | | |

Table 7.2 Event Mapping

1 Temporal 4 coding cannot not be used for NAC circuits on CO Supervisory events.

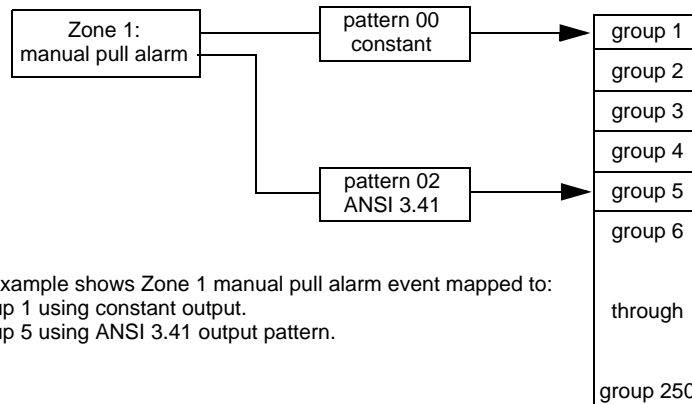


Figure 7.4 Example of Zone Events Mapped to Output Groups and Patterns

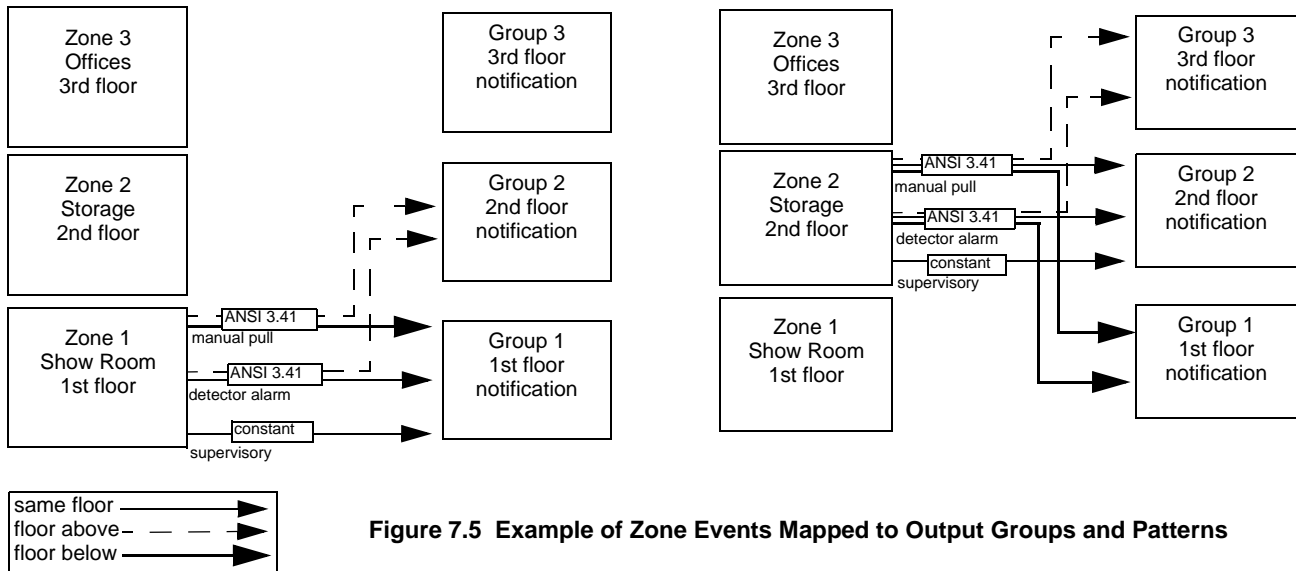


Figure 7.5 Example of Zone Events Mapped to Output Groups and Patterns

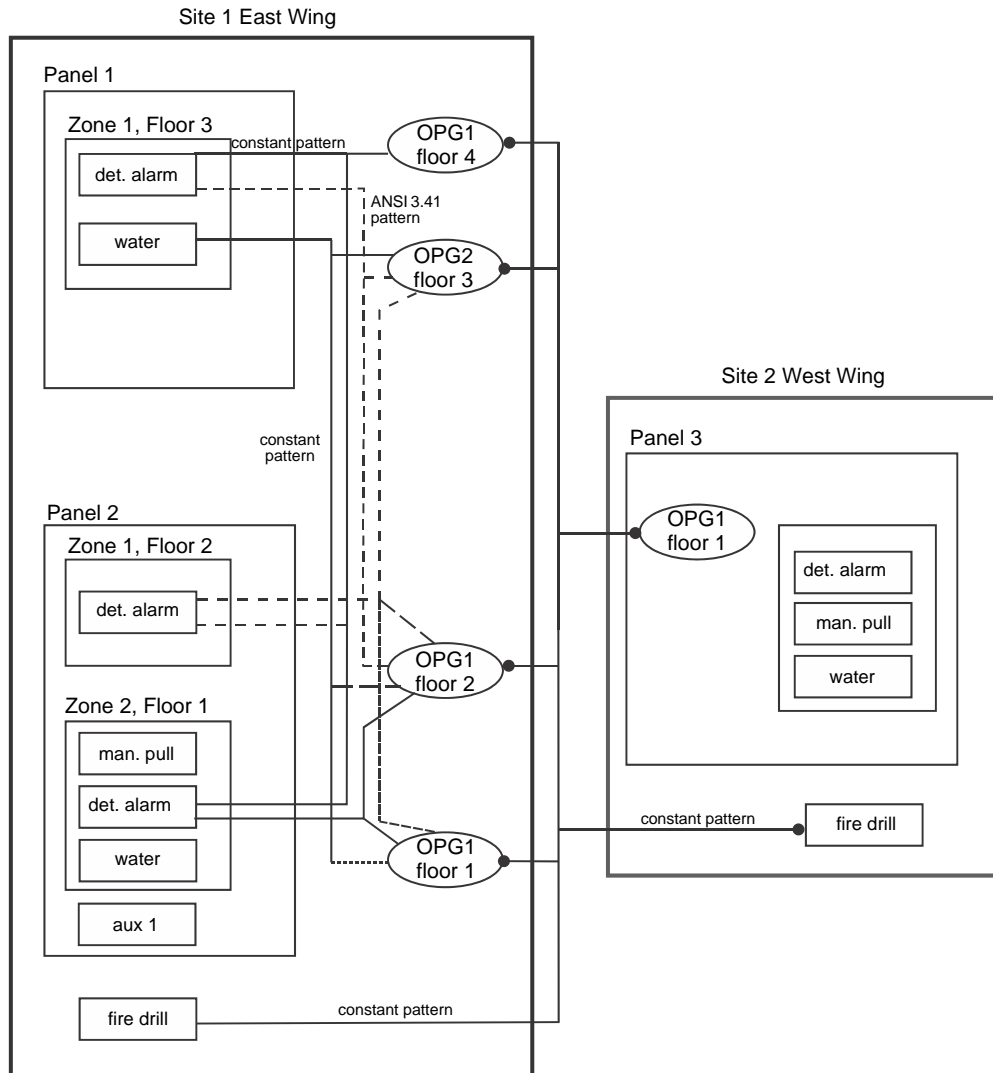


Figure 7.6 Example of Event Mapped to Output Groups and Patterns within a Networked Site

7.2.4 Mapping LED Points

Figure 7.7 is a simple example showing how LED points are mapped to zones and output groups. Typically you would create two output groups for each zone, one for alarms and one for troubles. (LED points are available when Models 5865-3/4 and/or 5880 are used with the system.)


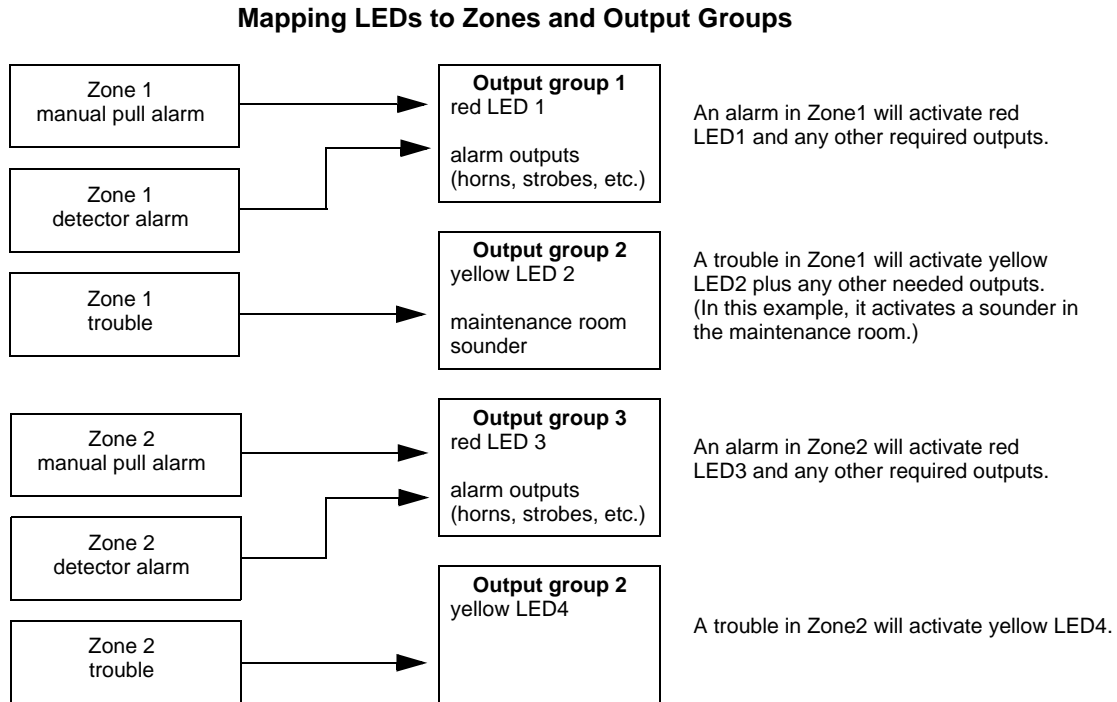


Figure 7.7 Example of LED Points Mapped to Output Groups (applies to Models 5865-3/4 and 5880)

7.2.5 Mapping LED Points for a Networked System

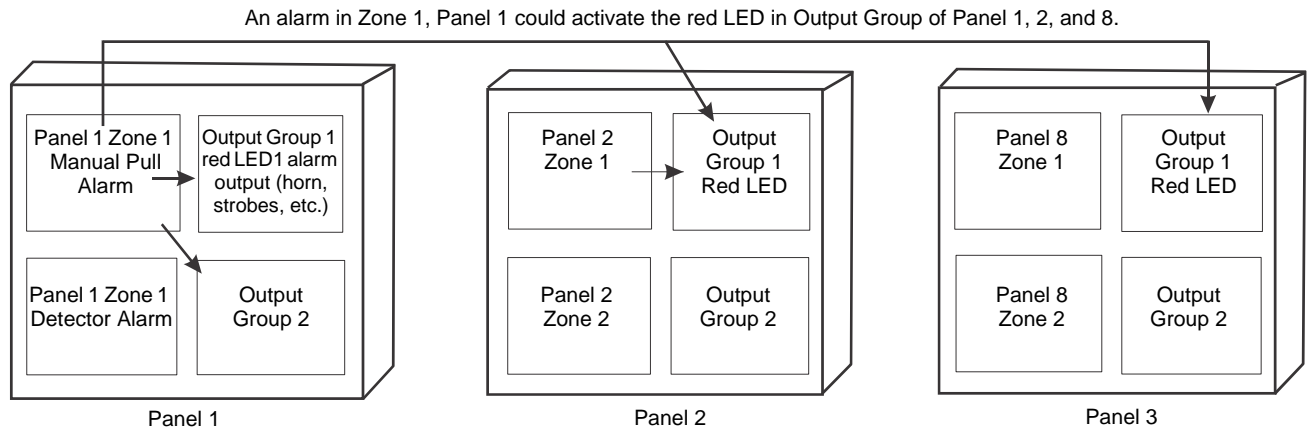

Note: If the panels are not in the same site, the mapping must be set to non-latching to disable the LED when the Trouble/Alarm is cleared.

Figure 7.8 Example of Expanding Mapping of LED Points Across Panels

7.3 Programming Using the HFSS Software Suite

You can use the HFSS Honeywell Fire Software Suite to program the control panel on-site (personnel will need to be on-site during the upload or download process). HFSS is a software package that lets you easily program the control panel using a Windows-based computer. HFSS is needed for mapping. When using HFSS, you can set up the programming options for the panel, save the options in a file, then download the file to the panel. You can connect to the control panel directly using the onboard USB or Ethernet. Updates are available at www.far-enhyt.com

7.4 Programming Using an Annunciator

You can program the control panel from a system annunciator, using either the control panel’s onboard annunciator or an RA-100, RA-1000 or RA-2000 remote annunciator.

The following subsections describe programming basics, including a description of editing keys available for programming and how to move through programming menus. Section 8 contains specific information about individual programming options.



NOTE: Output mapping cannot be programmed through the onboard and remote annunciators. Mapping is only available through the HFSS Honeywell Fire Software Suite.

7.4.1 Entering / Exiting Panel Programming

Entering Programming Mode

1. Login to the panel. (Refer to Section 9.2.1).
2. Select 7 for the Programming Menu. See Section 8 for detailed information and Section 7.5 for a quick reference listing all programmable options and JumpStart defaults.

Exiting Programming Mode

When you have completed working with the menus, press the left arrow several times until you exit from the Programming Mode. Two prompts will display. At the first prompt, a message appears indicating to exit the Program Menu (select Yes or No as appropriate). At the second prompt, a message indicates if the user accepts all changes. If you select No, any changes you have made since you entered the Program Menu will have no effect.

7.4.2 Moving through the Menus

Figure 7.9 shows how to move or navigate through program menu screens using the Main Menu screen as an example.

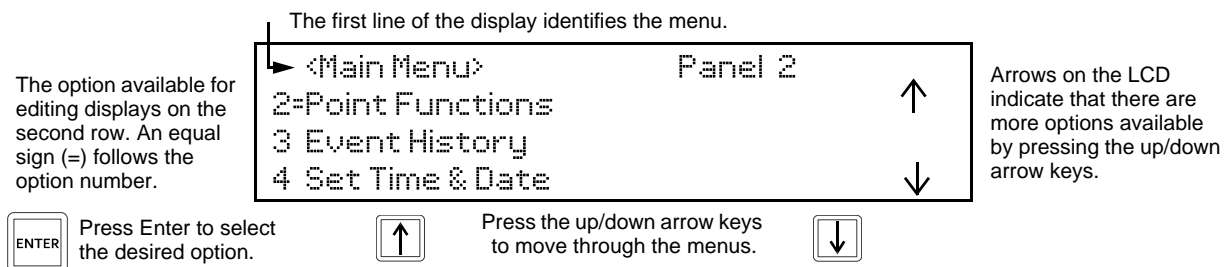


Figure 7.9 Moving through Program Menu

7.4.3 Selecting Options and Entering Data

There are several ways to make programming selections using the control panel depending on which screen you are currently using. The chart below is a generic explanation.

| To | Press |
|--------------------------------|---|
| Select from a menu | Enter the number of the option. |
| Enter numeric data | Press the appropriate number on the annunciator. |
| Enter text (alphanumeric data) | Enter each character individually using the Up and Down arrow keys until the one you wish to select displays. Then press right arrow to select the character. See Appendix A for a complete list of characters. |
| Select from a scrolling list | Use up arrow and down arrow to move through a list of available options. When the option you want to select is displayed, press ENTER. |

Table 7.3 Menu Options

7.5 Programming Menu Quick Reference

This section of the manual lists all Panel Programming options in the order they appear on the sub-menus. Default settings are indicated in text or marked with an asterisk (*). The comments column provide quick information and a reference to a section (if applicable) which has more detailed information.

| Menu | | Options/Defaults | | Comments |
|-------------------------------|---------------|--|-------------------|---------------|
| Module | Edit Module | Select Module | Edit Module ID | Section 8.2.1 |
| | | | Enter Module Name | |
| | | Edit Module specific options | | |
| Module | Add Module | 5824 Serial/Parallel/IO | | Section 8.2.2 |
| | | RA-2000 LCD Annunciator | | |
| | | RA-1000 LCD Annunciator | | |
| | | RA-100 LCD Annunciator | | |
| | | 6815 SLC Loop Expander | | |
| | | 5815XL SLC Loop Expander | | |
| | | RPS-1000 Power Supply | | |
| | | 5496 NAC Expander | | |
| | | 5880 LED I/O Module | | |
| | | 5865 LED Annunciator Module | | |
| | | ECS-50W Voice Amplifier ¹ | | |
| | | ECS-125W Voice Amplifier ¹ | | |
| | | ECS-DUAL50W Dual Amp ¹ | | |
| | | ECS-INT50W Internal Amp ¹ | | |
| | | ECS-NVCM Network Voice Control Module | | |
| | | ECS-VCM Voice Control Module | | |
| | | ECS-RVM Remote Voice Module ¹ | | |
| SK-NIC Network Interface Card | | | | |
| Delete Module | Select Module | | Section 8.2.3 | |
| View Module List | Select Module | | Section 8.2.4 | |

Table 7.4 Programming Menus Quick Reference List

| Menu | | Options/Defaults | | | Comments | |
|--------------------|---------------------------------|------------------|--|--------------------|--|---|
| Zone | Edit Zone | Select Zone | Edit Zone Name | | See "Edit Zone Name" on page 96. | |
| | | | Zone Properties | Verification Type | *1-Count | See "Edit Zone Properties" on page 96. |
| | | | | | 2-Count | |
| | | | | | Alarm Verif. | |
| | | | | | PAS | |
| | | | | | SNGL ILOCK | |
| | | | | | DBL ILOCK | |
| | | | Heat Temp Set | 135° to 150°F | SD devices. See "Edit Zone Properties" on page 96. | |
| | | | | | | 135° to 190°F |
| | | | | Smoke Sensitivity | | Low |
| Medium | | | | | | |
| High | | | | | | |
| Zone Accessory Opt | Single/Multi-station Cadence | 00-23 | See "Zone Accessory Options" on page 98. | | | |
| | CO Single/Multi-station Cadence | 00-23 | | | | |
| | Local Zone | Yes | | | | |
| | | No | | | | |
| | View Zone Points | Select Zone | | Section 8.4.2 | | |
| Group | Edit Group | Select Group | Group Name | | See "Edit Group Name" on page 99. | |
| | | | Group Properties | Voice Group | Y or N | See "Edit Group Properties" on page 99. |
| | | | | Switch | 1-64 | |
| | | | | Template Override | Y or N | |
| | | | | Allow Sys Override | Y or N | |
| | | | Dynamic Act/Template Override Cadence | 00-23 | See "Edit Group Properties" on page 99 and Appendix C. | |
| | View Group Points | Select Group | | Section 8.4.2 | | |
| | Edit OPG Template | Select template | Modify name and which output groups (OPGs) are in the template | Section 8.4.3 | | |

Table 7.4 Programming Menus Quick Reference List (Continued)

| Menu | | Options/Defaults | | | | Comments | |
|-------|---|------------------|---------------|----------------------------|----------------------------|-------------|-----------|
| Point | SD, IDP, and SK Devices on Internal SLC, External 6815, and External 5815XL | Enter Pt | Select Module | UNUSED | | Section 8.5 | |
| | | | | SWITCH 2, 3, 4, 5, 6, 7 | MANUAL PULL | | |
| | | | | | WATER FLOW | | *LATCH |
| | | | | | | | NON-LATCH |
| | | | | | FIRE SUPERVSY | | *LATCH |
| | | | | | | | NON-LATCH |
| | | | | | FIRE DRILL | | |
| | | | | | SILENCE | | |
| | | | | | RESET | | |
| | | | | | P.A.S. ACK | | |
| | | | | | ZONE AUX1 | | *LATCH |
| | | | | | | | NON-LATCH |
| | | | | | ZONE AUX2 | | *LATCH |
| | | | | | | | NON-LATCH |
| | | | | | SYSTEM AUX1 | | *LATCH |
| | | | | | | | NON-LATCH |
| | | | | | SYSTEM AUX2 | | *LATCH |
| | | | | | | | NON-LATCH |
| | | | | | DETECTOR | | |
| | | | | | FIRE TAMPER | | *LATCH |
| | | | | | | | NON-LATCH |
| | | | | | MANUAL RELEASE | | |
| | | | | | INTERLOCK | | |
| | | | | | STATUS POINT | | |
| | | | | | CO DETECTOR SWITCH | | |
| | | | | | CO SUPERV. DETECTOR SWITCH | | *LATCH |
| | | | | | | | NON-LATCH |
| | ECS INPUT | *LATCH | | | | | |
| | | NON-LATCH | | | | | |
| | ECS TAMPER | *LATCH | | | | | |
| | | NON-LATCH | | | | | |
| | ECS SUPERVISORY | *LATCH | | | | | |
| | | NON-LATCH | | | | | |
| | TROUBLE_MON | | | | | | |
| | NOTIF ^{2,3,4,5,6,7} | OUTPUT PT | Select Group | | | | |
| | | AUX CONST | | | | | |
| | | AUX RESET | | | | | |
| | | AUX DOOR | | | | | |

Table 7.4 Programming Menus Quick Reference List (Continued)

| Menu | | Options/Defaults | | | | | Comments | |
|---|--|------------------|------------------|-------------------------|----------------|---|-------------|--|
| Point (cont.) | SD, IDP, and SK Devices on Internal SLC, External 6815, and External 5815XL | Enter Pt | Select Sensor | RELAY 2,3,4,5,6,7 | OUTPUT PT | Select Group | Section 8.5 | |
| | | | | | AUX RESET | | | |
| | | | | | AUX DOOR | | | |
| | | | | SLC LED 4,7 | LED Number | 1-80 | | |
| | | | | | LED Function | Notif. Output Unused | | |
| | | | | DETECTOR 2,3,5,6 | 2-WIRE SMOKE | Select Zone | | |
| | | | | W. Gateway 2,3,5,6 | | | | |
| | | | | W SWITCH 2,3,5,6,8 | Same as SWITCH | | | |
| | | | | W-RELAY 2,3,5,6,8 | Same as Relay | | | |
| | | | | UNUSED | | | | |
| | | | | DETECTOR 2,3,4,5,6,7 | PHOTO | No Base | | |
| | | | | | | SDR BAS | | Single station or Multi station Silence or Non- Silence |
| | | | | | | RLY BAS | | |
| | | | | | | I-SdrBa (Intelligent Sounder Base) 2,3,5,6 | | Latch or non-latch, Single station or Multi station, Silence or Non- Silence, volume high (default) or low |
| | | | | | ION | No Base | | |
| | | | | | | SDR BAS | | Single station or Multi station Silence or Non- Silence |
| | | | | | | RLY BAS | | |
| I-SdrBa (Intelligent Sounder Base) 2,3,5,6 | Latch or non-latch, Single station or Multi station, Silence or Non- Silence, volume high (default) or low | | | | | | | |

Table 7.4 Programming Menus Quick Reference List (Continued)

| Menu | | Options/Defaults | | | Comments | | |
|------------------|---|------------------|------------------|-------------------------|--|--|-------------|
| Point (cont.) | SD, IDP, and SK Devices on Internal SLC, External 6815, and External 5815XL | Enter Pt | Select Sensor | DETECTOR 2,3,4,5,6,7 | HEAT ^{2,3,4,5,6,7} | No Base | Section 8.5 |
| | | | | | SDR BAS | Single station or Multi station | |
| | | | | | RLY BAS | Silence or Non- Silence | |
| | | | | | I-SdrBa (Intelligent Sounder Base) ^{2,3,5,6} | Latch or non-latch, Single station or Multi station, Silence or Non- Silence, volume high (default) or low | |
| | | | | | PHOTO DUCT ^{2,3,4,5,6,7} | No Base | |
| | | | | | DCT RLY | | |
| | | | | | ION DUCT ^{4,7} | No Base | |
| | | | | | DCT RLY | | |
| | | | | | 2-WIRE SMOKE ^{4,7} | | |
| | | | | | ACCLIMATE 2,3,5,6 | No Base | |
| | | | | | SDR BAS | Single station or Multi station | |
| | | | | | RLY BAS | Silence or Non- Silence | |
| | | | | | I-SdrBa (Intelligent Sounder Base) | Latch or non-latch, Single station or Multi station, Silence or Non- Silence, volume high (default) or low | |
| | | | | | HEAT-HT ^{2,3,5,6} | No Accessory base | |
| | | | | | SDR base | Single station or Multi station | |
| | | | | | RLY base | Silence or Non- Silence | |
| | | | | | I-SdrBa (Intelligent Sounder Base) | Latch or non-latch, Single station or Multi station, Silence or Non- Silence, volume high (default) or low | |
| | | | | | PHOTO- HEAT ^{2,3,5,6} | No Accessory base | |
| | | | | | SDR BAS | Single station or Multi station | |
| | | | | | RLY BAS | Silence or Non- Silence | |
| | | | | | I-SdrBa (Intelligent Sounder Base) | Latch or non-latch, Single station or Multi station, Silence or Non- Silence, volume high (default) or low | |
| | | | | | BEAM ^{2,3,5,6} | | |
| | | | | | SUP DET 2,3,4,5,6,7 | Same function as DETECTOR | LATCH |
| | | | | | | | NON-LATCH |

Table 7.4 Programming Menus Quick Reference List (Continued)

| Menu | | Options/Defaults | | | | Comments | |
|-----------------------|---|--|-----------------------------|------------------------------------|---|--|--|
| Point (cont.) | SD, IDP, and SK Devices on Internal SLC, External 6815, and External 5815XL | Enter Pt | Select Sensor (cont.) | CO FIRE ^{2,3,5,6} | CO ALARM/FIRE ALARM | No Base | Single station or Multi station Silence or Non- Silence |
| | | | | | | SDR BAS | |
| | | | | | | RLY BAS | |
| | | | | | I-SdrBA (Intelligent Sounder Base) | Latch or non-latch, Single station or Multi station, Silence or Non- Silence, volume high (default) or low | |
| | | | | | CO ALARM/FIRE SUPR | No Base | Single station or Multi station Silence or Non- Silence |
| | | | | | | SDR BAS | |
| | | | | | | RLY BAS | |
| | | | | | I-SdrBA (Intelligent Sounder Base) | Latch or non-latch, Single station or Multi station, Silence or Non- Silence, volume high (default) or low | |
| | | | | | CO SUPR/ FIRE ALARM | No Base | Single station or Multi station Silence or Non- Silence |
| | | | | | | SDR BAS | |
| | | | | | | RLY BAS | |
| | | | | | I-SdrBA (Intelligent Sounder Base) | Latch or non-latch, Single station or Multi station, Silence or Non- Silence, volume high (default) or low | |
| CO SUPR/ FIRE SUPR | No Base | Single station or Multi station | | | | | |
| | SDR BAS | | | | | | |
| | RLY BAS | | | | | | |
| | I-SdrBA (Intelligent Sounder Base) | Latch or non-latch, Single station or Multi station, Silence or Non- Silence, volume high (default) or low | | | | | |
| Point (cont.) | SD, IDP, and SK Devices on Internal SLC, External 6815, and External 5815XL | Enter Pt | Select Sensor (cont.) | W-Detector ^{2,3,5,6,8} | Photo ^{2,3,5,6,8} | Section 8.5 | |
| | | | | | Acclimate ^{2,3,5,6,8} | | |
| | | | | | Photo-Heat ^{2,3,5,6,8} | | |
| | | | | | Heat ^{2,3,5,6,8} | | |
| | | | | W-SUP DET ^{2,3,5,6,8} | Same as W-Detector | | |

Table 7.4 Programming Menus Quick Reference List (Continued)

| Menu | | Options/Defaults | | | | Comments | |
|---------------------------------|--|--|---------------------------------|----------|-----------------------|---|---|
| Point (cont.) | Internal Power and External Power | Enter Pt /Select Function | Select Sensor | UNUSED | | Section 8.5 | |
| | | | | B NOTIF | NOTIF OUTPUT | | Select Group Supervised Yes or No |
| | | | | | CONTROL CIRCUIT | | |
| | | | | A NOTIF | NOTIF OUTPUT | | Select Group Supervised Yes or No |
| | | | | | CONTROL CIRCUIT | | |
| | | | | AUX PWR | CONSTANT | | |
| | | | | | AUX RESET | | |
| | | | | | AUX DOOR | | |
| | | | | | AUX SYNC ⁹ | | |
| | | | | B SWITCH | MANUAL PULL | | Latch and Non-Latch feature only appear for WATERFLOW,FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2., ECS INPUT, ECS TAMPER, and ECS SUPERVISORY. |
| | | | | | WATER FLOW | | |
| | | | | | FIRE SUPERVISORY | | |
| | | | | | FIRE TAMPER | | |
| | | | | | FIRE DRILL | | |
| | | | | | SILENCE | | |
| | | | | | RESET | | |
| | | | | | P.A.S. ACK | | |
| | | | | | ZONE AUX 1 | | |
| | | | | | ZONE AUX2 | Latch and Non-Latch feature only appear for WATERFLOW,FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2., ECS INPUT, ECS TAMPER, and ECS SUPERVISORY. | |
| | | | | | SYSTEM AUX1 | | |
| SYSTEM AUX2 | | | | | | | |
| MANUAL RELEASE | | | | | | | |
| INTERLOCK | If ECS INPUT is selected choose associated EVENT | | | | | | |
| STATUS POINT | | | | | | | |
| ECS INPUT | Latch and Non-Latch feature only appear for WATERFLOW,FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2., ECS INPUT, ECS TAMPER, and ECS SUPERVISORY | | | | | | |
| ECS TAMPER | | | | | | | |
| ECS SUPERVISORY | | | | | | | |
| A SWITCH | Same as B SWITCH | | Section 8.5.3 | | | | |
| B DETECT | 2-WIRE SMOKE | | | | | | |
| | 4-WIRE SMOKE | | | | | | |
| | CO 4 WIRE DET | | | | | | |
| A DETECT | 2-WIRE SMOKE | | | | | | |
| | 4-WIRE SMOKE | | | | | | |
| | CO 4 WIRE DET | | | | | | |
| Select Group or Zone Number | | Group or Zone selection will appear depending on the function selected | | | | | |
| Edit Name | | Enter Name | | | | | |
| 5880/5865/ECS-Series Amplifiers | Enter Point # | UNUSED | Section 8.5.4 and Section 8.5.6 | | | | |
| | | NOTIF | | | NOTIFICATION OUTPUT | | |
| | | | | | CONTROL CIRCUIT | | |

Table 7.4 Programming Menus Quick Reference List (Continued)

| Menu | | Options/Defaults | | | Comments | |
|----------------------------------|---------------------------|----------------------|----------------------------------|---------------------------------|---------------|---|
| Point (cont.) | 5496 | Edit Point # | UNUSED | | Section 8.5.5 | |
| | | | B NOTIF | Control Circuit Notif Output | | Select Group, Supervised Yes or No |
| | | | A NOTIF | | | |
| | | | AUX_PWR | Constant | | Edit Name |
| | | | | Aux Sync | | |
| Aux Door | | | | | | |
| | Aux Reset | | | | | |
| ECS-VCM, ECS-RVM, ECS-NVCM | Enter Pt /Select Function | UNUSED | | Section 8.5.7 | | |
| | | SWITCH ¹⁰ | SUPERVISORY | | | |
| | | | TAMPER | | | |
| | | | WATER FLOW | | | |
| | | | P.A.S. (Non-latching) | | | |
| | | | MANUAL PULL (Latching) | | | |
| | | | SYSTEM SILENCE (Non-latching) | | | |
| | | | SYSTEM RESET | | | |
| | | | ZONE AUX 1 | | | |
| | | | ZONE AUX 2 | | | |
| | | | SYSTEM AUX 1 | | | |
| | | | SYSTEM AUX 2 | | | |
| | | | FIRE DRILL | | | |
| | | | MANUAL RELEASE SWITCH | | | |
| | | | INTERLOCK SWITCH | | | |
| | | | STATUS POINT | | | |
| | | | ECS INPUT | | | |
| | | | ECS TAMPER | | | |
| | | | ECS SUPERVISORY | | | |
| | | | VOICE AUX ECS 1-4 | | | |
| VOICE AUX STATUS 1-2 | | | | | | |
| BACKGROUND MUSIC ENABLE | | | | | | |

Table 7.4 Programming Menus Quick Reference List (Continued)

| Menu | | Options/Defaults | | | Comments | |
|-------------------|--------------------------|-------------------------------------|-----------------|----------------------------------|----------|-----------------------------------|
| System Options | Communication Options | Auto Time Test | Set the Hour | *02:00AM | | See "Auto Test Time" on page 110. |
| | | | Set the Minutes | | | |
| | | | Select AM/PM | | | |
| | | | Enter Interval | 24 hrs, 12 hrs, *6 hrs, 4 hrs | | |
| | Phone Lines | For each phone line (1 & 2) select: | | | | |
| | | Dialing Prefix | Up to 9 digits | *none | | See "Phone Lines" on page 111. |
| | | # of Answer Rings | Range: 00-15 | *06 | | |
| | | Select Dialing Option | TT | *TT | | |
| | | | TT/PL | | | |
| | | | PULSE | | | |
| | | Rotary Pulse Format | U = 60/40 | *U | | |
| | | | E = 66/34 | | | |
| | | Dial Tone Disabled | Y or N | *N | | |
| | Monitor Line | Y or N | *N | | | |
| | Answering Machine Bypass | Y or N | *N | | | |
| Phone Line Unused | Y or N | *N | | | | |
| Edit Ethernet | IP Address | | | See "Edit Ethernet" on page 112. | | |
| | Subnet Mask | | | | | |
| | Default Gateway | | | | | |
| | DHCP Enable | | | | | |

Table 7.4 Programming Menus Quick Reference List (Continued)

| Menu | | Options/Defaults | | | | Comments |
|-------------------------|-------------------------------|---|--------------------|--|---------------|-------------------------------------|
| System Options cont. | Communication Options | AlarmNet Timers | Ethernet Supervise | 75 sec, 90 Sec, 3 min, 5 min, 1 hr, 24 hrs, 30 days, None | *5 Minutes | See "AlarmNet Timers" on page 112. |
| | | | Cellular Supervise | 24Hrs, 30 days, none | *24 Hours | |
| | | | Old Alarm Time | 10 min, 15 min, 30 Minutes, 1 hr, 2 hrs, 4 hrs, 8 hrs, 12 hrs, 24hrs, none | *30 Minutes | |
| | | Phone Line Gains | Dialing | High | *High | See "Phone Line Gains" on page 113. |
| | | | | Low | | |
| | | | | Normal | | |
| | | | Reporting | Low | *Low | |
| | | | | Normal | | |
| | | | | High | | |
| | Daytime/Nighttime Sensitivity | Enable/Disable | Yes | *No | Section 8.6.2 | |
| | | | No | | | |
| | | Day Start | Enter time | *6:00AM | | |
| | | Night Start | Enter time | *6:00PM | | |
| | Days of the Week | Select days | *-MTWTF- | | | |
| | Holiday Days | Holidays 1 to 18 | Enter dates | *01/01, 07/04, 12/24, 12/25 | Section 8.6.3 | |
| Time Options | Water Flow Delay | 0 - 90 Seconds | *1 sec | Section 8.6.4 | | |
| | Alarm Verify | 60 to 250 seconds | *60 sec | | | |
| | Low AC Report Time | 0 - 30 hours | *3 hrs | | | |
| | AC Freq: | 50 Hz | *60Hz | | | |
| | | 60 Hz | | | | |
| | | Internal | | | | |
| | Clock Display Format | AM/PM | *AM/PM | | | |
| MIL | | | | | | |
| Auto-resound | 4 hours | *24 hours | | | | |
| | 24 hours | | | | | |
| Miscellaneous Options | SYNC Strobes when Silenced | Y | *N | Section 8.6.5 | | |
| | | N | | | | |
| | Auto Display Events | Y | *N | | | |
| Daylight Saving Options | Auto Daylight Saving | Y | *Y | Section 8.6.6 | | |
| | | N | | | | |
| | DST Start | Select week: 1st, 2nd, 3rd, 4th or Last | Select month | Section 8.6.6 | | |
| DST End | | | | | | |
| Edit Banner | Refer to Appendix A. | | | Section 8.6.7 | | |
| SLC Family | IDP | | | Section 8.6.8 | | |
| | SK | | | | | |
| | SD | | | | | |
| JumpStart AutoPrg | | Y (Yes) | | Section 8.7 | | |
| | | N (No) | | | | |
| Restore Defaults | | Y (Yes) N (No) | | Section 8.8 | | |

Table 7.4 Programming Menus Quick Reference List (Continued)

| Menu | | Options/Defaults | Comments |
|-----------------------------|---------------------|----------------------------|-------------|
| Voice Options ¹⁰ | VCM Maintenance | PC Connection | Section 8.9 |
| | | Local Recording | |
| | Edit Voice Settings | Enable Dual Channel System | |
| *=-Default | | | |

Table 7.4 Programming Menus Quick Reference List (Continued)

- 1 Requires ECS module programmed into the panel
- 2 Available on internal SLC.
- 3 Available on external 6815 expander.
- 4 Available on external 5815XL expander.
- 5 Available with SLC family as IDP.
- 6 Available with SLC family as SK.
- 7 Available with SLC family as SD.
- 8 Requires wireless gateway.
- 9 AUX SYNC setting is only applicable for the B200S Intelligent Sounder Base.
- 10 Requires ECS module programmed into the panel.

Section 8: Programming

This section of the manual describes how to manually program the control panel from the built-in annunciator. Each subsection discusses these menu options in detail. All options described in this section can be performed using the HFSS Honeywell Fire Software Suite.



NOTE: JumpStart auto-programming should be run Before any customized programming is performed. Thoroughly test the system after running JumpStart because it automatically programs the system, searching for and configuring all SLC and SBUS devices it finds. JumpStart allows you to confirm the integrity of the installation prior to performing any custom programming. After determining that the hardware is properly installed, custom programming can be performed.

8.1 UL 864 / UL 2572 Programming Requirements

| NOTICE TO USERS, INSTALLERS, AUTHORITIES HAVING JURISDICTION, AND OTHER INVOLVED PARTIES: This product incorporates field programmable software. In order for the product to comply with the requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864 and UL 2572, certain programming features or options must be limited to specific values or not used at all as indicated below. | | | | | | |
|---|------------------------------------|---------------------------|----------------------------|--------------------------------------|---|---|
| Programming Option | Menu Item | Permitted in UL 864 (Y/N) | Permitted in UL 2572 (Y/N) | Possible Settings | Settings Permitted in UL 864 | Settings Permitted in UL 2572 |
| Time Options | Auto-resound | Yes | Yes | 4 hrs, 24hrs | 4 hours if using SWIFT devices 24 hours if using other devices | 4 hours if using SWIFT devices 24 hours if using other devices |
| Time Options | Low AC Report Delay | Yes | Yes | 0-30 hours | 1-3 hours | 1-3 hours |
| Communication Options | Auto Test Time | Yes | Yes | 4, 6, 12, and 24 hrs | 4 or 6 hours | 4 or 6 hours |
| Silencing Options | Auto Silence | Yes | Yes | 0-60 minutes | 3-60 minutes | 3-60 minutes |
| Display Oldest Event | Y (Enabled) | Yes | Yes | Yes or No | Yes | Yes |
| | N (Disabled) | No | No | Yes or No | No | No |
| Initial Delay | 0-28 | Yes | Yes | 0-28 hours | 3 hours | 3 hours |
| Inter Message Delay | 4-32 | No | No | 4-32 hours | 4-32 hours | 4-28 hours |
| Alarm Verification ¹ | Alarm Verification | Yes | Yes | 60-250 seconds (Confirmation period) | 0-60 seconds | 0-60 seconds |
| Manual Release Switch ² | Manual Release | Yes | Yes | 0-120 seconds (delay period) | 0-30 seconds (delay period) | 0-30 seconds (delay period) |
| Auto Reset ECS MIC Triggered Event | Auto Reset ECS MIC Triggered Event | Yes | Yes | Never Timer Event Disabled | Never Timer Event Disabled | Never Timer Event Disabled |
| ECS Input | ECS Input | Yes | Yes | Latching Non-Latching | Latching | Latching |
| Event Priority | CO Alarm | No | No | Yes & No | No | No |

Table 8.1 Programming Requirements

- When 2-count delay is active, you cannot use the alarm verification.
- The Manual Release Switch shall override any pre-discharge delays resulting in an immediate release or start of the Manual Release Delay period. The delay period shall be 30 seconds or less from the activation of the switch to the actuation of the releasing device(s).



NOTE: Use software version 7.0 or higher.

8.2 Modules

This section lists the options available under the module option in the program menu. The following modules are available for the control panel: RA-100, RA-1000 or RA-2000 LCD Annunciators, 5815XL SLC loop expander for SD devices, 6815 SLC Loop Expander for IDP or SK devices, 5824 serial/parallel printer interface module, 5496 NAC Expander, RPS-1000 intelligent power module, 5880 LED I/O module, 5865 LED annunciator, ECS-50W, ECS-125W, ECS-INT50W, ECS-DUAL50W watt audio amplifier, ECS-VCM voice control module, ECS-NVCM network voice control module, ECS-RVM remote voice module, and SK-NIC network interface card.

8.2.1 Edit Modules

The features that can be edited when this option is selected are, module name and class of wiring (Class A or Class B).

To edit an existing module, follow these steps:

- Login to the panel.

2. Select 7 for Program Menu.



NOTE: If you are working on a networked system, you will need to select which panel you want to program.

3. Press 1 to enter the Module Menu.
4. Press 1 to edit a module.
5. To select the module you want to edit, use the up or down arrow key. Then, press ENTER.

Editing Module ID

6. Press the up or down arrow key to modify the module ID.



NOTE: You cannot edit the module ID for any internal devices, the ECS-NVCM, or the SK-NIC.

Naming Modules

You can assign an English name to a system hardware module to make it easier to recognize on a display.

7. If you want to edit the modules name, press the up or down arrow key to select each character for the modules name (or press the right arrow key to bypass the name edit).



NOTE: See Appendix A for instructions on how to edit names.

Default name for the Internal SLC module (no customization) →

```

Internal SLC Loop
Module ID: 97
Internal SLC
<Module Name>
More →
    
```

Use the up or down arrow key to select the mode. Press the number until the desired character is shown. Press left/right arrow key to move. →

```

<Enter Module Name> Enter: Accept
Internal Power Supply
1[abc] 2[def] 3[ghi] 4[jkl] 5[mno]
6[pqr] 7[stu] 8[vwx] 9[yz] 10[SpC]
    
```

Figure 8.1 Edit Module Name Programming Screen Example

Changing Module Options

Each module has a unique set of options that specifically applies to the functionality of the module being edited.

8. Use the left and right arrow keys to move the cursor between the available options.
9. To edit the Option settings, press the up or down arrow key or use the keypad to enter a number.

8.2.2 Adding a Module

If you need to add a new hardware module to the system, follow these steps.

1. Login to the panel.
2. Select 7 for Program Menu.
3. Press 1 to enter Module Menu.
4. Press 2 to add a module.
5. From the next screen, use the up or down arrow to choose a module type to add from the <New Module Type> screen.
The screen will display “Adding module [#]...” for a few moments. You will be returned to the <New Module Type> screen where you can add additional modules if desired.

You must save changes when you exit the Program Menu or the new module will not be added.



NOTE: If you add a module that has not been physically connected, the panel will go into trouble after it reinitializes (when you exit the Program Menu). When the new module is attached, the trouble will correct itself automatically.

8.2.3 Deleting a Module

If you ever need to delete a module, follow these steps.

1. Login to the panel.
2. Select 7 for Program Menu.
3. Press 1 to enter Module Menu.
4. Select the desired module.
5. Press 3 to delete a module.
6. Select a module to delete.
7. A Warning screen will display. If you want to proceed with deleting the module, select Yes. To cancel, select No.

8.2.4 View Module List

1. Login to the panel.
2. Select 7 for Program Menu.
3. Press 1 to enter Module Menu.
4. Press 4 to View Module List.

8.3 Zone

Through the Zone option in the Program Menu, you can edit and view zone points. Selections made here affect all detectors and switches in the zone. Up to 250 zones can be used in the system.

8.3.1 Edit Zone

Features that can be edited through the Edit Zone option are zone name, zone properties (which includes, zone type, and detector sensitivity), zone output mapping, and zone accessory options.

To edit a zone, follow these steps:

1. Login to the panel.
2. Select 7 for Program Menu.
3. Press 2 to enter Zone Menu.
4. Press 1 to edit a zone.
5. Enter the zone number, then press ENTER.

Edit Zone Name

6. Press 1 to edit the selected Zone Name.
- You can use words to display a descriptive name for a zone.



NOTE: See Appendix A for editing names.

Edit Zone Properties

Zone properties consist of alarm delay characteristics, heat detector sensitivity, and smoke detector sensitivity.

1. Do steps 1 through 5 of Section 8.3.1.
2. Press 2 to edit the properties of the selected zone.

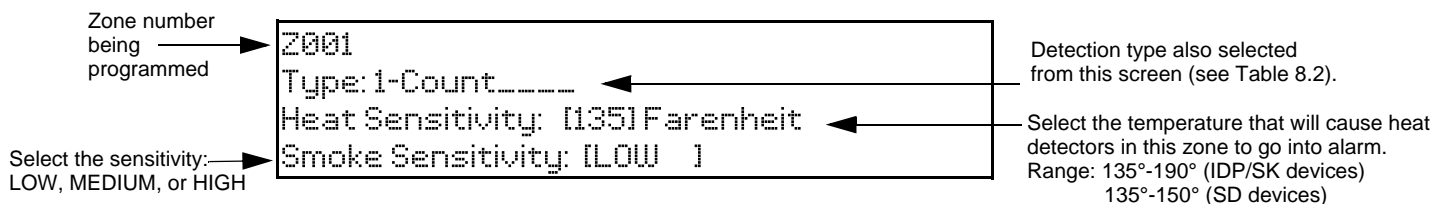


Figure 8.2 Edit Zone Properties



NOTE: You only see smoke sensitivity on the IFP-300 if the daytime/nighttime sensitivity is off under the System Options. (See Section 8.6.2). Otherwise, if you have Daytime/Nighttime Sensitivity on, this will bring up a Smoke Sens Day and Night, 2 separate widgets with sensitivity as being either low, medium, or high for each.

■ Alarm Delay Characteristics

The programmed zone type is provided for the user reference only. To modify the zone type, use the HFSS Honeywell Fire Software Suite. Select the alarm delay characteristics (see Table 8.2 below) by pressing the up or down arrow.

| Type of Delay | Description |
|----------------------|--|
| 1-Count ¹ | One Count (No Delay). When this option is enabled, an alarm occurs immediately when a single device of any of the following types goes into alarm: detector, manual pull, water flow, Aux1 or Aux2. This is considered the most typical operation and is the default for all zones. |
| 2-Count | When this type of alarm delay is used, two or more detectors within the zone must go into alarm in order for the zone to report an alarm. Switches of type manual pull, water flow, Detector Switch, Aux1 and Aux2 are an exception; they will cause an alarm when only one switch is in alarm. When a single detector is in alarm in a 2-Count zone, the system enters a pre-alarm condition. In a pre-alarm condition, the touchpad PZT beeps and the annunciator display indicates that a pre-alarm has occurred. If the zone has been mapped to an output group for the pre-alarm event, the output group will activate. The pre-alarm will not be reported to the central station. |

Table 8.2 Alarm Delay Types

| Type of Delay | Description |
|---|--|
| Alarm Verification | Alarm verification is an optional false alarm prevention feature that verifies an alarm condition by resetting the smoke detector. If the alarm condition still exists by the time the reset cycle has completed, the detector will go into alarm. If the detector is no longer in alarm, no report will go to the central station. The alarm verification sequence is ignored if the zone is already in alarm. |
| PAS-Positive Alarm Sequence ² | This option is intended to be used with an acknowledge switch. An alarm is delayed for 15 seconds, giving on-site personnel a chance to investigate the alarm. If the acknowledge switch is not activated within 15 seconds, an alarm occurs automatically. If this option is enabled for a zone, the zone will respond to an alarm condition as follows: <ul style="list-style-type: none"> ✓ The zone will not go into alarm for 15 seconds to allow an on-site operator to activate the acknowledge switch. ✓ If the operator does not press the acknowledge switch within 15 seconds, the zone will go into alarm. ✓ If the operator presses the acknowledge switch within 15 seconds, a 180-second time-frame will begin counting down. This time-frame allows the operator to investigate the cause of the alarm. ✓ If the operator performs a reset within 180 seconds, the alarm will not occur. ✓ If the operator does not perform a reset within 180 seconds, an alarm will occur automatically. ✓ The PAS feature will be overridden if another alarm occurs. |
| Alternate P.A.S. - Positive Alarm Sequence ² | An improved version of PAS is available with software version 6.04 or higher, for use with the RA-100 and RA-2000 only. Existing systems with PAS enabled will still function normally. The PAS option will program an automatic, addressable detector to delay panel activation (including alarm relay and communicator) for a period of 15 seconds plus a delay time of up to three minutes. When a detector triggers an alarm, the onboard piezo sounds immediately, but the mapped output groups (e.g. NACs, control/relay modules) are prevented from activating for 15 seconds. This inhibit time is factory set and cannot be changed. Pressing the ACK key during the 15 second inhibit time will start a timer which prevents activation of the mapped output groups for an additional time duration for up to three minutes and display a countdown for the three minute delay. After the delay, the mapped output groups will activate if the source of the alarm is not cleared. If a second alarm occurs during either time delay, the alarm will be processed immediately, causing activation of the appropriate output groups. If PAS is enabled, <ul style="list-style-type: none"> ✓ the onboard piezo sounds immediately. ✓ the control panel LCD display will indicate a PAS-alarm event and the active point. ✓ output groups (NACs and control/relay modules) of associated zones will be inhibited from activating for a factory-set duration of 15 seconds. ✓ pressing the ACK key will start a timer which inhibits output activation for additional time delay of up to three minutes. ✓ a second alarm occurring at any time during either time delay will cause immediate activation of all associated outputs. |
| SNGL ILOCK | See Section 9.6.1 for single interlock releasing operation. |
| DBL ILOCK | See Section 9.6.2 for double interlock releasing operation. |

Table 8.2 Alarm Delay Types (Continued)

- 1 IDP-FIRE-CO, SK-FIRE-CO, and other CO detectors can only be installed in a 1 count zone. They will operate as a 1- count point regardless of the programmed zone type (i.e. Alarm Verification, 2 count, etc.).
- 2 PAS operation requires the approval of the local Authority Having Jurisdiction. Alarm Verification, two-count, single interlock releasing, and double interlock releasing cannot be used while PAS is enabled.

■ Heat Detector Sensitivity

Use this feature to set the temperature at which high temperature detectors will respond. All detectors in the zone will respond in the same way. The range for the SD505-HEAT heat detector is from 135°F to 150°F. The range for IDP-HEAT-HT or SK-HEAT-HT heat detectors are from 135°F to 190°F.

The high temperature IDP or SK heat detectors are absolute temperature devices. This means that they respond to an alarm immediately if the temperature in the zone goes above the programmed temperature.

3. Enter the temperature at which the heat detector will respond, or use the up or down arrow to scroll through the range or enter directly from the number keys on the annunciator, then press ENTER.

■ Smoke Detector Sensitivity



NOTE: Drift compensation is automatic for all smoke detectors (photoelectric and ionization). The feature is always in effect. No programming is required. See Section 9.3.11 for information about how to check if a detector is in UL compliance.

All detectors in the zone will respond as programmed in this menu location.

| Detector Protocol | Type of Smoke Detector | Choices | Comments |
|-------------------------------|---|---|---|
| IDP/SK | IDP-PHOTO, IDP-ACCLIMATE, IDP-PHOTO-T, SK-PHOTO, SK-ACCLIMATE, SK-PHOTO-T | Low (3.5% obscurity) | If the day/night sensitivity option is selected, you can have different sensitivity settings during the day and at night. You can determine the days of the week that Day/Night Sensitivity will automatically adjust. You can also designate specific days as Holidays. Holiday and weekend days use night sensitivity for the entire day. |
| | | Medium (2.5% obscurity) | |
| | | High (1.5% obscurity) (Default) | |
| | DNR with IDP-PHOTO or IDP-PHOTO-R | Low (2.5% obscurity) | |
| | | Medium (2.0% obscurity) | |
| | | High (1.5% obscurity) (Default) | |
| | SK-PHOTO-CO-W and IDP-PHOTO-CO-W | Low (4% obscurity) | |
| Medium (3% obscurity) | | | |
| High (2% obscurity) (Default) | | | |
| SK-CO-W and IDP-CO-W | Fixed | Low, Medium and High settings have no effect for CO detectors. Day and night settings also have no effect on these detectors. | |
| SD | SD505-PHOTO | Low (3.5% obscurity) | If the day/night sensitivity option is selected, you can have different sensitivity settings during the day and at night. You can determine the days of the week that Day/Night Sensitivity will automatically adjust. You can also designate specific days as Holidays. Holiday and weekend days use night sensitivity for the entire day |
| | | Medium (2.5% obscurity) | |
| | | High (1.5% obscurity) (Default) | |
| | SD505-DUCT&SD505-DUCTR | Fixed | Low, Medium and High settings have no effect for photoelectric duct detectors. Photoelectric duct detector sensitivity is always 1.1% per foot. Day and night settings also have no effect on these detectors. |
| | SD505-DUCT&SD505-DUCTR | Fixed | Low, Medium, or High settings have no effect for ionization duct detectors. Ionization duct detector sensitivity is always 75 MIC (0.8%) regardless of Low, Medium or High setting. Day and night settings also have no effect on these detectors. |

Table 8.3 SD, IDP and SK Detector Sensitivity Choices*

1. Detectors are suitable for Open Area Protection within the listed air velocity range. Typically, this range is 0 - 4,000 ft/min for photoelectric detectors and 0 - 1,200 ft/min for ionization detectors. Be sure to confirm this range before installing the detector by referring to the Manufacturer's Installation Instructions.
2. Detectors will default to Open Area Protection (High Sensitivity). Where applicable, detectors will only be compliant with UL 268 7th Edition if they remain programmed to open area.
3. The alarm and threshold limits determined by the control unit interconnected to detectors that employ a special application mode/configuration are designed and shipped from the factory with the Detector Sensitivity Setting set to an acceptable Open Area Protection sensitivity being the default mode of operation.
The special application mode/configuration shall not be activated at the control unit without a deliberate action by the user to initiate the special application mode through an alternate detector sensitivity selection setting. Additionally, the extended label should be modified at this address to include the phrase 'SPECIAL APPLICATIONS' or 'SPECIAL APPS' for compliance with UL 864 requirements. Please refer to the FACP Programming/Installation Instructions for further instructions on altering extended labels.



NOTE: Automatic drift compensation is always in effect for all detectors. See Section 9.3.11 for information about how to check if a detector is in compliance.

4. Use the up or down arrow to scroll through the range or enter directly from the number keys on the annunciator, then press ENTER.



NOTE: If the SLC protocol is changed from IDP/SK to SD and a zone's sensitivity is higher than the SD limit, the zone sensitivity will be set to the max value of 150 for the SD family.

Zone Accessory Options

1. Login to the panel.
2. Select 7 for Program Menu.
3. Press 2 to enter Zone Menu.
4. Press 1 to edit a zone.
5. Enter the zone number, then press ENTER.
6. Press 3 to edit the Zone's Accessory options.

Single or Multi-Station cadence pattern (choose from Patterns 00 to 02, 23 if using IDP or SK. Choose from 00-16, 23 if using SD devices). See Appendix C.

CO Single and Multi-Station Cadence (choose from Cadence Patterns 00 to 02, 23 for IDP or SK devices).



NOTE: The B200S Intelligent Sounder base provides the recommended CO cadence pattern.

Local Zone (choose Y or N, for Yes or No).



NOTE: If the SLC protocol is changed from SD to IDP/SK series and the cadence is no longer valid for IDP/SK, the zone cadence will be set to constant on.

8.3.2 View Zone Points

To view the points in a zone, follow these steps:

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Press 2 to enter the Zone Menu.
4. Press 2 to View Zone Points.
5. Enter the number of the zone you want to view, then press ENTER.

8.4 Group

An output group is made up of output points that have been programmed to respond in the same way. Output groups simplify programming because you only have to program the output characteristics that are common to all of the group points once, instead of programming each individual point. Once you have defined the characteristics of output groups, you can assign each point to the appropriate group. All valid output points are assigned to only one output group. Unused points are not assigned to any output group. Up to 250 output groups can be defined per panel.

8.4.1 Edit Group

In the Edit Group option, you can program the name of an output group and change the properties of that group.

To edit a group, follow these steps:

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Press 3 to enter Group Menu.
4. Press 1 to edit the Group.
5. Enter the number of the group you want to edit, then press ENTER.

Edit Group Name

6. To edit the Group Name, press 1.

You can use words to display a descriptive name for a group.



NOTE: See Appendix A for editing names.

Edit Group Properties

7. To edit the Group Properties, Press 2 from the Edit Group Menu.



NOTE: These settings only apply to non-voice groups.

- Select Y for voice group and N for non-voice group.
- Select / Dynamic Activation switch number: used when the group is defined as a voice group; or as a non-voice group where Dynamic Activation is used. This option links the output group with a voice select switch on an ECS-VCM, ECS-RVM, ECS-NVCM or switch expander for dynamic activation/deactivation. See “Activating/Deactivating Output Groups Dynamically” on page 134 for more information.
- Template Override is shown when set to Yes.
- Dynamic Activation is shown if a non-voice group is assigned to a Select/Dynamic Activation switch number
- Dynamic Activation / Template Override Cadence (shown when the Template override is set to Yes or if a non-voice group is assigned a Select/Dynamic Activation switch number): this setting sets the cadence of the non-voice group mapped to voice select switch when activated using dynamic activation or by a template. See “Activating/Deactivating Output Groups Dynamically” on page 134 and Section 8.5 for more information.

■ Defining Output Group Type

Each output group is defined as either a voice output group or a non-voice output group. Output points that are audio circuits (all circuits on the ECS-50W, ECS-125W, ECS-DUAL50W, ECS-INT50W, and ECS-CE4) can only be assigned to voice output groups. Output points that are non-voice circuits (all other points and circuits that are on all modules except the ECS-50W, ECS-125W, ECS-DUAL50W, ECS-INT50W, and ECS-CE4) are assigned to non-voice output groups.

Each of the output groups defined as voice can be mapped to a particular switch and LED on the ECS-VCM/ECS-NVCM, ECS-RVM, and ECS-SW24. This allows the user to see the state of the voice groups assigned to the switches. This also lets the user individually select which areas in which they want to do a live page. Output groups not defined as voice groups can also be assigned to these switches as long as there is a voice group already assigned to the group. This allows for dynamically activating/deactivating both voice and strobes/other outputs in an area with a single button press. See “Activating/Deactivating Output Groups Dynamically” on page 134.

■ **Silencing Options**

The following silencing options are available for each output group.

| Optional Timers | Description |
|---------------------------------------|--|
| Silence Inhibit | Timed Silence after Inhibit. If this option is selected, the output group must be audible for a programmed number of minutes before it can be silenced. If the condition that caused the output to activate has not cleared during the time-frame, the output can be silenced. If you select this option, select the time-frame in the delay field. Range is 0-60 minutes. |
| Auto Silence | Silenceable. The output group will automatically silence after the timer expires. Range is 0-60 minutes. |
| Auto Unsilence | If this option is selected, the output group can be silenced for a programmed time-frame. If the condition that caused the output to activate has not cleared during the time-frame, the output reactivates. If you select this option, select the time-frame in the delay field. Range is 0-60 minutes. |
| Startup Delay | When a alarm is generated, the output group will not activate until the timer expires assuming the event is still active. Range is 0-120 Seconds |
| Silence Reset Across Sites | If this option is selected from the Network Programming Menu, in (4-40 display), the “Edit Silence-Reset Option” appears. In the (4x20 display), the “Edit Sil-Rst Opt” appears. The default value for “Silence-Rset Across Sites” is No. |
| Silence Reset from Non-ECS Display | If the user selects Yes in this option, the user can Silence-Reset all panels/sites from any panel in any site. After the user selects Yes, the options, “Reset Fire System” and “Reset Emergency System” appear. Both options appear whether or not the panel has ECS. If the user selects No in this option, the non-ECS panel will do a “Fire Reset” and no Menu appears. Other sites will not be affected. |
| Silence Reset from Multi-Site Display | In a Multi-Site Display, if the user selects “Silence” or “Reset”, no action is required. |

Table 8.4 Silencing Options

8.4.2 View Group Points

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Press 3 to enter Group Menu.
4. Press 2 to view the Group Points.
5. Enter the group number, then press ENTER.

8.4.3 Edit OPG (Output Group) Template

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Press 3 to enter Group Menu.
4. Press 3 to edit OPG Template.
5. Enter the Template number, then press ENTER
6. Press ENTER on the template name to edit the name.

You can use words to display a descriptive name for a group.



NOTE: See Appendix A for editing names.

7. To select which output groups to include in the template, press the right arrow key to access the OPG and select YES or NO.

8.5 Point

You may need to change the characteristics of the individual input points (detectors and switches) even after using JumpStart. This section explains how to change the options for: type of input point; latching/non-latching status (switches); and name and zone/group assignment of a point. The table below is for a quick reference to point programming options. The following sections explain these options in more detail.

| Choices | Type Selections | Function Selections for each Type | Comments |
|---------------|-------------------------|-----------------------------------|----------|
| 5880 (output) | UNUSED | | |
| | NOTIF (outputs pt 1-40) | NOTIF OUTPUT | |
| | | CONTROL CIRCUIT | |

Table 8.5 Point Programming Options

| Choices | Type Selections | Function Selections for each Type | Comments |
|-----------------------|-----------------|-----------------------------------|---|
| 5880 (input 41-48) | SWITCH | MANUAL PULL | Refer to comments column of Table 8.6 on page 102 for description of these options. Latch or Non-latching feature only appears for WATERFLOW, FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2, ECS INPUT, ECS TAMPER, and ECS SUPERVISORY. |
| | | WATERFLOW | |
| | | FIRE SUPERVISORY | |
| | | FIRE TAMPER | |
| | | FIRE DRILL | |
| | | SILENCE | |
| | | RESET | |
| | | P.A.S. ACK | |
| | | ZONE AUX1 | |
| | | ZONE AUX2 | |
| | | SYSTEM AUX1 | |
| | | SYSTEM AUX2 | |
| | | MANUAL RELEASE | |
| | | INTERLOCK | |
| STATUS POINT | | | |
| 5880 (input 41-48) | SWITCH | ECS INPUT | User also has ECS Event Number 1-8 option for ECS INPUT, ECS TAMPER, and ECS SUPERVISORY functions in both 5880 and ECS-VCM or ECS-NVCM/ECS-RVM choices, when installed in the system. |
| | | ECS TAMPER | |
| | | ECS SUPERVISORY | |
| 5496 | UNUSED | | |
| | B NOTIF | NOTIF OUTPUT | supervised not supervised |
| | | CONTROL CIRCUIT | |
| | A NOTIF | NOTIF OUTPUT | |
| | | CONTROL CIRCUIT | |
| | AUX_PWR | CONSTANT | |
| | | AUX RESET | |
| | | AUX DOOR | |
| AUX SYNC | | Cannot be supervised | |
| 5865 | UNUSED | | |
| | NOTIF | NOTIF OUTPUT | |
| | | CONTROL CIRCUIT | |
| ECS Amps | UNUSED | | |
| | NOTIF | | |

Table 8.5 Point Programming Options

| Choices | Type Selections | Function Selections for each Type | Comments |
|----------------------------------|--|-----------------------------------|---|
| ECS-VCM, ECS-NVCM, ECS-RVM | UNUSED | | Refer to comments column of Table 8.7 on page 105 for description of these options. Latch or Non-latching feature only appears for WATERFLOW, FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2, ECS INPUT, ECS TAMPER, and ECS SUPERVISORY. |
| | SWITCH | MANUAL PULL | |
| | | WATERFLOW | |
| | | FIRE SUPERVISORY | |
| | | FIRE TAMPER | |
| | | FIRE DRILL | |
| | | SILENCE | |
| | | RESET | |
| | | P.A.S. ACK | |
| | | ZONE AUX1 | |
| | | ZONE AUX2 | |
| | | SYSTEM AUX1 | |
| | | SYSTEM AUX2 | |
| | | MANUAL RELEASE | |
| | | INTERLOCK | |
| | | STATUS POINT | |
| | | VOICE AUX STATUS 1-2 | |
| VOICE AUX ECS 1-4 | | | |
| Background Music | | | |
| ECS INPUT | User also has ECS Event Number 1-8 option for ECS INPUT. | | |
| ECS TAMPER | Only available when an ECS-VCM or ECS-NVCM is installed in the system. | | |
| ECS SUPERVISORY | | | |

Table 8.5 Point Programming Options

8.5.1 Point Programming for a 5815XL Module

To program for points on an 5815XL module, follow these steps:

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Press 4 to enter the Point Menu.
4. Press the up or down arrow key to select the desired module. Refer to Section 7.5 for available choices. Then, press ENTER.
5. Enter the number of the point you want to edit, then press ENTER.
6. Select the type of device by pressing the up or down arrow key. Refer to Table 8.6 under the column heading “Type Selection” for a list of choices.

| Type Selection | Function | Latching Option | Comments |
|----------------|--------------|--------------------------|---|
| UNUSED | | | Select for SLC points that are unused. |
| DETECTOR | PHOTO | | Spot photoelectric detectors. |
| | ION | | Spot ionization detector. |
| | HEAT | | Spot heat detector. |
| | PHOTO DUCT | | Duct photoelectric detector. |
| | ION DUCT | | Duct Ion detector. |
| | 2-WIRE SMOKE | | 2-wire smoke detector. |
| SUP DET | PHOTO | Latching Non Latching | Use this option when you want a detector to indicate a supervisory alarm. |
| | ION | | |
| | HEAT | | |
| | PHOTO DUCT | | |
| | ION DUCT | | |

Table 8.6 Programming Options for 5815XL Modules

| Type Selection | Function | Latching Option | Comments |
|----------------|------------------|--|--|
| SWITCH | MANUAL PULL | | Use this switch type for manual pull stations. This input is always latched. The switch can clear only when an alarm is reset. This switch type has the highest fire priority; it overrides any other type of fire alarm. |
| | WATERFLOW | Latching | Use this switch type for monitoring water flow in a sprinkler system. Switch closure will cause a sprinkler alarm. Water flow switches can be programmed as latching or non-latching. You can program a delay of up to 90 seconds to be used with a water flow switch. The delay allows for normal, brief changes in sprinkler system water pressure. The water flow alarm will not activate unless the switch is active for the programmed delay time. If a delay is used, the system begins counting down when the switch closes. If the switch opens (restores) before the timer expires, a water flow alarm is not generated. If the water flow switch remains closed after the timer expires, a water flow alarm will be generated. |
| | | Non Latching | |
| | FIRE SUPERVISORY | Latching | Use this switch type for tamper monitoring of sprinklers and other fire protection devices. If a contact closes, a sprinkler supervisory event will be generated. Supervisory switches can be latching or non-latching. |
| | | Non Latching | |
| | FIRE DRILL | | System-level, non latching switch. This switch is an alternative way of causing a fire drill. It has the same operation as the fire drill option available from the annunciator. When the switch is activated, a fire drill begins; when the switch is de-activated, the fire drill ends. |
| | SILENCE | | This system-level switch is an alternative way to silence the fire system. It has the same effect as pressing the Silence key. |
| | RESET | | This system-level switch is an alternative way to reset the fire system. It has the same effect as pressing the Reset key. |
| | P.A.S. ACK | | Positive acknowledge switch. This switch must be used in zones programmed as Positive Alarm Sequence (See "Edit Zone Properties" on page 96.). If an acknowledge switch closes when an alarm or trouble condition is not already in progress, a trouble will occur. You must use a UL listed normally open, momentary switch type. The switch must be rated at 5V, 100 mA (minimum) and be used with an EOL resistor for supervision. |
| | ZONE AUX1 | Latching | Use these switch types if you want to monitor special zone-level conditions (such as dry contact from a remote power supply). |
| | | Non Latching | |
| | ZONE AUX2 | Latching | |
| | | Non Latching | |
| | SYSTEM AUX1 | Latching | Use these switch types if you want to monitor special system-wide conditions (such as dry contact from a remote power supply). |
| Non Latching | | | |
| SYSTEM AUX2 | Latching | | |
| | Non Latching | | |
| DETECTOR | | Used to monitor conventional 4-wire detectors, a contact closure will generate a detector alarm event. | |

Table 8.6 Programming Options for 5815XL Modules (Continued)

| Type Selection | Function | Latching Option | Comments |
|------------------------------|------------------|--------------------------------|--|
| SWITCH (cont.) | FIRE TAMPER | Latching | Performs identically to a supervisory switch, but will be indicated as a tamper switch on the LCD annunciator. |
| | | Non Latching | |
| | MANUAL RELEASE | | Manual release switch |
| | INTERLOCK | | Interlock release switch input. |
| | STATUS POINT | | |
| | ECS INPUT | Latching | User also has ECS Event Number 1-8 option for ECS INPUT. Only available when an ECS-VCM/ECS-NVCM is installed in the system. |
| | | Non Latching | |
| | ECS TAMPER | Latching | |
| | | Non Latching | |
| | ECS SUPER-VISORY | Latching | |
| Non Latching | | | |
| CO DETECT SWITCH | | CO Detector Switch | |
| CO SUPERVISORY DETECT SWITCH | Latching | CO Supervisory Detector Switch | |
| | Non Latching | | |
| NOTIF | OUTPUT PT | Select Group | Output point, a general use notification type. Use for driving standard notification appliances. |
| | AUX CONST | | Use constant power for applications that require a constant auxiliary power source. Power is always present at constant circuits. See "Constant Power" on page 55 for more information. |
| | AUX RESET | | Use for auxiliary power, resettable applications. See "Resettable Power" on page 55 for a description of how this option operates. |
| | AUX DOOR | | Use for auxiliary power, door holder applications. For example, if you were using an auxiliary power supply for door holders, you would use this option. See "Door Holder Power" on page 55 for a description of how this option operates. |
| RELAY | OUTPUT PT | Select Group | Output point, a general use relay type. Use for applications requiring a relay, such as fan shutdown, elevator recall, and so on. |
| | AUX RESET | | Use for auxiliary power, resettable applications. See Section "Resettable Power" on page 55 for a description of how this option operates. |
| | AUX DOOR | | Use for auxiliary power, door holder applications. For example, if you were using an auxiliary power supply for door holders, you would use this option. See "Door Holder Power" on page 55 for a description of how this option operates. |
| SLC LED | LED NUMBER | 01-80 | For use with SD devices only. 80 sub addresses on LED. |
| | LED FUNCTION | Unused | |
| | | NOTIF | Notification can have group number. |

Table 8.6 Programming Options for 5815XL Modules (Continued)

8.5.2 Point Programming for a 6815 Module

To program for points on a 6815 module, follow these steps:

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Press 4 to enter the Point Menu.
4. Press the up or down arrow key to select the desired module. Refer to Section 7.5 for available choices. Then, press ENTER.
5. Select S for sensor or M for module. (IDP or SK devices only)
6. Enter the number of the point you want to edit, then press ENTER.
7. Select the type of device by pressing the up or down arrow key. Refer to the column heading, "Type Selection" in the table below for a list of choices.

| Type Selection | Function | Latching Option | Comments |
|-------------------|---------------------|--------------------------|--|
| UNUSED | | | Select for SLC points that are unused. |
| DETECTOR | PHOTO | | Spot photoelectric detectors. |
| | ION | | Spot ionization detector. |
| | HEAT | | Spot heat detector. |
| | PHOTO DUCT | | Duct photoelectric detector. |
| | ACCLIMATE | | Acclimate photoelectric detector. |
| | HEAT HT | | High temperature heat detector. |
| | PHOTO-HEAT | | Photoelectric detector with heat sensor. |
| | BEAM | | Beam smoke detector. |
| | 2-WIRE SMOKE | | 2-wire smoke detector. |
| SUP DET | PHOTO | Latching Non Latching | Use this option when you want a detector to indicate a supervisory alarm. |
| | ION | | |
| | HEAT | | |
| | PHOTO DUCT | | |
| | ACCLIMATE | | |
| | HEAT HT | | |
| | PHOTO-HEAT | | |
| | BEAM | | |
| CO SMOKE DETECTOR | CO ALRM / FIRE ALRM | | No Accessory Base, Sounder base, Relay Base, or Intelligent Sounder base. Bases can be set for Single station or Multi station, Silence or Non-Silence, Latching or non-latching. Intelligent sounder bases can have volume set for high or low. |
| | CO ALRM / FIRE SUPR | | |
| | CO SUPR / FIRE ALRM | | |
| | CO SUPR / FIRE SUPR | Latching Non Latching | |
| W-DETECTOR | PHOTO | Latching | Wireless photoelectric detectors |
| | ACCLIMATE (IDP) | Non Latching | Wireless acclimate photoelectric detector |
| | HEAT | | Wireless heat detector |
| | PHOTO-HEAT (SK) | | |
| W-SUP DET | Same as W-Detector | Latching Non Latching | Wireless photoelectric detectors |

Table 8.7 Programming Options for 6815 Modules

| Type Selection | Function | Latching Option | Comments |
|----------------|------------------|--|--|
| SWITCH | MANUAL PULL | | Use this switch type for manual pull stations. This input is always latched. The switch can clear only when an alarm is reset. This switch type has the highest fire priority; it overrides any other type of fire alarm. |
| | WATERFLOW | Latching | Use this switch type for monitoring water flow in a sprinkler system. Switch closure will cause a sprinkler alarm. Water flow switches can be programmed as latching or non-latching. You can program a delay of up to 90 seconds to be used with a water flow switch. The delay allows for normal, brief changes in sprinkler system water pressure. The water flow alarm will not activate unless the switch is active for the programmed delay time. If a delay is used, the system begins counting down when the switch closes. If the switch opens (restores) before the timer expires, a water flow alarm is not generated. If the water flow switch remains closed after the timer expires, a water flow alarm will be generated. |
| | | Non Latching | |
| | FIRE SUPERVISORY | Latching | Use this switch type for tamper monitoring of sprinklers and other fire protection devices. If a contact closes, a sprinkler supervisory event will be generated. Supervisory switches can be latching or non-latching. |
| | | Non Latching | |
| | FIRE DRILL | | System-level, non latching switch. This switch is an alternative way of causing a fire drill. It has the same operation as the fire drill option available from the annunciator. When the switch is activated, a fire drill begins; when the switch is de-activated, the fire drill ends. |
| | SILENCE | | This system-level switch is an alternative way to silence the fire system. It has the same effect as pressing the Silence key. |
| | RESET | | This system-level switch is an alternative way to reset the fire system. It has the same effect as pressing the Reset key. |
| | P.A.S. ACK | | Positive acknowledge switch. This switch must be used in zones programmed as Positive Alarm Sequence. (See "Edit Zone Properties" on page 96.). If an acknowledge switch closes when an alarm or trouble condition is not already in progress, a trouble will occur. You must use a UL listed normally open, momentary switch type. The switch must be rated at 5V, 100 mA (minimum) and be used with an EOL resistor for supervision. |
| | ZONE AUX1 | Latching | Use these switch types if you want to monitor special zone-level conditions (such as dry contact from a remote power supply). |
| | | Non Latching | |
| | ZONE AUX2 | Latching | |
| | | Non Latching | |
| | SYSTEM AUX1 | Latching | Use these switch types if you want to monitor special system-wide conditions (such as dry contact from a remote power supply). |
| | | Non Latching | |
| | SYSTEM AUX2 | Latching | |
| Non Latching | | | |
| DETECTOR | | Used to monitor conventional 4-wire detectors, a contact closure will generate a detector alarm event. | |
| FIRE TAMPER | Latching | Performs identically to a supervisory switch, but will be indicated as a tamper switch on the LCD annunciator. | |
| | Non Latching | | |
| MANUAL RELEASE | | Manual release switch | |
| INTERLOCK | | Interlock release switch input. | |
| STATUS POINT | | | |

Table 8.7 Programming Options for 6815 Modules (Continued)

| Type Selection | Function | Latching Option | Comments |
|------------------------------|------------------|--|--|
| SWITCH (cont.) | ECS INPUT | Latching | User also has ECS Event Number 1-8 option for ECS INPUT. |
| | | Non Latching | Only available when an ECS-VCM or ECS-NVCM is installed in the system. |
| | ECS TAMPER | Latching | |
| | | Non Latching | |
| | ECS SUPER-VISORY | Latching | |
| | | Non Latching | |
| | CO DETECT SWITCH | | CO Detector Switch |
| CO SUPERVISORY DETECT SWITCH | Latching | CO Supervisory Detector Switch | |
| | Non Latching | | |
| TROUBLE_MON | | Use this switch type to monitor trouble from external devices. Trouble monitors are used in HVAC operations. | |
| NOTIF | OUTPUT PT | Select Group | Output point, a general use notification type. Use for driving standard notification appliances. |
| | AUX CONST | | Use constant power for applications that require a constant auxiliary power source. Power is always present at constant circuits. |
| | AUX RESET | | Use for auxiliary power, resettable applications. See Section 4.17.2 for a description of how this option operates. |
| | AUX DOOR | | Use for auxiliary power, door holder applications. For example, if you were using an auxiliary power supply for door holders, you would use this option. See Section "Door Holder Power" on page 55 for a description of how this option operates. |
| RELAY | OUTPUT PT | Select Group | Output point, a general use relay type. Use for applications requiring a relay, such as fan shutdown, elevator recall, and so on. |
| | AUX RESET | | Use for auxiliary power, resettable applications. See Section "Resettable Power" on page 55 for a description of how this option operates. |
| | AUX DOOR | | Use for auxiliary power, door holder applications. For example, if you were using an auxiliary power supply for door holders, you would use this option. See Section "Door Holder Power" on page 55 for a description of how this option operates. |
| Detector | 2-Wire Smoke | | |
| W-Gateway | | | Wireless Gateway |
| W-SWITCH | Same as SWITCH | | |
| W-Relay | Same as Relay | | When a wireless relay is in use, module device count must be limited to 109 modules per loop. This includes wired and wireless modules that are on the same loop. The module address must be within 1-109. |

Table 8.7 Programming Options for 6815 Modules (Continued)

8.5.3 Point Programming For Internal or External Power Module (RPS-1000)

To program for an internal or external power module points:

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Press 4 to enter Point Menu.
4. Press the up or down arrow key to select the desired module. Refer to Section 7.5 for available choices, then press ENTER.
5. Enter the number of the circuit or the point you want to edit, then press ENTER.
6. Select the type by pressing the up or down arrow key, then press ENTER.
7. Select the function by pressing the up or down arrow key, then press ENTER.
8. If the point supports latching, press the up or down arrow key to select latching or non-latching, then press ENTER.
9. Select the zone or group by pressing the up or down arrow key, then press ENTER.
10. If the point supports not supervised, press the up or down arrow key to select supervised or non-supervised, then press ENTER.
11. Press ENTER to edit the Point Name. See Appendix A for help with editing text. Or, Press the right arrow key to skip the Point Name edit.
12. Repeat Steps 1 through 11 for all circuits.

| Choices | Type Selections | Function Selections for each Type | Comments |
|-----------------------|-----------------------|---|--|
| Enter Point | | | |
| Select Type | UNUSED | | |
| | B NOTIF | NOTIF OUTPUT | User also has Supervised/Unsupervised option |
| | | CONTROL CIRCUIT | |
| | A NOTIF | Same as B NOTIF | |
| | AUX_PWR | CONSTANT | Constant auxiliary power. |
| | | AUX RESET | Resettable auxiliary power. |
| | | AUX DOOR | Door holder auxiliary power. |
| | | AUX SYNC | Power Sync |
| | B SWITCH ¹ | MANUAL PULL | Refer to comments column of Table 8.6 and Table 8.7 for description of these options. Latch or Non-latching feature only appears for WATERFLOW, FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2, ECS INPUT, ECS TAMPER, and ECS SUPERVISORY. |
| | | WATERFLOW | |
| | | SUPERVISORY | |
| | | TAMPER | |
| | | FIRE DRILL | |
| | | SILENCE | |
| | | RESET | |
| | | P.A.S. ACK | |
| | | ZONE AUX1 | |
| | | ZONE AUX2 | |
| | | SYSTEM AUX1 | |
| | | SYSTEM AUX2 | |
| | | MANUAL RELEASE | |
| | | INTERLOCK | |
| | STATUS POINT | | |
| ECS INPUT | ECS INPUT | User also has ECS Event Number 1-8 option for ECS INPUT. Only available when an ECS-VCM or ECS-NVCM is installed in the system. | |
| | ECS TAMPER | | |
| | ECS SUPERVISORY | | |
| A SWITCH ¹ | Same as B SWITCH | | |
| B DETECT ¹ | 2-WIRE SMOKE | Used for Class B, 2-wire detectors. | |
| | 4-WIRE SMOKE | Used for Class B, 4-wire detectors. | |
| | CO 4-WIRE DET | Used for Class B, 4-wire CO detectors. | |
| | CO 4-WIRE SUP DET | Latching or Non-latching used for Class B, 4-wire CO Supervisory detectors | |
| A DETECT ¹ | 2-WIRE SMOKE | Used for Class A, 2-wire detectors. | |
| | 4-WIRE SMOKE | Used for Class A, 4-wire detectors. | |
| | CO 4-WIRE DET | Used for Class A, 4-wire CO detectors. | |
| Select Zone/Group | | | Group or Zone selection will appear depending on the type selected. |
| Edit Name | | | See Appendix A. |

Table 8.8 Menu Choices for Internal/External Power Module

1 Only applicable to RPS-1000

8.5.4 Point Programming for 5880 or 5865 Modules

To program 5880 or 5865 module output points:

1. Login to the panel.
2. Select 7 for Program Menu.
3. Press 4 to enter the Point Menu.
4. Press the arrows to select the desired module. Refer to Section 7.5 for available choices. Then press ENTER.
5. Enter the point number, then press ENTER.
6. Press the up or down arrow key to select the type (notification or unused). Then, press ENTER.
7. Press the up or down arrow key to select the desired group. Then, press ENTER.
8. Press ENTER to edit the Point Name. See Appendix A for help with editing text. Or, Press the right arrow key to skip the Point Name Edit.
9. Repeat Steps 1 through 8 for all output points.

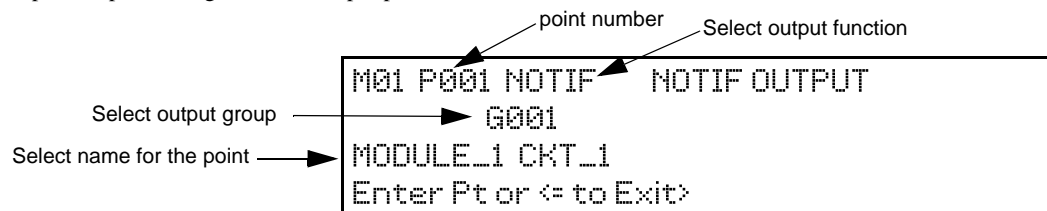


Figure 8.3 Programming Output Points Screen for 5880 and 5865 Modules

To program 5880 or 5865 module input points:

10. To use the 5880 as an input point, Enter point number 41 - 48. Then press ENTER.
11. Press the up or down arrow key to select type (switch or unused), and press ENTER.
12. Press the up or down arrow key to select the desired function and press ENTER.
13. If the point supports latching press the up or down arrow key to select latching or non-latching, and press ENTER.
14. Press the up or down arrow key to select the desired group/zone, and press ENTER.
15. Edit the point name or press the right arrow key to skip the Module Name Edit.
16. Repeat steps 10 through 15 for all input points.

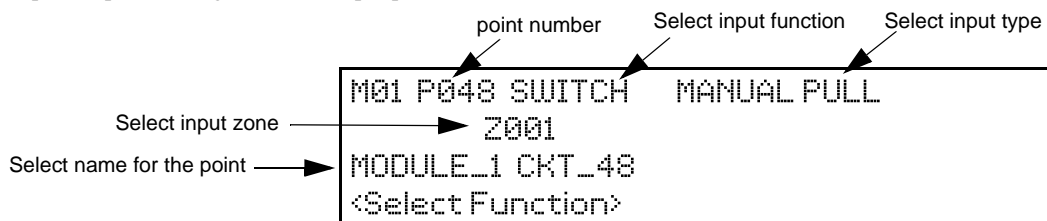


Figure 8.4 Programming Input Points Screen for 5880 and 5865 Modules

8.5.5 Point Programming for the 5496

To program the module points:

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Press 4 to enter point menu.
4. Press the up or down arrow key to select the desired module. Refer to Section 7.5 for available choices, then press ENTER.

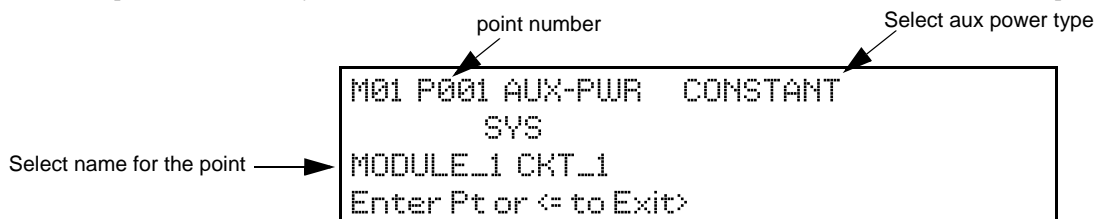


Figure 8.5 Programming Points Screen for the 5496 Module

5. Enter the point number, then press ENTER.
6. Press the up or down arrow key to select the type and press ENTER.
7. Press ENTER to edit the Point Name. See Appendix A or press the right arrow key to skip the Point Name Edit.
8. Repeat Steps 1 through 7 for all points.

8.5.6 Point Programming for ECS Amplifiers

To program the module points, do the following.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Press 4 to enter the Point Menu.
4. Press the up or down arrow key to select the desired module. Refer to Section 7.5 for available choices. Then press ENTER.

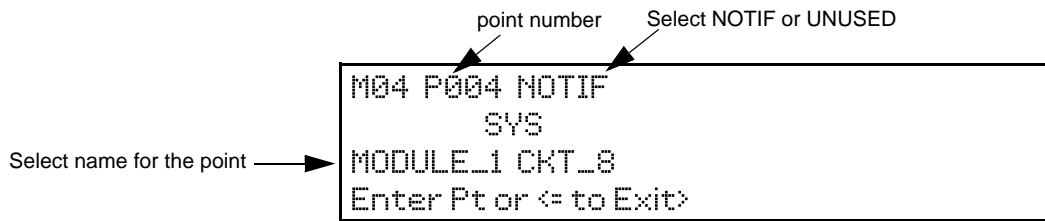


Figure 8.6 Programming Points Screen for ECS Amplifier Modules

5. Enter the point number, then press ENTER.
Points 5-8 on the ECS-50W or the ECS-125W will not be available unless an ECS-CE4 is installed.
6. Press the up or down arrow key to select the type (notification or unused), then press ENTER.
7. Press ENTER to edit the Point Name. Refer to Appendix A. Or, press the right arrow key to skip the Point Name Edit.
8. Repeat Steps 1 through 7 for all points.

8.5.7 Point Programming for ECS-VCM, ECS-NVCM, and ECS-RVM Modules

To program ECS-VCM, ECS-NVCM, and ECS-RVM module points, do the following.

1. Login as the Installer using the Installer Code.
2. Select 7 for the Program Menu.
3. Press 4 to enter the Point Menu.
4. Press the up or down arrow keys to select the desired module. Refer to Section 7.5 for available choices. Press ENTER.

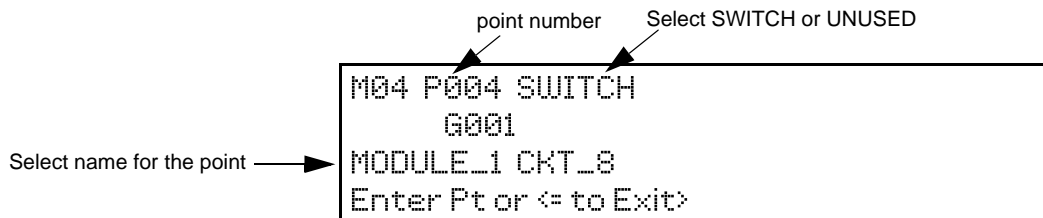


Figure 8.7 Programming Points Screen for the ECS-VCM, ECS-NVCM, or ECS-RVM Modules

5. Enter the point number. Press ENTER.
6. Press the up or down arrows to select the type (Switch or unused). Press ENTER.
7. Press the up or down arrows to select the function. Press ENTER.
8. Use the up or down arrows to modify and remaining options and use ENTER to move the cursor to the next field.
9. Edit the Module Name. Refer to Appendix A. Or, press the right arrow to skip the module name edit.
10. Repeat Steps 1 through 9 for all points.

8.6 System Options

This section of the manual explains how to customize software options that affect general operation of the system. This includes such items as: Communication Options, Daytime/Nighttime Sensitivity, Holiday Days, Time Options, Miscellaneous Options, Daylight Saving Options, Edit Banner, and SLC Family. Refer to each individual subsection for complete instructions.

8.6.1 Communication Options

Auto Test Time

To access the automatic communicator test time screen:

1. Login to the panel.
2. Select 7 for the Program Menu.
3. From the Program Menu, select 5 for System Options.
4. Press 1 for Communication Options.
5. Select 1 for Auto Test Time.
6. Enter the hour you desire the control panel to send an automatic test report (or press the up or down arrow), then press ENTER.
7. Enter the minutes (or press the up or down arrow), then press ENTER.

8. Select AM or PM by pressing the up or down arrow, then press ENTER.
9. Select the Report Time Interval by pressing the up or down arrow, then press ENER. Time Interval selections are 24hrs, 12hrs, 6hrs, and 4 hrs.



NOTE: AM and PM are only available if the panel "Clock Options" are set for AMPM mode. Otherwise, the clock is in military time and AMPM is not selectable.

Phone Lines

To access the phone lines screen:

1. Login to the panel.
2. Select 7 for Program Menu.
3. From the Program Menu, select 5 for System Options.
4. Select 1 for Communication Opts.
5. Select 2 for the Phone Lines Menu.
6. Select the phone line to be edited (1 or 2) by pressing the up or down arrow, then press ENTER.

phone line to edit (selected in previous screen)

dialing prefix- up to 9 characters can be used for PBX, dial-out codes, a pause, etc.

dialing choice: touchtone, pulse, both

monitor line: Y/N

number of rings before the panel answers a call from a computer

dial tone detection disabled: Y/N

phone line unused: Y/N

answering machine bypass: Y/N

dial format: U=US or E=European
US format = 60/40msec make/break
European=66/34 msec make/break

Figure 8.8 Phone Lines Editing Screen

■ Dialing Prefix

Enter up to nine characters to be used for such things as PBX dial-out codes, a pause, etc. The following special characters are available:

| | |
|---|--|
| # | Pound (or number) key on the telephone |
| * | Star key on the telephone |
| , | Comma (character for 2-second pause) |

Use the number buttons on the annunciator or the up- and down-arrow keys to select special characters. Characters begin displaying after "9".

7. Enter a dialing prefix (if needed), then press ENTER. Or, press the right arrow to bypass the dialing prefix option.

■ Number of Answer Rings

This option is used in conjunction with the HFSS Honeywell Fire Software Suite. Use this option to determine the number of rings before the panel answers a call from the computer. The range is 00-15 rings. This option is factory-programmed as 06 rings, which should be compatible for most installations where the answering machine bypass feature is used. You may need to adjust it depending on the installation's telephone system.

The selection made here must match the programming for this option in the Communication Configuration dialog box of HFSS.

8. Enter the desired number of answer rings, then press ENTER.

■ Dial Option

9. Press the up or down arrow to select the dial option, then press ENTER.

| Dial Option | Description |
|-------------|---|
| PULSE | If this option is selected, only pulse dialing will be used for this phone line. |
| TT | Touch-tone dialing. If this option is selected, only touch-tone dialing will be used for this phone line. |
| TT/PL | Touch-tone alternating with pulse. If this option is selected, the communicator will first attempt to use touch-tone. It will switch to pulse if touch-tone is not successful on the first attempt. It will continue to alternate between TT and pulse for additional attempts. |

Table 8.9 Dial Options

■ Dial Format

10. Press the up or down arrow to select the pulse ratio for rotary dialing option, then press ENTER.

Options are as follows:

- U U.S. standard format. Uses the 60 msec / 40 msec make/break ratio.
- E European format. Uses the 66 msec / 34 msec make/break ratio.

■ Dial Tone Detection Disabled

11. Select Y (do disable) or N (don't disable) by pressing the up or down arrow key, then press ENTER.

■ Line Monitor

Enable the line monitor for each phone line that will be used. See Figure 8.8 for location of this field on the phone lines screen. When the phone line monitor has been enabled for a phone line, a trouble condition will occur if the line is not connected. If a phone line will not be used, it must be disabled.

12. Select Y (monitor line) or N (don't monitor line) by pressing the up or down arrow, then press ENTER.

■ Answering Machine Bypass

This option is used in conjunction with the HFSS Honeywell Fire Software Suite. This feature ensures that an answering machine will not interfere with communication between the panel and the computer. If an answering machine is used at the panel site, enable this feature; if an answering machine is not used, disable the feature.

This option is factory-programmed as Yes (enabled).

The selection made here must match the programming for this option in the Communication Configuration dialog box of the HFSS.

13. Select Y (answering machine bypass enabled) or N (answering machine bypass disabled) by pressing the up or down arrow, then press ENTER.

■ Phone Line Unused

This option is used so that you can set unused phones lines to "Yes", so no auto-test will be sent through that line.

This option is factory programmed as No.

14. Select Y or N by pressing the up or down arrow key, then press ENTER.

Edit Ethernet

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Select 5 for System Options.
4. From the next Menu, select 1 for Communication Opts.
5. Select 3 for Edit Ethernet.

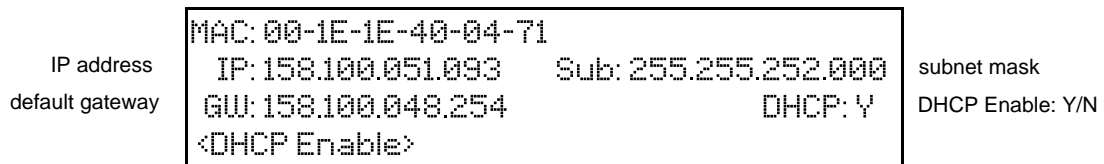


Figure 8.9 Edit Ethernet Message

AlarmNet Timers

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Select 5 for System Options.
4. From the next menu, select 1 for Communication Options.
5. Select 4 for AlarmNet Timers.
6. The available options for AlarmNet Timers are as follows: (*default)
 - Ethernet: None, 75 seconds, 90 seconds, 3 minutes, *5 minutes, 1 hour, 24 hours, 30 days.
 - Cellular: None, *24 hours, 30 days.
 - Old Alarm: None, 10 minutes, 15 Minutes, *30 Minutes, 1 Hour, 2 Hours, 4 Hours, 6 Hours, 12 Hours, 24 Hours.

(Sets how long an undeliverable alarm is retried for delivery to the Central Station. If the message is not validated, it is retried until the old alarm time is reached or the message is validated).

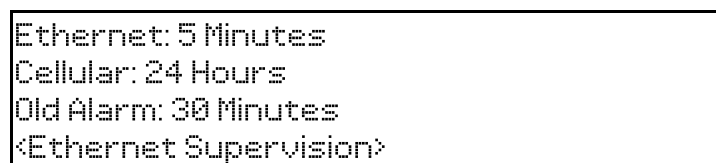


Figure 8.10 AlarmNet Timers

Phone Line Gains

1. Login as the Installer using the Installer Code.
2. Select 7 for Panel Programming.
3. Select 5 for System Options.
4. From the next menu, select 1 for Communication Options.
5. Select 5 for phone line Gains
6. The available options: (*default)
 - Dialing Gain:
 - Low = 9 DB Attenuation
 - Normal = 6 DB Attenuation
 - *High = 3 DB Attenuation
 - Reporting Gain:
 - *Low = 9 DB Attenuation
 - Normal = 6 DB Attenuation
 - High = 3 DB Attenuation


8.6.2 Daytime/Nighttime Sensitivity

If you need to change the time that sensitivity levels take effect (that is, the time that “Day” and “Night” begin, as well as the days of the week), follow these steps.

1. Login as the Installer using the Installer Code.
2. Select 7 for Program Menu.
3. Select 5 for System Options.
4. Select 2 for Day/Night Sense.

A screen similar to the one shown in “Changing Day/Night Sensitivity Time and Days” on page 113 will display.

In this example, daytime sensitivity will be observed between 6:00AM and 6:00PM Monday through Friday. Nighttime sensitivity levels will be observed between 6:00PM and 6:00AM Monday through Friday and all day Saturday and Sunday.

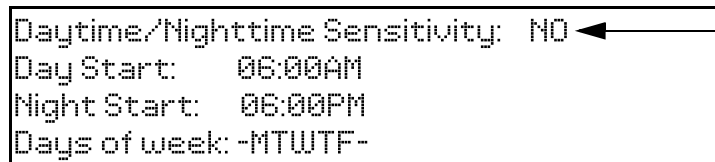

Enable Day/Night
If disabled, daytime sensitivity is in effect at all times. Sensitivity levels are programmed in the Zones menu.

Figure 8.11 Changing Day/Night Sensitivity Time and Days

8.6.3 Holiday Days

Up to 18 dates can be designated as holidays. When the Day/Night Sensitivity is enabled, all photoelectric smoke detectors in the system will use night sensitivity for the entire day on days designated as holidays (see Section “Daytime/Nighttime Sensitivity” on page 113).

To add or change a holiday, follow these steps.

1. Login as the Installer using the Installer Code.
2. Select 7 for Program Menu.
3. Select 5 for System Options.
4. Select 3 for Holiday Days.

A screen similar to that shown in “Select Holidays Screen” on page 113 will display.

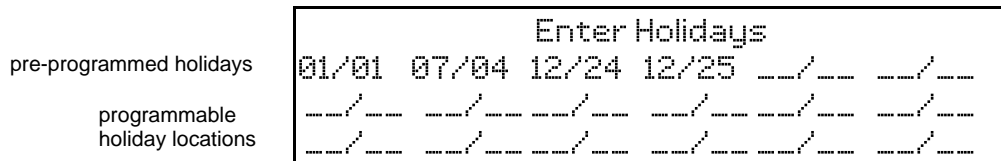


Figure 8.12 Select Holidays Screen



NOTE: For most installations, the holiday programming will need to be performed each year to ensure the correct dates.

5. Select the holiday schedules you want to edit (1- holidays 1 - 9, 2- holidays 10 - 18).
6. Enter the month of the holiday, then press ENTER. Enter the day of the month for the holiday, then press ENTER.
7. Repeat steps 6 for any remaining holidays you want to program.

8.6.4 Time Options

Through this programming option, you can set the water flow delay time, alarm verification time, AC report delay, AC-Frequency, Auto-Resound, and Clock Format.

Water Flow Delay

You can program a delay of 0-90 seconds (zero means no delay) to be used in conjunction with a water flow switch. The delay is system-wide. All water flow switches on the system will use the same delay period.

To access the screen for programming water flow delay, follow these steps:

1. Login to the panel.
2. Select 7 for Program Menu.
3. Select 5 for System Options.
4. Select 4 for Time Options.

A screen similar to the one shown below will display.

delay in seconds before
waterflow alarm occurs (00-90)

```

Water Flow Delay: 01s   Alarm Verify: 060s
AC Report Delay: 06h   AC-Frequency: 60Hz
Clock Format: AMPM     Auto-Resound: 24Hr
<Water Flow Delay (0-90s)>

```

Figure 8.13 Water Flow Delay Programming Screen

5. Enter the number of seconds (0 to 90) to delay a water flow switch alarm, then press ENTER.

Alarm Verify

You can set the alarm verification time from 60 to 250 seconds (default is 60 seconds).

To set the alarm verification, do the following.

6. Enter the desired number of seconds for the alarm verification time.
7. Press the right arrow key or ENTER to make your selection and move the cursor to the next programming option.

AC Report Delay



NOTE: You must select 1-3 hours for AC Delay Time in UL Central Station and UL Remote Signaling installations.

You can adjust the number of hours before a Low AC Report will be sent to the Central Station.

8. Enter the number of hours (0-30) before a low AC Report will be sent to the Central Station, then press ENTER.

Change AC Line Frequency

The panel's AC line frequency is selectable for 50, 60 Hz, or Internal. The AC Frequency feature dictates how the control panel will calculate time based on the AC line frequency used in the installation site. The "Internal" option can be used in areas where the AC line frequency is not dependable and you want the panel to calculate time from the internal crystal. The internal crystal is not as accurate as the AC power source and either 60 Hz or 50 Hz should normally be selected. The panel defaults to the 60 Hz selection.

To change the AC line frequency, continue programming from step 9 above:

9. Select 50, 60 or Internal, by pressing the up or down arrow, then press ENTER.

Clock Display Format (AM/PM or Military)

To change the system clock display format, continue programming from step 8 above:

10. Select AMPM (for AM/Pm display format) or MIL (for military or 24 hr display format) by pressing the up or down arrow, then press ENTER.

Auto-Resound (4 or 24 hours)

The system resound time period can be modified from the default value 24 hours to 4 hours. This setting adjusts when the FACP will automatically resound events after being silenced. Set this option to 4 hours when using SWIFT devices.

8.6.5 Miscellaneous Options

Through this programming option, you can turn on or off the strobe synchronization during silence, and display status at Idle (auto display event).

To edit the Miscellaneous Options, do the following.

1. Login to the panel.
2. Select 7 for Program Menu.
3. Select 5 for System Options.
4. Select 5 for Miscellaneous Options.

Sync Strobes Active when Audible Silenced

When “SYNC Strobe” is selected as Y (Yes), the strobes will continue to flash when the system is silenced and will stop flashing when the system is reset.



NOTE: The “SYNC Strobe” feature only functions with outputs that use a synchronized output pattern.

5. Press the up or down arrow key to toggle this selection between Y (Yes) or N (No).
6. Press right arrow key or ENTER to make your selection and move to the next programming option.

Auto Display Events

When this feature is programmed Y (Yes), the highest priority event of the system in control will automatically display on the control panel and remote annunciators after there has been no activity on any system touch pad for two minutes.

7. Press the up or down arrow key to toggle this selection between Y (Yes) or N (No).
8. Press right arrow key or ENTER to make your selection and move to the next programming option.

8.6.6 Daylight Savings Options

To edit Daylight Savings Time:

1. Login to the panel.
2. Select 7 for Program Menu.
3. Select 5 for System Options.
4. Select 6 for Daylight Savings.

Automatic Daylight Saving Time Adjustment

The control panel has an automatic DST (Daylight Saving Time) adjustment feature. If this feature is not enabled (set to *No*), the Daylight Saving Time change is not made to the system clock.

To enable or disable DST adjustment continue programming:

5. Select Y (enabled) or N (disabled) by pressing the up or down arrow, then press ENTER.

Daylight Saving Time Start and End

This option lets you to adjust the week and month Daylight Saving Time (DST) starts and ends. For this feature to work, you must enable (set to *Yes*) the Automatic Daylight Savings Adjustment option under Daylight Savings Options. The default values for the DST Start and End are:

- DST Start: The second Sunday in March
- DST End: The first Sunday in November

To set the start and end for Daylight Saving Time:

6. Press the up or down arrow to select the week (1st, 2nd, etc.) Daylight Saving Time starts, then press ENTER to make your selection and move to the month setting.
7. Press the up or down arrow to select the month (January – December) Daylight Saving Time starts, then press ENTER to make your selection and move to the DST End option.
8. Press the up or down arrow to select the week (1st, 2nd, etc.) Daylight Saving Time ends, then press ENTER to make your selection and move to the month setting.
9. Press the up or down arrow to select the month (January – December) Daylight Saving Time ends, then press ENTER two times to make your selection and exit.

8.6.7 Edit Banner

The banner is the message that displays on the panel LCD when the system is normal, that is, when no alarms or troubles exist and no one is currently using system menus. You can create a customized message, which can be up to 40 characters, two lines of 20 characters each.

If you do not create a customized message, the system will use the internal banner. You cannot change the internal banner.

To customize the banner display message:

1. Login to the panel.
2. Select 7 for Program Menu.
3. Select 5 for System Options.
4. Select 7 for Edit Banner.



NOTE: See Appendix A for instructions on how to edit banner.

5. Select each character of a word by pressing the up or down arrow, then press the right arrow to move to the next character.
6. When word or sentence is complete press ENTER to save the custom banner.

8.6.8 SLC Family

The IFP-300 supports SD, Intelligent Device Protocol (IDP), or SK Series SLC devices. You must configure the IFP-300 to accept the protocol of the devices you are installing. You cannot mix SLC devices of different protocols.

1. Login to the panel.
2. Select 7 to access the program menu.
3. Select 5 to access System Options.
4. Select 8 for SLC Family.
5. Press UP arrow to select the desired SLC device type.
6. Press ENTER to accept the displayed SLC device type.



NOTE: When you change the SLC type from one protocol to another, the following message will appear.

```
Setting the SLC family will set all
SLC point to UNUSED
← Back                [Enter] to Accept
```

Figure 8.14 SLC Family Change

When changing SLC family from IDP or SK to SD will remove all external 6815 modules. When changing from SD to IDP or SK SLC family will remove all 5815XL modules on the system.

8.7 JumpStart Auto-Programming



NOTE: JumpStart Auto-Programming is used to auto learn the system hardware after devices have been added or removed from the system. Hardware devices which remain the same between repeat JumpStart will retain any customized text or options associated with the device. It is best to carefully consider the Network ID setting for each panel before the first JumpStart Auto-Programming is performed. Once this is done, the panel must be defaulted back to factory defaults if the network ID settings need to change.

To run JumpStart Auto-Programming, do the following steps.

1. Login to the panel.
2. Select 7 for Program Menu.
3. Select 6 for JumpStart.
4. Press ENTER to accept the Warning screen.
5. Follow the remaining on screen instructions
6. Press ENTER to confirm. See Section 7.1.3.

8.8 Restore Defaults

This option allows you to restore the panel back to factory defaults. All programming will be lost.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Panel Programming.
3. Select 7 for Restore Defaults.
4. Press the up or down arrow key to select YES or NO from the warning screen. Then press ENTER.

8.9 Voice Options

Through this programming menu you can modify the messages programmed into an NVCM/VCM. You can also modify other voice settings.

8.9.1 VCM Maintenance

The VCM Maintenance menu is used to program custom messages into the NVCM/VCM. Messages can be recorded locally using the microphone.

1. Select 7 for Panel Programming.
2. Select 8 for Voice Options.
3. Select 1 for VCM Maintenance.

8.9.2 Voice Settings

1. Select 7 for Panel Programming.
2. Select 8 for Voice Options.
3. Select 2 for Voice Settings.

Enable Dual Channel System

This option allows you to select whether the dual channel is enabled in the System. For dual channel capabilities, the system must only contain dual channel voice hardware.

To enable the System as a dual channel, press the up or down arrow key to select YES or NO. Then, press ENTER.

Section 9: System Operation

Operation of the control panel is simple. Menus guide you step-by-step through operations. This section of the manual is an overview of the Operation Menu. Please read this entire section carefully before operating the panel.

9.1 Annunciator Description

Figure 9.1 shows the annunciator that is part of the control panel board assembly.

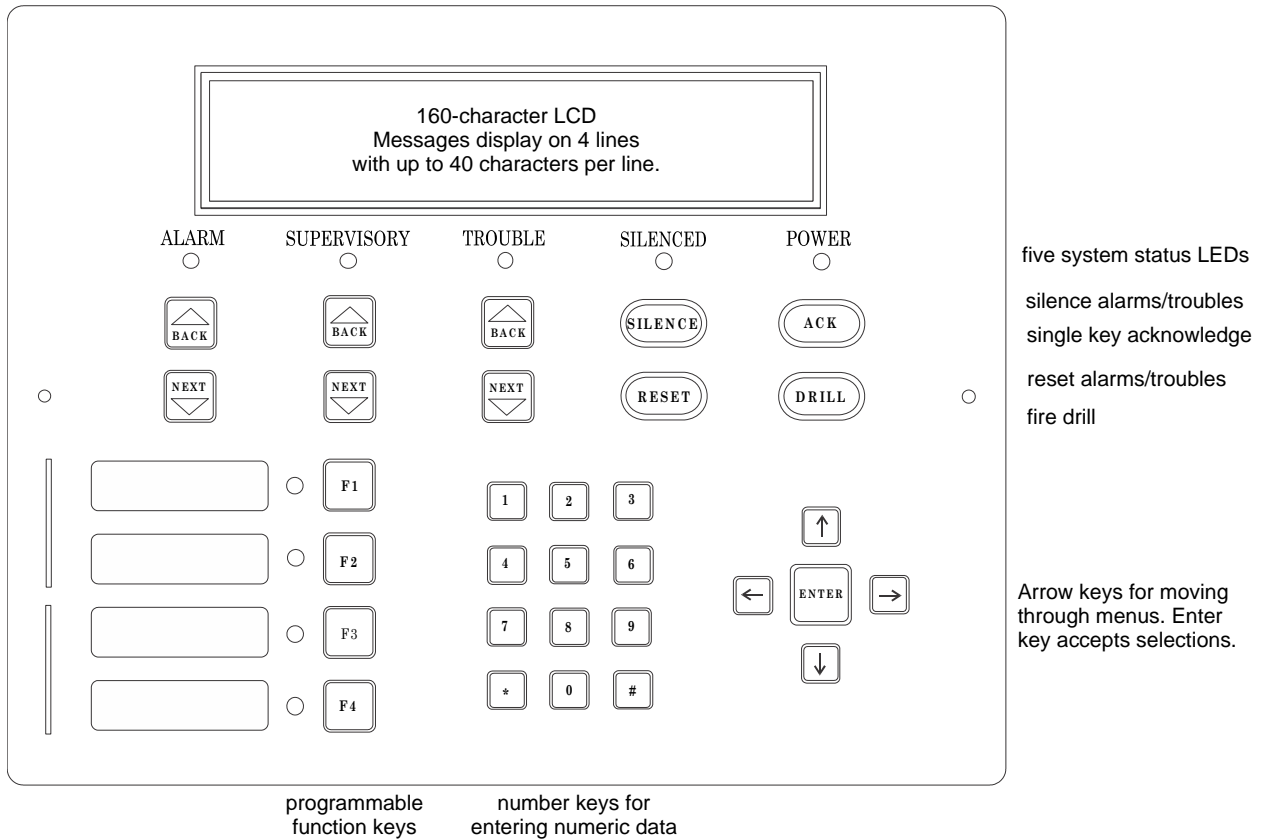


Figure 9.1 Control Panel Annunciator

9.1.1 LCD Display

The control panel LCD displays system messages, annunciates alarms, supervisories and troubles, provides status information, and prompts for input. These messages can be up to 160 characters, displaying over four lines of 40 characters each. Annunciator keys beep when they are pressed.

9.1.2 Banner

The banner is the message that displays on the control panel when the system is in normal mode (no alarm or trouble condition exists and menus are not in use). You can create a customized message that will display instead of the internal (default) message. See Section 8.6.7 for information on customizing the banner.

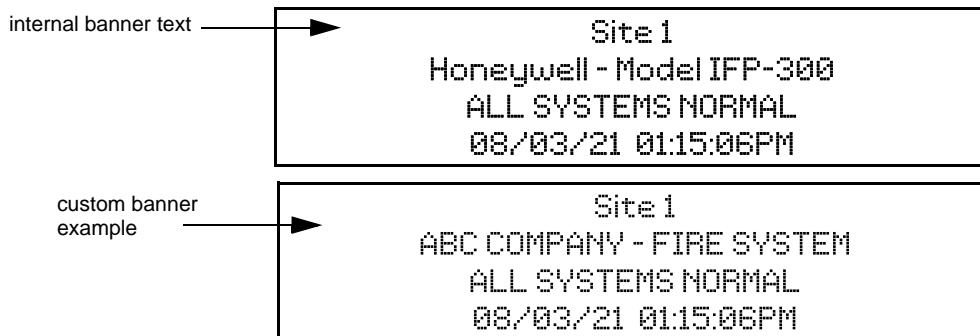


Figure 9.2 Banner Display Examples

9.2 Menu System

The control panel is easy to operate from the Main Menu. To view the Main Menu press the ENTER or right arrow key on the control panel or remote annunciator. This will bring up the panel login menu, as described in Section 9.2.1. Once validated, the user will be able to access the Main Menu as shown in Section 9.2.2. Select the desired option. You will be prompted for an access code if required.

The control panel supports up to 20 access codes. The profile for each access code (or user) can be modified through the network programming option (see Section 6.2.5 for access code programming).

9.2.1 Panel Login Menu

After pressing ENTER, and 1 for the login menu, a screen will prompt for the type of access account, Administrator or User. An administrator has the ability to modify user accounts and view the cybersecurity log. The User account has access to panel programming.

Admin Profiles

After initial power-up, the IFP-300 requires a password change and user account setup before programming. Only Admin1 will be active. Using the login for Admin1, the default password (0000000) must be changed to a new, unique password. This new password must be 7-digits and cannot be sequential or easily guessed. If the password is not changed, a default password trouble will appear on the panel.

There is a maximum of two administrator profiles available. After the administrator account is set up, you must create a User account(s). Only a User account has the ability to program the control panel. There is a maximum of 18 User accounts available.

Admin accounts can:

- View cybersecurity logs with date/time stamp
- Edit name to user profiles
- Enable/disable user profiles
- Modify access codes of user profiles
- Edit access to panel functions
- Change computer access code
- Restore factory default settings to the panel

User (Installer) Profiles

There are two programming levels which will access the Programming screens. From either of the screens, access to specific system and device features or programming may be obtained. An “Installer” can program local panel data relating to device types, zoning, messages, control panel functions, etc. A “Multi-site Installer” can program panel data across a network. A user has the ability to change their administrator-assigned password after it has been assigned for the first time. Refer to Section 6.2.5 on page 71.

- Profile 1 is the profile used that dictates what functions to which the Fire Fighter Key has access. Because this is the profile used for a key, the User Name and the Access Code cannot be edited.
- Profile 2 is defaulted as “Installer” and profile 3 is defaulted to “Multi-Site Installer”. Profiles 4-18 are empty profiles available for assignment. User profiles 2-18 can be edited for name and panel functions. Table 9.1 lists the panel functions that can be selected for each user profile.

| Type of Function | Selectable Functions |
|------------------|----------------------|
| Panel Operations | System Reset |
| | System Silence |
| | System Ack |
| | Fire Drill Key |
| | *F1 Function Key |
| | *F2 Function Key |
| | *F3 Function Key |
| | *F4 Function Key |

Table 9.1 User Profile Selectable Panel Functions

| Type of Function | Selectable Functions |
|---|-----------------------------|
| Panel Menus | System Tests |
| | Fire Drill Menu |
| | Indicator Test |
| | Walk Test-No Report |
| | Walk Test -With Report |
| | Communicator Test |
| | Clear History Buffer |
| | Point Functions |
| | Disable/Enable Point |
| | Point Status |
| | Set SLC Device Address |
| | SLC Single Device Locator |
| | SLC Multiple Device Locator |
| | I/O Point Control |
| | Event History |
| | Set Time & Date |
| | System Information |
| | Network Diagnostics |
| | Network Programming |
| | Panel Programming |
| Send/Receive Firmware Update | |
| *Function Keys are only available on the RA-2000 LCD annunciator. | |

Table 9.1 User Profile Selectable Panel Functions

Invalid Password/Panel Timeout

If a password is entered incorrectly or is not a valid password, the panel will display an error message. You must hit ENTER or the left arrow key and re-enter the password correctly. After ten invalid attempts, the panel will lock for 30 seconds and then you can try again. However, if the password has been forgotten, record the 20-character code displayed on the panel and contact Technical Services. After proper authentication, the password will be supplied.

9.2.2 Main Menu Overview

The chart below is a brief overview of the Main Menu. These options are described in greater detail throughout this section of the manual.

| Main Menu Options | Description |
|------------------------|--|
| 1- System Tests | Access to Fire Drill, Indicator Test, Walk Tests, Communicator Test, Clear History Buffer, Manual AlarmNet Registration, and Manual Communicator Reset |
| 2- Point Functions | Enable/disable points, Point Status, SLC Single Device Locator, SLC Multiple Device Locator, and I/O Point Control |
| 3- Event History | Display event history on the LCD. See Section 9.3.3 for more information. |
| 4- Set Time and Date | Set time and date for the system |
| 5- Network Diagnostics | Ping Panel, Data Network Status, and Voice Network Status |
| 6- Network Programming | Access Learn Network, Edit Network Names, Edit Panel ID, Computer Access, Communicator Options, Voice Options, Sync Network Options |
| 7- Panel Programming | Brings up a set of menus for programming the panel. These options are described in detail in Section 8. |
| 8- System Information | Menus to view information about the panel such as model, ID, serial number, revision, send or receive firmware updates and feature registration activation |

Table 9.2 Main Menu Options

9.2.3 Using the Menus

| | |
|----------------------------|--|
| To move through the menus: | Use the up and down arrow key to move the cursor through the options in a menu. Use the left arrow key to move to a previous menu. |
| To select an option: | Enter the number of the option, or press ENTER if the option has the = symbol next to it. |
| Exit Menu | Press the left arrow. |

9.3 Basic Operation

9.3.1 Setting Time and Date

1. Select 4 for Set Date & Time.
2. Make changes in the fields on the screen. Use right arrow to move through the fields. Use the up or down arrow key to select options in the fields.
3. When the date and time are correct, press ENTER.

9.3.2 Disable / Enable a Point

1. Select 2 for Point Functions.
2. Select 1 for Disable/Enable Point.

Disable / Enable NACs by Template

1. Press 1 for Disable NACs by Template, or press 2 to Enable NACs by Template.
2. Use the up or down arrow key to move through the list of templates. Press ENTER to select the current template.

Disable / Enable NACs by Group

1. Press 3 to Disable NACs by Group, or press 4 to Enable NACs by Group.
2. Use the up or down arrow key to move through the list of groups. Press ENTER to select the group highlighted.

Disable / Enable Zone Points

1. Press 5 to Disable Zone Points, or press 6 to Enable Zone Points.
2. Use the up or down arrow key to move through the list of zones. Press ENTER to select the zone highlighted.

Disable / Enable Point

1. Press 7 to Disable /Enable Point.
2. Choose module.
3. Use the up or down arrow key to choose point and press ENTER.
4. Press right arrow to disable or enable point.

Inhibit Output Group

Inhibiting an output group prevents the group from being utilized by system mapping. While inhibited, no event in the system can activate the output group.

1. Press 8 to Inhibit Output Group.
2. Use the up or down arrow key to select the group to be inhibited.
3. Press the right arrow key to inhibit the group.
4. Press right arrow again to enable the group.

9.3.3 View Event History

Use the View Event History feature to display events on LCD. From the Main Menu, press 3 to select Event History. Events will begin displaying with most recent events first.

The panel can store up to 1000 events. When it reaches its 1000-event capacity, it will delete the oldest events to make room for the new events as they occur. In networked setups, each panel stores up to 1000 of its own events. When viewing Event History in the panel, the newest 500 events from every panel in the site will be displayed. When using HFSS Honeywell Fire Software Suite, all 1000 events from every panel in the network will be uploaded.

On multi-site displays, pressing ENTER or right arrow brings you directly into View Event History and allows you to view the Event History from every panel in each of the sites that the multi-site display is assigned to.

To clear the event history

From the Installer menu select 1 for System Tests. From the test menu select 6 Clear History Buffer. In network systems, this clears the History Buffer of all panels in the site.

Single Key Acknowledge

This feature allows the user to press the ACK and display the oldest un-acknowledged event in the system. Pressing ACK again will acknowledge the event, then display the next oldest un-acknowledged event without pressing the arrow keys.



NOTE: This system has the capability to acknowledge across the ECS network.

9.3.4 Conduct a Fire Drill

This system test initiates a Fire Drill alarm and activates Fire Drill mapping for 10 minutes or until a user manually exits the fire drill.

1. From the Main Menu, press 1 for System Tests.
2. Press 1 for Fire Drill. You will be prompted to press ENTER.
3. The drill will begin immediately after you press ENTER.

4. Press any key to end the drill. (If you do not press any key to end the fire drill manually, it will time out automatically after ten minutes). If a fire drill switch has been installed, activating the switch will begin the drill; deactivating the switch will end the drill.

9.3.5 Conduct an Indicator Test

The Indicator Test checks the annunciator LEDs, PZT, and LCD display.

1. From the Main Menu, press 1 for System Tests.
2. Press 2 for Indicator Test. The system turns on each LED several times and sounds the piezo. At the same time, it scrolls each available character across the LCD. A problem is indicated if any of the following occurs:
 - A LED does not turn on
 - You do not hear a beep
 - All four lines of the LCD are not full

This test takes approximately 15 seconds to complete. You can press any key to end manually while the test is still in progress. When the test ends, you will be returned to the Test Menu.

9.3.6 Conduct a Walk Test

Walk Test is a feature which allows one person to test the fire alarm system. The Walk Test will run for 4 hours or until the user manually exits. If an alarm or pre-alarm condition is occurring in the system, you will not be able to enter the walk test. A walk test may only be initiated if the test is enabled in the user profile.

1. From the Main Menu, press 1 for System Tests.



CAUTION: ALARM VERIFICATION

IF ANY ALARM VERIFICATION ZONES ARE BEING USED, THE USER WILL BE ASKED IF THEY WISH TO DISABLE ALARM VERIFICATION DURING WALK TEST. THIS OCCURS FOR EITHER WALK TEST OPTION.

2. Select 3 for Walk Test-No Report. The LCD will display “WALK TEST STOPPED” on Line 1 and “ENTER = start test” on Line 3. Enter the time period you wish the NAC circuit to be active for each alarm (06 to 180 seconds). By selecting this option, central station reporting is disabled while the test is in progress.

OR

Select 4 for Walk Test-with Report. The LCD will display “WALK TEST STOPPED” on Line 1 and “ENTER = start test” on Line 3. Enter the time period you wish the NAC circuit to be active for each alarm (06 to 180 seconds). By selecting this option, central station reporting will occur as normal during the walk test.

The panel generates a TEST report to the central station when the walk test begins. During a walk test, the panel’s normal fire alarm function is completely disabled, placing the panel in a local trouble condition. All zones respond as 1-Count zones (respond when a single detector is in alarm) during a walk test. Each alarm initiated during the walk test will be reported and stored in the event history buffer.

3. To End the Walk test, access the Main Menu. Select 1 for System Test, then press 3 or 4. Press ENTER to end the walk test. The system will reset. The panel will send a “TEST RESTORE” report to the central station.

If you do not end the walk test manually within four hours, it will end automatically. If there is an alarm or pre-alarm condition in the system, you will not be able to enter the walk test.



NOTE: The panel does not do a full 30 second reset on resettable power outputs. As soon as the device is back to normal, the panel is ready to go to the next device.

9.3.7 Conduct a Communicator Test

1. From the Main Menu, press 1 for System Tests.
2. Select 5 for Communicator Test. The screen will display “Manual communicator test started”. When the test is completed, you will be returned to the Test Menu. A manual communicator test requires that at least one daily test in the network be enabled in communicator programming.
3. The Manual communicator test will be communicated out both Phone Lines and Ethernet/Cellular paths if they are all programmed. Each manual communicator test will alternate between one of the Phone Line paths and one of the AlarmNet paths.

9.3.8 Manual AlarmNet Registration

1. From the Main Menu, press 1 for System Tests.
2. Select 8 for Register AlarmNet. The screen will display and ask for confirmation. Feedback will be given if the command was sent or not.

9.3.9 Silence Alarms or Troubles

Press SILENCE to turn off silenceable outputs and annunciator PZTs. If an external silence switch has been installed, activating the switch will silence fire alarms or troubles. If you are already using system menus when you press SILENCE, you will not need to enter your code.



NOTE: Alarm and trouble signals that have been silenced, but the detector remains un-restored, will resound every 4 or 24 hours depending on user selection until the detector is restored. Refer to “Auto-Resound (4 or 24 hours)” on page 114.



NOTE: This system has the ability to silence control panels across the ECS network.



NOTE: For ECS systems, pressing silence at an LOC will only silence the system in control. See Section 9.4.1.

9.3.10 Reset Alarms

Press RESET and enter your code or rotate the key at the prompt. If an external reset switch has been installed, activating the switch will reset alarms. If you are already using system menus when you press RESET, you will not need to enter your code or rotate the key.



NOTE: Multi-Site displays do not allow for resetting multiple sites. To reset a site, enter a Multi-Site Installer access password, select a site from the list of Sites, and then press Silence or Reset button to continue. This option will occur whether the Network was programmed No/Yes for "Silence-Reset Across Sites". Also, this option allows the user to select Reset Fire System and Reset Emergency Communication System whether or not the panel has ECS. If the user selects No, the non-ECS panel will do a fire reset within the site and no other sites will be affected.



NOTE: For ECS Systems, pressing reset at an LOC will prompt the user for which system they want to reset. See Section 9.4.1.

Reset Communicator

This options allows the user to reset the communicator. The LCD will display:

"Resetting Communicator... Please Wait"

You will be returned to the Main Menu when the reset is complete.

The communicator is not allowed to be reset when alarms or supervisories are active. Communicator reset is not allowed if any of the following are active:

- Fire Alarm
- Fire Supervisory
- Fire Pre-Alarm
- CO Alarm
- CO Supervisory
- ECS Alarm
- ECS Supervisory

9.3.11 Check Detector Sensitivity Through Point Status

The control panel constantly monitors smoke detectors to ensure that sensitivity levels are in compliance with NFPA 72.

If sensitivity for a detector is not in compliance, the panel goes into trouble, generating a CAL TRBLE condition. A detector enters a CAL MAINT state to indicate that it is approaching an out of compliance condition (but is currently still in compliance).

When a CAL TRBLE condition occurs, the Central Station receives a detector trouble report ("373" and the zone or point for Contact ID format; "FT" and the zone or point in SIA format).

To check sensitivity for an individual detector, follow the steps below.

1. From the Main Menu, press 2 for Point Functions.
2. Press 2 for Point Status.
3. Select the module where the point you want to check is located.
4. Enter the number of the point you want to check and press ENTER.

5. A screen similar to those shown in below will display.

Example of detector in compliance

```

    detector ID
    Det-Photo 3.5% ob/ft ← percent obscuroty per foot
    MODULE_97 POINT_101
    [Z001][M97:P_101] Clean Air = 059
    NORMAL ← detector state
    >= MORE
    
```

```

    Alarm Threshold=169 (3.5% ob/ft)
    Maint Threshold=083 Trble Threshold=094
    Clear Air=058 (01%) Avg Clear Air=056
    Peak=059 (02%)
    
```

- Possible states:
- NORMAL: detector sensitivity in compliance with UL and not in alarm
 - ALARM: detector in alarm
 - CAL MAINT: detector needs maintenance, but not yet in trouble
 - CAL TRBLE: detector not in compliance with NFPA72
- (Other trouble states could override this message.)

Example of detector not in compliance

```

    blanks indicate detector
    not in compliance
    Det-Photo ____% ob/ft
    MODULE_97 POINT_101
    [Z001][M97:P_101] A058
    CAL TRBLE >= MORE ← detector state
    ← current value
    
```

```

    Alarm Threshold=169 (____% ob/ft)
    Maint Threshold=083 Trble Threshold=094
    Clear Air=058 (01%) Avg Clear Air=056
    Peak=059 (02%)
    
```

Example of CO detector in compliance

```

    detector ID          percent obscuroty per foot
    CO SMOKE 2.0%
    MODULE_33 SENSOR_4
    [Z001][M33:004] AXXX
    
```

```

    Sensitivity = 2.0%
    CO = xxx ppm
    
```

Figure 9.3 Checking Detector Sensitivity Compliance

You can print the detector status by uploading the detector status to, and printing from the HFSS Honeywell Fire Software Suite.

9.3.12 View Status of a Point

1. From the Main Menu, select 2 for Point Functions.
2. Select 2 for Point Status.
3. From the list that displays, press ENTER to select the module where this point is located. Next, enter the point to display. The screen that displays will show you if the point has a trouble and will provide sensitivity compliance information. (See Section 9.3.11 for complete information about detector sensitivity compliance.)

9.3.13 View Alarms or Troubles

When the system is in alarm or trouble, you can press the down arrow to view the location of an alarm, supervisory, or trouble.

9.3.14 System Information

From the Main Menu, press 8 to access the System Information menu.

About Panel

Press 1 to access About Panel to view the panel model, serial number, system version number, and date.

Send/Receive Firmware Updates

The IFP-300 has the ability to be updated in the field. The latest IFP-300 Firmware Update Utility can be downloaded from the Farenhyt website, www.farenhyt.com. Once a panel has been updated using the Firmware Update Utility, you can use Send/Receive firmware updates to propagate the firmware to the other panels in the network.

1. Press 2 to send a firmware update or press 3 to receive a firmware update from the System Information Menu. Available panels are listed in the Menu.
2. Use the up or down arrow key to select a panel to send/receive an update to/from. Press ENTER to start the update process.

Feature Activation

This menu is used to activate/register additional features.

1. Press 4 from the System Information menu. This option will bring up the Feature Activation menu.
2. Press 1 to enter a six digit activation code or press 2 to review the features already activated in this panel.

Ethernet Info

1. Press 5 from the System Information Menu for the Ethernet Information.

```
<Ethernet Info>
MAC Address 00-D0-2D-20-68-94 CRC: 0000
IP: 000.000.000.000 Sub: 000.000.000.000
GW: 000.000.000.000 DHCP: Y
```

AlarmNet Info

Press 6 from the System Information menu for AlarmNet Info.

- Cell Strength: 0 to 100%
- Status: Registered/Not Registered

AlarmNet Temporary PIN

Press 7 from the System Information menu to enter an AlarmNet Temporary PIN. This is issued by AlarmNet to register a new panel in case the existing FACP is ever replaced.

9.4 Event Priority

This section describes how the event activations are handled by the control panel with regards to priority.

9.4.1 System Control

The IFP-300 control panel integrates both a fire and emergency system into one. When events are active from both systems, the control panel makes intelligent decisions to determine which system should be controlling outputs. This is called System Control. This manual will refer to the fire or emergency systems having System Control, this means that the system has an active alarm or supervisory event that has a higher event priority than an active alarm or supervisory event from the other system. For this consideration, the control panel looks at the highest priority event active on each system. When both systems are active, the system with control will activate System Override. System Override is activated on the lower priority, non-System Control panel system (fire or emergency system.).

9.4.2 System Override

System Override temporarily disengages output group activations from the system being overridden. This is done to not provide conflicting messages and signaling and help with reducing confusion of the building occupants.

When output groups are supposed to be active but are not because System Control has activated System Override, they are re-activated every 30 seconds for 2-3 seconds to indicate to the building occupants that there is still an event active. This will only occur when the system with System Control is not using the output group. The System Override option is programmable for non-voice output groups on a per output group basis through the panel output group programming menus and in HFSS. In these places, the option is called Allow System Override, and defaults to YES. It is also possible to not reactivate the output groups every 30 seconds when System Override is active on a per system basis. This option is programmable in HFSS.

There are times when you would not want to allow System Override for an output group. For example: fire is programmed to an elevator relay to bring the elevator to the bottom floor for fire only. If fire and ECS are active with ECS being the higher priority event, you still need the elevator to move to the bottom floor and only audible and visual notification appliances must be overridden. In this case, the output group assigned to the relay would be set to NO on the Allow System Override setting. See Section 8.4.1 to edit group properties.

9.4.3 Event Priority

Each event type (see Table 9.3) has a priority level assigned to it. When more than one event type is active, the panel uses the Event Priority Table to determine which event mapping to use to control output groups. The Event Priority Table can be modified using HFSS. It is strongly recommended that before each installation a risk analysis is done by the stake holders (property owners, AHJ, occupants, etc...) to determine which events take precedence over others.

The Emergency LOC Alarm entry in the Event Priority Table encompasses all ECS Alarm Events that can be activated from an LOC (LOC Mic Triggered ECS Alarm and LOC ECS 1 Alarm through LOC ECS 8 Alarm). By default, these events do not have a priority - they can be activated in any order. A programming option in HFSS exists to force a priority scheme for the LOC ECS Alarm Events. When this option is enabled, the lower numbered the ECS event is, the higher priority it has (e.g. LOC ECS 1 Alarm is higher priority than LOC ECS 8 Alarm). With this priority scheme, once a higher priority ECS Event has been activated, an ECS reset must be performed before a lower priority ECS Event can be activated.

The Event Priority Table contains the following events for modification.

| Fire System | Emergency System |
|------------------------------|-----------------------------|
| Fire Manual Pull Alarm | Emergency LOC Alarm |
| Fire Detector Alarm | Emergency 1 Point Alarm |
| Fire Water Flow Alarm | Emergency 2 Point Alarm |
| Fire Interlock Release Alarm | Emergency 3 Point Alarm |
| Fire Zone Aux 1 Alarm | Emergency 4 Point Alarm |
| Fire Zone Aux 2 Alarm | Emergency 5 Point Alarm |
| Fire System Aux 1 Alarm | Emergency 6 Point Alarm |
| Fire System Aux 2 Alarm | Emergency 7 Point Alarm |
| | Emergency 8 Point Alarm |
| | Emergency Voice Aux 1 Alarm |
| | Emergency Voice Aux 2 Alarm |
| | Emergency Voice Aux 3 Alarm |
| | Emergency Voice Aux 4 Alarm |
| CO Alarm | |
| Fire Pre-Alarm | |
| Fire Interlock Alert | |
| | Emergency Supervisory |
| Fire Supervisory | |
| CO Supervisory | |
| Trouble | |
| Site F Key Status | |
| System Status | |

Table 9.3 Event Priority



NOTE: Status Points, Status Voice Aux 1, Status Voice Aux 2, and Background Music are contained within the System Status event priority. All fire, emergency, and system troubles are prioritized into the Trouble Event Priority.

9.4.4 Priority Rules

1. Event priorities can be changed only within, not between the priority levels (defined by bold lines in Table 9.3).
2. An Emergency LOC Alarm must be higher than an Emergency 1-8 Point Alarm and Emergency Voice Aux 1-4 Alarm.
3. ECS events do not need to be prioritized by the ECS number.

9.4.5 Other Priority Considerations

There are other considerations to take into account when the same event is acting on the same output group (an event being mapped to an output group.) These are prioritized in order of appearance:

- For the Voice System using the dual channel, normal mapping takes priority over alert mapping. Example: Zone 1 Manual Pull is mapped to Voice Group 1 as an Alert 1 mapping and Zone 2 Manual Pull is mapped to Voice Group 1 as a normal mapping. If Zone 1 and Zone 2 Manual Pull events are active, Voice Group 1 will annunciate the Fire Alarm message defined in the Voice Settings for the panel's assigned site.
- Event Priority is considered based on the Event Priority Table above.
- If an output group is mapped both directly and through an output group template to an event, the direct map gets priority. Example: Template 1 Contains Group 1. Zone 1 Manual Pull is mapped to Template 1 and Group 1 using constant and ANSI patterns respectively. If Zone 1 Manual Pull is active, Group 1 will output ANSI.
- When an event is mapped to an output group from multiple zones, the lower numbered zone gets priority. Example: Zone 1 Manual Pull and Zone 2 Manual Pull are mapped to Group 1 using constant and ANSI patterns respectively. If Zone 1 and Zone 2 Manual Pull events are active, Group 1 will output constant.

9.5 Panel Operating Modes

The control panel can be in one or more of seven conditions at any given moment: Normal, Alarm, Pre-alarm, Supervisory, Trouble, Silenced, and Reset. Table 9.4 describes the behavior of the panel in each of these modes.

When looking at the LCD, the screen will display FIRE for the “Fire System”, or CO for the “CO System”. The highest priority event will display first and include the event count.

Press the down arrow to view the location and type of alarm, supervisory, or trouble. If the panel is programmed to Auto Display Event, information describing the highest priority active event will display on the first two lines. Auto Display Event activates after two minutes of annunciator inactivity.

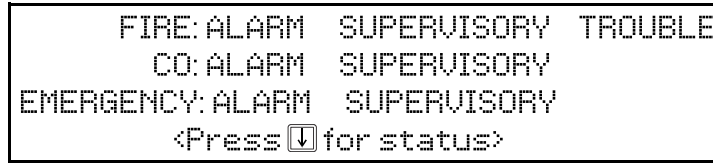


Figure 9.4 Highest Priority Event Display

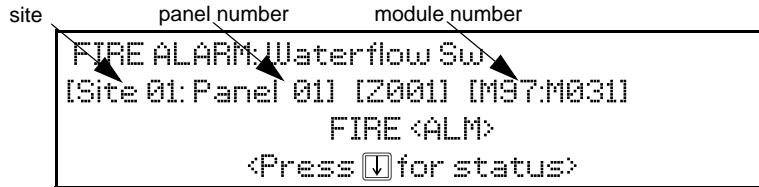


Figure 9.5 Event Display after Two Minutes Sitting Idle

| Operating Mode | Occurs When | System Behavior | In This Mode You Can |
|----------------|---|---|---|
| Normal | No alarm, supervisory, or trouble condition exists and menus are not in use. | SYSTEM POWER LED is on. The All Systems Normal display indicates that the system is in normal mode. The current date and time display on the last line of the LCD. | Enter the appropriate code, or rotate the key to activate the Main Menu. |
| Alarm | <p>A smoke detector goes into alarm or a pull station is activated.</p> <p>CO detector goes into alarm.</p> <p>If more than 3 categories are active at a single time, the screen will display as shown.</p> | <p>The system will report events to the central station. The onboard annunciator will sound loud, steady beeps to distinguish alarm signals. For a fire alarm, the sequence is a loud steady beep. (Any notification devices attached to the system will also sound). For an ECS Alarm, the sequence is four seconds on, one second off.</p> <p>The GENERAL ALARM LED will turn on.</p> <p>The LCD displays a screen similar to this one.</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <pre> Site 1 FIRE: ALARM EMERGENCY: ALARM <Press [down arrow] for status> </pre> </div> <p>Pressing the down arrow will display the location macro, date/time stamp, and site/panel number if applicable.</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <pre> Site 1 CO: ALARM <Press [down arrow] for status> </pre> </div> <p>Pressing the down arrow key to view the type and location of alarm. (Message will alternate with the date/time display.)</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <pre> FIRE: ALARM SUPERVISORY TROUBLE CO: ALARM EMERGENCY: ALARM SUPERVISORY SYSTEM: TROUBLE </pre> </div> | <p>Press the down arrow to view the alarm. A screen similar to this one displays.</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <pre> Site 1 Panel 1 FIRE ALARM: Waterflow Sw SBUS 97 MODULE 3 08/03/21 01:45:52PM </pre> </div> <p>Press SILENCE and enter an Access Code (or activate the key) to silence the annunciator (and any notification devices attached to the system).</p> <p>When the alarm condition clears, press RESET and enter a code (or activate the key) to restore the panel to normal.</p> |

Table 9.4 Panel Operating Modes

| Operating Mode | Occurs When | System Behavior | In This Mode You Can |
|----------------|--|---|--|
| Supervisory | <p>The system detects a supervisory condition.</p> <p>A Supervisory with a CO detector.</p> | <p>The system will report events to the central station. The onboard annunciator sounds a loud, pulsing beep to distinguish supervisory signals. For fire supervisory signals, the sequence is two seconds on, two seconds off. For ECS supervisory signals, the sequence is two seconds on, three seconds off. The SUPERVISORY LED will turn on. The LCD displays a screen similar to this one.</p> <div data-bbox="467 436 971 548" style="border: 1px solid black; padding: 5px; text-align: center;"> <p>Site 1 FIRE: SUPERVISORY <Press [F] for status></p> </div> <p>Pressing the down arrow to display the location macro, date/time stamp, and site/panel, if applicable.</p> <div data-bbox="467 621 971 732" style="border: 1px solid black; padding: 5px; text-align: center;"> <p>Site 1 CO: SUPERVISORY <Press [F] for status></p> </div> <p>Press the down arrow to view the type and location of the Supervisory event. The message will alternate with the time/date display.</p> | <p>Press the down arrow to view the fire supervisory condition. A screen similar to this one displays.</p> <div data-bbox="1003 279 1507 390" style="border: 1px solid black; padding: 5px;"> <p>Site 1 Panel 1 FIRE SUPERVISORY: Supervisory Sw SBUS 97 MODULE 3 08/03/21 01:45:52PM</p> </div> <p>Press SILENCE and enter an Access Code (or activate the key) to silence the annunciator. Once the supervisory condition has been corrected, the system will restore automatically.</p> |
| Trouble | <p>A system trouble condition occurs.</p> <p>A trouble condition with a CO detector</p> | <p>The system will report events to the central station. The onboard annunciator sounds a loud, pulsing beep in the sequence 0.75 second on, eight seconds off. The SYSTEM TROUBLE LED will turn on. The LCD displays a screen similar to this one.</p> <div data-bbox="467 974 971 1085" style="border: 1px solid black; padding: 5px; text-align: center;"> <p>Site 1 FIRE: TROUBLE <Press [F] for status></p> </div> <p>Press the down arrow to display the location macro, date/time stamp, and site/panel, if applicable.</p> <div data-bbox="467 1159 971 1270" style="border: 1px solid black; padding: 5px; text-align: center;"> <p>Site 1 CO: TROUBLE <Press [F] for status></p> </div> <p>Press the down arrow to view the type and location of the Trouble event. The message will alternate with the time/date display.</p> | <p>Press down arrow to view the fire trouble. A screen similar to this one displays.</p> <div data-bbox="1003 896 1507 1008" style="border: 1px solid black; padding: 5px;"> <p>Site 1 Panel 1 FIRE TROUBLE: Supervisory Sw SBUS 97 MODULE 32 08/03/21 01:45:52PM</p> </div> <p>Press SILENCE to silence the annunciator. Once the trouble condition has been fixed, the system will restore itself automatically.</p> |
| Pre-alarm | <p>A single detector trips in a 2-Count zone. (2-Count means two detectors must trip before an alarm is reported.)</p> | <p>The touchpad piezo beeps. The LCD displays a screen similar to this one.</p> <div data-bbox="467 1434 971 1545" style="border: 1px solid black; padding: 5px; text-align: center;"> <p>Site 1 FIRE: PREALARM <Press [F] for status></p> </div> <p>Press the down arrow to display the location macro, date/time stamp, and site/panel, if applicable.</p> | <p>Press down arrow to view the Prealarm. A screen similar to this one displays.</p> <div data-bbox="1003 1434 1507 1545" style="border: 1px solid black; padding: 5px;"> <p>Site 1 Panel 2 FIRE PREALARM: Det-Photo SBUS 97 MODULE 33 08/03/21 01:45:52PM 1 of 1</p> </div> <p>All system operations are available in this mode.</p> |
| Reset | <p>The RESET button is pressed followed by a valid code, if necessary.</p> | <p>All LEDs are on briefly then the LCD displays "RESET IN PROGRESS". If the reset process completes normally, the date and time normal mode screen displays.</p> | <p>Menus are not available during the reset process.</p> |

Table 9.4 Panel Operating Modes (Continued)

| Operating Mode | Occurs When | System Behavior | In This Mode You Can |
|----------------|---|---|---|
| Silenced | An alarm or trouble condition has been silenced but still exists. To silence alarms and troubles, press SILENCE followed by the Installer or User Code, if necessary. | The SYSTEM SILENCE LED is on. The SYSTEM TROUBLE, SUPERVISORY, and/or GENERAL ALARM LED (depending on condition) is on. The annunciator (and any notification devices attached to the system) will be silenced. | Press down arrow to view the location of the alarm, supervisory, or trouble. When the condition no longer exists, the SYSTEM SILENCED and SYSTEM TROUBLE LED, SUPERVISORY and/or GENERAL ALARM LEDs turn off. |

Table 9.4 Panel Operating Modes (Continued)

9.5.1 Multi-Site Annunciator and Multi-Site User Access

Multi-site annunciators are unique as they can display the status and event history of all sites they are assigned to. These displays can be especially useful in guard shacks or security centers. A multi-site display is indicated by the words “Multi-Site Display” at the top of the Idle screen.

- The ACK, DRILL, RESET and F-Macro keys are disabled until a multi-site user access code has been entered and a specific site has been selected.
- Multi-site Annunciator silencing rules:
 - If any of the assigned sites are silenced, the Silenced LED will be lit.
 - Silence key will only silence the sound from the multi-site annunciator on which the silence key was pressed. This is called being Locally Silenced. If Locally Silenced is enabled on a multi-site annunciator, it will be indicated by a blinking Silenced LED.
 - If any new troubles, supervisory, pre-alarms, or alarms are triggered in any assigned sites, locally silenced annunciators will resound.
 - If a multi-site annunciator is locally silenced for 4 or 24 hours, depending on user selection, the locally silenced annunciators will resound.
- The IFP-300 Menu System is disabled on a multi-site annunciator. Pressing the Right or Enter keys will bring you straight into event history for assigned sites. To get into the menu system, a multi-site user password must be entered and then a site must be selected from the site selection menu. Once this is done you will have access to the Idle screen of that site and the annunciator will temporarily act like a single site annunciator.
- A multi-site annunciator will sound the highest priority tone from the sites it is assigned to.



NOTE: A multi-site display is created in Module programming in the edit properties menu for an annunciator. See Section 8.2.1.



NOTE: An annunciator cannot be programmed as a multi-site display when it is associated with an ECS-VCM, ECS-NVCM, or ECS-RVM in an ECS system.

9.6 Releasing Operations

The control panel supports two types of releasing: Double Interlock Zone and Single Interlock Zone.

- The Double Interlock Zone operation requires an interlock switch input in the system.
- The Single Interlock Zone does not. An interlock switch is typically a dry-contact pressure switch.

When Single or Double Interlock Zone releasing is selected using HFSS, the software suite will automatically default the following system parameters:



NOTE: The defaults created can be modified through programming if desired.

- Output Group 2 is created. Output Group 2 will be defaulted as a “Detector Alarm” output group for all releasing zones. NAC [98:001] is assigned to Output Group 2.
- Output Group 3 is created. Output Group 3 will be defaulted as a “Interlock Release Alert” output group for all releasing zones. NAC [98:002] is assigned to Output Group 3.
- Output Group 4 is created. Output Group 4 will be defaulted as “Interlock Release Alarm” output group for all releasing zones. NAC circuit [98:003] is assigned to Output Group 4.



NOTE: The Installer must define which input points will be used for detectors, manual release switches, or interlock/pressure switches.



NOTE: For manual release operations, FM approved/ UL listed releasing manual station must be used. Refer to the *Device Compatibility Document* for approved releasing devices.

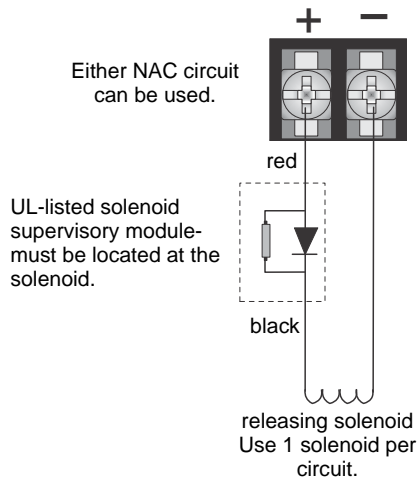


Figure 9.6 Wiring Configuration for Solenoid



NOTE: For releasing operations, a manual releasing disconnect switch is required per UL 864. Refer to the *MRD-1 Series Document* for installation instructions.

9.6.1 Single Interlock Zone Releasing

A single interlock zone utilizes a minimum of two addressable detectors and a designated manual release switch. Only addressable detectors can be used. No conventional detectors can be used.

Conditions Required for an Interlock Release Alert Output Activation

If any single addressable detector is activated, the “Interlock Release Alert” output will activate. This alerts the user that the initial stages required for a release condition are present. (Refer to Table 9.5).

Conditions Required for a Detector Alarm and Interlock Release Alarm Output Activation

If two or more addressable detectors, or a manual release switch activate, the “Detector Alarm” and “Interlock Release Alarm” outputs will activate. (Refer to Table 9.5 below.)

| Inputs | | Output Results | | | | | | |
|--------------------------|--------|-------------------------|--|---|---|---|---|---|
| 1st Addressable Detector | | X | | X | | X | | X |
| 2nd Addressable Detector | | | X | X | | | X | X |
| Manual Release Station | | | | | X | X | X | X |
| | Normal | Interlock Release Alert | Interlock Release Alarm and Detector Alarm | | | | | |

Table 9.5 Single Interlock Zone Operation



CAUTION: DETECTOR SPACING

DETECTORS MUST BE INSTALLED AT 0.7 TIMES THE LINEAR SPACING AS DESCRIBED IN NFPA 72

9.6.2 Double Interlock Zone Releasing

A Double Interlock Zone uses a minimum of two addressable detectors, a designated manual release switch, and an interlock switch input. An interlock switch is typically a dry-contact pressure switch and will be referred to as an interlock/pressure switch in this document. Only addressable detectors can be used. No conventional detectors can be used.

Conditions Required for an Interlock Release Alert Output Activation

If any single addressable detector is activated, the “Interlock Release Alert” output will activate. This alerts the user that the initial stages required for a release condition are present. (Refer to Table 9.6.)

Conditions Required for a Detector Alarm Output Activation

If two addressable detectors, a manual release switch is activated, or an interlock switch is active, the “Interlock Release Alert” and “Detector Alarm” outputs will activate.

Conditions Required for an Interlock Release Alarm Output Activation

Any release requires the activation of an interlock switch, and either a manual release switch or 2 activated addressable detectors. When these conditions are met, the “Interlock Release Alarm” and “Detector Alarm” outputs will activate, and the “Interlock Release Alert” outputs will deactivate.

| Inputs | Output Results | | | | | | | | | | | | | | | |
|---------------------------|-------------------------|--------------------------------|---|---|-------------------------|---|---|---|----------------|---|---|---|--|---|---|---|
| | Interlock Release Alert | | | | Interlock Release Alarm | | | | Detector Alarm | | | | Interlock Release Alarm and Detector Alarm | | | |
| 1st Addressable Detector | | X | | X | | X | | X | | X | | X | | X | | X |
| 2nd Addressable Detector | | | X | X | | | X | X | | | X | X | | | X | X |
| Manual Release Station | | | | | X | X | X | X | | | | | X | X | X | X |
| Interlock/Pressure Switch | | | | | | | | | X | X | X | X | X | X | X | X |
| | Normal | Interlock Release Alert | | | | Interlock Release Alarm and Detector Alarm | | | | Interlock Release Alarm and Detector Alarm | | | | | | |

Table 9.6 Double Interlock Zone Operation



CAUTION: DETECTOR SPACING

DETECTORS MUST BE INSTALLED AT 0.7 TIMES THE LINEAR SPACING AS DESCRIBED IN NFPA 72

9.7 Smoke Alarm Verification

Figure 9.7 illustrates how the Smoke Alarm Verification cycle operates.

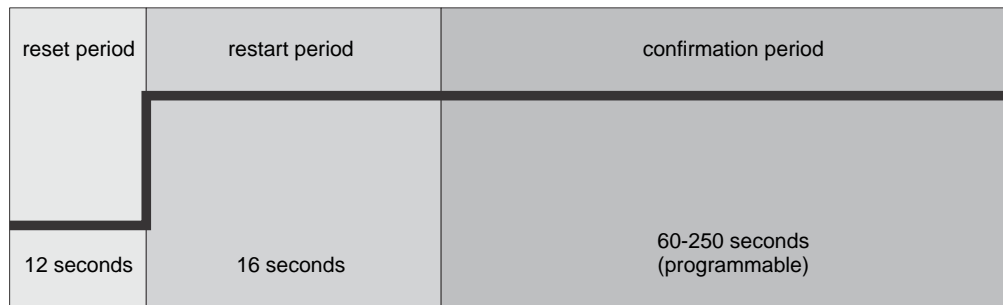


Figure 9.7 Smoke Verification Cycle

If there is no alarm indication during the confirmation period, the system will return to normal operation.

9.8 Function Keys

The function keys on the IFP-300 have multiple features. Their macro key functionality can simplify the disabling, activating, or inhibiting points or groups respectively. They can also be used as a status type activation event and for activating Map Inhibit. Each F-Key macro can hold 50 events.

To Access the F-Key Recording Menu:

1. From the Idle screen, press and hold the F-Key for 5 seconds.
2. Enter a PIN with F-Key recording privileges, if prompted.

9.8.1 Recording an F-Key Macro

1. Access the F-Key Recording menu and select the ‘Start FKEY Recording’ option.
2. The panel will return to the Idle screen. Notice the 4th line on the display now alternates with “F# Key Recording”, where # is the number of the F-Key being recorded.
3. Any Disabling or Activating of points, output groups, or templates from the site at this point will be programmed into the macro. Do this by going to any annunciator within the site and entering Main Menu > Point Functions and use Disable/Enable Point or use I/O Point Control to: disable output groups or individual points, or activate individual points.
4. Once you are finished with disabling or activating points/output groups, enter the F-Key Recording Menu again and select the ‘End FKEY Recording’ option.
5. The panel will return to the Idle screen.

9.8.2 Aborting an F-Key Macro Recording Session

1. After an F-Key macro recording session has been started, the session can be canceled at any time by accessing the F-Key Recording menu and selecting ‘Abort FKEY Recording’ option.
2. The panel will return to the Idle screen.

9.8.3 Erasing an F-Key Macro

1. If an F-Key macro has already been recorded, you can erase it by accessing the F-Key Recording menu and selecting the 'Erase FKEY Macro' option.
2. The panel will return to the Idle screen.

9.8.4 Using a Recorded F-Key Macro

1. From the Idle screen on any annunciator in the site, press the F-Key you want to activate.
2. Once finished, to de-activate the macro press the F-Key again.

9.8.5 F-Key Status Event

When an F-Key is enabled, it activates its corresponding F-Key Active event. This is a status type event that can activate outputs without showing any status on annunciator displays. This should be used for ancillary purposes only.

9.8.6 F-Key Map Inhibit

The F-Keys have the ability to disable event - output group mapping for the purpose of simulating that the map doesn't exist. This can be setup to allow for testing purposes where notification of an entire building is not desired during the test. This option is programmable for each output group map through HFSS Honeywell Fire Software Suite.

When an F-Key is active and a map in the system is set to be disable by Map Inhibit, the system will show a trouble event indicating it as such.

Section 10: Emergency Communication System Operation

10.1 Overview

The ECS Series control panels and accessories provides features to meet the requirements for a Mass Notification Systems as described in NFPA 72 and is compliant with the UL 2572 standard. The ECS (Emergency Communication System) is integrated with the fire alarm and voice evacuation functions of the control panel. In a networked panel system, only one panel can be chosen to be the voice evacuation/ECS panel for the site.

There are two ways for activating ECS in the IFP-300ECS panel:

ECS Point Activations ECS Point Activation involves using pre-determined ECS Alarm input points to activate ECS Alarm events. These events cause output areas to activate based on mapping that is programmed into the system at installation. This is very similar to the traditional mapping that the fire system has utilized to date.

Manual LOC Activations Manual LOC Activation involves using the ECS-LOC interface to activate ECS Events, choose output areas, and speak through a microphone. These selections are not pre-determined and allow the user to make system functionality decisions when the event is actually happening. This requires the activation of Manual ECS State which bypasses ECS Point Activations.

10.2 LOC Functionality

A Local Operating Console consists of either the ECS Series panel (ECS-VCM Voice Control Module or ECS-NVCM Network Voice Control Module and the Alarm Control Panel) or the ECS-LOC Local Operating Console (ECS-RVM Remote Voice Module and its associated RA-2000). The ECS-LOC provides eight buttons for activating the ECS messages, a button to gain and request ECS Control, and a microphone for live paging. There can be up to eight ECS-LOC devices in the system. In a networked panel system, all of the ECS-LOC consoles must be connected through SBUS to the panel that includes the ECS-VCM or ECS-NVCM.

10.2.1 Keys and LEDs

This section outlines the functionality of the keys and LEDs on the ECS-VCM/ECS-NVCM and ECS-RVM expander modules.

ECS Control Key

Pressing the ECS Control Key will do one of two things:

1. Enter Message Mode of the LOC ECS interface (including trying to gain ECS Control if the user doesn't have it already).
2. Relinquish ECS Control if pressed while in Message Mode.

ECS Control LED

The ECS Control LED is used to indicate the status of ECS Control in the system. When the LED is on solid, the LOC has ECS Control within the system. When the LED is blinking, another LOC has gained ECS Control in the system.

ECS Message Keys

ECS Message Keys are used in Message Mode to select which ECS Message is to be played. If pressed when the LOC does not have ECS Control, the system will automatically try to gain ECS Control before allowing the ECS Event to be activated. See Section 10.2.2.

ECS Message LEDs

The red ECS Message LEDs indicate the active ECS Message and any previously active ECS messages. The green LEDs indicate the ECS Message was selected in message mode and that the LOC has ECS control.

1. For ECS Point Activation, the red ECS Message LEDs will illuminate on each LOC to indicate which ECS messages have been activated in automatic ECS state.
2. In Manual ECS State, the red ECS Message LEDs will indicate which ECS message has been activated at an LOC. See Section 10.2.3.
3. The green ECS Message LEDs will activate for the LOC that activated the ECS Message.

Select Keys

The Select Keys are used to toggle which output areas are active.

1. If Message Mode is active (see Section 10.2.5), the Select Keys will toggle which areas the active message is distributed to (also toggles the red Select Key LED).



NOTE: For LOC activated emergency alarm events, if an area is programmed to be active through output mapping, that area is automatically selected and cannot be deactivated using the Select Keys.

2. If Fire Page Mode is active (see Section 10.2.3), the Select Keys will toggle which areas the microphone audio is distributed to (also toggles the green Select Key LED).

Select Key LEDs

The Select Key LEDs are used to indicate which output areas are active for a microphone page or system events.

1. Green LEDs: active areas for microphone paging.



NOTE: Select LEDs are only active when the microphone PTT (push-to-talk) is engaged. Blinking LEDs indicate one or more associated network page destination panels are unable to page.

- Red LEDs: active areas for system events.

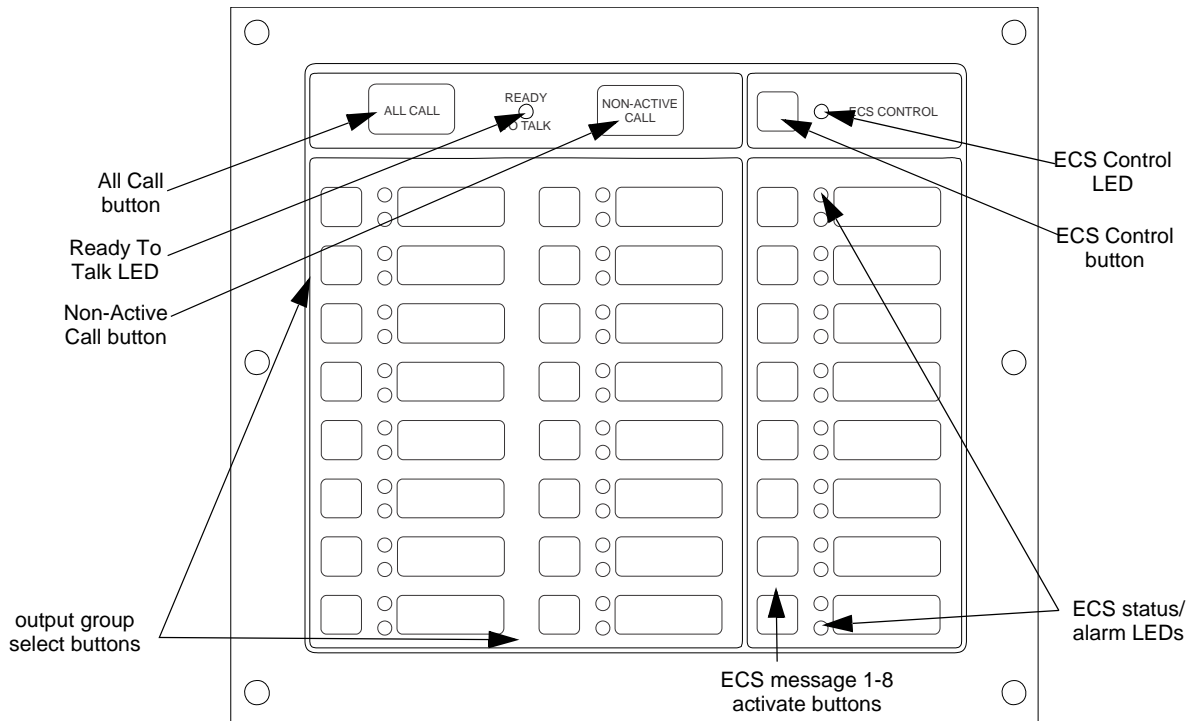


Figure 10.1 Front View of ECS-RVM/ECS-EMG

10.2.2 Gaining ECS Control

When attempting to gain ECS Control, there are three things that govern whether or not ECS Control can be obtained:

1. LOC Priority.
2. LOC Lockout.
3. User profile access control.

LOC Priority

LOCs are assigned (through panel or HFSS programming of the ECS-VCN, ECS-NVCN, or ECS-RVM) an LOC priority of low, normal, or high. LOCs with a higher priority are always able to gain control from a lower priority LOC.

LOC Lockout

When LOCs are programmed to the same priority, the setting LOC lockout applies. LOC lockout will not allow an LOC to gain ECS Control from the LOC with ECS Control until one of three things happen:

1. The LOC lockout timer expires. Once the LOC lockout timer expires, an attempt to gain ECS Control can be made again.



NOTE: The lockout timer must be programmed to expire sometime other than Never.

2. The user at the second LOC requests ECS Control from the LOC with ECS Control and that LOC grants the request. (See Section 10.2.7). If the ECS lockout timer expires while an ECS Control request is in progress, the system will automatically pass ECS Control to the requesting LOC.
3. The user at the second LOC enters an access code with the ECS Super User profile option.

The LOC lockout timer can be set between immediate and 12 hours in increments of 1 second or it can be set to never expire. The default setting is 30 seconds. The LOC lockout timer is restarted upon any key press at the LOC with ECS control. The LOC lockout timer is cleared when ECS Control is relinquished.

User Profile Access Control

The user will need to enter an access code containing the ECS Control Request or ECS Super User profile option to gain ECS Control. ECS Control Request and ECS Super User profile options will be mutually exclusive to the system. If the access code has ECS Super User, the ECS Control Request is ignored and activations by that user are always as ECS Super User. Only a panel administrator can assign profile options to users. Refer to Section 9.2.1 for more information on panel users.

10.2.3 Manual ECS

After gaining ECS control, you can activate the emergency system and use emergency paging. Once an emergency event has been activated, the panel enters a manual ECS state. In this state, all points programmed for ECS alarms that are currently in alarm are changed to active. The display status screen reflects this when viewing the system for status. Any outputs that were activated by the programmed ECS alarm

points are deactivated until manual ECS state is exited. Only an ECS reset can exit the manual ECS state. If a user gains ECS control at an LOC and does not activate an ECS message, the system will automatically generate an ECS Supervisory. This prevents an LOC from being in an undesired state of ECS control when an actual event emerges.

There are two modes for interacting with the ECS interface when in the manual ECS state:

- Fire Page Mode
- Message Mode

These two modes allow you to quickly toggle areas of output for a desired message and toggle output areas to speak to for microphone ECS paging.

After gaining ECS control, the system is in Message Mode of the manual ECS state.

Switching between Fire Page Mode and Message Mode

At any time while in ECS Control, you can switch between Fire Page Mode and Message Mode. Fire Page Mode is entered by simply engaging the microphone.

- Message Mode: Use the ECS Message keys to select which message/event to output to the system. Use the Select Keys to select output areas in which to play the current ECS message. The Select key's red LED will toggle on/off with the activation/deactivation of the ECS message to the area. Any non-voice groups assigned to this Select key will also activate with their Activation Cadence. See Appendix C.
- Fire Page Mode: Use the Select keys while the microphone is active to toggle which areas in which to broadcast a live ECS page. The Select key's green LED will toggle on/off with the activation/deactivation of the ECS microphone page to the area.

Activating/Deactivating Output Groups Dynamically

This method allows the system to be set up with minimal or no system mapping. When in manual ECS state and operating in Message Mode, the user can dynamically activate/deactivate output areas for system notification. The Select key's red LED will light and the circuits in the output group(s) will become active and play the currently active ECS event message when activated. When deactivated, the Select key's red LED will turn off and the circuits in the output group(s) will become inactive. Non-voice output groups can also be assigned to Select keys and will toggle on/off using the activation cadence assigned to it in output group programming. This is available in panel programming and in HFSS. Refer to Section 8.4.1 for information on editing groups.

10.2.4 Fire Page Mode

Fire Page Mode allows the user to press the Select keys to toggle which output areas in which to broadcast over with the microphone. The green LEDs next to the Select keys will activate or deactivate.

```

FIRE PAGE MODE
SELECT KEYS: Toggle Output Areas
Microphone Active
Release Microphone for MESSAGE MODE

```

When Fire is set to higher priority than ECS in user programming, and NACs are active due to a release alarm, ECS functions and the microphone will be disabled. In this instance, NACs take higher priority over ECS messages. The screen will display the following.

```

FIRE PAGE MODE
Fire Alarm Priority Higher than ECS
Microphone and SELECT KEYS Disabled
MESSAGE Disabled for MESSAGE MODE

```

10.2.5 Message Mode

In Message Mode, the user is able to press the ECS Message keys to choose a message and press the Select keys to activate or deactivate the output areas in which the message will be played. This will activate or deactivate the green and red LEDs next to the ECS message keys and the red LEDs next to the Select keys.

```

MESSAGE MODE
ECS MESSAGE KEYS: Choose Message
SELECT KEYS: Toggle Output Areas
Engage Microphone for FIRE PAGE MODE

```

When Fire is set to higher priority than ECS in user programming, and NACs are active due to a release alarm, ECS functions and the microphone will be disabled. In this instance, NACs take higher priority over ECS messages. The screen will display the following.

```

MESSAGE MODE
Fire Alarm Priority Higher than ECS
MESSAGE and SELECT KEYS Disabled
Microphone Disabled for FIRE PAGE MODE
    
```

10.2.6 Custom ECS Event

Custom ECS events allows the user to generate an ECS event and speak a custom message using the microphone. Once the user is done speaking the message, the tone and any associated strobes will continue to be active in the output areas.

To generate a Custom ECS Event:

1. Gain ECS Control using the ECS Control Key when there is not an active manual ECS state event.
2. Activate the microphone.
3. Choose desired output areas using the Select keys.
4. Speak a custom message into microphone.

10.2.7 Passing ECS Control

Passing of ECS Control is allowed when two LOC units have the same priority. When it is possible to pass control, a prompt (similar to Figure 10.2) will display in which the user can request control from the LOC with ECS control, enter an access code with the ECS Super User profile option to override the other LOC, or wait for the lockout timer to expire (if applicable).

```

GAIN ECS CONTROL OPTIONS MENU
1=Request ECS Control from LOC
2 Gain ECS Control as ECS Super User
3 Wait for Lockout Timer to Expire 30
    
```

Figure 10.2 Request ECS Control with Lockout Timer Active

When passing ECS Control between two ECS Super Users, the user is not shown the prompt screen. Instead, a request for ECS control is automatically made. Additionally, the lockout timer does not apply for ECS Super User.

When a request for ECS control is made, the LOC with ECS control will be shown a screen indicating that another LOC is requesting ECS control.

```

Relinquishing ECS Control
Automatic ECS Timer: 30
1=Cancel, Keep ECS Control
2 Accept, Relinquish ECS Control
    
```

Figure 10.3 Another LOC is Requesting ECS Control

Once ECS control is passed to another LOC, the new user will assume the system AS IS. This means that the event that was set to be playing at the previous LOC and all output areas, does not change.

10.2.8 Exit ECS Control Menu

The user can exit the LOC ECS interface by pressing the left arrow. The user will be returned to the Idle screen.

10.2.9 Relinquish ECS Control

Relinquishing ECS control is accomplished by pressing the ECS Control Key from within Message Mode. A screen will be displayed (See Figure 10.4) to ensure the user wants to relinquish ECS control. ECS control will be automatically relinquished after a time-out on this screen. When ECS control is relinquished, the system stays in the Manual ECS State. ECS control can then be gained by another LOC or again at the same LOC.



NOTE: The ECS will relinquish control after 5 minutes of inactivity.

```

Relinquishing ECS Control
Automatic ECS Timer: 30
1=Cancel, Keep ECS Control
2 Accept, Relinquish ECS Control

```

Figure 10.4 Relinquish ECS Control

10.2.10 ECS Reset

An ECS reset is accomplished by pressing the RESET button from an LOC. The user will be prompted to reset either the fire system or emergency system. After an ECS reset, the LOC will automatically exit the LOC ECS interface.



NOTE: In order to perform an ECS reset, the display must be associated with the ECS-VCM, ECS-NVCM, or ECS-RVM. See Section 10.6.2.

10.3 ECS Super User

The ECS Super User access code profile function provides the ability to override all ECS control rules and gain ECS control. The ECS Super User is the highest priority user in the system. The ECS Super User has several features that differ from the normal user:

1. Any alarm activated while under ECS Super User control needs to be reset using an ECS Super User function enabled access code.
2. LOC priority and LOC lockout timer are ignored when passing ECS Control between ECS Super Users at LOC units. If another ECS Super User attempts to gain ECS control from an LOC, an ECS control request is presented to the ECS Super User at the LOC that currently has ECS control.

10.4 ECS Point Functionality

Any input point in the system can be configured as an ECS input. Alarm input types can be used to trigger predetermined ECS events for output areas. ECS-VCM, ECS-NVCM, or ECS-RVM points can be programmed to trigger Voice Aux events that can allow external audio to be played through the emergency system.

10.4.1 ECS Point Activations

ECS points can only activate outputs and be placed into an alarm state if the system is not in the Manual ECS State. ECS points have no priority and all are allowed to be activated. If the ECS point is a higher priority than the fire system, then the system will play the highest event message through all ECS mapped outputs.

For example: Emergency 1 Point Alarm is higher priority than Emergency 2 Point Alarm. Emergency 1 Point Alarm has message 1 mapped to through groups 1 and 2. Emergency 2 Point Alarm has message 2 playing through groups 2 and 3. If a point for Emergency 1 Point Alarm and a point for Emergency 2 Point Alarm are both active, the system will play message 1 through groups 1, 2, and 3.

Once Manual ECS State is active, points in alarm state switch to an active state. When the points are changed to the active state, they do not activate any system mapping or turn any outputs on. Any points that are activated while in Manual ECS are also placed into the active state and are not allowed to activate any mapping. The system Idle screen will show an ECS alarm for any points in the active state, and the detailed description of the point will show the point as active.

After an ECS Reset, any ECS points that are still active will again be put into alarm.

10.4.2 ECS-VCM, ECS-NVCM, and ECS-RVM Points

ECS-VCM, ECS-NVCM, and ECS-RVM modules contain two programmable input points. These also have the ability to be programmed as a trigger for bringing external audio into the system. These special point types are: Voice Aux ECS and Voice Aux Status. When activated, if the event has the highest event priority of all activated events, these points will activate the Aux In input to all outputs defined by the respective event program mapping.



NOTE: Background Music is only allowed to be mapped to circuit 8 of the ECS-DUAL50W amplifiers to ensure correct active supervision.

10.5 Amplifier Programming

10.5.1 Adding an Amplifier

To add a new amplifier to the system, follow these steps:

1. Login to the panel. The panel will automatically go to the Main Menu.
2. Select 7 for Panel Programming Menu.
3. Press 1 to enter Module Menu.
4. Press 2 to add a module.
5. From the next screen, add an ECS-AMP.

The screen will display “Adding module [#]...” for a few moments. You will be returned to the New Module Type screen where you can select another module(s) if desired.

You must save changes when you exit the Program Menu or the new module will not be added. For more information, see Section 8.2.2.

If you add a Module that has not been physically connected, the panel will go into trouble after it re-initializes (i.e., when you exit the Program Menu with changes accepted). When the new module is attached, the trouble will restore automatically the next time you power up the FACP.

10.5.2 Editing an Amplifier

When editing amplifiers, the features that may be edited are: module ID, module name, amplifier module, ECS-CE4 installed (Yes or No), and output voltage. To edit an existing module, do the following steps.

1. Login to the panel. The panel will automatically access the Main Menu.
2. Select 7 for Program Menu.
3. Press 1 to enter Module Menu.
4. Press 1 to edit a module.
5. Use the up or down arrow key to select the module you want to edit.
6. Press the right arrow key or ENTER to move to the next selection.

10.6 LOC Programming

Device Priority is a programmable option for each of the ECS devices:

- ECS-VCM
- ECS-NVCM
- ECS-RVM

Each device is assigned a priority level: Low, Normal, or High.

10.6.1 Adding an LOC

To add new ECS hardware modules to the system, follow these steps:

You must access the Main Menu to perform this task.

1. Login as the Installer using the Installer Code.
2. Select 7 for Program Menu.
3. Press 1 to enter Module Menu.
4. Press 2 to add a module.
5. From the next screen, add either an ECS-VCM or ECS-NVCM (max 1 per site) or ECS-RVM (max 15 per site).

The screen will display “Adding module [#]...” for a few moments. You will be returned to the <New Module Type> screen where you can select a name for the module if desired.

6. Add a compatible LCD Annunciator, if desired, to associate with each ECS-VCM, ECS-NVCM, or ECS-RVM.

You must save changes when you exit the Program Menu or the new module will not be added. For more information see Section 8.2.2.



NOTE: If you add a module to panel programming that has not been physically connected, the panel will go into trouble after it re-initializes (when you exit the Program Menu). When the new module is attached, the trouble will correct itself automatically the next time you power up the system.

10.6.2 Editing an LOC

Settings that are specific to an LOC are modified by editing the ECS-VCM, ECS-NVCM, or ECS-RVM expander module of the LOC. These options may include: number of switch expanders installed, microphone type, microphone gain, auxiliary gain, tone gain, message gain, keypad priority, port 1 used, port 2 used, select switch, panel, network paging and associated keypad.



NOTE: You can also use HFSS to edit an LOC.

To edit an existing module:

1. Login to the panel. The panel will automatically go to the Main Menu.
2. Select 7 for Program Menu.
3. Press 1 to enter Module Menu.
4. Press 1 to edit a module.
5. Use the up or down arrow key to select the module you want to edit.
6. Press the right arrow key or ENTER to move to the next selection.

LOC Priority

Each device is assigned a Priority level: Low, Normal, or High. This is modified by editing the LOC’s ECS-VCM, ECS-NVCM, or ECS-RVM module. By default, the ECS-VCM and ECS-NVCM has a high LOC priority. The ECS-RVM is defaulted to normal LOC priority.

LOC Association

To create an LOC, you must associate an annunciator to an ECS-VCM, ECS-NVCM, or ECS-RVM.

To do this, edit the ECS-VCM, ECS-NVCM, or ECS-RVM module and select the correct annunciator for the associated device.

During JumpStart, the ECS-VCM or ECS-NVCM is automatically associated with the internal annunciator. To associate other LOC units in the system, you must perform it in programming.

10.7 Using the Microphone

10.7.1 Microphone Functionality

Each microphone in the system is capable of providing convenience, fire or emergency paging. A convenience or fire page can be made anytime the Emergency System does have System Control (see Section 9.4.1). When the Emergency System has been activated and has System Control, the user must gain ECS Control to do an emergency page.

The microphones are housed within the ECS-Series panel enclosure and the ECS-LOC/ECS-RPU cabinets. A maximum of eight microphones can be installed in the system.

10.7.2 Custom ECS Event

This event is activated by gaining ECS control at a LOC and using the microphone without any ECS event already active in the Manual ECS State. In this case, the Mic-Triggered ECS Alarm mapping and General ECS Alarm mapping will be activated and stay activated until a different ECS event is activated at the LOC or the user resets the Emergency Communication System.

10.7.3 Fire Page

A fire page can only occur when any of the following events occur.

- Only the Fire System is active.
- Both Fire and the Emergency Systems are active and the highest priority active fire event is programmed to be of higher priority than the highest priority active emergency event.
- Only the Fire System is active, the user has gained ECS control, and custom ECS event is a lower priority than the fire alarm.



NOTE: If Fire and Emergency Systems are active and the Emergency System is of a higher priority, a fire page is NOT allowed. An LOC must gain ECS Control in order to do any live voice.

10.7.4 Emergency Page

An emergency page can occur when:

- Only the Emergency System is active and the user has gained ECS Control.
- Both Fire and the Emergency Systems are active and the highest priority active emergency event is programmed to be of higher priority than the highest priority active fire event and the user has gained ECS Control.
- Only fire system is active, the Emergency LOC Alarm priority is higher than the active fire system event and the user has gained ECS Control. This will trigger the ECS system and enable mapping for 'Mic Triggered ECS Alarm' and 'General ECS Alarm'.

10.7.5 Paging


If there are no active emergency or fire system events, the microphone at an LOC can be used for paging by following these steps:

1. Push the PTT (push-to-talk) button on the microphone.
2. Use the Select Keys on the LOC to toggle the output areas to page to with the microphone (illuminates the green LEDs).



NOTE: The Ready to Talk LED will illuminate after an output area has been activated.


3. Speak into the microphone.
4. Release the PTT button when finished.

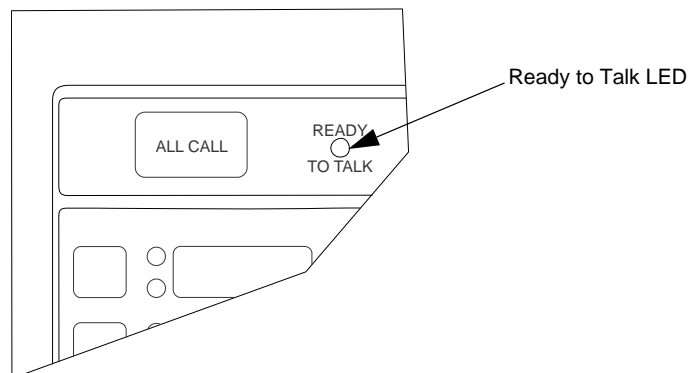

10.8 Recording Custom Messages

The ECS-VCM or ECS-EMG keypad comes with 15 recordable message slots. Messages 1-15 can be recorded from the microphone, Aux Input, or by using the Message Manager utility of HFSS. All messages can be a maximum of one minute.

When in the record mode the ECS-VCM or ECS-EMG switches will function as follows:

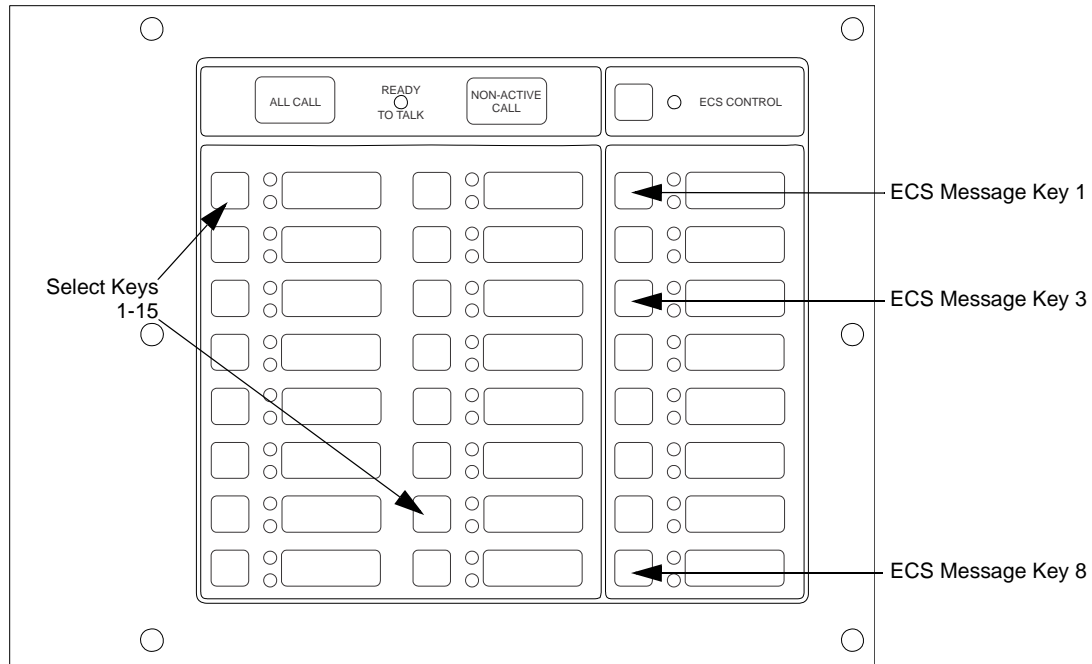

| Key | Function |
|-------------------|---|
| ECS Message Key 1 | Select message slot to record |
| ECS Message Key 3 | Start and stop recording from Aux Audio Input |
| ECS Message Key 8 | Erase user message 1-15 |
| Select Keys 1-15 | Message storage lot 1-15 |

While in the Local Record mode, select keys 1-15 will be used to reference message slots 1-15. The associated green Select key will indicate that a message is currently programmed in the corresponding slot. When there is no message recorded (or the message is erased), the associated green Select key LED will be off. While recording a particular message, the red Select key will turn on until recording is completed. The Select key 1-15 will be used to playback a recorded message or to select a message slot to record to or erase.

When in the Local Record mode, the ECS-VCM or ECS-EMG LEDs will function as follows:

| Switch LED | Active LED Status | Action |
|-------------------------------|-------------------|---|
| Select key 1-15 Green LED | On | Message is currently programmed in this slot |
| Select key 1-15 Red LED | On | Message recording is in progress |
| Select key 1-15 Green/Red LED | Off/Off | Message slot is empty |
| Select key 1-15 Red LED | Flashing | Message is being played back or message is selected for recording |

Table 10.1 LED Functions During Programming

10.8.1 Recording Messages 1-15 Using Aux Audio Input

Recording messages from the Aux Audio Input enables you to load customized, pre-recorded messages into an ECS message location.

Follow these steps to input user message using Aux Audio Input.

1. Wire a speaker cable with 1/8" mini plug to Aux AUDIO GND and IN terminals. See Figure 10.5 below.

2. Plug the mini plug into the Line Out/Headphone jack on a PC or Laptop.

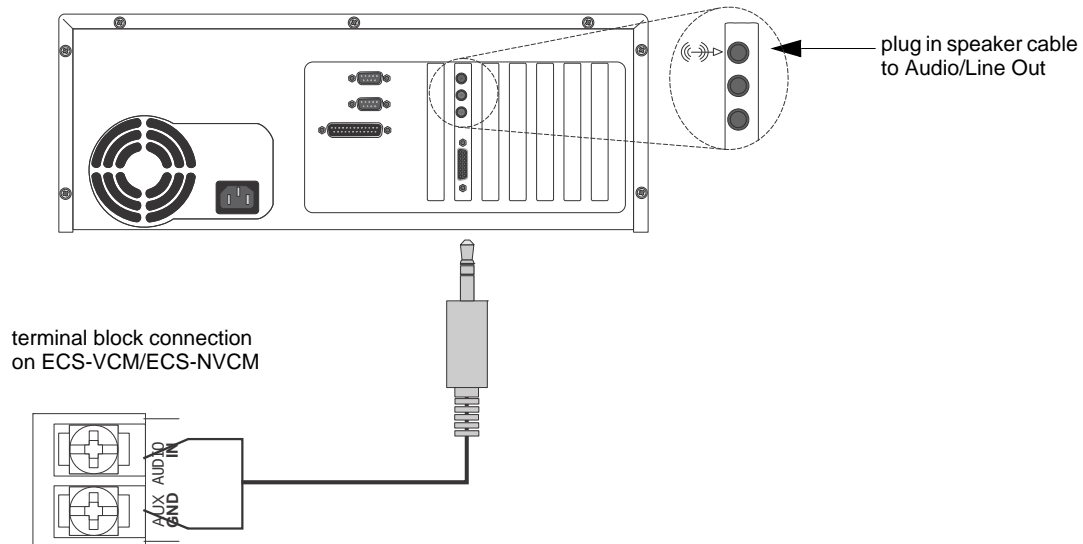


Figure 10.5 AUX Audio Connection for Recording

3. Enter programming mode at the main control panel.
4. Select option 8 for System Options.
5. Select option 1 VCM Maintenance.
6. Select option 2 Local Recording.



NOTE: The keypad will light the green Select Key LED for message slots that are occupied. If a message is already stored in the desired slot, then you must erase the message first.

7. Select the amplifier and circuit for the audio to play through during programming. A user would generally pick the audio circuit that is in closest proximity to them.
8. Press ECS Message key 1 to enter the message slot selection mode. Then, press the Select key 1-15 that corresponds to the message slot to which you want to record. The associated Select key red LED will begin flashing, indicating that the message slot is ready for recording.
9. Simultaneously press ECS Message key 3 and start playing the audio source on the PC or laptop.
10. When the audio file from the PC is finished playing, press ECS Message key 3 again to stop the recording. The Select key green LED will turn on.
11. To playback the recorded message, press the Select key 1-15 that was just recorded.

Recording with Aux Audio Input Example

The user wants to record into memory slot 2 via the Aux Audio Input channel.

Upon entering the Local Recording mode via the keypad menu, the keypad will light the green LEDs of Select keys 1-15 for each occupied message slot.

If a message already exists in message slot 2, it must first be erased. Press ECS Message key 8, then press Select key 2, (refer to Section 10.8.3). When the message has been erased, the Select key 2's green LED will turn off.

To record a message, press ECS Message key 1, then press Select key 2 (this will use message slot 2 for the recording). Select key 2's red LED will begin flashing.

Press ECS Message key 3, while simultaneously pressing play on the PC to start recording the Aux Audio Input. When the PC message is done, press ECS Message key 3 to stop recording. Select key 2's red LED will stay on until processing is completed. Select key 2's green LED comes on after the recording is completed.

Pressing Select key 2 will start a playback of the recorded message.

10.8.2 Recording Messages 1-15 Using the Microphone

Messages can be recorded into the ECS system by using the onboard microphone.

Follow these steps to use the microphone to record your message:

1. Enter programming mode at main control panel.
2. Select option 8 Voice Options.
3. Select 1 for VCM Maintenance.
4. Select option 2 Local Recording.

5. Select the amplifier and circuit for the audio to play through during programming. A user would generally pick the audio circuit that is in closest proximity to them.



NOTE: The keypad will light the green Select key LED for message slots that are occupied. If a message is already stored in the desired slot, then you must erase the message first. (Refer to Section 10.8.3.)

6. Press ECS Message key 1 to enter the message slot selection mode. Then, press the Select key 1-15 that corresponds to the message slot that you wish to record. The associated Select key red LED will begin flashing, indicating that the message slot is ready for recording.
7. Press the PTT (push-to-talk) button on the microphone and speak your message.
8. Release the PTT button on the microphone to save your message. The Select key's green LED for this location will turn on.
9. To playback the recorded message, press the Select key 1-15 that was just recorded.
10. If you are not satisfied with the recorded message, erase it (see Section 10.8.3) and then repeat steps 1 through 7.

Recording with Microphone Example

The User wants to record a message to message slot 5 via the microphone.

Upon entering the Local Recording mode via the keypad menu, the Select key's green LEDs will light for 1-15 for each occupied message slot.

If a message already exists in message slot 5, it must first be erased. Press ECS Message key 8, then press Select key 5, (Refer to Section 10.8.3). When the message has been erased, Select key 5's green LED will turn off.

To record a message, press ECS Message Key 1, press Select key 5 (this will use message slot 5 for the recording). Select key 5's red LED will begin flashing.

Press the push-to-talk button on the microphone and speak your message. Release the PTT button to save your message. Select key 5's red LED stays on until processing is completed. Select key 5's green LED comes on after the recording is completed.

Pressing Select key 5 will start a playback of the recorded message.

10.8.3 Erasing User Messages

To erase the message stored in switch 1-15 memory location follow these steps:

1. Enter programming mode at main control panel.
2. Select option 8 Voice Options.
3. Select option 1 VCM Maintenance.
4. Select option 2 Local Recording. Once in this mode, the keypad will light all the green LEDs for switches 1-15 indicating which message slots are occupied.
5. Select the amplifier and circuit for the audio to play through during programming. A user would generally pick the audio circuit that is in closest proximity to them.
6. Press ECS Message Key 8 on the keypad, press the Select key 1-15 that you wish to erase. The Select key's red LED will stay on until the erase is done. When erased, the Select key's green LED will turn off.

10.8.4 Using HFSS Voice Message Load Software

The HFSS Voice Message Load Software is a software support utility that is used to download recorded messages (in .ske format stored on your PC hard drive) to the various message locations of the ECS Series keypad. Messages can be uploaded from the ECS-VCM or ECS-NVCM, stored, and used again in similar installations.

To read/write .ske formatted messages to and from the main panel, follow these steps:

1. Make sure that panel is in Normal mode.

2. Connect the PC to the USB port on the FACP using a standard USB cable. The ECS-NVCM will use the USB on the FACP (See Figure 10.6 below). The ECS-VCM will use the USB port on the ECS-VCM.

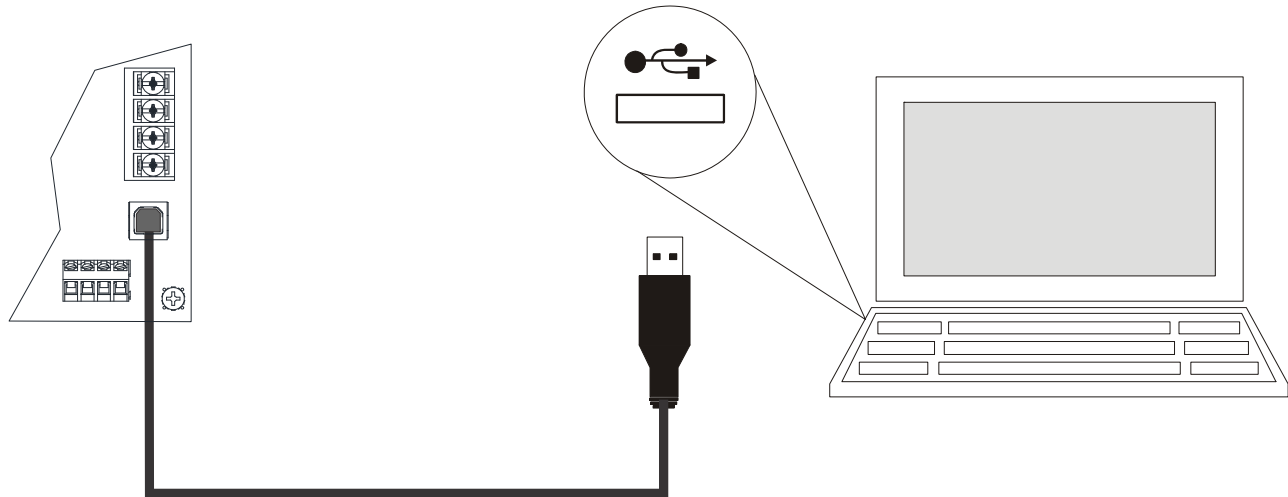


Figure 10.6 USB Cable Connections

3. Run the Voice Message Load software.
4. Select “Read from Panel” to read a message and store onto your hard drive, or “Write to Panel” to transfer a .SKE formatted message to the panel.
5. Select the appropriate message location you wish to read/write.
6. Enter the file name you want to transfer (Press Browse to display a list of files.)
7. Press Start to start the transfer.

10.9 Network Paging

Network paging allows live voice paging between panels across the network. The ECS-NVCM, Network Voice Control Module, is needed for network paging. For more information, see the *ECS Series installation manual*.

The network paging source is the panel in the network from which the microphone paging originates. Only one panel in the network can be the source panel at a time.

A network paging destination panel is a panel in the network that is receiving the network paging. Many panels can be selected as a destination panel for the network paging. Network paging functions as an All Call on the destination panel(s) - all speaker circuits will be activated with the network paging audio on a destination panel. The following need to be considered:

10.9.1 Priority

1. Local microphone has a higher priority than network paging (a user can page from their local panel even if the local panel is currently receiving a network voice page).
2. Network Paging is higher priority than alarm and alert messages/tones.
3. Network paging uses a VBus channel. In a dual channel system, network paging will use either VBus 1 or VBus 2. If both buses are in use, network paging will overtake one of them.

10.9.2 Configuration

1. The ECS-NVCM Select Switches need to be programmed for network paging.
 - Program the switches to select one or more panels as destination panels.
 - Each switch can only be programmed for either output group activation or network paging activation.
2. To use network paging: cue the microphone and press the Select switch(es) that correspond to the panel(s) desired to receive network paging. Only one panel can source network paging at a time. The first panel to activate network paging is the source until that panel discontinues use of network paging.
3. The panel that is the Network Paging source will continue to play any alarms that are active as long as the alarm circuits aren't outputting the microphone page.

Section 11: Reporting

This section lists receivers that are compatible with this control panel, and the reporting codes sent by the control panel for SIA and Contact ID formats.

11.1 Receivers Compatible with the Control Panel

Table 11.1 lists receivers compatible with the control panel.

| Manufacturer | Model | Format |
|----------------------------|--------------------------------|---|
| Silent Knight by Honeywell | Model 9800 | SIA and Contact ID |
| | Model 9000 (SIA formats) | SIA |
| Honeywell Security | AlarmNet 7810-ir | IP and Cellular Receiver, Contact ID only |
| Ademco | MX8000 | SIA and Contact ID |
| Ademco | Model 685 (Contact ID) | Contact ID |
| Sur-Gard | SG-MLR2-DG (V. 1.64 or higher) | SIA and Contact ID |
| Osborne Hoffman | Quickalert | SIA and Contact ID |

Table 11.1 Receivers Compatible with the Control Panel

| Event Description | SIA Reporting Format | | | | Contact ID Reporting Format | | | |
|--|---|-----------------|-----------|------------|-----------------------------|------------|------------|-----------|
| | Module ID # (If Any) | SIA Event Codes | Parameter | SIA | Qualifier | Event Code | Group # | Contact # |
| System Events | System Events are reported when either "Report by Point" or Report by Zone is selected | | | | | | | |
| AC power low trouble | | AT | 0 | ATNN000000 | 1 | 301 | 00 | 000 |
| AC power low trouble restore | | AR | 0 | ARNN000000 | 3 | 301 | 00 | 000 |
| Auto dialer test communications trouble line 1 | | YC | 1 | YCNN000001 | 1 | 350 | Receiver # | 001 |
| Auto dialer test communications trouble line 1 restore | | YK | 1 | YKNN000001 | 3 | 350 | Receiver # | 001 |
| Auto dialer test communications trouble line 2 | | YC | 2 | YCNN000002 | 1 | 350 | Receiver # | 002 |
| Auto dialer test communications trouble line 2 restore | | YK | 2 | YKNN000002 | 3 | 350 | Receiver # | 002 |
| Automatic test normal | | RP | 0 | RPNN000000 | 1 | 602 | 00 | 000 |
| Automatic test off normal | | RY | 0 | RYNN000000 | 1 | 608 | 00 | 000 |
| Battery voltage trouble | | YT | Exp. ID | YTNNXX0000 | 1 | 302 | Exp. ID | 000 |
| Battery voltage trouble restore | | YR | Exp. ID | YRNNXX0000 | 3 | 302 | Exp. ID | 000 |
| Date changed event | | JD | 0 | JDNN000000 | 1 | 625 | 00 | 000 |
| ECS Reset | | OR | 1 | ORNN000001 | 1 | 401 | 00 | 001 |
| Emergency System Overridden | | QS | 0 | QSNN000000 | 1 | 244 | 00 | 000 |
| Emergency System Overridden Restore | | QR | 0 | QRNN000000 | 3 | 244 | 00 | 000 |
| Fire drill has begun | | FI | 0 | FINN000000 | 1 | 604 | 00 | 000 |
| Fire drill has ended | | FK | 0 | FKNN000000 | 3 | 604 | 00 | 000 |
| F1 Mapping Inhibited | | FT | 2001 | FTNN002001 | 1 | 570 | 00 | 001 |
| F1 Mapping Inhibited Restoral | | FJ | 2001 | FJNN002001 | 3 | 570 | 00 | 001 |
| F2 Mapping Inhibited | | FT | 2002 | FTNN002002 | 1 | 570 | 00 | 002 |
| F2 Mapping Inhibited Restoral | | FJ | 2002 | FJNN002002 | 3 | 570 | 00 | 002 |
| F3 Mapping Inhibited | | FT | 2003 | FTNN002003 | 1 | 570 | 00 | 003 |
| F3 Mapping Inhibited Restoral | | FJ | 2003 | FJNN002003 | 3 | 570 | 00 | 003 |
| F4 Mapping Inhibited | | FT | 2004 | FTNN002004 | 1 | 570 | 00 | 004 |

Table 11.2 Report Formats Table

| Event Description | SIA Reporting Format | | | | Contact ID Reporting Format | | | |
|--|----------------------|-----------------|----------------|------------|-----------------------------|------------|----------|-----------|
| | Module ID # (If Any) | SIA Event Codes | Parameter | SIA | Qualifier | Event Code | Group # | Contact # |
| F4 Mapping Inhibited Restoral | | FJ | 2004 | FJNN002004 | 3 | 570 | 00 | 004 |
| Fire Reset | | OR | 0 | ORNN000000 | 1 | 401 | 00 | 000 |
| Fire System Overridden | | FS | 0 | FSNN000000 | 1 | 245 | 00 | 000 |
| Fire System Override Restore | | FR | 0 | FRNN000000 | 3 | 245 | 00 | 000 |
| Ground fault condition trouble | | YP | Exp. ID | YPNNXX0000 | 1 | 310 | Exp. ID | 000 |
| Ground fault condition trouble restore | | YQ | Exp. ID | YQNNXX0000 | 3 | 310 | Exp. ID | 000 |
| Initial power up | | RR | 0 | RRNN000000 | 1 | 305 | 00 | 000 |
| Local programming aborted or ended with errors | | LU | 0 | LUNN000000 | 1 | 628 | 00 | 000 |
| Local programming begin | | LB | 0 | LBNN000000 | 1 | 627 | 00 | 000 |
| Local programming ended normally | | LS | 0 | LSNN000000 | 1 | 628 | 00 | 000 |
| Network node trouble (panel missing) | | EM | Panel ID | EMNNNN0000 | 1 | 334 | Panel ID | 000 |
| Network node trouble restore (panel no longer missing) | | EN | Panel ID | ENNNNN0000 | 3 | 334 | Panel ID | 000 |
| OPG Inhibit Trouble | | FT | Group # + 1000 | FTNN001GGG | 1 | 320 | 00 | Group # |
| OPG Inhibit Trouble Restore | | FJ | Group # + 1000 | FJNN001GGG | 3 | 320 | 00 | Group # |
| OPG Inhibit of Releasing Group | | SS | Group # + 1000 | SSNN001GGG | 1 | 203 | 00 | Group # |
| OPG Inhibit of Releasing Group Restore | | SR | Group # + 1000 | SRNN001GGG | 3 | 203 | 00 | Group # |
| Phone line 1 trouble detected | | LT | 1 | LTNN000001 | 1 | 351 | 00 | 000 |
| Phone line 1 trouble restore | | LR | 1 | LRNN000001 | 3 | 351 | 00 | 000 |
| Phone line 2 trouble detected | | LT | 2 | LTNN000002 | 1 | 352 | 00 | 000 |
| Phone line 2 trouble restore | | LR | 2 | LRNN000002 | 3 | 352 | 00 | 000 |
| Printer is off-line trouble | | VZ | Exp. ID | VZNNXX0000 | 1 | 336 | Exp. ID | 000 |
| Printer is off-line trouble restore | | VY | Exp. ID | VYNNXX0000 | 3 | 336 | Exp. ID | 000 |
| Printer is out of paper trouble | | VO | Exp. ID | VONNXX0000 | 1 | 335 | Exp. ID | 000 |
| Printer is out of paper trouble restore | | VI | Exp. ID | VINNXX0000 | 3 | 335 | Exp. ID | 000 |
| Releasing Notif/Control Circuit Disabled | pi Exp. ID | SS | Point # | SSNNXXPPPP | 1 | 203 | Exp. ID | Point # |
| Releasing Notif/Control Circuit enabled | pi Exp. ID | SR | Point # | SRNNXXPPPP | 3 | 203 | Exp. ID | Point # |
| Remote programming aborted or ended with errors | | RU | 0 | RUNN000000 | 1 | 413 | 00 | 000 |
| Remote programming ended normally | | RS | 0 | RSNN000000 | 1 | 412 | 00 | 000 |
| Repeater ground fault trouble | | EM | 0103 | EMNN000103 | 1 | 334 | Panel ID | 103 |
| Repeater ground fault trouble restore | | EN | 0103 | ENNN000103 | 3 | 334 | Panel ID | 103 |
| Repeater missing trouble | | EM | 0100 | EMNN000100 | 1 | 334 | Panel ID | 100 |
| Repeater missing trouble restore | | EN | 0100 | ENNN000100 | 3 | 334 | Panel ID | 100 |
| Repeater Rx1 communication trouble | | EM | 0101 | EMNN000101 | 1 | 334 | Panel ID | 101 |
| Repeater Rx1 communication trouble restore | | EN | 0101 | ENNN000101 | 3 | 334 | Panel ID | 101 |
| Repeater Rx2 communication trouble | | EM | 0102 | EMNN000102 | 1 | 334 | Panel ID | 102 |
| Repeater Rx2 communication trouble restore | | EN | 0102 | ENNN000102 | 3 | 334 | Panel ID | 102 |

Table 11.2 Report Formats Table (Continued)

| Event Description | SIA Reporting Format | | | | Contact ID Reporting Format | | | |
|--|--|-----------------|---------------|------------|-----------------------------|------------|---------|------------|
| | Module ID # (If Any) | SIA Event Codes | Parameter | SIA | Qualifier | Event Code | Group # | Contact # |
| SBUS Class A supervision lost | | ET | Exp. ID | ETNXX0000 | 1 | 333 | Exp. ID | 000 |
| SBUS Class A supervision restore | | ER | Exp. ID | ERNXX0000 | 3 | 333 | Exp. ID | 000 |
| SBUS expander trouble | | ET | Exp. ID | ETNXX0000 | 1 | 333 | Exp. ID | 000 |
| SBUS expander trouble restore | | ER | Exp. ID | ERNXX0000 | 3 | 333 | Exp. ID | 000 |
| SLC class A supervision trouble | | ET | Exp. ID | ETNXX0000 | 1 | 331 | Exp. ID | 000 |
| SLC class A supervision trouble restore | | ER | Exp. ID | ERNXX0000 | 3 | 331 | Exp. ID | 000 |
| SLC programming ended, system active | | TE | 0 | TENN000000 | 3 | 607 | 00 | 000 |
| SLC programming started, system shut down | | TS | 0 | TSNN000000 | 1 | 607 | 00 | 000 |
| SLC short circuit trouble | | ET | Exp. ID | ETNXX0000 | 1 | 332 | Exp. ID | 000 |
| SLC short circuit trouble restore | | ER | Exp. ID | ERNXX0000 | 3 | 332 | Exp. ID | 000 |
| Time changed event | | JT | 0 | JTNN000000 | 1 | 625 | 00 | 000 |
| Unable to report to account trouble | | RT | Receiver # | RTNN00RRRR | 1 | 354 | 00 | Receiver # |
| Unable to report to account trouble restore | | YK | Receiver # | YKNN00RRRR | 3 | 354 | 00 | Receiver # |
| User access code changed | | JV | 0 | JVNN000000 | 1 | 602 | 00 | 000 |
| User initiated manual dialer test | | RX | 0 | RXNN000000 | 1 | 601 | 00 | 000 |
| Walk test begin | | TS | 0 | TSNN000000 | 1 | 607 | 00 | 000 |
| Walk test end | | TE | 0 | TENN000000 | 3 | 607 | 00 | 000 |
| Zone Events | Zone events are reported only when "Report by Zone" is selected | | | | | | | |
| Auxiliary power trouble | | FT | 0000 | FTNN000000 | 1 | 320 | 00 | 000 |
| Auxiliary power trouble restore | | FJ | 0000 | FJNN000000 | 3 | 320 | 00 | 000 |
| CO Detector Alarm | | GA | Zone # | GANN000ZZZ | 1 | 162 | 00 | Zone # |
| CO Detector Alarm Restore | | GH | Zone # | GHNN000ZZZ | 3 | 162 | 00 | Zone # |
| CO Detector Supervisory Alarm | | GS | Zone # | GSNN000ZZZ | 1 | 200 | 00 | Zone # |
| CO Detector Supervisory Alarm Restore | | GR | Zone # | GRNN000ZZZ | 3 | 200 | 00 | Zone # |
| CO Detector Trouble | | GT | Zone # | GTNN000ZZZ | 1 | 373 | 00 | Zone # |
| CO Detector Trouble Restore | | GJ | Zone # | GJNN000ZZZ | 3 | 373 | 00 | Zone # |
| Detector Alarm | | FA | Zone # | FANN000ZZZ | 1 | 110 | 00 | Zone # |
| Detector Alarm Restore | | FH | Zone # | FHNN000ZZZ | 3 | 110 | 00 | Zone # |
| Detector trouble | | FT | Zone # | FTNN000ZZZ | 1 | 373 | 00 | Zone # |
| Detector trouble restore | | FJ | Zone # | FJNN000ZZZ | 3 | 373 | 00 | Zone # |
| ECS Switch Trouble | | QT | 0 | QTNN000000 | 1 | 242 | 00 | 000 |
| ECS Switch Trouble Restore | | QJ | 0 | QJNN000000 | 3 | 242 | 00 | 000 |
| ECS Supervisory/Tamper Alarm | | QS | 0 | QSNN000000 | 1 | 241 | 00 | 000 |
| ECS Supervisory/Tamper Alarm Restore | | QR | 0 | QRNN000000 | 3 | 241 | 00 | 000 |
| ECS Output Group Trouble | | QT | Group # +1000 | QTNN001GGG | 1 | 320 | 00 | Group # |
| ECS Output Group Trouble Restore | | QJ | Group # +1000 | QJNN001GGG | 3 | 320 | 00 | Group # |
| External Reset/Silence/Fire Drill switch trouble | | UT | 0000 | UTNN000000 | 1 | 373 | 00 | 000 |
| External Reset/Silence/Fire Drill switch trouble restore | | UJ | 0000 | UJNN000000 | 3 | 373 | 00 | 000 |

Table 11.2 Report Formats Table (Continued)

| Event Description | SIA Reporting Format | | | | Contact ID Reporting Format | | | |
|--|----------------------|-----------------|----------------|------------|-----------------------------|-------------------|---------|-----------|
| | Module ID # (If Any) | SIA Event Codes | Parameter | SIA | Qualifier | Event Code | Group # | Contact # |
| LOC Mic Activated ECS Alarm | | QA | 0 | QANN000000 | 1 | 220 | 00 | 000 |
| LOC Mic Activated ECS Alarm Restore | | QH | 0 | QHNN000000 | 3 | 220 | 00 | 000 |
| LOC/Point ECS # Alarm | | QA | Emergency # | QANN0E0000 | 1 | 220 + Emergency # | 00 | 000 |
| LOC/Point ECS # Alarm Restore | | QH | Emergency # | QHNN0E0000 | 3 | 220 + Emergency # | 00 | 000 |
| Manual pull switch alarm | | FA | Zone # | FANN00ZZZ | 1 | 115 | 00 | Zone # |
| Manual pull switch alarm restore | | FH | Zone # | FHNN00ZZZ | 3 | 115 | 00 | Zone # |
| Manual pull switch trouble | | FT | Zone # | FTNN00ZZZ | 1 | 373 | 00 | Zone # |
| Manual pull switch trouble restore | | FJ | Zone # | FJNN00ZZZ | 3 | 373 | 00 | Zone # |
| Notification output trouble | | FT | Group # + 1000 | FTNN001GGG | 1 | 320 | 00 | Group # |
| Notification output trouble restore | | FJ | Group # + 1000 | FJNN001GGG | 3 | 320 | 00 | Group # |
| Positive Alarm Sequence acknowledge switch trouble | | FT | Zone # | FTNN00ZZZ | 1 | 373 | 00 | Zone # |
| Positive Alarm Sequence acknowledge switch trouble restore | | FJ | Zone # | FJNN00ZZZ | 3 | 373 | 00 | Zone # |
| SLC LED Module trouble | | ET | 0000 | ETNN000000 | 1 | 333 | 00 | 000 |
| SLC LED Module trouble restore | | ER | 0000 | ERNN000000 | 3 | 333 | 00 | 000 |
| Status Point Types Trouble | | UT | 0 | UTNN000000 | 1 | 379 | 00 | 000 |
| Status Point Types Trouble Restore | | UJ | 0 | UJNN000000 | 3 | 379 | 00 | 000 |
| Supervisory Detector Alarm | | FS | Zone # | FSNN00ZZZ | 1 | 200 | 00 | Zone # |
| Supervisory Detector Alarm Restore | | FR | Zone # | FRNN00ZZZ | 3 | 200 | 00 | Zone # |
| Supervisory/Tamper Alarm | | FS | Zone # | FSNN00ZZZ | 1 | 200 | 00 | Zone # |
| Supervisory/Tamper alarm condition restore | | FR | Zone # | FRNN00ZZZ | 3 | 200 | 00 | Zone # |
| Supervisory/Tamper switch trouble | | FT | Zone # | FTNN00ZZZ | 1 | 373 | 00 | Zone # |
| Supervisory/Tamper switch trouble restore | | FJ | Zone # | FJNN00ZZZ | 3 | 373 | 00 | Zone # |
| System-based AUX1 switch alarm | | UA | 1000 | UANN001000 | 1 | 140 | 01 | 000 |
| System-based AUX1 switch alarm restore | | UH | 1000 | UHNN001000 | 3 | 140 | 01 | 000 |
| System-based AUX1 switch trouble | | UT | 1000 | UTNN001000 | 1 | 373 | 01 | 000 |
| System-based AUX1 switch trouble restore | | UJ | 1000 | UJNN001000 | 3 | 373 | 01 | 000 |
| System-based AUX2 switch alarm | | UA | 2000 | UANN002000 | 1 | 140 | 02 | 000 |
| System-based AUX2 switch alarm restore | | UH | 2000 | UHNN002000 | 3 | 140 | 02 | 000 |
| System-based AUX2 switch trouble | | UT | 2000 | UTNN002000 | 1 | 373 | 02 | 000 |
| System-based AUX2 switch trouble restore | | UJ | 2000 | UJNN002000 | 3 | 373 | 02 | 000 |
| Voice Aux ECS 1 Alarm | | UA | 3 | UANN003000 | 1 | 171 | 00 | 000 |
| Voice Aux ECS 1 Alarm Restore | | UH | 3 | UHNN003000 | 3 | 171 | 00 | 000 |
| Voice Aux ECS 2 Alarm | | UA | 4 | UANN004000 | 1 | 172 | 00 | 000 |
| Voice Aux ECS 2 Alarm Restore | | UH | 4 | UHNN004000 | 3 | 172 | 00 | 000 |
| Voice Aux ECS 3 Alarm | | UA | 5 | UANN005000 | 1 | 173 | 00 | 000 |
| Voice Aux ECS 3 Alarm Restore | | UH | 5 | UHNN005000 | 3 | 173 | 00 | 000 |
| Voice Aux ECS 4 Alarm | | UA | 6 | UANN006000 | 1 | 174 | 00 | 000 |

Table 11.2 Report Formats Table (Continued)

| Event Description | SIA Reporting Format | | | | Contact ID Reporting Format | | | |
|---|--|-----------------|---------------|--|-----------------------------|------------|---------|-----------|
| | Module ID # (If Any) | SIA Event Codes | Parameter | SIA Fixed Length Format NN - panel ID XX- SBUS ID ZZZ- Zone # PPPP- Point # GGG- Group # E- Emergency # RRRR-Receiver # | Qualifier | Event Code | Group # | Contact # |
| Voice Aux ECS 4 Alarm Restore | | UH | 6 | UHNN006000 | 3 | 174 | 00 | 000 |
| Water flow switch alarm | | SA | Zone # | SANN00ZZZ | 1 | 113 | 00 | Zone # |
| Water flow switch alarm Restore | | SH | Zone # | SHNN00ZZZ | 3 | 113 | 00 | Zone # |
| Water flow switch trouble | | ST | Zone # | STNN00ZZZ | 1 | 373 | 00 | Zone # |
| Water flow switch trouble Restore | | SJ | Zone # | SJNN00ZZZ | 3 | 373 | 00 | Zone # |
| Zone-based AUX1 switch alarm | | UA | Zone # + 1000 | UANN001ZZZ | 1 | 140 | 01 | Zone # |
| Zone-based AUX1 switch alarm restore | | UH | Zone # + 1000 | UHNN001ZZZ | 3 | 140 | 01 | Zone # |
| Zone-based AUX1 switch trouble | | UT | Zone # + 1000 | UTNN001ZZZ | 1 | 373 | 01 | Zone # |
| Zone-based AUX1 switch trouble restore | | UJ | Zone # + 1000 | UJNN001ZZZ | 3 | 373 | 01 | Zone # |
| Zone-based AUX2 switch alarm | | UA | Zone # + 2000 | UANN002ZZZ | 1 | 140 | 02 | Zone # |
| Zone-based AUX2 switch alarm restore | | UH | Zone # + 2000 | UHNN002ZZZ | 3 | 140 | 02 | Zone # |
| Zone-based AUX2 switch trouble | | UT | Zone # + 2000 | UTNN002ZZZ | 1 | 373 | 02 | Zone # |
| Zone-based AUX2 switch trouble restore | | UJ | Zone # + 2000 | UJNN002ZZZ | 3 | 373 | 02 | Zone # |
| Point Events | For IDP/SK devices, sensors 1–159 are reported as Points 1–159, modules 1–159 are reported as Points 201–359. | | | | | | | |
| An unexpected SLC device has been detected | pi Exp. ID | XE | Point # | XENNXPPPP | 1 | 380 | Exp. ID | Point # |
| An unexpected SLC device has been removed | pi Exp. ID | XI | Point # | XINNXPPPP | 3 | 380 | Exp. ID | Point # |
| Auxiliary power disabled | pi Exp. ID | FB | Point # | FBNNXPPPP | 1 | 571 | Exp. ID | Point # |
| Auxiliary power enabled | pi Exp. ID | FU | Point # | FUNNXPPPP | 3 | 571 | Exp. ID | Point # |
| Auxiliary power Trouble | pi Exp. ID | FT | Point # | FTNNXPPPP | 1 | 320 | Exp. ID | Point # |
| Auxiliary power trouble restore | pi Exp. ID | FJ | Point # | FJNNXPPPP | 3 | 320 | Exp. ID | Point # |
| Background Music Switch is Trouble | pi Exp. ID | UT | Point # | UTNNXPPPP | 1 | 379 | Exp. ID | Point # |
| Background Music Switch is Trouble Restored | pi Exp. ID | UJ | Point # | UJNNXPPPP | 3 | 379 | Exp. ID | Point # |
| Background Music Switch is Disabled | pi Exp. ID | UB | Point # | UBNNXPPPP | 1 | 580 | Exp. ID | Point # |
| Background Music Switch is Enabled | pi Exp. ID | UU | Point # | UUNNXPPPP | 3 | 580 | Exp. ID | Point # |
| CO Detector Trouble | pi Exp. ID | GT | Point # | GTNNXPPPP | 1 | 373 | Exp. ID | Point # |
| CO Detector Trouble Restore | pi Exp. ID | GJ | Point # | GJNNXPPPP | 3 | 373 | Exp. ID | Point # |
| CO Detector Disabled | pi Exp. ID | GB | Point # | GBNNXPPPP | 1 | 571 | Exp. ID | Point # |
| CO Detector Enabled | pi Exp. ID | GU | Point # | GUNNXPPPP | 3 | 571 | Exp. ID | Point # |
| Detector Alarm | pi Exp. ID | FA | Point # | FANNXPPPP | 1 | 110 | Exp. ID | Point # |
| Detector Alarm restore | pi Exp. ID | FH | Point # | FHNNXPPPP | 3 | 110 | Exp. ID | Point # |
| Detector Disabled | pi Exp. ID | FB | Point # | FBNNXPPPP | 1 | 571 | Exp. ID | Point # |
| Detector Enabled | pi Exp. ID | FU | Point # | FUNNXPPPP | 3 | 571 | Exp. ID | Point # |
| Detector Trouble | pi Exp. ID | FT | Point # | FTNNXPPPP | 1 | 373 | Exp. ID | Point # |
| Detector Trouble restore | pi Exp. ID | FJ | Point # | FJNNXPPPP | 3 | 373 | Exp. ID | Point # |
| Detector CO Alarm | pi Exp. ID | GA | Point # | GANNXPPPP | 1 | 162 | Exp. ID | Point # |
| Detector CO Alarm Restore | pi Exp. ID | GH | Point # | GHNNXPPPP | 3 | 162 | Exp. ID | Point # |
| Detector CO Supervisory Alarm | pi Exp. ID | GS | Point # | GSNNXPPPP | 1 | 200 | Exp. ID | Point # |
| Detector CO Supervisory Alarm Restore | pi Exp. ID | GR | Point # | GRNNXPPPP | 3 | 200 | Exp. ID | Point # |

Table 11.2 Report Formats Table (Continued)

| Event Description | SIA Reporting Format | | | | Contact ID Reporting Format | | | |
|--|----------------------|-----------------|---|---|-----------------------------|-------------------|---------|-----------|
| | Module ID # (If Any) | SIA Event Codes | Parameter | Fixed Length Format NN - panel ID XX- SBUS ID ZZZ- Zone # PPPP- Point # GGG- Group # E- Emergency # RRRR-Receiver # | Qualifier | Event Code | Group # | Contact # |
| ECS Alarm # Point Alarm | pi Exp. ID | QA | (EPPP) E - Emergency # PPP - Point # | QANNXXEPPP | 1 | 220 + Emergency # | Exp. ID | Point # |
| ECS Alarm # Point Alarm Restore | pi Exp. ID | QH | (EPPP) E - Emergency # PPP - Point # | QHNNXXEPPP | 3 | 220 + Emergency # | Exp. ID | Point # |
| ECS Alarm # Point Trouble | pi Exp. ID | QT | Point # | QTNNXXPPPP | 1 | 242 | Exp. ID | Point # |
| ECS Alarm # Point Trouble Restore | pi Exp. ID | QJ | Point # | QJNNXXPPPP | 3 | 242 | Exp. ID | Point # |
| ECS Alarm # Point Disabled | pi Exp. ID | QB | Point # | QBNNXXPPPP | 1 | 243 | Exp. ID | Point # |
| ECS Alarm # Point Enabled | pi Exp. ID | QU | Point # | QUNNXXPPPP | 3 | 243 | Exp. ID | Point # |
| ECS Supervisory/Tamper Alarm | pi Exp. ID | QS | Point # | QSNNXXPPPP | 1 | 241 | Exp. ID | Point # |
| ECS Supervisory/Tamper Alarm Restore | pi Exp. ID | QR | Point # | QRNNXXPPPP | 3 | 241 | Exp. ID | Point # |
| ECS Supervisory/Tamper Trouble | pi Exp. ID | QT | Point # | QTNNXXPPPP | 1 | 242 | Exp. ID | Point # |
| ECS Supervisory/Tamper Trouble Restore | pi Exp. ID | QJ | Point # | QJNNXXPPPP | 3 | 242 | Exp. ID | Point # |
| ECS Supervisory/Tamper Disabled | pi Exp. ID | QB | Point # | QBNNXXPPPP | 1 | 243 | Exp. ID | Point # |
| ECS Supervisory/Tamper Enabled | pi Exp. ID | QU | Point # | QUNNXXPPPP | 3 | 243 | Exp. ID | Point # |
| ECS NAC Trouble | pi Exp. ID | QT | Point # | QTNNXXPPPP | 1 | 320 | Exp. ID | Point # |
| ECS NAC Trouble Restored | pi Exp. ID | QJ | Point # | QJNNXXPPPP | 3 | 320 | Exp. ID | Point # |
| ECS Control Circuit Trouble | pi Exp. ID | QT | Point # | QTNNXXPPPP | 1 | 320 | Exp. ID | Point # |
| ECS Control Circuit Trouble Restored | pi Exp. ID | QJ | Point # | QJNNXXPPPP | 3 | 320 | Exp. ID | Point # |
| ECS Relay Trouble | pi Exp. ID | QT | Point # | QTNNXXPPPP | 1 | 320 | Exp. ID | Point # |
| ECS Relay Trouble Restored | pi Exp. ID | QJ | Point # | QJNNXXPPPP | 3 | 320 | Exp. ID | Point # |
| ECS Notification Trouble | pi Exp. ID | QT | Point # | QTNNXXPPPP | 1 | 320 | Exp. ID | Point # |
| ECS Notification Trouble Restored | pi Exp. ID | QJ | Point # | QJNNXXPPPP | 3 | 320 | Exp. ID | Point # |
| External Reset/Silence/Fire Drill switch disabled | pi Exp. ID | UB | Point # | UBNNXXPPPP | 1 | 571 | Exp. ID | Point # |
| External Reset/Silence/Fire Drill switch enabled | pi Exp. ID | UU | Point # | UUNNXXPPPP | 3 | 571 | Exp. ID | Point # |
| External Reset/Silence/Fire Drill switch trouble | pi Exp. ID | UT | Point # | UTNNXXPPPP | 1 | 373 | Exp. ID | Point # |
| External Reset/Silence/Fire Drill switch trouble restore | pi Exp. ID | UJ | Point # | UJNNXXPPPP | 3 | 373 | Exp. ID | Point # |
| Interlock switch alarm (Water Release Zone) | pi Exp. ID | FA | Point # | FANNXXPPPP | 1 | 110 | Exp. ID | Point # |
| Interlock switch alarm restore (Water Release Zone) | pi Exp. ID | FH | Point # | FHNNXXPPPP | 3 | 110 | Exp. ID | Point # |
| Interlock switch disabled | pi Exp. ID | FB | Point # | FBNNXXPPPP | 1 | 571 | Exp. ID | Point # |
| Interlock switch enabled | pi Exp. ID | FU | Point # | FUNNXXPPPP | 3 | 571 | Exp. ID | Point # |
| Interlock switch trouble (Water Release Zone) | pi Exp. ID | FT | Point # | FTNNXXPPPP | 1 | 373 | Exp. ID | Point # |
| Interlock switch trouble restore (Water Release Zone) | pi Exp. ID | FJ | Point # | FJNNXXPPPP | 3 | 373 | Exp. ID | Point # |
| LOC Mic Activated ECS Alarm | pi Exp. ID | QA | 0 | QANNXX0000 | 1 | 220 | Exp. ID | 000 |
| LOC Mic Activated ECS Alarm Restore | pi Exp. ID | QH | 0 | QHNNXX0000 | 3 | 220 | Exp. ID | 000 |

Table 11.2 Report Formats Table (Continued)

| Event Description | SIA Reporting Format | | | | Contact ID Reporting Format | | | |
|--|----------------------|-----------|---|------------|-----------------------------|-------------------|---------|-----------|
| | SIA pi Modifier | | SIA | | Qualifier | Event Code | Group # | Contact # |
| Module ID # (If Any) | SIA Event Codes | Parameter | Fixed Length Format NN - panel ID XX- SBus ID ZZZ- Zone # PPPP- Point # GGG- Group # E- Emergency # RRRR-Receiver # | | | | | |
| LOC ECS # Alarm | pi Exp. ID | QA | Emergency # | QANNXXE000 | 1 | 220 + Emergency # | Exp. ID | 000 |
| LOC ECS # Alarm Restore | pi Exp. ID | QH | Emergency # | QHNNXXE000 | 3 | 220 + Emergency # | Exp. ID | 000 |
| Manual pull switch alarm | pi Exp. ID | FA | Point # | FANNXXPPPP | 1 | 115 | Exp. ID | Point # |
| Manual pull switch alarm restore | pi Exp. ID | FH | Point # | FHNNXXPPPP | 3 | 115 | Exp. ID | Point # |
| Manual pull switch disabled | pi Exp. ID | FB | Point # | FBNNXXPPPP | 1 | 571 | Exp. ID | Point # |
| Manual pull switch enabled | pi Exp. ID | FU | Point # | FUNNXXPPPP | 3 | 571 | Exp. ID | Point # |
| Manual pull switch trouble | pi Exp. ID | FT | Point # | FTNNXXPPPP | 1 | 373 | Exp. ID | Point # |
| Manual pull switch trouble restore | pi Exp. ID | FJ | Point # | FJNNXXPPPP | 3 | 373 | Exp. ID | Point # |
| Manual release switch alarm (Water Release Zone) | pi Exp. ID | FA | Point # | FANNXXPPPP | 1 | 110 | Exp. ID | Point # |
| Manual release switch alarm restore (Water Release Zone) | pi Exp. ID | FH | Point # | FHNNXXPPPP | 3 | 110 | Exp. ID | Point # |
| Manual release switch disabled | pi Exp. ID | FB | Point # | FBNNXXPPPP | 1 | 571 | Exp. ID | Point # |
| Manual release switch enabled | pi Exp. ID | FU | Point # | FUNNXXPPPP | 3 | 571 | Exp. ID | Point # |
| Manual release switch trouble (Water Release Zone) | pi Exp. ID | FT | Point # | FTNNXXPPPP | 1 | 373 | Exp. ID | Point # |
| Manual release switch trouble restore (Water Release Zone) | pi Exp. ID | FJ | Point # | FJNNXXPPPP | 3 | 373 | Exp. ID | Point # |
| Notification output point disabled | pi Exp. ID | FB | Point # | FBNNXXPPPP | 1 | 571 | Exp. ID | Point # |
| Notification output point enabled | pi Exp. ID | FU | Point # | FUNNXXPPPP | 3 | 571 | Exp. ID | Point # |
| Notification output point trouble | pi Exp. ID | FT | Point # | FTNNXXPPPP | 1 | 320 | Exp. ID | Point # |
| Notification output point trouble restore | pi Exp. ID | FJ | Point # | FJNNXXPPPP | 3 | 320 | Exp. ID | Point # |
| Positive Alarm Sequence acknowledge switch disabled | pi Exp. ID | FB | Point # | FBNNXXPPPP | 1 | 571 | Exp. ID | Point # |
| Positive Alarm Sequence acknowledge switch enabled | pi Exp. ID | FU | Point # | FUNNXXPPPP | 3 | 571 | Exp. ID | Point # |
| Positive Alarm Sequence acknowledge switch trouble | pi Exp. ID | FT | Point # | FTNNXXPPPP | 1 | 373 | Exp. ID | Point # |
| Positive Alarm Sequence acknowledge switch trouble restore | pi Exp. ID | FJ | Point # | FJNNXXPPPP | 3 | 373 | Exp. ID | Point # |
| Status Point Trouble | pi Exp. ID | UT | Point # | UTNNXXPPPP | 1 | 379 | Exp. ID | Point # |
| Status Point Trouble Restored | pi Exp. ID | UJ | Point # | UJNNXXPPPP | 3 | 379 | Exp. ID | Point # |
| Status Point is Disabled | pi Exp. ID | UB | Point # | UBNNXXPPPP | 1 | 580 | Exp. ID | Point # |
| Status Point is Enabled | pi Exp. ID | UU | Point # | UUNNXXPPPP | 3 | 580 | Exp. ID | Point # |
| Supervisory/Tamper Alarm | pi Exp. ID | FS | Point # | FSNNXXPPPP | 1 | 200 | Exp. ID | Point # |
| Supervisory/Tamper Alarm Restore | pi Exp. ID | FR | Point # | FRNNXXPPPP | 3 | 200 | Exp. ID | Point # |
| Supervisory/Tamper point disabled | pi Exp. ID | FB | Point # | FBNNXXPPPP | 1 | 571 | Exp. ID | Point # |
| Supervisory/Tamper point enabled | pi Exp. ID | FU | Point # | FUNNXXPPPP | 3 | 571 | Exp. ID | Point # |
| Supervisory/Tamper point trouble | pi Exp. ID | FT | Point # | FTNNXXPPPP | 1 | 373 | Exp. ID | Point # |
| Supervisory/Tamper point trouble restore | pi Exp. ID | FJ | Point # | FJNNXXPPPP | 3 | 373 | Exp. ID | Point # |

Table 11.2 Report Formats Table (Continued)

| Event Description | SIA Reporting Format | | | | Contact ID Reporting Format | | | |
|---|----------------------|-----------------|----------------------|---|-----------------------------|------------|---------|-----------|
| | Module ID # (If Any) | SIA Event Codes | Parameter | Fixed Length Format NN - panel ID XX- SBUS ID ZZZ- Zone # PPPP- Point # GGG- Group # E- Emergency # RRRR-Receiver # | Qualifier | Event Code | Group # | Contact # |
| System-based AUX1 switch alarm | pi Exp. ID | UA | Point # | UANNXXPPPP | 1 | 140 | Exp. ID | Point # |
| System-based AUX1 switch alarm restore | pi Exp. ID | UH | Point # | UHNNXXPPPP | 3 | 140 | Exp. ID | Point # |
| System-based AUX1 switch disabled | pi Exp. ID | UB | Point # | UBNNXXPPPP | 1 | 571 | Exp. ID | Point # |
| System-based AUX1 switch enabled | pi Exp. ID | UU | Point # | UUNNXXPPPP | 3 | 571 | Exp. ID | Point # |
| System-based AUX1 switch trouble | pi Exp. ID | UT | Point # | UTNNXXPPPP | 1 | 373 | Exp. ID | Point # |
| System-based AUX1 switch trouble restore | pi Exp. ID | UJ | Point # | UJNNXXPPPP | 3 | 373 | Exp. ID | Point # |
| System-based AUX2 switch alarm | pi Exp. ID | UA | Point # | UANNXXPPPP | 1 | 140 | Exp. ID | Point # |
| System-based AUX2 switch alarm restore | pi Exp. ID | UH | Point # | UHNNXXPPPP | 3 | 140 | Exp. ID | Point # |
| System-based AUX2 switch disabled | pi Exp. ID | UB | Point # | UBNNXXPPPP | 1 | 571 | Exp. ID | Point # |
| System-based AUX2 switch enabled | pi Exp. ID | UU | Point # | UUNNXXPPPP | 3 | 571 | Exp. ID | Point # |
| System-based AUX2 switch trouble | pi Exp. ID | UT | Point # | UTNNXXPPPP | 1 | 373 | Exp. ID | Point # |
| System-based AUX2 switch trouble restore | pi Exp. ID | UJ | Point # | UJNNXXPPPP | 3 | 373 | Exp. ID | Point # |
| Voice Aux ECS 1 Point Alarm | pi Exp. ID | UA | (3PPP) PPP - Point # | UANNXX3PPP | 1 | 171 | Exp. ID | Point # |
| Voice Aux ECS 1 Point Alarm Restore | pi Exp. ID | UH | (3PPP) PPP - Point # | UHNNXX3PPP | 3 | 171 | Exp. ID | Point # |
| Voice Aux ECS 2 Point Alarm | pi Exp. ID | UA | (4PPP) PPP - Point # | UANNXX4PPP | 1 | 172 | Exp. ID | Point # |
| Voice Aux ECS 2 Point Alarm Restore | pi Exp. ID | UH | (4PPP) PPP - Point # | UHNNXX4PPP | 3 | 172 | Exp. ID | Point # |
| Voice Aux ECS 3 Point Alarm | pi Exp. ID | UA | (5PPP) PPP - Point # | UANNXX5PPP | 1 | 173 | Exp. ID | Point # |
| Voice Aux ECS 3 Point Alarm Restore | pi Exp. ID | UH | (5PPP) PPP - Point # | UHNNXX5PPP | 3 | 173 | Exp. ID | Point # |
| Voice Aux ECS 4 Point Alarm | pi Exp. ID | UA | (6PPP) PPP - Point # | UANNXX6PPP | 1 | 174 | Exp. ID | Point # |
| Voice Aux ECS 4 Point Alarm Restore | pi Exp. ID | UH | (6PPP) PPP - Point # | UHNNXX6PPP | 3 | 174 | Exp. ID | Point # |
| Voice Aux ECS Point Trouble | pi Exp. ID | UT | Point # | UTNNXXPPPP | 1 | 379 | Exp. ID | Point # |
| Voice Aux ECS Point Trouble Restore | pi Exp. ID | UJ | Point # | UJNNXXPPPP | 3 | 379 | Exp. ID | Point # |
| Voice Aux ECS Point Disabled | pi Exp. ID | UB | Point # | UBNNXXPPPP | 1 | 580 | Exp. ID | Point # |
| Voice Aux ECS Point Enabled | pi Exp. ID | UU | Point # | UUNNXXPPPP | 3 | 580 | Exp. ID | Point # |
| Voice Aux Status 1 Switch is Trouble | pi Exp. ID | UT | Point # | UTNNXXPPPP | 1 | 379 | Exp. ID | Point # |
| Voice Aux Status 1 Switch is Trouble Restored | pi Exp. ID | UJ | Point # | UJNNXXPPPP | 3 | 379 | Exp. ID | Point # |
| Voice Aux Status 1 Switch is Disabled | pi Exp. ID | UB | Point # | UBNNXXPPPP | 1 | 580 | Exp. ID | Point # |
| Voice Aux Status 1 Switch is Enabled | pi Exp. ID | UU | Point # | UUNNXXPPPP | 3 | 580 | Exp. ID | Point # |
| Voice Aux Status 2 Switch is Trouble | pi Exp. ID | UT | Point # | UTNNXXPPPP | 1 | 379 | Exp. ID | Point # |
| Voice Aux Status 2 Switch is Trouble Restored | pi Exp. ID | UJ | Point # | UJNNXXPPPP | 3 | 379 | Exp. ID | Point # |
| Voice Aux Status 2 Switch is Disabled | pi Exp. ID | UB | Point # | UBNNXXPPPP | 1 | 580 | Exp. ID | Point # |
| Voice Aux Status 2 Switch is Enabled | pi Exp. ID | UU | Point # | UUNNXXPPPP | 3 | 580 | Exp. ID | Point # |
| Water flow switch alarm | pi Exp. ID | SA | Point # | SANNXXPPPP | 1 | 113 | Exp. ID | Point # |
| Water flow switch alarm restore | pi Exp. ID | SH | Point # | SHNNXXPPPP | 3 | 113 | Exp. ID | Point # |
| Water flow switch disabled | pi Exp. ID | SB | Point # | SBNNXXPPPP | 1 | 571 | Exp. ID | Point # |
| Water flow switch enabled | pi Exp. ID | SU | Point # | SUNNXXPPPP | 3 | 571 | Exp. ID | Point # |
| Water flow switch trouble | pi Exp. ID | ST | Point # | STNNXXPPPP | 1 | 373 | Exp. ID | Point # |
| Water flow switch trouble restore | pi Exp. ID | SJ | Point # | SJNNXXPPPP | 3 | 373 | Exp. ID | Point # |
| Zone-based AUX1 switch alarm | pi Exp. ID | UA | Point # | UANNXXPPPP | 1 | 140 | Exp. ID | Point # |
| Zone-based AUX1 switch alarm restore | pi Exp. ID | UH | Point # | UHNNXXPPPP | 3 | 140 | Exp. ID | Point # |

Table 11.2 Report Formats Table (Continued)

| Event Description | SIA Reporting Format | | | | Contact ID Reporting Format | | | |
|---|----------------------|-----------------|-----------|--|-----------------------------|------------|---------|-----------|
| | Module ID # (If Any) | SIA Event Codes | Parameter | SIA | Qualifier | Event Code | Group # | Contact # |
| Zone-based AUX1 switch disabled | pi Exp. ID | UB | Point # | Fixed Length Format NN - panel ID XX- SBUS ID ZZZ- Zone # PPPP- Point # GGG- Group # E- Emergency # RRRR-Receiver # UBNXXPPPP | 1 | 571 | Exp. ID | Point # |
| Zone-based AUX1 switch enabled | pi Exp. ID | UU | Point # | UUNXXPPPP | 3 | 571 | Exp. ID | Point # |
| Zone-based AUX1 switch trouble | pi Exp. ID | UT | Point # | UTNXXPPPP | 1 | 373 | Exp. ID | Point # |
| Zone-based AUX1 switch trouble restore | pi Exp. ID | UJ | Point # | UJNXXPPPP | 3 | 373 | Exp. ID | Point # |
| Zone-based AUX2 switch alarm | pi Exp. ID | UA | Point # | UANXXPPPP | 1 | 140 | Exp. ID | Point # |
| Zone-based AUX2 switch alarm restore | pi Exp. ID | UH | Point # | UHNXXPPPP | 3 | 140 | Exp. ID | Point # |
| Zone-based AUX2 switch disabled | pi Exp. ID | UB | Point # | UBNXXPPPP | 1 | 571 | Exp. ID | Point # |
| Zone-based AUX2 switch enabled | pi Exp. ID | UU | Point # | UUNXXPPPP | 3 | 571 | Exp. ID | Point # |
| Zone-based AUX2 switch trouble | pi Exp. ID | UT | Point # | UTNXXPPPP | 1 | 373 | Exp. ID | Point # |
| Zone-based AUX2 switch trouble restore | pi Exp. ID | UJ | Point # | UJNXXPPPP | 3 | 373 | Exp. ID | Point # |
| System-based Wireless Gateway Trouble | pi Exp. ID | UT | Point # | UTNXXPPPP | 1 | 373 | Exp. ID | Point # |
| System-based Wireless Gateway Trouble - restore | pi Exp. ID | UJ | Point # | UJNXXPPPP | 3 | 373 | Exp. ID | Point # |
| Wireless Gateway Trouble | pi Exp. ID | UT | Point # | UTNXXPPPP | 1 | 373 | Exp. ID | Point # |
| Wireless Gateway Trouble restore | pi Exp. ID | UJ | Point # | UJNXXPPPP | 3 | 373 | Exp. ID | Point # |

Table 11.2 Report Formats Table (Continued)

11.2 SIA - Panels PI Modifier Reporting

Events are sent to the Central Station as a variable length string.

The event format is:

EEZZZZ

Where:

EE Event code (2 characters)

ZZZZ Event parameter (up to four digits – not zero filled)

1. The account number is sent using an account block that is separate from the event block
2. Multiple events can be sent within a single event block. Events are separated by a “/” character.
3. Event parameter can be either a zone, point or module number.
4. When reporting by point is enabled, the communicator uses a “pi” event to supersede the actual point event to report the module the point is linked to.
5. Panel ID is not sent in the SIA event parameters.

For Example see Table 11.3:

| Event | Report Zone/ Point | Panel ID | Module | Zone ZZZZ | Point ZZZZ | Fields Sent | SIA Event Data |
|-----------------------------|--------------------|----------|--------|-----------|---------------|--------------|------------------|
| Fire Alarm-Zone | Zone | n/a | n/a97 | 15 | n/a | EE-ZZ | FA15 |
| Fire Alarm-Zone | Zone | n/a | n/a | 05 | n/a | EE-Z | FA5 |
| Fire Alarm-Point | Point | n/a | 01 | n/a | 123 | EE-ZZ/EE-ZZZ | pi01/FA123 |
| Fire Alarm-Point | Point | n/a | 33 | n/a | 203 | EE-ZZ/EE-ZZZ | pi11/FA203 |
| Expander Trouble | n/a | n/a | 11 | n/a | n/a | EE-ZZ | ET11 |
| Auto Test | n/a | n/a | n/a | n/a | n/a | EE-Z | RP0 |
| Battery Trouble-Panel 32 | n/a | n/a | 98 | n/a | n/a | EE-ZZ | YT98 |
| Battery Trouble-Expander 18 | n/a | n/a | 18 | n/a | n/a | EE-ZZ | YT18 |
| SLC Loop Shorted | n/a | n/a | 44 | n/a | n/a | EE-ZZ | ET44 |
| Program Begin Panel ID=32 | n/a | n/a | n/a | n/a | n/a | EE-Z | LB0 |
| Program Begin Panel ID= 22 | n/a | n/a | n/a | n/a | n/a | EE-Z | LB0 |
| AC Power Loss - Panel 22 | n/a | n/a | 98 | n/a | n/a | EE-Z | AT0 |
| Fire Trouble | Point | n/a | 97 | n/a | 200 | EE-ZZ/EE-ZZZ | pi97/FT200 |
| Fire Trouble | Zone | n/a | 97 | 01 | n/a | EE-Z | FT1 |
| Fire Trouble-NAC | Point | n/a | 98 | n/a | Nac Circuit 7 | EE-ZZ/EE-Z | pi98/FT7 Z=Pt. # |
| Fire Trouble-NAC | Zone | n/a | 98 | n/a | Nac Circuit 7 | EE-ZZZ | FT400ZZZ=OPG# |

Table 11.3 SIA / Panels - PI Modifier Reporting Examples

11.3 SIA – Panel Communicator

(The differences/additional features are underlined).

Events are sent to the Central Station Receiver as a fixed length string.

The event format is:

EEPPMMZZZZ

Where

EE Event code (2 characters)

PP Panel number (2 digits – Zero Filled) (valid range from 1 to 64)

MM Module number (2 digits – Zero Filled) (valid range from 1 to 98, typically Module information)

ZZZZ Event parameter (4 digits – Zero Filled) (typically Point, Zone or Circuit information)

1. The Event field will contain 10 digits including the 2 digit event code (EE), 2 digit panel ID (PP), 2 digit Module Number (MM) and a 4 digit Event Parameter (ZZZZ).
2. Based on the actual Event Code, the Module Number or Event Parameter fields might not contain pertinent information. In that case the field will contain zeros.
3. The account number is sent using an account block that is separate from the event block.
4. Multiple events can be sent within a single event block. Events are separated by a “/” character.
5. Event parameter can be a Zone, Point or Circuit Number.
6. “pi” modifier event is not used.
7. Panel can be set to report by either Point or Zone.

For examples see Table 11.4.

| Event | Report Zone/Point | Panel ID PP | Module MM | Zone ZZZZ | Point ZZZZ | Fields Sent | SIA Event Data |
|-----------------------------|-------------------|-------------|-----------|-----------|---------------|---------------|--------------------------|
| Fire Alarm-Zone | Zone | 32 | n/a | 15 | n/a | EE-PP-MM-ZZZZ | FA32000015 |
| Fire Alarm-Zone | Zone | 32 | n/a | 05 | n/a | EE-PP-MM-ZZZZ | FA32000005 |
| Fire Alarm-Point | Point | 32 | 01 | n/a | 123 | EE-PP-MM-ZZZZ | FA32010123 |
| Fire Alarm-Point | Point | 21 | 33 | n/a | 203 | EE-PP-MM-ZZZZ | FA21330203 |
| Expander Trouble | n/a | 15 | 11 | n/a | n/a | EE-PP-MM-ZZZZ | ET15110000 |
| Auto Test | n/a | 32 | n/a | n/a | n/a | EE-PP-MM-ZZZZ | RP32000000 |
| Battery Trouble-Panel 32 | n/a | 32 | 98 | n/a | n/a | EE-PP-MM-ZZZZ | YT32980000 |
| Battery Trouble-Expander 18 | n/a | 32 | 18 | n/a | n/a | EE-PP-MM-ZZZZ | YT32180000 |
| SLC Loop Shorted | n/a | 01 | 44 | n/a | n/a | EE-PP-MM-ZZZZ | ET01440000 |
| Program Begin | n/a | 32 | n/a | n/a | n/a | EE-PP-MM-ZZZZ | LB32000000 |
| Program Begin | n/a | 22 | n/a | n/a | n/a | EE-PP-MM-ZZZZ | LB22000000 |
| AC Power Loss- Panel 22 | n/a | 22 | 98 | n/a | n/a | EE-PP-MM-ZZZZ | AT22980000 MM = 00 |
| Fire Trouble | Point | 22 | 97 | n/a | 200 | EE-PP-MM-ZZZZ | FT22970200 |
| Fire Trouble | Zone | 22 | 97 | 1 | n/a | EE-PP-MM-ZZZZ | FT22970001 MM = 00 |
| Fire Trouble-NAC | Point | 22 | 98 | n/a | NAC Circuit 7 | EE-PP-MM-ZZZZ | FT22980007 ZZZZ=Pt. # |
| Fire Trouble-NAC | Zone | 22 | 98 | n/a | NAC Circuit 7 | EE-PP-MM-ZZZZ | FT22980007 ZZZZ=OPG # |

Table 11.4 SIA Reporting Examples

Section 12: Testing and Troubleshooting

12.1 Troubleshooting

This Section of the Manual offers suggestions for troubleshooting hardware problems. Please read this section if you encounter a problem when installing the control panel. If these suggestions do not solve your problem or if you encounter a problem that is not listed here, contact Honeywell Technical Support at 800.446.6444 for assistance.

12.1.1 Common Problems

| Problem | Possible Cause / Suggested Actions |
|---|--|
| Trouble message "DBL ADDR" (Double Address) displays on LCD. | An address has been assigned to more than one detector. Correct the address following the procedure described for IDP, SK, and SD devices in the <i>SLC Wiring Manual</i> . |
| Auxiliary power or notification circuits have incorrect polarity. | Correct polarity. For notification and auxiliary power circuits: When in alarm or powered, terminals labeled "X" are positive, terminals labeled "O" are negative. |
| SLC devices are not being recognized (trouble message "Missing" displays). | Check hardware connections. If devices are physically connected, make sure the wiring is correct. Refer to the <i>SLC Wiring Manual</i> . For the main panel, the positive side of device must be connected to terminal 34; the negative side must be connected to Terminal 33. For SLC devices, make sure the device connects to the SLC loop via the SLC OUT terminals. |
| | Make sure SLC devices have been addressed properly. For information on device addressing, refer to the <i>SLC Wiring Manual</i> . For contact monitor modules, which are addressed using DIP switches, the DIP switch must be set to the correct address before power is applied to the SLC loop. If this procedure is not followed, the device will have an incorrect address. |
| | Make sure correct polarity has been observed for SLC device wiring. For information on wiring, refer to the <i>SLC Wiring Manual</i> . |
| SLC devices are not being recognized (trouble message "Missing" displays on the annunciator). | Check that SLC loop impedance is within the required range. To measure impedance, use the following procedure. <ol style="list-style-type: none"> 1. Disconnect both wires from the terminal block at the panel (SLC devices can remain connected). 2. Measure the impedance from positive to negative and from negative to positive. Both measurements should be greater than 500 K ohms. If the installation uses T-taps, test each T-tap individually. 3. Temporarily connect the positive wire to the negative wire of the SLC loop at the point farthest from the panel (SLC devices can remain connected). 4. Measure the impedance from positive to negative and from negative to positive. Both measurements must be less than 50 ohms. |
| The panel indicates a ground fault trouble condition (trouble message "GROUND FAULT" displays). | An earth ground fault occurs when the panel senses an unexpected flow of current from one or more of its terminals to the earth connection (Terminal 2). Isolate the wiring that is causing the fault by removing wiring connections one at a time until the earth fault is no longer present. Pause at least five seconds after removing a wire before removing the next one. The panel will also go into ground fault if a computer is connected to the panel via a serial cable attached to the panel's 9-pin connector or a USB cable. This is a correct method for on-site communication between a panel and a computer. Ignore the ground fault message in this case. The trouble will clear automatically when you disconnect the computer from the cable |
| 5496, 6815, or 5815XL module that has been physically connected to the panel but is not being recognized. | Check the status of the module's green LED. If it flashes in the pattern half second on/ half second off, it is likely that the device has not been added to the system through programming. JumpStart will add any modules connected to the panel. If you have already run JumpStart, modules can be added manually. (Refer to Section 8.2.2). Check that the correct ID for the module has been set through the DIP switches. Assign ID#1 to the first module and ID#2 to the second. If the wiring between the device and the panel is correct, measure the voltage from the Terminal (+) to Terminal (-). Voltage should be in the range 27.2-27.4V when AC power is present. If the green LED is not flashing, the likely cause is incorrect wiring from between the device and the panel. |

Table 12.1 Troubleshooting Chart

12.2 Periodic Testing and Maintenance

To ensure proper and reliable operation, it is recommended that system inspection and testing be scheduled monthly or as required by national and/or local fire codes. Testing should be done by a qualified service representative if a malfunction is encountered.

Before Testing

1. Notify the fire department and/or central alarm receiving station if an alarm condition is transmitted.
2. Notify facility personnel of a test so that alarm sounding devices are ignored during the test period.

Testing

1. Rotate the key or enter a code to access the Main menu.

2. Press 1 for System Test.
3. Press 1 to select Fire Drill.
4. Press ENTER to begin the drill. To end the drill, press any key.

To conduct a fire drill from a remote fire drill switch: Activate the switch to begin the drill; de-activate the switch to end the drill. Measure battery voltage while the Notification Appliances are sounding. Replace any battery with terminal voltage less than 85% of rating. Reapply AC power and press RESET. Return all switches to their normal outward positions. Notify fire department, central station and/or building personnel that the test is complete.

12.3 Event History

The Event History can be useful for tracking or recalling a trouble condition.

To view the Event History, do the following.

1. Login to the panel.
2. Press 3 to select Event History.
3. Press the up or down arrow key to view events in the history buffer.

12.4 Built-in Troubleshooting and Testing Tools

The fire control panel has several built-in testing and troubleshooting tools that can be utilized to save time while testing and troubleshooting points and SLC devices.

12.4.1 SLC Device Locator

SLC device locator can be used to locate a device on a SLC loop.

Follow these steps to locate a particular SLC device:

1. Select 2 for Point Functions from the Main Menu.
2. Select 4 for SLC Single Device Locator.

A message similar to the one shown below will display.

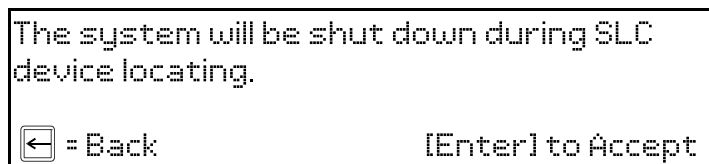


Figure 12.1 Shut Down Warning

3. Press ENTER to accept, or left arrow to Exit.
If left arrow is chosen you will exit back to the Point Function Menu.
If ENTER is chosen the system will cease normal operation leaving the premise unprotected.
4. Select the SLC loop.
5. Enter the SLC address of the device you wish to locate.
The LED on the selected device will start flashing.
6. Press left arrow key to exit the SLC Device Locator.



NOTE: Once you exit, the system will resume normal operation.

12.4.2 SLC Multiple Device Locator

This feature is the same as SLC Single Device Locator, except you can locate up to 8 devices on a single search.

Follow these instructions to locate multiple SLC devices:

1. Select 2 for Point Functions from the Main Menu.
2. Select 5 for SLC Multiple Device Locator.

A message similar to the one shown below will display.

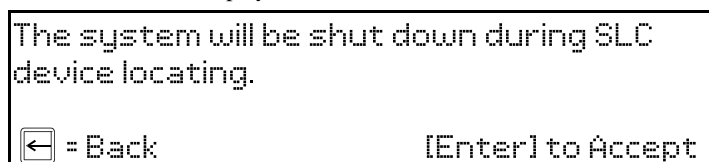


Figure 12.2 Shut Down Warning

3. Press ENTER to accept, or left arrow to Exit.
If left arrow is chosen you will exit back to the Point function menu.
If ENTER is chosen the system will cease normal operation leaving the premise unprotected.

4. Select the SLC loop.
5. Enter up to eight SLC addresses for the devices you wish to locate.
The LEDs on the selected devices will start flashing.
6. Press the left arrow key to exit SLC Multiple Device Locator.



NOTE: Once you exit, the system will resume normal operation.

12.4.3 I/O Point Control

This feature allows you to toggle any output on or off and trip any input device. This can be useful to test a point's output mapping. I/O Point Control can only be accessed if enabled in the user profile.

Follow these steps to control an I/O point.

1. Select 2 (Point Functions) from the Main Menu.
2. Select 6 (I/O Point Control).
3. Select the module the point is on.
4. Make any selections specific to the module selected in the previous step.
5. Use the up or down arrow key to select the point you wish to test.
6. Press ENTER to toggle (Active/Inactive) Output.
7. Press the left arrow key to exit.

12.4.4 Earth Fault Resistance

Table 12.2 lists the Earth Fault Resistance detection for each applicable terminal on the FACP. Any wire-to-wire fault impedance is 0 ohms.

| Function | Terminal Label | | Low Biased | | High Biased | |
|-----------------------|------------------|-----------|------------|--------------|-------------|-------------|
| | (Values in Ohms) | | High Trip | High Restore | Low Trip | Low Restore |
| Notification Circuits | - | NAC 4 | - | - | 0 | 0 |
| | + | | 0 | 0 | - | - |
| | - | NAC 3 | - | - | 0 | 0 |
| | + | | 0 | 0 | - | - |
| | - | NAC 2 | - | - | 0 | 0 |
| | + | | 0 | 0 | - | - |
| | - | NAC 1 | - | - | 0 | 0 |
| | + | | 0 | 0 | - | - |
| SBUS OUT | B | SBUS1 OUT | - | - | 0 | 0 |
| | A | | - | - | 0 | 0 |
| | + | | 0 | 0 | - | - |
| | - | | - | - | 0 | 0 |
| EXT. COMM | B | | - | - | 0 | 0 |
| | A | | - | - | 0 | 0 |
| | + | | 0 | 0 | - | - |
| | - | | - | - | 0 | 0 |
| SLC Terminals | - | SLC OUT | - | - | 0 | 0 |
| | + | | 0 | 0 | - | - |
| | - | SLC IN | - | - | 0 | 0 |
| | + | | 0 | 0 | - | - |

Any wire to wire fault impedance is 0 ohms.

Table 12.2 Terminals Earth Fault Resistance Values

Section 13: Installation Records

This section of the manual is for you to use if you wish to track how points, zones, and groups have been programmed.

13.1 Detector and Module Point Record

If installing IDP or SK SLC devices, use Table 13.1 to record detector points (up to 159 per SLC loop) installed on the onboard SLC loop and make a copy of Table 13.2 to record installed modules (up to 159 per SLC loop).

| Module | Address | Zone / Group | Description | Module | Address | Zone/ Group | Description |
|---------|---------|--------------|-------------|---------|---------|-------------|-------------|
| Onboard | 1 | | | Onboard | 2 | | |
| Onboard | 3 | | | Onboard | 4 | | |
| Onboard | 5 | | | Onboard | 6 | | |
| Onboard | 7 | | | Onboard | 8 | | |
| Onboard | 9 | | | Onboard | 10 | | |
| Onboard | 11 | | | Onboard | 12 | | |
| Onboard | 13 | | | Onboard | 14 | | |
| Onboard | 15 | | | Onboard | 16 | | |
| Onboard | 17 | | | Onboard | 18 | | |
| Onboard | 19 | | | Onboard | 20 | | |
| Onboard | 21 | | | Onboard | 22 | | |
| Onboard | 23 | | | Onboard | 24 | | |
| Onboard | 25 | | | Onboard | 26 | | |
| Onboard | 27 | | | Onboard | 28 | | |
| Onboard | 29 | | | Onboard | 30 | | |
| Onboard | 31 | | | Onboard | 32 | | |
| Onboard | 33 | | | Onboard | 34 | | |
| Onboard | 35 | | | Onboard | 36 | | |
| Onboard | 37 | | | Onboard | 38 | | |
| Onboard | 39 | | | Onboard | 40 | | |
| Onboard | 41 | | | Onboard | 42 | | |
| Onboard | 43 | | | Onboard | 44 | | |
| Onboard | 45 | | | Onboard | 46 | | |
| Onboard | 47 | | | Onboard | 48 | | |
| Onboard | 49 | | | Onboard | 50 | | |
| Onboard | 51 | | | Onboard | 52 | | |
| Onboard | 53 | | | Onboard | 54 | | |
| Onboard | 55 | | | Onboard | 56 | | |
| Onboard | 57 | | | Onboard | 58 | | |
| Onboard | 59 | | | Onboard | 60 | | |
| Onboard | 61 | | | Onboard | 62 | | |
| Onboard | 63 | | | Onboard | 64 | | |
| Onboard | 65 | | | Onboard | 66 | | |
| Onboard | 67 | | | Onboard | 68 | | |
| Onboard | 69 | | | Onboard | 70 | | |
| Onboard | 71 | | | Onboard | 72 | | |
| Onboard | 73 | | | Onboard | 74 | | |
| Onboard | 75 | | | Onboard | 76 | | |
| Onboard | 77 | | | Onboard | 78 | | |
| Onboard | 79 | | | Onboard | 80 | | |
| Onboard | 81 | | | Onboard | 82 | | |
| Onboard | 83 | | | Onboard | 84 | | |
| Onboard | 85 | | | Onboard | 86 | | |
| Onboard | 87 | | | Onboard | 88 | | |

Table 13.1 Installation Record of Onboard Devices

| Module | Address | Zone / Group | Description | Module | Address | Zone/ Group | Description |
|---------|---------|--------------|-------------|---------|---------|-------------|-------------|
| Onboard | 89 | | | Onboard | 90 | | |
| Onboard | 91 | | | Onboard | 92 | | |
| Onboard | 93 | | | Onboard | 94 | | |
| Onboard | 95 | | | Onboard | 96 | | |
| Onboard | 97 | | | Onboard | 98 | | |
| Onboard | 99 | | | Onboard | 100 | | |
| Onboard | 101 | | | Onboard | 102 | | |
| Onboard | 103 | | | Onboard | 104 | | |
| Onboard | 105 | | | Onboard | 106 | | |
| Onboard | 107 | | | Onboard | 108 | | |
| Onboard | 109 | | | Onboard | 110 | | |
| Onboard | 111 | | | Onboard | 112 | | |
| Onboard | 113 | | | Onboard | 114 | | |
| Onboard | 115 | | | Onboard | 116 | | |
| Onboard | 117 | | | Onboard | 118 | | |
| Onboard | 119 | | | Onboard | 120 | | |
| Onboard | 121 | | | Onboard | 122 | | |
| Onboard | 123 | | | Onboard | 124 | | |
| Onboard | 125 | | | Onboard | 126 | | |
| Onboard | 127 | | | Onboard | 128 | | |
| Onboard | 129 | | | Onboard | 130 | | |
| Onboard | 131 | | | Onboard | 132 | | |
| Onboard | 133 | | | Onboard | 134 | | |
| Onboard | 135 | | | Onboard | 136 | | |
| Onboard | 137 | | | Onboard | 138 | | |
| Onboard | 139 | | | Onboard | 140 | | |
| Onboard | 141 | | | Onboard | 142 | | |
| Onboard | 143 | | | Onboard | 144 | | |
| Onboard | 145 | | | Onboard | 146 | | |
| Onboard | 147 | | | Onboard | 148 | | |
| Onboard | 149 | | | Onboard | 150 | | |
| Onboard | 151 | | | Onboard | 152 | | |
| Onboard | 153 | | | Onboard | 154 | | |
| Onboard | 155 | | | Onboard | 156 | | |
| Onboard | 157 | | | Onboard | 158 | | |
| Onboard | 159 | | | | | | |

Table 13.1 Installation Record of Onboard Devices (Continued)

13.3 Conventional Output Point Record

This chart can be used to keep track of how conventional output points (circuits) have been configured.

| Point/Circuit | Group | Description |
|---------------|-------|-------------|
| 1 | | |
| 2 | | |
| 3 | | |
| 4 | | |
| 5 | | |
| 6 | | |
| 7 | | |
| 8 | | |

Appendix A: Editing Text Using the Built-In Programmer

This section contains tables of programmable characters that may be used for device, module, site, template, group, and zone names or phone numbers. T9 style editing is used.

A.1 Characters Used for Editing Text

Table A.1 lists the available characters and their associated numeric designator. When programming:

1. Use the Up or Down arrow key to scroll to the mode wanted.
2. Press the number shown in Table A.1 until the character wanted is shown.
3. Arrow left and right for position, and press enter to accept.

| Lower Case Letters | | | | | | | |
|--------------------------------|---|-------|---|-------|---|-------|---|
| abc | 1 | def | 2 | ghi | 3 | jkl | 4 |
| mno | 5 | pqr | 6 | stu | 7 | vwx | 8 |
| yz | 9 | Spc | 0 | | | | |
| Upper Case Letters | | | | | | | |
| ABC | 1 | DEF | 2 | GHI | 3 | JKL | 4 |
| MNO | 5 | PQR | 6 | STU | 7 | VWX | 8 |
| YZ | 9 | Spc | 0 | | | | |
| Numbers and Special Characters | | | | | | | |
| 1 [] | 1 | 2 () | 2 | 3 . , | 3 | 4 ; : | 4 |
| 5 ' " | 5 | 6 ? ! | 6 | 7 ' / | 7 | 8 - + | 8 |
| 9 = - | 9 | 0 | 0 | * & @ | * | # \$ | # |

Table A.1 Character Table

A.2 Example Name Edit

1. Press the up or down arrow to select upper case letters mode, Press 2 until “F” appears.
2. Press the up or down arrow to change mode to lower case letters, Press 3 until “i” appears.
3. Press 6 until “r” appears.
4. Press 2 until “e” appears.
5. Press 0 to space, then continue to next word using the same process.
6. Press ENTER to accept.



NOTE: After three seconds of no change, letter will automatically be accepted. Also pressing next number will automatically accept previous choice.

```

<Module Name>          Enter: Accept
Fire Door___
 1[abc] 2[def] 3[ghi] 4[jkl] 5[mno]
 6[pqr] 7[stu] 8[vwx] 9[yz] 0[Spc]
  
```

Figure A.1 Edit Name Example

Appendix B: Expanded Receiver/Panel Relationship

The available receiver number will correspond with what panel number you entered. Receiver numbers are populated based on panel number and audited to allow only the four appropriate receivers. See Section 6.

| Panel | Available Receiver Numbers | | | |
|-------|----------------------------|-----|-----|-----|
| 1 | 1 | 2 | 3 | 4 |
| 2 | 5 | 6 | 7 | 8 |
| 3 | 9 | 10 | 11 | 12 |
| 4 | 13 | 14 | 15 | 16 |
| 5 | 17 | 18 | 19 | 20 |
| 6 | 21 | 22 | 23 | 24 |
| 7 | 25 | 26 | 27 | 28 |
| 8 | 29 | 30 | 31 | 32 |
| 9 | 33 | 34 | 35 | 36 |
| 10 | 37 | 38 | 39 | 40 |
| 11 | 41 | 42 | 43 | 44 |
| 12 | 45 | 46 | 47 | 48 |
| 13 | 49 | 50 | 51 | 52 |
| 14 | 53 | 54 | 55 | 56 |
| 15 | 57 | 58 | 59 | 60 |
| 16 | 61 | 62 | 63 | 64 |
| 17 | 65 | 66 | 67 | 68 |
| 18 | 69 | 70 | 71 | 72 |
| 19 | 73 | 74 | 75 | 76 |
| 20 | 77 | 78 | 79 | 80 |
| 21 | 81 | 82 | 83 | 84 |
| 22 | 85 | 86 | 87 | 88 |
| 23 | 89 | 90 | 91 | 92 |
| 24 | 93 | 94 | 95 | 96 |
| 25 | 97 | 98 | 99 | 100 |
| 26 | 101 | 102 | 103 | 104 |
| 27 | 105 | 106 | 107 | 108 |
| 28 | 109 | 110 | 111 | 112 |
| 29 | 113 | 114 | 115 | 116 |
| 30 | 117 | 118 | 119 | 120 |
| 31 | 121 | 122 | 123 | 124 |
| 32 | 125 | 126 | 127 | 128 |

Table B.1 Receiver/panel relationship

Appendix C: Cadence Patterns

Table C.1 shows the cadence patterns available for use with the control panel.

| # | Name | Pattern Description (Patterns repeat until condition is cleared.) |
|----|--------------------------|---|
| 00 | Constant | Continuous sound (This is the only pattern that can be used for relay circuits. The system will override any other choice.) |
| 01 | March Time | 0.5 second on, 0.5 second off |
| 02 | ANSI 3.41 | 0.5 sec on, 0.5 sec off, 0.5 sec on, 0.5 sec off, 0.5 sec on, 1.5 sec off |
| 03 | Single Stroke | 0.1 sec on, 1 sec off, 0.1 sec on, 1 sec off, 0.1 sec on, 3 sec off |
| 04 | California | 5 sec on, 10 sec off |
| 05 | Zone-coded, Zone 1 | 0.5 sec on, 0.5 sec off |
| 06 | Zone-coded, Zone 2 | This pattern is multiplied by the zone number in alarm, followed by 3 seconds off. For example, Pattern 6, Zone 2 coded: (pattern x two): 0.5 sec on, 0.5 sec off, 0.5 sec on, 0.5 sec off, 3 sec off |
| 07 | Zone-coded, Zone 3 | |
| 08 | Zone-coded, Zone 4 | |
| 09 | Zone-coded, Zone 5 | |
| 10 | Zone-coded, Zone 6 | |
| 11 | Zone-coded, Zone 7 | |
| 12 | Zone-coded, Zone 8 | |
| 13 | Zone-coded, Custom 1 | |
| 14 | Zone-coded, Custom 2 | |
| 15 | Zone-coded, Custom 3 | |
| 16 | Zone-coded, Custom 4 | |
| 17 | Sync Type- Faraday (N/A) | These outputs provide synchronization for Gentex, System Sensor, Wheelock, or AMESECO synchronized appliances. |
| 18 | Sync Type- Gentex | |
| 19 | Sync Type- System Sensor | |
| 20 | Sync Type- Wheelock | |
| 21 | Sync Type- AMSECO | |
| 22 | Power Isolated | Disconnected. No voltage at terminals. |
| 23 | Temporal 4 | 0.1 sec on, 0.1 sec off, 0.1 sec on, 0.1 sec off, 0.1 sec on, 0.1 sec off, 0.1 sec on, 5 sec off, |

Table C.1 Cadence Patterns

Appendix D: Panel Security

Panel Installation / Maintenance Security Checklist

System Description: _____

System Location: _____

Installer: _____ Date: _____

Complete the following Cybersecurity Tasks for Each Panel Installation

- Install the panel in a secure location considering both software and hardware vulnerabilities.
- Change the default password to a unique password.
- Securely configure networks and firewalls.
- Assess security risks.
- Develop a Disaster and Recovery Plan.
- Develop a Backup and Recovery Strategy.
- Install, configure and keep anti virus software updated on all computers which access the panel.
- Keep operating system updated on all computers which access the panel.
- Deliver all required system information upon delivery to the system owner.
- Train end-users on security maintenance tasks upon system delivery.
- For decommissioning, dispose of data securely.
- Ensure the Ethernet cable is removed from the FACP when not being utilized for configuration or for reporting purposes.

Security and Data Protection

Communication Security - Level 1

Stored Data Security - Level 0

Physical Security - Level 1

Access Control Security - Level 1



Model IFP-300 Basic Operating Instructions

These Instructions must be framed and displayed next to the IFP-300 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

| Operation | Task to Perform |
|--|---|
| Silence Alarms and Troubles | Press SILENCE and then enter a code if prompted. The Silence LED will light. |
| Reset Alarms | Press RESET and then enter a code if prompted. |
| View Alarms, Supervisories, and Troubles | <p>For each type of condition press the Up or Down button associated for Alarms, Supervisories, or Troubles.</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <pre> FIRE: ALARM SUPERVISORY TROUBLE CO: ALARM SUPERVISORY SYSTEM: TROUBLE </pre> </div> |
| View Point Status | <ol style="list-style-type: none"> 1. Login to the panel. 2. Press 2 to select Point Functions. 3. Press 2 to select Point Status. 4. Select the desired module by using the Up or Down button. Then press ENTER. 5. Enter the point number. |
| Conduct a Fire Drill | <p>Hold the DRILL button and then enter a code if prompted. OR</p> <ol style="list-style-type: none"> 1. Login to the panel. 2. Then Press 1 to select System Tests. 3. Press 1 to select Fire Drill. 4. Press ENTER to start the fire drill. Press ENTER to end the fire drill. |
| Check Detector Sensitivity | <ol style="list-style-type: none"> 1. Login to the panel. 2. Press 2 for Point Status. 3. From the list that displays, select the SLC module where the desired point is located. 4. The fourth line of the display shows the sensitivity status. "NORMAL" means the detector is in compliance with NFPA 72. "CAL MAINT" means the detector is in compliance with NFPA 72 but maintenance should be performed soon. "CAL TRBLE" means the detector is not in compliance with NFPA 72. |
| Set Time and Date | <ol style="list-style-type: none"> 1. Login to the panel. 2. Press 4 to select Set Time & Date. 3. Make changes in the fields on the screen as necessary. 4. When the time and date are correct, press ENTER. |
| Enable / Disable a Point | <ol style="list-style-type: none"> 1. Login to the panel. 2. Press 2 to select Point Functions. 3. Press 1 for Disable / Enable Pt 4. Press 7 for Disable / Enable Pt. 5. Use the Up or Down button to move through the list. Then press ENTER to select the module where the desired point is located. 6. Enter the point or circuit number that you want to disable/enable. 7. Press the right arrow key to toggle between NORMAL (enable) or DISABLE. |
| View Event History | <ol style="list-style-type: none"> 1. Login to the panel. 2. Press 3 to select Event History. 3. Press the Up or Down button to view events in the history buffer. |
| For Service Call: | |

Cut along dotted line.

Cut along dotted line.



Model IFP-300ECS Basic Operating Instructions


These Instructions must be framed and displayed next to the IFP-2100ECS panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

| Operation | Task to Perform |
|---|---|
| Silence Alarms and Troubles | Press SILENCE and then enter a code if prompted. The Silence LED will light. |
| Reset Alarms | <ol style="list-style-type: none"> 1. Press RESET and then enter a code if prompted. 2. Press 1 to reset the Fire System or 2 to reset the Emergency Communication System. <p><i>To reset the ECS at an LOC, the user must gain ECS Control (See Figure 1).</i></p> |
| View all active alarm, trouble, and supervisory signals | <p>The highest priority event will display first. Press the Down arrow to view location and type of alarm or trouble.</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <pre> FIRE: ALARM SUPERVISORY TROUBLE CO: ALARM SUPERVISORY EMERGENCY: ALARM SUPERVISORY SYSTEM: TROUBLE </pre> </div> |
| View Point Status | <ol style="list-style-type: none"> 1. Login to the panel. 2. Press 2 to select Point Functions. 3. Press 2 to select Point Status. 4. Select the desired module by using the Up or Down button. Then press ENTER. 5. Enter the point number. |
| Conduct a Fire Drill | <p>Hold the DRILL button and then enter a code if prompted. OR</p> <ol style="list-style-type: none"> 1. Login to the panel. 2. Then Press 1 to select System Tests. 3. Press 1 to select Fire Drill. 4. Press ENTER to start the fire drill. Press ENTER to end the fire drill. |
| Set Time and Date | <ol style="list-style-type: none"> 1. Login to the panel. 2. Press 4 to select Set Time & Date. 3. Make changes in the fields on the screen as necessary. 4. When the time and date are correct, press ENTER. |
| Enable / Disable a Point | <ol style="list-style-type: none"> 1. Login to the panel. 2. Press 2 to select Point Functions. 3. Press 1 for Disable / Enable Pt 4. Press 7 for Disable / Enable Pt. 5. Use the Up or Down button to move through the list. Then press ENTER to select the module where the desired point is located. 6. Enter the point or circuit number that you want to disable/enable. 7. Press the right arrow key to toggle between NORMAL (enable) or DISABLE. |
| To Gain / Request ECS Control | <p>Press the ECS Control Button and follow the on-screen Instructions.</p> <p><i>When the ECS Control LED is blinking, another LOC has ECS Control. The ECS Control LED is on steady when the LOC has ECS Control.</i></p> |
| For Service Call: | |

Cut along dotted line.

Cut along dotted line.

Keypad and LED Indicators

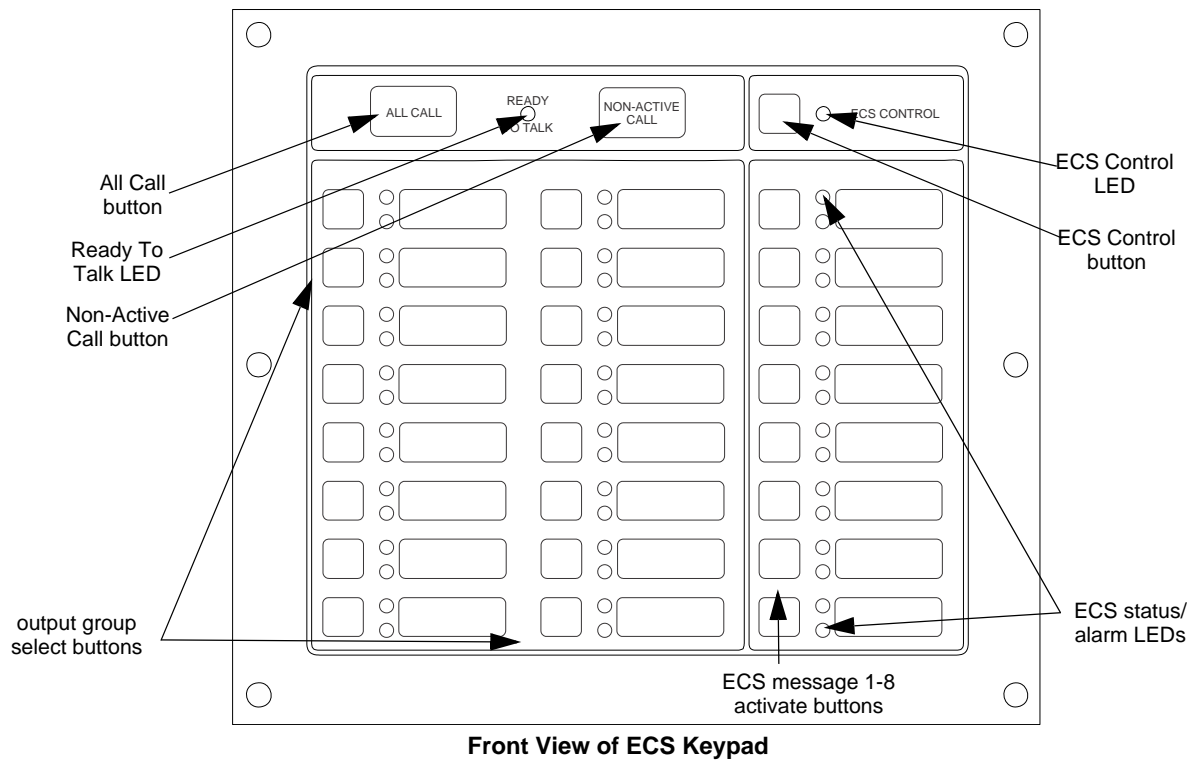

Front View of ECS Keypad

| LED | Color | State | Definition |
|-----------------|-------|-------|---|
| Select Keys | Red | On | The corresponding area is active for the ECS message currently playing |
| | | Off | The corresponding area is not active. |
| | Green | On | The corresponding area is active for the microphone. |
| | | Off | The corresponding area is not active for the microphone. |
| ECS Control LED | Green | Blink | When this LED is blinking, someone has requested control of the ECS System. |
| | | On | LOC has ECS Control and the user is able to make changes to the ECS. |
| | | Off | LOC does not have ECS Control. |
| ECS Message LED | Red | On | The corresponding ECS event was activated by an ECS device. |
| | | Off | The corresponding ECS event was not activated from this LOC. |
| | Green | On | The corresponding ECS event is active and was generated from the LOC (or was activated from another LOC, but this LOC now has ECS Control). |

LED Conditions

Cut along dotted line.

Cut along dotted line.

ECS Control

| Operation | Task |
|---|---|
| Gain ECS Control at an LOC | Press the ECS Control Key and enter a code if prompted. If ECS Control is available, the ECS Control LED will illuminate. If another LOC has ECS Control, the display will be similar to the one shown below. Press 1 to request control. The LOC with ECS Control will then be able to allow or deny the request. |
| Gain ECS Control as an ECS Super User at an LOC (only one ECS Super User is allowed ECS Control in the system at a time). | From the system idle screen, enter an ECS Super User access code and then press the ECS Control Key. If ECS Control as Super User is available, the ECS Control LED will illuminate. If another LOC has Super User ECS Control, a request for Super User ECS Control will automatically be made to the LOC with control. The LOC with Super User ECS Control will then be able to allow or deny the request. (See the figure below for screen display example.) |
| Select all output groups for microphone override | Key the microphone, wait for the Ready-to-Talk LED to light, press the All Call Key, and then deliver your verbal message. |
| Select all non-activated output groups for microphone override | Key the microphone, wait for the Ready-to-Talk LED to light, press the Non-Active Call Key, and then deliver your verbal message. |

ECS Control Request

```
GAIN ECS CONTROL OPTIONS MENU
1-Request ECS Control from LOC
2 Gain ECS Control as ECS Super User
3 Wait for Lockout Timer to Expire 30
```

How to Operate the Microphone:

1. Press the ECS Control Button.
2. Key the Microphone.
3. Press the All Call Button.

How to Reset the ECS System

1. Press The Reset Button.
2. Select 2 Reset emergency System.

ECS-RPU Operating Instruction

For Live Message

1. Key the Microphone.
2. Press the All Call Key or select desired output area using Select Keys.
3. Deliver your verbal message.

For Pre-recorded Message

Select desired ECS Message Key 1-8.

- If ECS Control LED is on steady, the LOC has ECS Control.
- If ECS Control LED is Blinking, another LOC has ECS Control.

Cut along dotted line.

Cut along dotted line.

Manufacturer Warranties and Limitation of Liability

Manufacturer Warranties. Subject to the limitations set forth herein, Manufacturer warrants that the Products manufactured by it in its Northford, Connecticut facility and sold by it to its authorized Distributors shall be free, under normal use and service, from defects in material and workmanship for a period of thirty six months (36) months from the date of manufacture (effective Jan. 1, 2009). The Products manufactured and sold by Manufacturer are date stamped at the time of production. Manufacturer does not warrant Products that are not manufactured by it in its Northford, Connecticut facility but assigns to its Distributor, to the extent possible, any warranty offered by the manufacturer of such product. This warranty shall be void if a Product is altered, serviced or repaired by anyone other than Manufacturer or its authorized Distributors. This warranty shall also be void if there is a failure to maintain the Products and the systems in which they operate in proper working conditions.

MANUFACTURER MAKES NO FURTHER WARRANTIES, AND DISCLAIMS ANY AND ALL OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, WITH RESPECT TO THE PRODUCTS, TRADEMARKS, PROGRAMS AND SERVICES RENDERED BY MANUFACTURER INCLUDING WITHOUT LIMITATION, INFRINGEMENT, TITLE, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. MANUFACTURER SHALL NOT BE LIABLE FOR ANY PERSONAL INJURY OR DEATH WHICH MAY ARISE IN THE COURSE OF, OR AS A RESULT OF, PERSONAL, COMMERCIAL OR INDUSTRIAL USES OF ITS PRODUCTS.

This document constitutes the only warranty made by Manufacturer with respect to its products and replaces all previous warranties and is the only warranty made by Manufacturer. No increase or alteration, written or verbal, of the obligation of this warranty is authorized. Manufacturer does not represent that its products will prevent any loss by fire or otherwise.

Warranty Claims. Manufacturer shall replace or repair, at Manufacturer's discretion, each part returned by its authorized Distributor and acknowledged by Manufacturer to be defective, provided that such part shall have been returned to Manufacturer with all charges prepaid and the authorized Distributor has completed Manufacturer's Return Material Authorization form. The replacement part shall come from Manufacturer's stock and may be new or refurbished. THE FOREGOING IS DISTRIBUTOR'S SOLE AND EXCLUSIVE REMEDY IN THE EVENT OF A WARRANTY CLAIM.

Warn-HL-08-2009.fm

Honeywell Fire Systems
12 Clintonville Road
Northford, CT 06472-1610
203-484-7161
www.farenhyt.com

LS10145-001SK-E | D | 08-22
©2022 Honeywell International Inc.

Honeywell