

Earmuff Fitting Instructions

HOWARD LEIGHT

by Honeywell



Headband

Thunder® T3



1 Place earcups over each ear.




2 Adjust the headband by sliding the headband up or down.



Neckband


Leightning® L1N

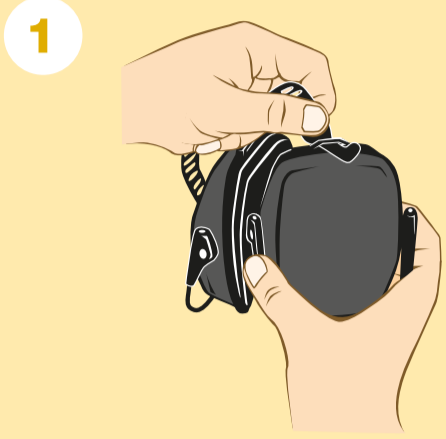

1



Adjust the length of the headband strap between the earcups so the earmuff fits well on top of the head.

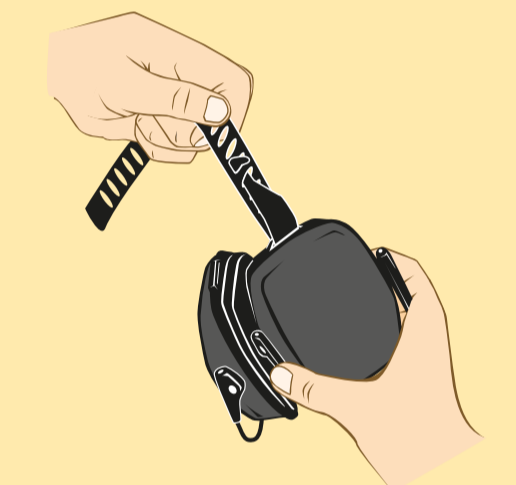

2 Place earcups over each ear.




Folding

Leightning® L2F



1

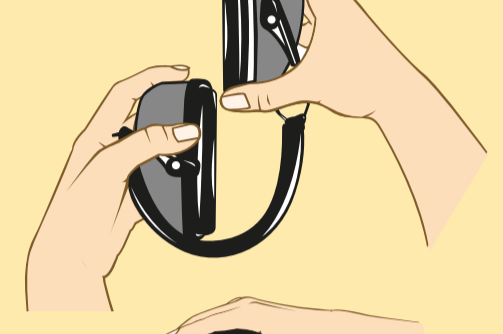

Fold out the earcups as shown.



2 Place earcups over each ear.



3 Adjust the headband by sliding the headband up or down.



Multiple Position

Viking® V2




1

Place earcups over each ear.




2

Adjust the headband by sliding the headband up or down.

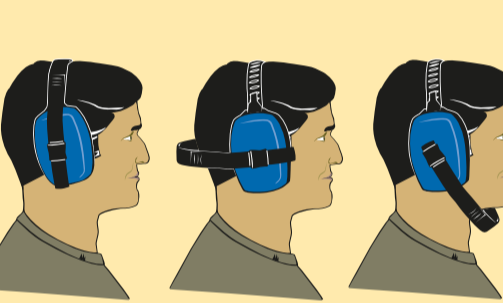

Multiple-Position earmuffs can be worn either over-the-head, behind-the-head or under-the-chin.

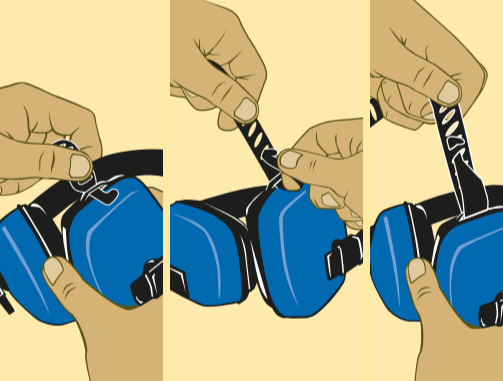


Attach headband strap to the slot in upper part of the earcup when worn behind-the-head or under-the-chin.




Cap-Mounted

Clarity® C3H

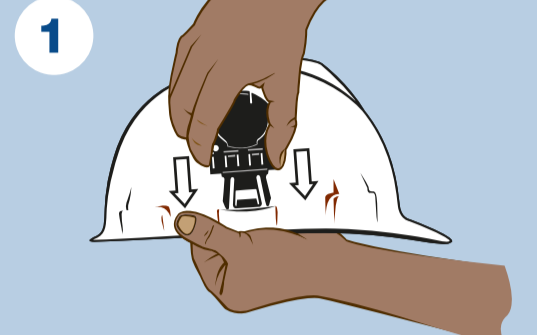

1

Attach adapters to each side of the hard hat by sliding them into the slots.

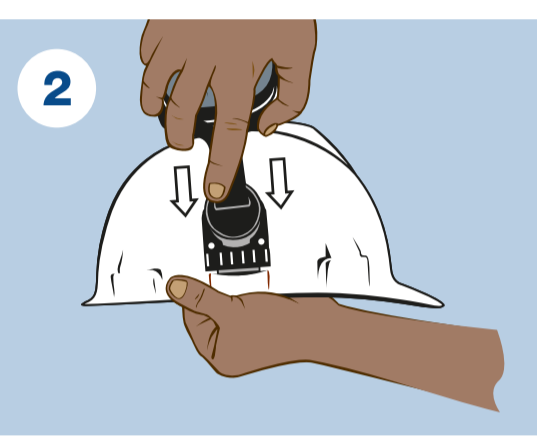

2

Attach each earmuff into its adapter by sliding the earmuff housing down into the adapter,



3

Place the hard hat on the head and adjust the earmuffs by sliding the cups up and down.



4

Ensure that the earmuff is firmly attached by lifting the arm up and down.


Get the most out of your earmuffs



Avoid Obstructions
Do not allow hair to obstruct the ear or the earmuff's secure fit in any way.



Firm Seal
Do seal the cushions firmly against the head.

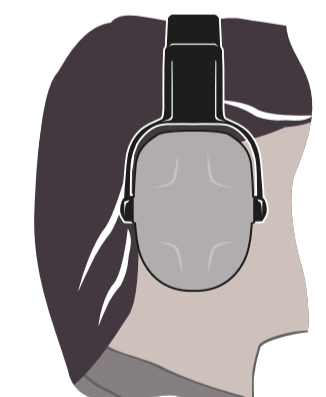

Cover Ear Completely
The earcups should never fit crooked or askew over the ear.

Keys to Successful Hearing Protection with Earmuffs

Selection

Avoid overprotection in minimal noise environments – in selecting the best earmuff for your situation, consider noise levels and your need to communicate with co-workers or hear warning signals on the job.

Wear

Read and follow all earmuff fitting instructions. Remove all hair underneath ear cushions.

Hygiene

Clean earcups and ear cushions regularly with mild soap and water.

Maintenance

Regularly inspect earcups and ear cushions for cracks and leaks – discard if earcups are visibly damaged or compromised.

Replacement

Replace ear cushions and foam inserts every 6-8 months under normal wear, every 3-4 months with heavy use or in humid/extreme climates.

Honeywell Safety Products Australia Pty Ltd
43 Garden Boulevard,
Dingley, Victoria 3172 Australia
Tel: 1300 139 166 Fax: 1300 362 491
New Zealand Tel: 0800 322 200
www.howardleight.com

Honeywell