HONEYWELL CONNECTED LIFE SAFETY SERVICES (CLSS)

USING THE CLSS GATEWAY FOR PORTABLE APPLICATIONS

Honeywell

CONNECTING TO THE PRINTER PORT: WHAT DO I NEED?
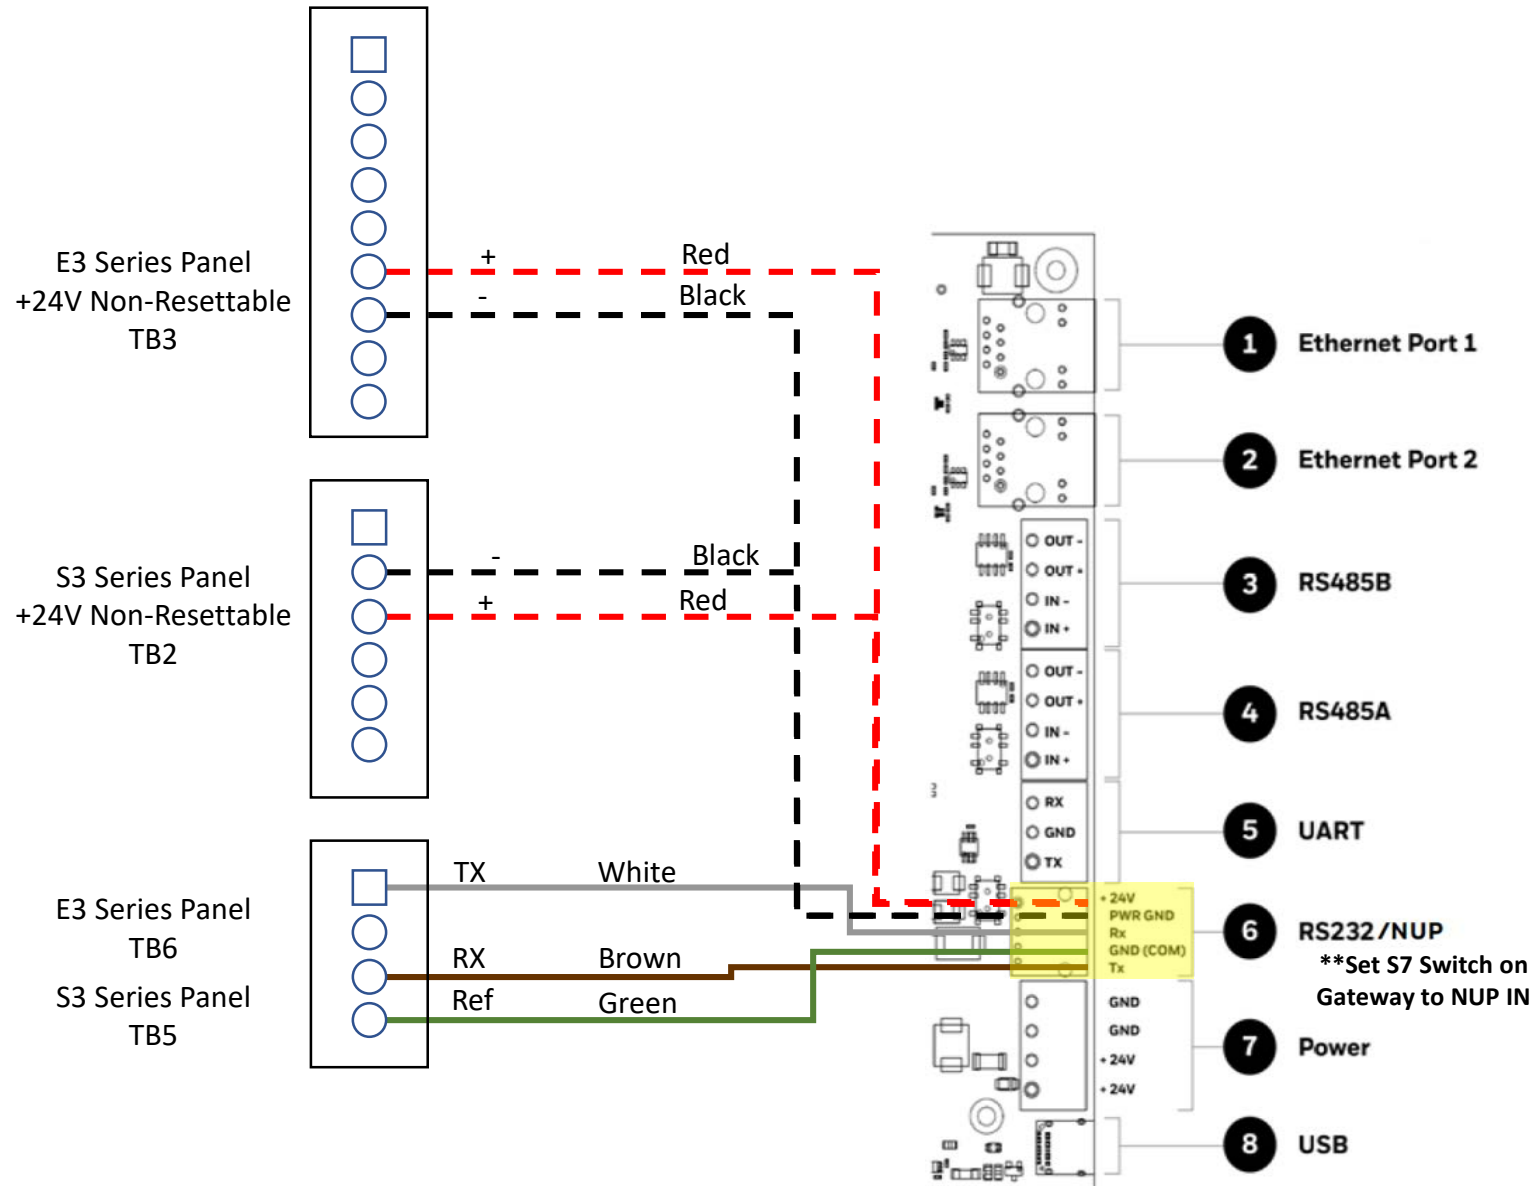
CLSS Gateway – (HON-CGW-MBB)

NUP to Flying lead Cable (included with Gateway)

CONNECTING TO THE PRINTER PORT: WIRING DIAGRAM

**E3 Series Panel
+24V Non-Resettable
TB3**

\+   Red

\-   Black

**S3 Series Panel
+24V Non-Resettable
TB2**

\-   Black

\+   Red

**E3 Series Panel
TB6**

**S3 Series Panel
TB5**

TX   White

RX   Brown

Ref   Green

1   Ethernet Port 1

2   Ethernet Port 2

OUT -
OUT +
IN -
IN +

3   RS485B

OUT -
OUT +
IN -
IN +

4   RS485A

RX
GND
TX

5   UART

+ 24V
PWR GND
Rx
GND (COM)
Tx

6   RS232/NUP

**Set S7 Switch on
Gateway to NUP IN

GND
GND
+ 24V
+ 24V

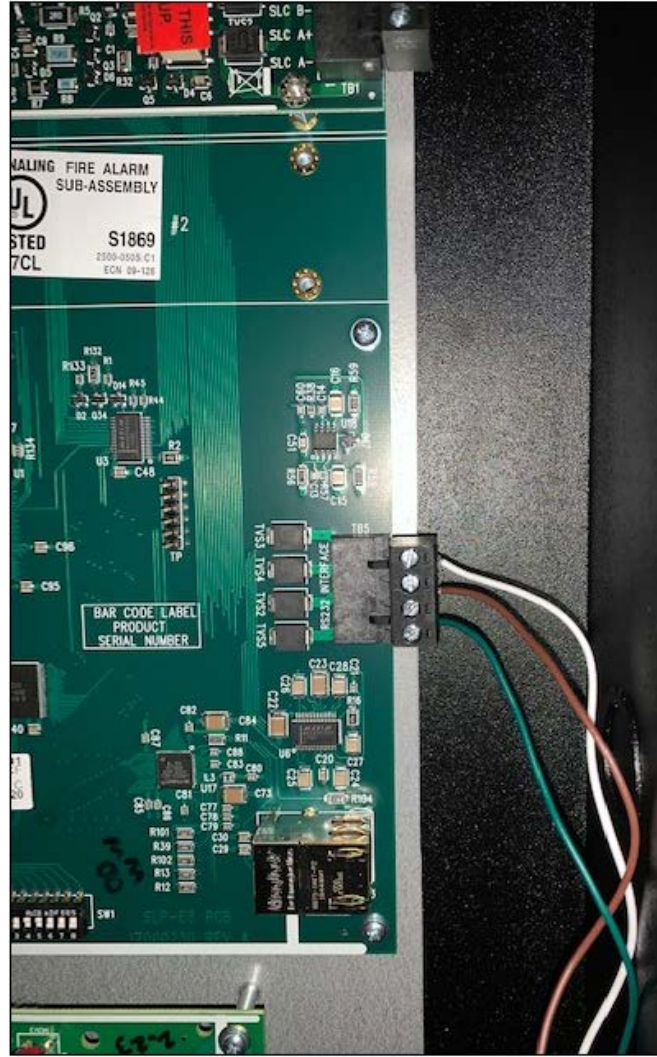**7**   Power

8   USB

CONNECTING TO THE PRINTER PORT: EXAMPLE

S3 Power Connections   S3 Printer Port Connection   Gateway Connection