12 Clintonville Road
Northford, CT 06472-1610 USA
800-289-3473 • FAX 203-484-7118
www.notifier.com

ONYXWORKS-WS Software Product Installation Document

PN LS10050-005NF-E:D 2/25/2021 ECN: 150924

1. Purpose

These instructions are intended to be used for the installation of the ONYXWorks® Workstation (P/N ONYXWORKS-WS) software application and associated user manuals on a Windows® compatible computer.

2. Associated Products

The table below lists products that are commonly used in conjunction with the workstation. These products are sold separately.

Part Number	Description
ONYXWORKS-WS	ONYXWorks Workstation
HCR-TOKEN or CLSS-TOKENSUB	Tokens to purchase ONYXWORKS Workstation software
Gateways:	
NFN-GW-EM-3	Embedded NFN Gateway
NFN-GW-PC-W	PC NFN Gateway - Wire
NFN-GW-PC-F	PC NFN Gateway - Fiber
NFN-GW-PC-HNW	High-Speed PC NFN Gateway - Wire
NFN-GW-PC-HNSF	High-Speed PC NFN Gateway - Single Fiber
NFN-GW-PC-HNMF	High-Speed PC NFN Gateway - Multiple Fiber

3. Workstation Computer Requirements

The minimum requirements for the workstation computer are as follows:

- Windows 10, 64-bit Professional
- Intel i5 Processor, or better
- 16 GB RAM
- 240 GB Hard Drive
- Monitor, Minimum resolution of 1280 x1024 Landscape Mode
- Microsoft® Compatible Mouse
- 104-key Keyboard
- USB Connector
- TCP/IP Ethernet Network Adapter Card
- Speakers
- Uninterruptible Power Supply (UPS) highly recommended

NOTE: The workstation PC should be solely dedicated to facilities monitoring. Software applications running in the background may adversely affect your PC's operating speed. It is highly recommended to ensure optimal facilities monitoring performance by this dedicated facilities monitoring PC that pertinent ONYXWorks System software applications be the only software applications installed and running.

4. Software Download and Installation Procedure

Download the ONYXWORKS-WS software as follows:

1. Go to the NOTIFIER website and download the workstation software application.
2. Proceed as follows:
   - If software download is being performed on the workstation PC, navigate to the **Downloads** folder and double click the workstation software file. Then go to step 3.

- If software download is being performed on a non-workstation PC, navigate to the **Downloads** folder and copy the workstation application and documentation EXE file to a USB drive for transport to the workstation PC. Copy the downloaded files from the USB drive onto the workstation PC and double-click the workstation software file. Then go to step 3.

3. An allow changes to computer message displays. Click **Yes**.
4. Follow the on-screen prompts to allow the software installation to proceed. Accept all software licensing agreements.
   Additional installation wizards may appear during the installation that may include:
   - Microsoft Access Database Engine Installation Wizard - Click **OK** to proceed.
   - Facilities Monitoring - InstallShield Wizard - Click **Finish** to proceed. A computer restart message displays.
5. Click **Yes**. The computer restarts.
6. Navigate to the location on the workstation PC's C:Drive where the downloaded software files are stored.
7. Double-click the EXE file with a filename that begins with "**OWDOCS**" to install the user documentation onto the PC at **C:\Facilities Monitoring\Documentation**.
8. Activate the software license as specified in Section 5.


5. Software License Initial Activation

NOTES:

- The workstation software application must be installed on the PC before performing license activation.
- The configuration tool can be opened and used to configure a life safety system upon initial software license activation. Full operational functionality of the workstation is available upon subscription software license activation. Refer to Section 7.

Perform the following steps to license a new workstation PC:

1. Click the Windows Start icon and type **License Manager**. Double-click the License Manager app. The License Manager (see Figure 1) displays with an auto-generated workstation ID.

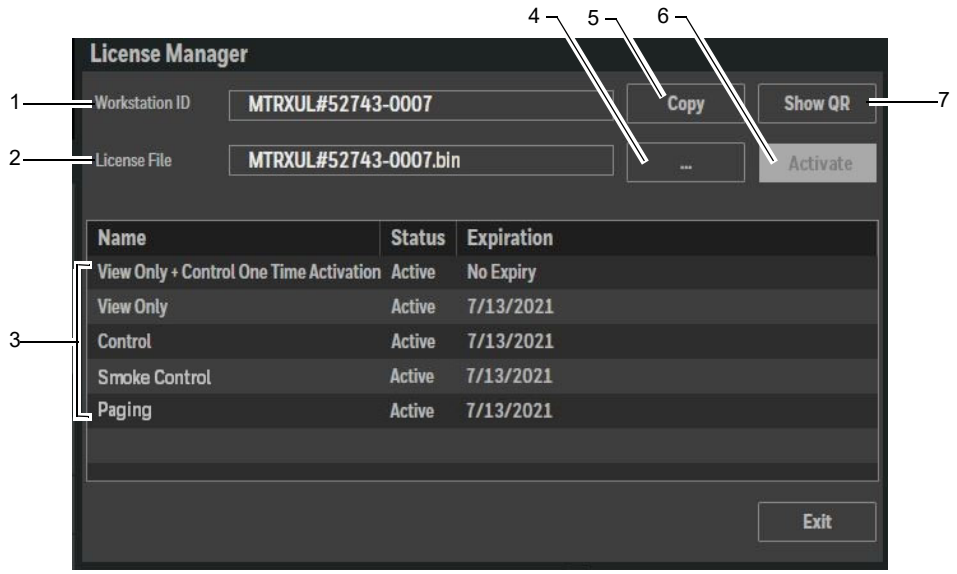

Item	Feature	Description
1	Workstation ID	Auto-generated ID number of the workstation to be licensed.
2	License File	Displays the license file name (.bin) after it has been activated in the workstation.
3	Features List	Displays the licensed features active on the workstation, status, and expiration date of the 5-year license.
4	Browse Button	Click to browse to the location of the license file.
5	Copy Button	Copies the Workstation ID to the clipboard.
6	Activate Button	Click to activate the selected license file.
7	Show QR Button	Displays the Workstation ID QR code to scan with a mobile device.

Figure.1 License Manager Layout

2. Provide the unique workstation ID to an administrator who has access and will be generating the license. The **Copy** button can be used to exactly copy the ID to the workstation PC clipboard or click the **Show QR** button and scan the QR code if using a mobile device.

3. Using an Internet browser, go to fire.honeywell.com or use the CLSS Mobile App. The Honeywell CLSS portal displays.
4. Log in as follows:
   a. Click **Sign In**.
   b. Double-click the appropriate user account. The CLSS portal main window displays.
5. At the left side of the window, click the **Feature Activation** icon .
6. At the top-right side of the window, click the **All Customers** button and select the customer name from the list. Then click **Apply**. The feature activation window for the selected customer displays.
7. Click on **Workstations** and then on **+ADD WORKSTATION**. The *Workstation* window displays.
8. Select **Adding a New Workstation**, paste/enter the workstation ID number in the *Workstation ID #* field and click **NEXT**. The *Add Workstation - Details* tab displays.
9. Provide the following information as necessary:
   - Select the workstation brand from the drop-down list (required).
   - Select the site from the drop-down list (optional).
   - Select the building from the drop-down list (optional).

   Click **Next**. The workstation ID is validated. The *Add Workstation - Feature Selection* tab displays.
10. Select the radio button for features to be available on the workstation. The features available depend on the workstation brand. Click **Next**. The *Add Workstation - Activation* tab displays.
11. Click the **Assign entitlement available in my account** radio button. This a one-time license activation fee. The number of entitlements available in the customer account is displayed. Click **Next**. The number of entitlements is decreased by one. The *Add Workstation - Subscription* tab displays.
12. Proceed as follows:
    - If you wish to enable workstation PC features immediately, select **Purchase Subscription Now** and the **5 Years** radio button.
    - If you wish to enable workstation PC features at a later date, select **Purchase Later**. This allows the workstation to be licensed, and configured at the worksite, but not be fully operational.

    Click **Next**. A confirmation page displays with licensing details for the workstation.
13. Click **Confirm**. A license summary screen displays.
14. Click **Download License**. The license file is downloaded to the local PC *Downloads* folder.
    - If license download process is being performed on the workstation PC, go to step 15.
    - If software download is being performed on a non-workstation PC, navigate to the Downloads folder, copy the license file (.bin) to a USB drive or paste as an attachment in an email for transmission to the worksite. Install the license file on the workstation PC and then go to step 15.
15. Close the workstation application (if running) on the workstation to be licensed and open License Manager (see step 1).
16. In License Manager (see Figure 1):
    a. Click the browse button (**…**).
    b. Navigate to the location of the license file.
    c. Double-click on the license filename (.bin extension). The filename displays in the *License File* field.
    d. Click **Activate**. A license activation success message displays. Click **OK**. The licensed features are displayed in the features list. The license expiration dates for the features display if a subscription has been purchased.
    e. When finished, click **Exit**.
17. Launch the workstation application from Windows 10 as follows:
    a. Click the Windows **Start** icon.
    b. Type "**workstation**" in the search field and **Enter**.
    c. Click the workstation application link in the search results window. The workstation application launches.
18. Log into the workstation and verify that the licensed features (if any) are activated in the workstation. If not, contact Technical Support.

NOTE: Once the license file has been successfully used, it can be deleted from the workstation, if desired.

6. Installing the Documentation EXE File

1. Navigate to the documentation EXE file ("**OWDOCS**" prefix) location on the workstation PC.
2. Double-click the filename and follow the prompts. The documentation folder is installed at **C:\Facilities Monitoring\Documentation**.

7. Activating the Subscription License if the Purchase Later Option Used

NOTE: The Workstation ID# will be required for this procedure.

If during the licensing process, the Purchase Later option was selected, and now you wish to start your subscription that will enable all licensed features on the workstation, proceed as follows:

1. Using an Internet browser, go to fire.honeywell.com.
2. Click **Sign In** and enter your username and password.The Honeywell CLSS portal displays.
3. At the top-right side of the window, click the **All Customers** button.
4. Select the customer name, site, and building from the list. Then click **Apply**. The feature activation window for the selected customer displays.
5. At the left side of the window, click the **Feature Activation** icon . The Feature Activation window displays.
6. Click **Workstations** and view the list of workstations.
7. Scroll down to the row with your workstation's ID and click the arrow (>) in the right-hand subscription column. An information page for the workstation displays.
8. Click **PURCHASE NOW**. The Purchase Subscription page displays showing a 5-year subscription and the price in tokens per year.
9. Click **PURCHASE**. A confirmation page displays.
10. Click **CONFIRM**. A success message displays on the information page for the workstation.
11. Click **Download License**.
12. Click **Download License**. The license file is downloaded to the local PC *Downloads* folder.
    - If license download process is being performed on the workstation PC, go to step 13.
    - If software download is being performed on a non-workstation PC, navigate to the Downloads folder, copy the license file (.bin) to a USB drive or paste as an attachment in an email for transmission to the worksite. Install the license file on the workstation PC and then go to step 14.
13. Close the workstation application (if running) on the workstation to be licensed and open License Manager (refer to Section 5, step 1).
14. In License Manager (see Figure 1):
    a. Click the browse button (**…**).
    b. Navigate to the location of the license file.
    c. Double-click on the license filename (.bin extension). The filename displays in the *License File* field.
    d. Click **Activate**. A license activation success message displays. Click **OK**. The licensed features are displayed in the features list. The license expiration dates for the features display if a subscription has been purchased.
    e. When finished, click **Exit**.
15. Launch the workstation application from Windows 10 as follows:
    a. Click the Windows **Start** icon.
    b. Type "**workstation**" in the search field and **Enter**.
    c. Click the workstation application link in the search results window. The workstation application launches.
16. Log into the workstation and verify that the licensed features (if any) are activated in the workstation. If not, contact Technical Support.

NOTE: Once the license file has been successfully used, it can be deleted from the workstation, if desired.