Honeywell

GENT

by Honeywell

Updated Jan 2012

Programming Custom messages in S-Quad

Prepared by Simon Foulkes
Product Manager
Gent by Honeywell
Waterside Road
Leicester
LE5 1TN

Tel 0116 246 2536

Email: simon.foulkes@Honeywell.com


Settings for programming S-Quad

MTTTY Tool may be downloaded from the following address


http://www.flaminsystems.com/page/page/2887252.htm

Before connecting open the tool on the PC and set the baud rate and other settings optons as shown in the screenshots below.


Once set these will remain as default settings. Close the tool before connecting to a device.

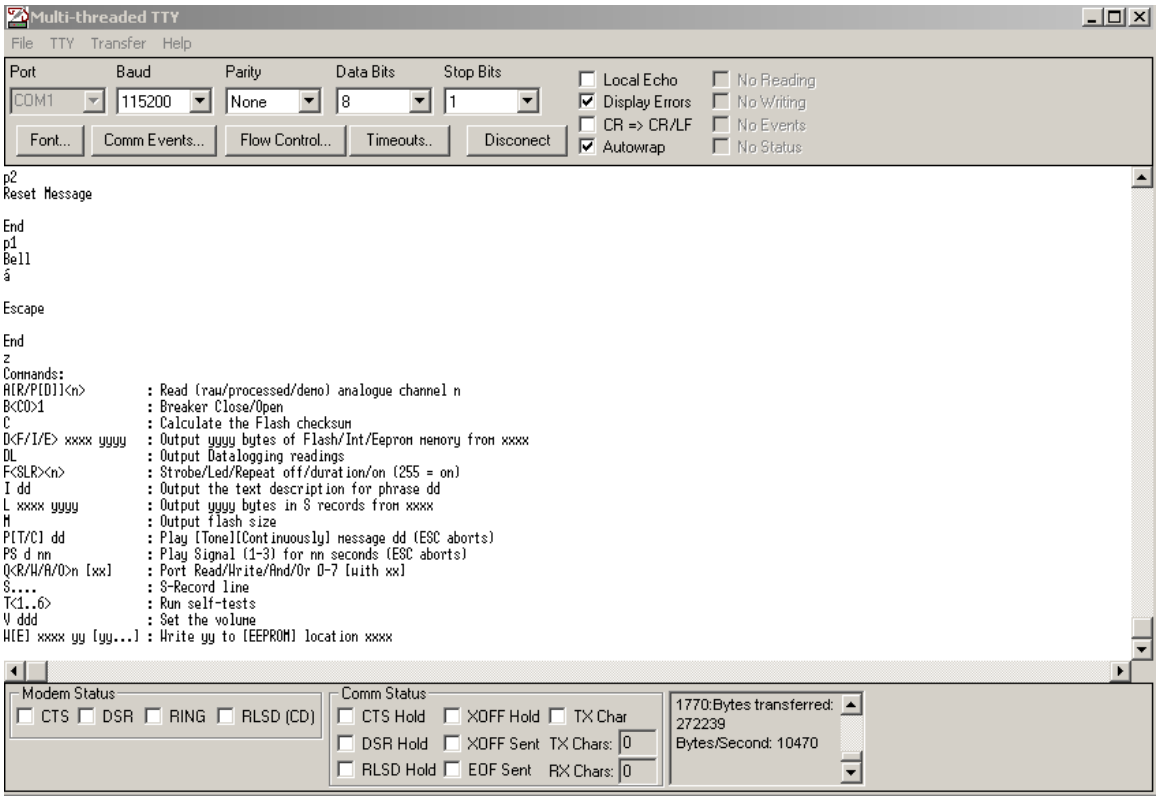


Click Comm Events...
and check settings as shown

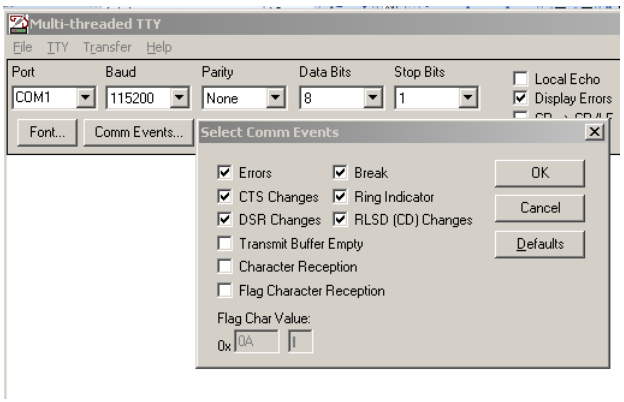

Click Flow Control...
and check settings as shown

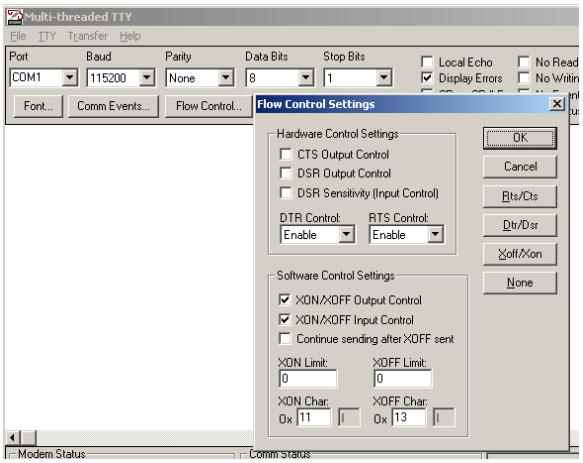

Click Timeouts..
and check settings as shown

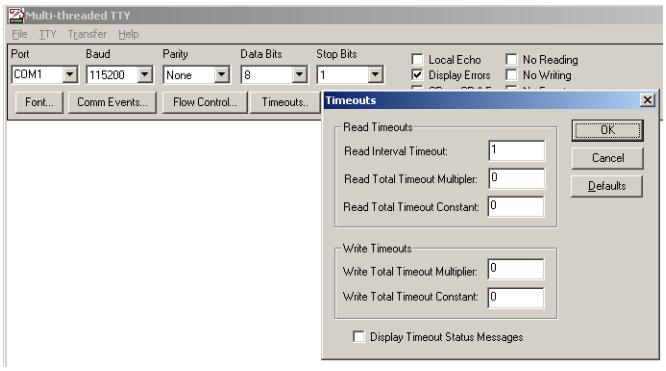

Connecting to an S-Quad Device

Before connecting an S-Quad device must be fitted in the programming base and powered up. A short audible tone must be heard on power-up otherwise programminng will not proceed.

To connect click 

and you will see device information in the dialogue box of the PC tool.

To download messages to S-Quad press function key F5 on the PC to select file to transfer

Select the .S19 file that wish to upload.

Click Open and transfer will commence.

Transfer is complete when the S-Quad beeps several times along with the strobe (if fitted) followed by the bell tone.

Checking the message

Type “Z” into the dialogue box and carriage return on the PC. A list of control options will appear.

To play a message Type the command “P1” and this will play message 1 (usually the bell). P2, P3, etc will play the remaining messages.

Connecting to S-Cubed

1 - Ribbon Cable connects S-Quad Programmer and S-cubed Sounder and tool is used in same way as for S-Quad



2 – base cover needs to be removed from Programmer and ribbon cable fitted in place of ribbon to contacts.



3 – Ribbon fits to connector behind yellow test label on S3. Loop connections L1 and L2 should shorted to discharge any latent capacitance prior to connecting up to base.

