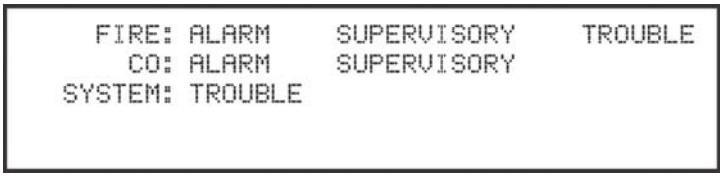
Model IFP-2100 Basic Operating Instructions

Honeywell


These instructions must be framed and displayed next to the IFP-2100 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

Operation	Task to Perform
Silence Alarms and Troubles	Press SILENCE then enter a code if prompted. Silence LED will light.
Reset Alarms	Press RESET then enter a code if prompted.
View Alarms, Supervisories, and Troubles	For each type of condition, press the up or down arrow associated with Alarm, Supervisory, or Trouble. 
View status of Point	1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 2 to select Point Functions. 3. Enter code if prompted, then press 2 to select Point Status. 4. Select the module the device is located on by using the up or down arrow. Then press ENTER. 5. Enter the point number.
Conduct a Fire Drill	Hold the DRILL button and then enter a code if prompted. OR 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 1 to select System Tests. 3. Enter code if prompted, then press 1 to select Fire Drill. 4. Press ENTER to start the fire drill., and Press ENTER to end the fire drill.
Check Detector Sensitivity	1. Follow steps 1 through 5 for viewing a point's status. 2. Press the right arrow to view detector sensitivity.
Set Time and Date	1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 4 to select Set Time & Date. Enter a code if prompted. 3. Make changes to the fields on the screen as necessary. 4. Press ENTER if you wish to keep the changes. 5. Press ENTER to set the entered time and date.
Enable / Disable a Point	1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 2 to select Point Functions. 3. Press 1 to select Disable / Enable Point. 4. Press 7 to select Disable/Enable Point. 5. Select the module the point is located on by using the up or down arrow. Then press ENTER. 6. Enter the point number then press ENTER. 7. Press the right arrow to Disable/Enable Point.
View Event History	1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 3 to select Event History. 3. Enter code if prompted. 4. Press the up or down arrow to view events in the history buffer.
For Service call:	

P/N LS10149-001SK-E Rev A

ECN: 16-0218

Cut Along the Dotted Line


Cut Along the Dotted Line