

# Flush-mounted Trim Ring Product Installation Document

PN 53144:B1 2/08/2012 12-0099

## Inventory


This trim ring ships unassembled as four (4) black metal frame edges and a hardware kit. The hardware kit contains four (4) corner torque plates and four (4) corner screw brackets.

When using this trim ring, mount the backbox with at least 1 inch (2.54 cm) between the wall surface and front of the backbox, to allow the door to open fully past the trim ring. No hardware is required to secure the trim ring to the backbox. Double-sided adhesive tape comes pre-affixed to the trim ring edges.

## Installation Instructions


To assemble the trim ring, follow the instructions below.

**Step 1:** The top and two (2) sides must be assembled first. Place a corner torque bracket into the corner of one of the trim ring edges. Slide a corner screw bracket over the torque plate and screw down.

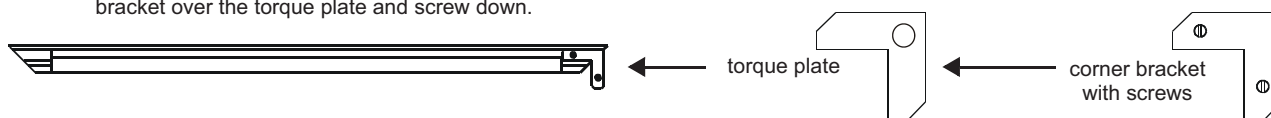


**Step 2:** Slide a second trim ring edge over the torque plate and bracket from step 1 and secure.

**Step 3:** Secure the third side with the torque plate and corner bracket in the same manner as steps 1 and 2.

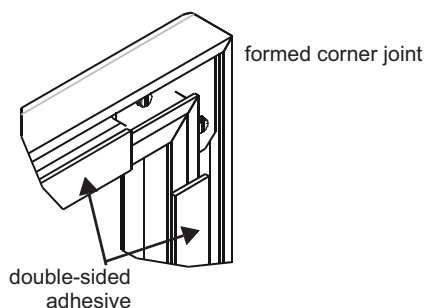

**Step 4:** With the last side piece, secure the remaining two (2) plates and brackets in both ends.

**Step 5:** Slide the brackets on the final side of the trim ring into the three (3) assembled sides and fasten down.

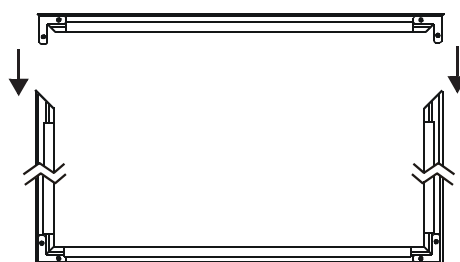

Trim Ring Front View

**Step 6:** Remove adhesive tape backing from the assembled trim ring and secure in place to the wall, lining up the trim ring around the backbox.

