



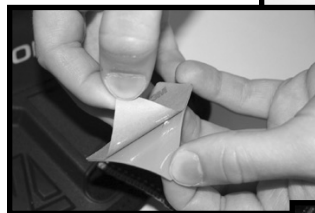

**REVOLUTION
HARNESS
IDENTIFICATION
LABEL
INSTRUCTIONS**

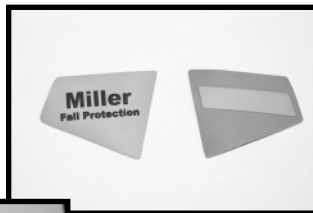

Peel backing off label.


Apply label to backpad. Company identification label is applied to the left location while the worker identification label is applied to the right.



If the label is not pre-printed with identification, use a permanent marker to write identification on the label.

I242 Rev. A.
MFP9720120

Snap-On Gen 2 Connector Installation Instructions

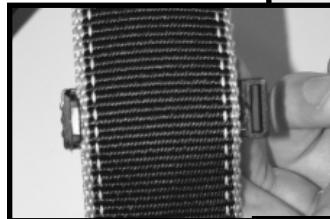

Place back half of
connector behind
webbing.

Snap top half with
green connection but-
ton on top of the back
half.



Attach accessory.