

## PerfectFit cut-resistant gloves

### Glove Sizing Guide

#### OPTION 1

**Step 1:**


Print this page at 100% (US letter).

**Step 2:**

Align the thumb and index finger of your right hand with the line indicated▲.

**Step 3:**

The widest part around your knuckles will indicate the correct glove size you require.

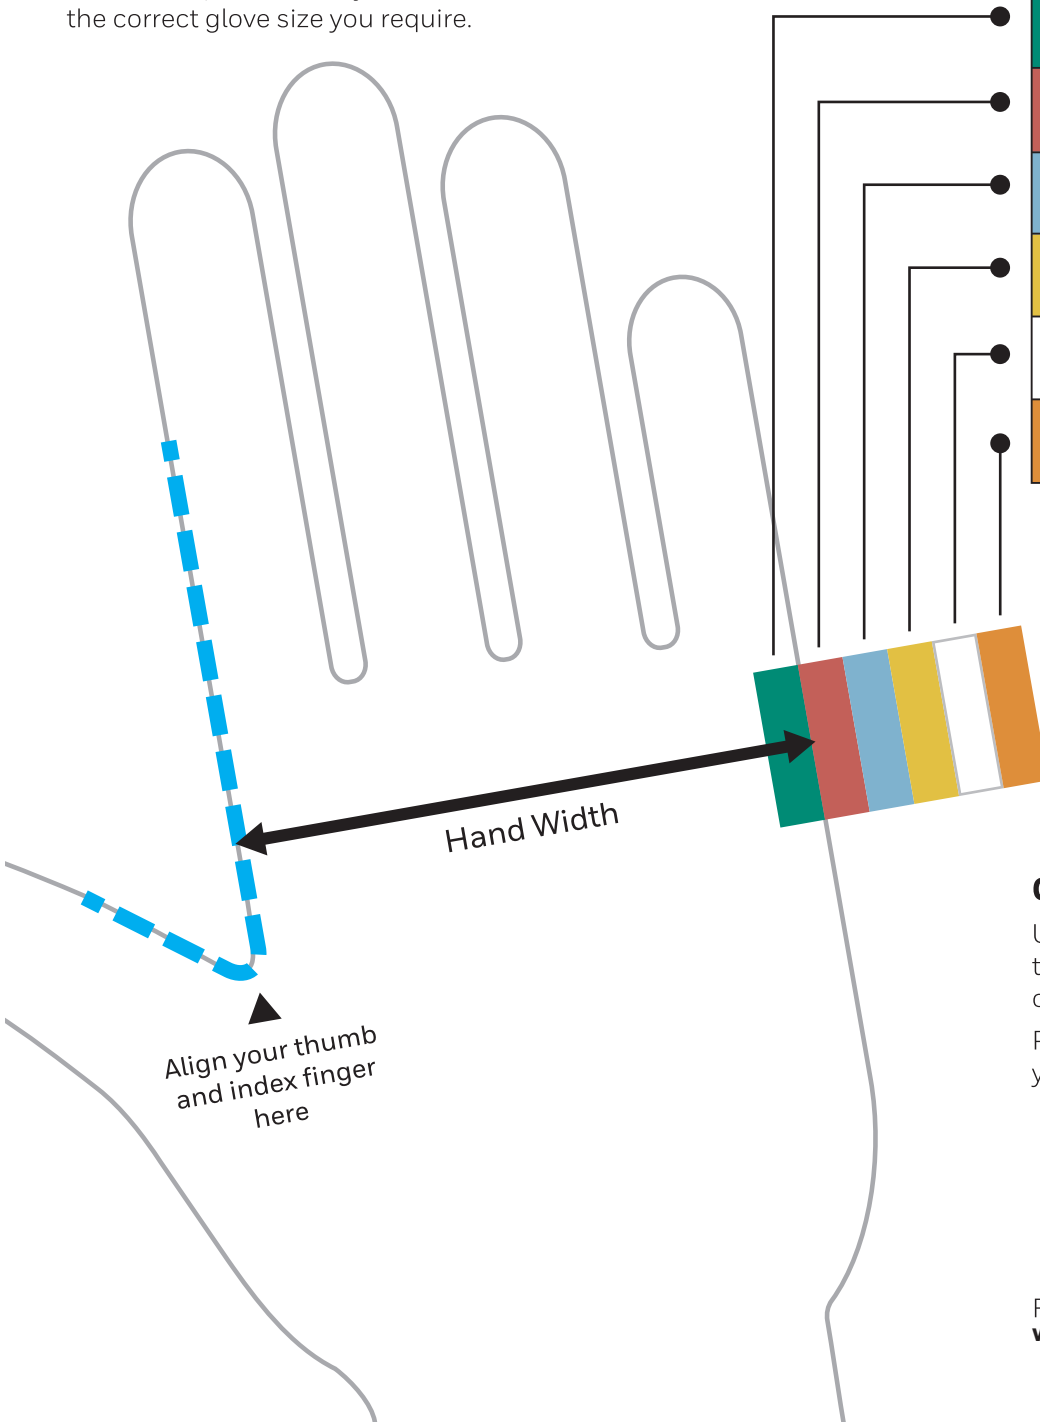

Glove Size	Hand Width
6/XS	2 <sup>3</sup> / <sub>4</sub> " - 3"
7/S	3" - 3 <sup>1</sup> / <sub>4</sub> "
8/M	3 <sup>1</sup> / <sub>4</sub> " - 3 <sup>1</sup> / <sub>2</sub> "
9/L	3 <sup>1</sup> / <sub>2</sub> " - 3 <sup>3</sup> / <sub>4</sub> "
10/XL	3 <sup>3</sup> / <sub>4</sub> " - 4"
11/XXL	4" - 4 <sup>1</sup> / <sub>4</sub> "

**Note:**

If you are between sizes, please choose the larger size.

The gloves with rubber coating may fit slightly tighter because of the natural rubber characteristics, so it is advisable to go one size up.

#### OPTION 2

Using a measuring tape, measure the distance across the widest part of your right palm as indicated.

Reference the size chart to find your closest size.