### features

- Modbus protolcol supported
- IP67 rated enclosure
- Integrates seemlessly with ZX control panels
- RS232 third party data port

The Modbus interface unit connects to the RS-485 peripheral bus of the ZX series fire alarm control panels and allows panel interrogation by a Modbus control system. Information on the states of panel outputs, peripherals, detectors and the general operating condition of the panel can be requested.

The unit consists of a circuit card mounted on a steel plate within a polycarbonate IP67 rated enclosure, as shown above. Pre-pressed knock-outs on the box sides allow cable entry glands to be fitted for power and communication line wiring.


A DC supply in the range of 18-28 Vdc, typically 24 Vdc, rated at 150 mA, is required to power the interface, An on board switch mode power supply isolates this input from all communication circuitry. An adequate DC supply can be obtained from the fire control panels auxiliary 24 Vdc output (see fire control panel manual). An earth reference should be connected to the Modbus Interface Platforms Earth termination point from the supply earth (i.e. fire control panel entry gland).

For a complete listing of the commands supported please refer to the installation guidelines and commissioning instructions, document EXP-057.

## mechanical

**Dimensions** 250 x 175 x 75 (W x H x D mm)

Weight 1.1 kg

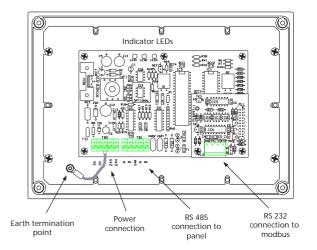



Charles Avenue, Burgess Hill West Sussex, RH15 9UF United Kingdom

+44 (0) 1444 23 55 56 +44 (0) 1444 25 44 10 Email: sales@morleyias.co.uk www.morley-ias.co.uk





## electrical

Power consumption 120 mA @ 24 Vdc Power Supply 18 V to 28 Vdc

**LED** indicators

LED1 - Blinks at 1Hz when unit is powered.

LED2 - Indicates Modbus data is currently being

received on the RS-232 port which is

addressed to the unit.

LED3 - Indicates Panel data is currently being

received on the RS-485 port which is

addressed to the unit.

### **Modbus Communication Settings**

Parameter Setting Mode RTU

Baud rate 9600 baud

Data bit 8

Framing 1 start bit, 1 stop bit

Parity None Interface RS232

#### Note


The fire control panel must be running software version 560 or higher to support a Modbus interface unit.

# part numbers

**795-057** Modbus Interface Unit

## accessories

**795-004-001** RS4885 communication card.

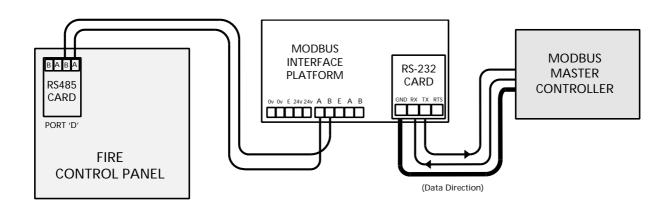

Your Local Distributor