
MX8Z-AN
Master Matrix



Slave matrix, certified EN54-16, predisposed for the insertion of 8 MZA-AN or MZAB-AN modules to control the amplifier and the speakers line. Frontal LED to 'FAULT' and 'BUSY' for each zone, two RJ45 terminals for the connection to the Master matrix or other slave extensions, terminal to connect 1 x spare amplifier for backup. Height: 2 modular units.

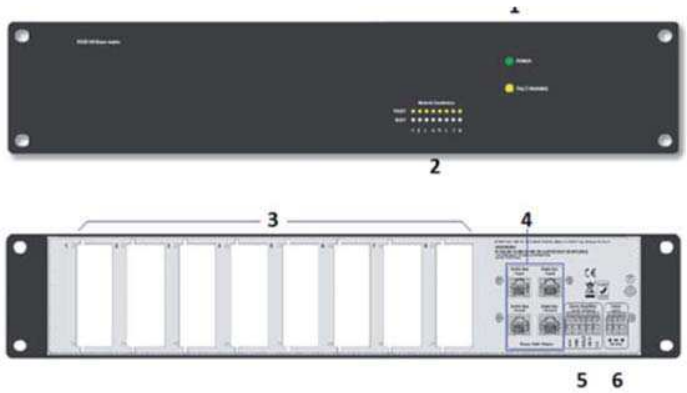

1. Status LED: 'POWER' to indicate the 'POWER-ON' status, 'FAULT WARNING' to indicate a system fault.
2. Zones LED: LED 'FAULT' (Yellow): to indicate a fault on the relative audio line, LED 'BUSY' (White) to indicate an audio signal running on the relative audio line.
3. 8 x Predisposed slot to insert MZA-AN (single line zone controller) or MZAB-AN (redundant A+B line).
4. 4 x RJ-45 terminals to connect the Master matrix (MX6Z-AN) or other Slave units (MX8Z-AN).
5. Spare Amp input for backup 1:8.
6. 24 V input.

MX8Z-AN Technical Features

LAYOUT	Steel enclosure, rack mountable with extensions slots on back panel
DIMENSIONS	W:19" – H: 2U – D: 195,5mm
WEIGHT	4,5 Kg
OPERATION / HUMIDITY	-5 ° C ÷ +60 ° C; Humidity 25% -75%
USER INTERFACE	16 X Line Status LED.
POWER INPUT	+24Vdc (min 22Vdc, max 28Vdc)
CONSUMPTION	2,64W (110mA @ 24Vdc) - measurement condition: quiescent state, all slots empty, no mic station connected
CERTIFICATE	EN54-16: 0068-CPR-018/2016 del 27/4/2016