# ID60 Series

## Single Loop Intelligent Fire Alarm Panels

Section: Intelligent Fire Alarm Panels

## GENERAL

The NOTIFIER ID60 Single Loop intelligent fire alarm panel, has been developed for both installers and end users with efficiency in mind, offering a technically advanced range of facilities and functions whilst remaining easy to install, program and operate. The ID60 panel is built and tested with the most sophisticated equipment available to ensure the highest quality and excellent reliability.



The ID60 supports NOTIFIER's unique Very Intelligent Early Warning (VIEW™) technology. Combined with the patented AWACS™ (Advance Warning Addressable Combustion Sensing) and DIG (Dynamic Intelligent Grouping) algorithms, the ID60 provides the most cost-effective, stable and reliable early warning system without the need to use costly aspirating detection sub systems.


The ID60 Single Loop Intelligent Fire Alarm Panel meets EN54 parts 2 & 4.
The ID61 & ID62 can be upgraded to 2 loops without the need to change the back box.

## Intelligent Features

- ✓ EN54 parts 2 and 4 compliant
- ✓ One loop capacity (99 sensors and 99 modules)
- ✓ 16 fire zones, 16 non fire zones
- ✓ Supports advanced detection such as
  - VIEW™
  - OptiPlex
  - HARSH™
  - HAZARD™
- ✓ 64 CBE rules
- ✓ Filter by device type
- ✓ Printer option
- ✓ 72 hours backup option
- ✓ Extinguishing controls
- ✓ Adjustable sensor sensitivity
- ✓ Automatic High Test
- ✓ Day/Night mode facility
- ✓ Class Change
- ✓ Active and passive repeaters
- ✓ Programmable from the panel keypad or PC
- ✓ Two on board sounder circuits
- ✓ Two on board configurable outputs
- ✓ "Autolearn" facility.
- ✓ Unconfigured device detection.
- ✓ One man "Walk Test" by zone.
- ✓ 512 event Historic Log.
- ✓ Duplicate address fault monitoring.
- ✓ Coincidence function.
- ✓ Loop powered sounder support.
- ✓ Non-latching "Plant Alarm" function.
- ✓ Pulsing sounders support.
- ✓ Output delay functions.
- ✓ Remote "Reset" function.
- ✓ 3 second response to manual call point activation.
- ✓ Alarm verification algorithm.
- ✓ Internal diagnostics program.
- ✓ Fully on-site configurable.
- ✓ Windows™ off-line configuration tool.
- ✓ Loop and Battery calculator.
- ✓ 20 characters of configurable zone text.
- ✓ 20 characters of configurable device location text.
- ✓ Built-in language variants.

## User Interface

- ✓ 16 zone indications of fire and fault, disablement/test
- ✓ 2 Lines of 40 characters each on a backlit LCD
- ✓ Real time clock for time-stamping of events
- ✓ 11 configurable pass codes for access restriction
- ✓ Numeric and Navigation keys
- ✓ Plant Alarm (Non-Fire) LED indication

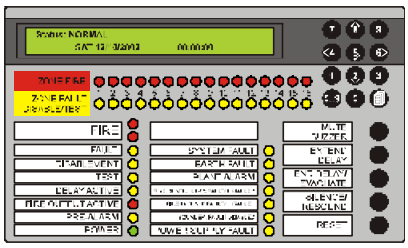

## Housing

- ✓ Two part, mild steel cabinet
- ✓ Plastic moulded insert
- ✓ Customer ID label indent

## Passive Repeater

- ✓ A compact mild steel housing incorporates all electronics for the fully monitored and addressable repeater unit
- ✓ A 2 x 40 character LCD indicates all information
- ✓ Incorporated status LED's for FIRE, FAULT, DISABLEMENT, POWER, PRE-ALARM, TEST, DELAY ACTIVE, SYSTEM FAULT and COMMUNICATIONS LOSS

This document is not intended to be used for installation purposes. Every care has been taken in the preparation of this document but no liability can be accepted for the use of the information therein. Design features may be changed or amended without prior notice. For more information, contact **NOTIFIER.**
Charles Avenue, Burgess Hill, West Sussex, RH15 9UF. United Kingdom
Phone: +44 (0) 1444 230 300 Fax: +44 (0) 1444 230 888

**ISO9001**
Design, Manufacture and Supply to Quality Management Systems Certified to ISO9001:1994

- ✓ Any combination of up to 16 Passive/ Active repeaters may be connected to a single ID50 Series Panel which will require an RS485 Interface Module PCB to be fitted in order to communicate
- ✓ Requires a 24V DC source at 90mA max. for power
- ✓ Optional semi-flush mounting Bezel

### Active Repeater


- ✓ A compact mild steel housing incorporates all electronics for fully the monitored and addressable repeater unit
- ✓ A 2 x 40 character LCD indicates all information
- ✓ Incorporated status LED's for FIRE, FAULT, DISABLEMENT, POWER, PRE-ALARM, TEST, DELAY ACTIVE, SYSTEM FAULT and COMMUNICATIONS LOSS are included, and control push-buttons for MUTE BUZZER, END DELAY/ EVACUTATE, SILENCE/RESOUND and RESET
- ✓ A keyswitch provides restricted access to control pushbuttons
- ✓ Any combination of up to 16 Passive/ Active repeaters may be connected to a single ID50 Series Panel which will require an RS485 Interface Module PCB to be fitted in order to communicate
- ✓ Requires a 24V DC source at 90mA max. for power
- ✓ Optional semi-flush mounting Bezel

## Windows™ Configuration Tool

- ✓ Simple to use Offline onfiguration
- ✓ Simple to use Output configuration
- ✓ Simple to use Text entry

Note...

**Example of the Windows™ Offline Configuration Tool below.**

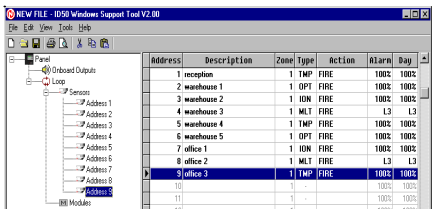


# SYSTEM MODULES

The ID60 Series Panel is available with the following modules. Choose from the required modules below. Each kit is supplied with all required fixings and installation instructions.

- **002-456 ID60 Series Panel**

ID60 single loop intelligent fire alarm panel. Supports VIEW™. Complete with 16 zonal LED's, sounder circuit, 1.5A power supply and space for 12Ah batteries. Black/Grey. LPCB approved.



- **002-463 ID61 Series Panel**

ID61 single loop intelligent fire alarm panel. Supports VIEW™. Complete with 16 zonal LED's, sounder circuit, separate 3A power supply, printer option and space for 12Ah batteries. Black/Grey. LPCB approved.




- **002-461 ID62 Series Panel**

ID62 single loop intelligent fire alarm panel. Supports VIEW™. Complete with 16 zonal LED's, sounder circuit, separate 3A power supply, printer option and space for 42Ah batteries. Black/ Grey. LPCB approved.




- **020-644-009 PRN-ID Printer Module Kit for ID61/ID62**

Includes thermal printer with power supply unit and roll of thermal paper.

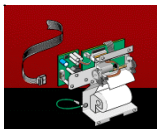

- **020-553 RS485 Interface Module PCB Kit ID60**

Includes the RS485 Interface Module PCB required for repeater interfacing to the ID60 Series Panel. Plugs into dedicated socket on ID60 Series Panel PCB Assembly. Includes instruction sheet and fixings.

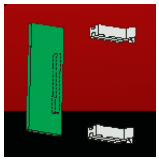

- **020-479 RS485 Interface Module PCB Kit ID61 / 62**

Includes the RS485 Interface Module PCB required for repeater interfacing to the ID61 / ID62 Series Panel. Plugs into dedicated socket on ID61 and ID62 Panel PCB Assemblies. Includes instruction sheet and fixings.



- **002-451 IDR-2P Passive Repeater**

Includes the complete passive repeater unit with all assembled electronics, Liquid Crystal Display (LCD), Fascia membrane and manual.



- **002-465 IDR-2P Passive Repeater, stainless steel**

Includes the complete passive repeater unit with all assembled electronics, Liquid Crystal Display (LCD), Fascia membrane and manual.



- **002-450 IDR-2A Active Repeater**

Includes the complete active repeater unit with all assembled electronics, Liquid Crystal Display (LCD), Control pushbuttons, Access control keyswitch, Fascia membrane and manual.



- **002-464 IDR-2A Active Repeater, stainless steel**

Includes the complete active repeater unit with all assembled electronics, Liquid Crystal Display (LCD), Control pushbuttons, Access control keyswitch, Fascia membrane and manual.



- **020-573 Mimic Control PCA Kit**

Supports up to 8 Mimic Drivers. Requires external 24Vdc power.



- **020-574 Mimic Driver & Terminal Board PCA Kit**

  Provides 64 LED's or Relay outputs and 8 inputs. Up to 8 Mimic Drivers can be daisy-chained. Requires Mimic Control PCA kit and external 24Vdc power.




- **020-599-009 ID60 Semi-flush Bezel Kit**

  Includes semi-flush mounting bezel for ID60 Black/Grey and instruction sheet.



- **020-038-009 ID61 Flush Bezel Kit**

  Includes flush mounting bezel for ID61, Black/ Grey and instruction sheet.

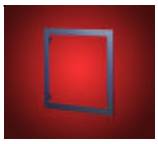

- **020-039-009 ID62 Semi-flush Bezel Kit**

  Includes flush mounting bezel for ID62, Black/Grey and instruction sheet.



- **020-600-009 Flush Bezel for IDR Repeaters**

  Flush mounting bezel for IDR repeaters, Black/ Grey.



- **020-638-004 ID60 Replacement PCB Assembly Kit**

  ID60 replacement PCB kit, including LCD and membrane.



- **020-650-004 ID61 & ID62 Replacement PCB Assembly Kit,**

  ID61 & ID62 Replacement PCB Assembly Kit, Including LCD and membrane.




- **020-648 Replacement Power Supply**

  Replacement power supply (3A) for ID61/ ID62.



- **020-562 ID60 series Support Tool Kit**

  Including Offline Configuration software, on-line manual and interconnection cable assembly.

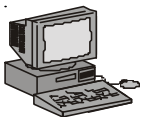

# PANEL SPECIFICATIONS

## Primary Input Power

- ✓ **ID60** - 230VAC, 50Hz, 1. 0A
- ✓ **ID61** - 230VAC, 50Hz, 1.6A
- ✓ **ID62** - 230VAC, 50Hz, 1.6A

## Sounder Outputs

- ✓ 2 Sounder outputs rated @ 30V 1A each

## Sounder / Volt-free Outputs

- ✓ 2 Sounder / Volt-free outputs rated @ 30V 1A

Note...

**Default as general fire and fault relay contacts.**

## Open - Collector Outputs

- ✓ 2 configurable outputs rated together @ 60mA total output

## Auxiliary Output

- ✓ 24V Auxiliary Output rated @ 250mA

## Power Supply / Battery Charger


- ✓ **ID60 -** Maximum 1.5A total output, 0.5A for battery charger, supporting 12Ah batteries to EN54.
- ✓ **ID61/62** - Maximum 3A total output, 2.2A for battery charger, supporting 42ah batteries to EN54
- ✓ Maximum of 1A available in alarm for sounders etc.

## Digital Input


- ✓ 1 configurable input defaulting to Level 2 access control.

## Dimensions


### ID60

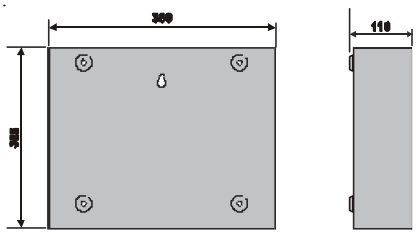


### ID61

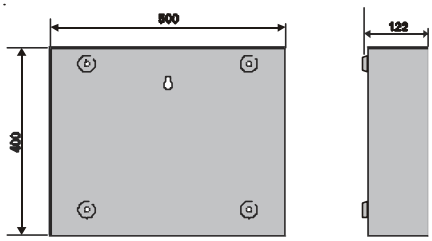


### ID62

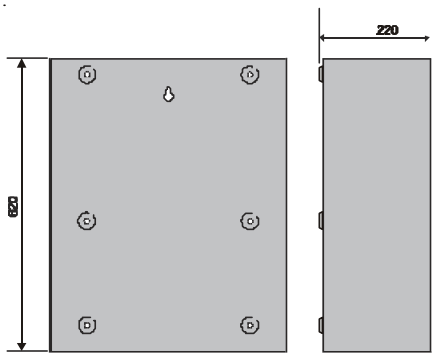


Note...

All dimensions are in Millimetres

## Weight

- ✓ **ID60** - 6kg without batteries.
- ✓ **ID61** - 9.5kg without batteries.
- ✓ **ID62** - 15.5kg without batteries.

## Battery Space

- ✓ **ID60** - Maximum 2 x 12V, 12Ah batteries.
- ✓ **ID61** - Maximum 2 x 12V, 12Ah batteries.
- ✓ I**D62** - Maximum 2 x 12V, 42Ah batteries.

## Cable Access

- ✓ **ID60** - 16 x 20mm knockouts in top of cabinet.
- ✓ **ID61** - 25 x 20mm knockouts in top of cabinet.
- ✓ **ID62** - 25 x 20mm knockouts in top of cabinet.

### Environmental Limits

- ✓ Climatic Classification :

  3K5, (IEC 721-2-3)
- ✓ Operating Temperature :

  -5° C to +45° C
- ✓ Humidity :

  5% to 95% R.H.
- ✓ Panel Sealing :

  IP 30, (EN 60529)

## REPEATER SPECIFICATIONS

### Primary Input Power

- ✓ 18 - 32V DC (+10%, -15%).


### Current Consumption

- ✓ 90mA rated @ 24V DC.

### Communications

- ✓ RS485.

### Dimensions

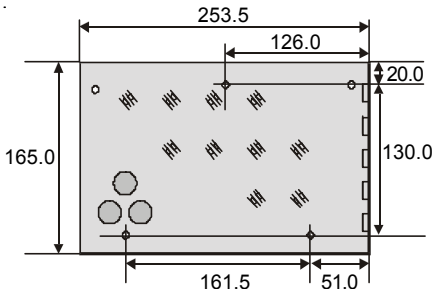


### Weight

- ✓ 750g.

### Cabling

- ✓ Maximum 1200 metres communications cable with 150R terminating resistors at both ends.

### Cable Access

- ✓ 5 x 20mm knockouts in top of cabinet.
- ✓ 3 x 20mm knockouts in back of cabinet.

### Environmental Limits

- ✓ Climatic Classification :

  3K5, (IEC 721-2-3)
- ✓ Operating Temperature :

  -5° C to +45° C
- ✓ Humidity :

  5% to 95% R.H.
- ✓ Panel Sealing :

  IP 30, (EN 60529)

## CONTROLS AND INDICATORS

### Led Status Indicators

- ✓ FIRE
- ✓ DISABLEMENT
- ✓ TEST
- ✓ BUZZER MUTED
- ✓ PLANT ALARM or FAULT OUTPUT FAULT / DISABLED (Configurable)
- ✓ DELAYED MODE
- ✓ RELAY DISABLED
- ✓ POWER
- ✓ FAULT
- ✓ POWER SUPPLY FAULT
- ✓ EARTH FAULT
- ✓ SYSTEM FAULT
- ✓ SOUNDER FAULT
- ✓ SOUNDERS DISABLED
- ✓ SOUNDERS SILENCED or PRE-ALARM (Configurable)
- ✓ Individual FIRE and FAULT / DISABLED / TEST LED's per zone

### Membrane Push-button Controls

- ✓ RESET
- ✓ EXTEND DELAY
- ✓ MUTE BUZZER
- ✓ SILENCE / RESOUND
- ✓ END DELAYS / EVACUATE

### Configuration and Selection Keys

- ✓ 12-Key Numeric / Navigation Keypad when used in conjunction with the Shift key.
- ✓ , , and Navigation Arrows
- ✓ (Select) Push-button
- ✓ (Shift) Push-button for numeric functions
- ✓ (Access Code Prompt) Push-button

### LCD Display

- ✓ Alphanumeric 80 Character (2 x 40) Backlit Display

## SYSTEM CAPACITY

### Intelligent Signalling Line Circuits (SLC)

- ✓ 1 Loop per panel

### Number of Zones

- ✓ 16 Zones of Fire Detection per panel
- ✓ 16 Zones of Non-Fire (Plant Alarm) per panel

### Intelligent Sensors

- ✓ 99 Intelligent Sensors per loop

### Addressable Modules

- ✓ 99 Addressable Monitored / Control Modules per loop