

Fendall 2000™ Door Alarm Installation For the Alarm & Switch Control Box Assembly (#32-002011-0000)

1. Inspect package and ensure that it includes the alarm box, switch control, and 9V industrial battery (the battery should already be installed).
2. Ensure the battery is installed properly in the new alarm box.
3. Use a screw driver or a pen on the release button in the center of the station's door. **Fig. 1**
4. While the button is pressed in, gently pull door open (there should be no resistance).
5. Remove the front panel. To do this first deactivate the alarm, see *ALARM SHUT-OFF PROCEDURE* (Below).
6. Carefully slide the nozzle out of the nozzle compartment on the front panel (let the nozzle hang in the basin below) and remove the front panel. **Fig. 2**
7. Uninstall the old alarm box and switch control by remove the three screws holding it in. **Fig. 3**
8. Install the new Alarm & Switch Box in reverse of the way the old one was removed.
9. Turn the on/off switch to "On". **Fig. 3**
10. Place the front panel back on the unit and close side panels.
11. In event of alarm activating before station is armed, see *ALARM SHUT-OFF PROCEDURE* (Below).
12. Open the door and pull the head rest towards you.
13. Pull out the nozzle from the basin. Slide the nozzle into the nozzle compartment, making sure the tube is not twisted and that the small locking hub of the wire tie is facing towards the inside of the unit. **Fig. 4**
14. Push the headrest back to its original position until an audible 'click' is heard. Close the door by pressing the center of the door and a 'click' will be heard confirming the nozzle is engaged.
15. Unit is now armed and ready for use.

Alarm Shut-off Procedure

1. Locate small blue button inside door of station.
2. Press and hold button for approximately 3-5 seconds until a beep is heard to disarm the alarm.
3. To rearm alarm, close station door. **ALARM IS NOW ARMED.**



Fig. 1

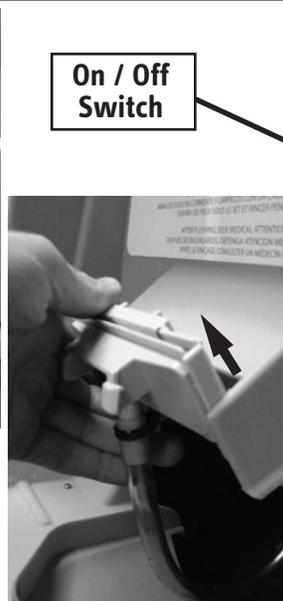


Fig. 2

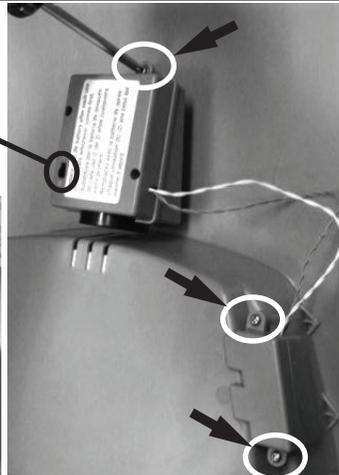


Fig. 3

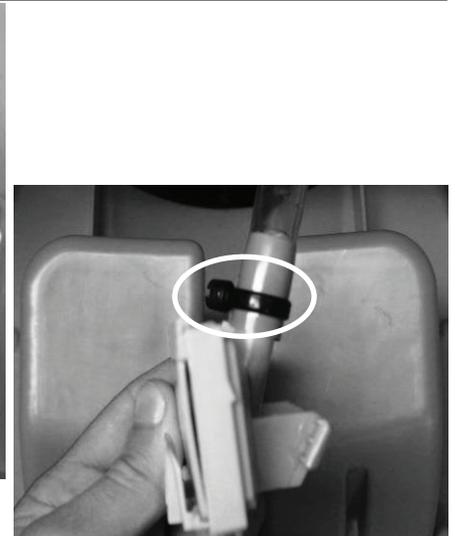


Fig. 4