



## Vertex M Crate Unpacking Instruction

Tools required: 1. 9/16" wrench  
2. Phillips screwdriver, #2

1. Figure 1 shows the Vertex-M crate as received.

**Warning: Place crate on a level surface before unpacking.**

2. Remove front cover (installed with 6 bolts). Rear cover is not removable. See Figures 1-3.
3. Remove top cover (installed with 6 bolts). See Figure 3.
4. Remove inner packaging foam inserts.
5. Place top cover in front of crate, as shown in Figure 4. Top cover will be used as a ramp to roll out unit.

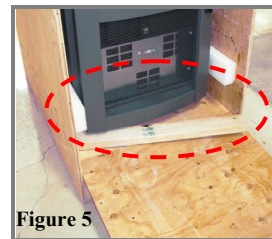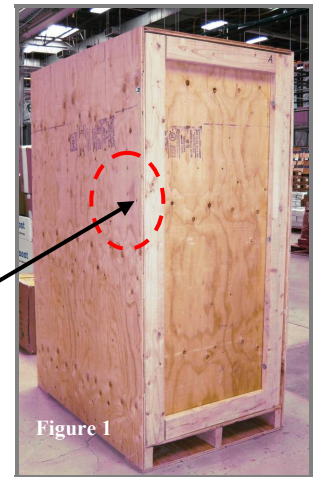

6. First, remove screw securing wheel chock-block. Then remove chock-block. See Figure 5.
7. Roll unit out of crate. See Figure 6.