

GasAlert MicroClip

Multi-Gas (1-4) Detector



H₂S, CO, O₂, LEL



GasAlert
MicroClipXL

GasAlert
MicroClipX3

IntelliFlash

Multi-gas made simple

The easy to wear, slim and compact GasAlertMicroClip provides affordable protection from atmospheric gas hazards and extended battery life, especially in cold weather. The GasAlertMicroClip features visual compliance at a glance with the flashing, green IntelliFlash™. Easy one-button operation reduces training time and lets workers focus on the job at hand. For simple, cost-effective management of your records, calibration and bump testing, choose BW's MicroDock II automatic test and calibration system and Fleet Manager II software.



Meets ACGIH 1 ppm H₂S TWA recommendations.

Visit honeywellanalytics.com to download the latest Fleet Manager II update.

Standard Package Contents

- Detector complete with specified sensor(s), stainless steel alligator clip and concussion-proof housing
- Rechargeable battery
- Wall outlet charging adaptor
- Calibration/test cap and hose
- Manual
- Multi-language CD manual

General Specifications

| | GasAlertMicroClip XL | GasAlertMicroClip X3 |
|-------------------------------------|--|--|
| Size | 4.4 x 2.4 x 1.2 in. / 11.3 x 6.0 x 3.1 cm | 4.4 x 2.4 x 1.2 in. / 11.3 x 6.0 x 3.1 cm |
| Weight | 6.7 oz. / 190 g | 6.3 oz. / 179 g |
| Temperature | -4 to +122°F / -20 to +50°C | |
| Typical battery life | 18 hours (recharges in less than 6 hours) <i>Note: Battery is guaranteed to have 12 hour runtime during warranty period under normal operating temperature of 4°F / -20°C to 122°F / 50°C.</i> | |
| Ingress Protection | IP68 | |
| Certifications and approvals | <p> Class I, Div. 1, Gr. A, B, C, D</p> <p>ATEX:  II 1 G Ex ia IIC T4 Ga</p> <p>IECEX: Ex ia IIC T4 Ga</p> <p>CE: European Conformity</p> | |
| Warranty | Full two-year (GasAlertMicroClip XL) or three-year (GasAlertMicroClip X3) warranty including all sensors | |

BW
Technologies
by Honeywell

| | Order Number | |
|---|-----------------------------|-----------------------------|
| GasAlertMicroClip 4-Gas Detector | GasAlertMicroClip XL | GasAlertMicroClip X3 |
| %LEL, O ₂ , H ₂ S, CO | MCXL-XWHM-Y-NA | MCX3-XWHM-Y-NA |
| GasAlertMicroClip 3-Gas Detector | GasAlertMicroClip XL | GasAlertMicroClip X3 |
| %LEL, O ₂ , H ₂ S | MCXL-XWH0-Y-NA | MCX3-XWH0-Y-NA |
| %LEL, O ₂ , CO | MCXL-XW0M-Y-NA | MCX3-XW0M-Y-NA |
| O ₂ , H ₂ S, CO | MCXL-X0HM-Y-NA | MCX3-X0HM-Y-NA |
| GasAlertMicroClip 2-Gas Detector | GasAlertMicroClip XL | GasAlertMicroClip X3 |
| %LEL, O ₂ | MCXL-XW00-Y-NA | MCX3-XW00-Y-NA |
| H ₂ S, CO | MCXL-00HM-Y-NA | MCX3-00HM-Y-NA |
| O ₂ , H ₂ S | MCXL-X0H0-Y-NA | MCX3-X0H0-Y-NA |
| O ₂ , CO | MCXL-X00M-Y-NA | MCX3-X00M-Y-NA |
| GasAlertMicroClip 1-Gas Detector | GasAlertMicroClip XL | GasAlertMicroClip X3 |
| O ₂ | MCXL-X000-Y-NA | MCX3-X000-Y-NA |
| H ₂ S | MCXL-00H0-Y-NA | MCX3-00H0-Y-NA |
| CO | MCXL-000M-Y-NA | MCX3-000M-Y-NA |

Note: To order a unit with black housing, change order number component "-Y-" to "-B-".

GasAlertMicroClip Region Codes

For orders outside North America, change order number component "-NA" to:

| | |
|-------------------------|---------------------------------------|
| "-EU" Europe | "-BR" Brazil |
| "-UK" United Kingdom | "-OR" Other region with 3-pin UK plug |
| "-AU" Australia | "-OE" Other region with 2-pin UK plug |
| "-CN" China/New Zealand | |

Gas Legend

| | |
|------------------|----------------------|
| %LEL | Combustible (W) |
| O ₂ | Oxygen (X) |
| H ₂ S | Hydrogen sulfide (H) |
| CO | Carbon monoxide (M) |



MicroDock II

Automatic test and calibration station (see MicroDock II section for additional information)

GasAlertMicroClip (continued)

Confined Space Kit

GasAlertMicroClip deluxe confined space kit - includes manual aspirator kit, IR connectivity kit with Fleet Manager II software, calibration cap with 1 ft. / 0.3 m hose, 0.5 LPM regulator, sampling probe, leather carrying case, auxiliary filter and carrying case with foam insert.
Detector and calibration gas sold separately.

Order Number

MC-CK-DL

Carrying case for GasAlertMicroClip with foam and lid insert

MC-CK-CC

Carrying & Protective Accessories

Order Number

Neck strap with safety release

GA-NS-1

Short strap (6 in. / 15.2 cm)

GA-LY-1

Extension strap (4 ft. / 1.2 m)

GA-ES-1

Chest harness

GA-CH-2

Black leather and PVC carrying holster

MC2-LC-1

Auxiliary filter kit (complete with filter adaptor and 5 filters)

MC-AF-K1

Auxiliary filter adaptor (no filters)

MC-AF-1

Auxiliary filter replacement for adaptor (kit of 10)

MC-SS-AF-K1

Sampling & Testing Equipment

Order Number

Manual aspirator pump kit with probe (1 ft. / 0.3 m)

MC-AS01

Test cap and hose (1 ft. / 0.3 m) replacement

MC-TC-1

Note: For complete list of Sampling & Testing Equipment, please refer to the full Price List or contact Honeywell Analytics.

Power Options and Spares

Order Number

Multi-unit (5) cradle charger

MC2-C01-MC5

Multi-unit (5) wall outlet power adaptor

GA-PA-1-MC5-NA*

12-24 Vdc vehicle power adaptor

GA-VPA-1

12-24 Vdc direct-wire power adaptor

GA-PA-3

Replacement wall outlet power adaptor

GA-PA-1-NA*

**For regions outside North America replace "-NA" with: "-EU" for Europe, "-UK" for United Kingdom and "-AU" for Australia/China.*



Black Leather PVC Case
MC2-LC-1



Auxiliary Filter Kit
MC-AF-K1
Easily attaches in the field to protect the internal filter



Manual Aspirator Pump Kit
MC-AS01
For remote sampling; complete with probe, hose, aspirator pump and adaptor cap



Test Cap
MC-TC-1



Deluxe Confined Space Kit
MC-CK-DL
Order detector and calibration gas separately.

GasAlertMicroClip (continued)

| Datalogging Accessories | Order Number |
|--|-------------------|
| IR connectivity kit with Fleet Manager II software | GA-USB1-IR |
| MicroDock II | Order Number |
| MicroDock II Automated Calibration and Testing Station: | |
| - Base station and GasAlertMicroClip docking module with charging cable | DOCK2-2-1C1P-00-G |
| - Base station and GasAlertMicroClip docking module without charging cable | DOCK2-2-1P-00-G |
| - GasAlertMicroClip docking module with charging cable | DOCK2-0-1C1P-00-G |
| - GasAlertMicroClip docking module without charging cable | DOCK2-0-1P-00-G |
| <i>Note: For complete MicroDock II system configuration information, please refer to the full Price List or contact Honeywell Analytics.</i> | |
| Replacement Sensor Screens | Order Number |
| Replacement quad sensor screen filters for GasAlertMicroClip XL / X3 (kit of 2) | MC2-SS |
| Replacement quad sensor screen filters for GasAlertMicroClip XL / X3 (kit of 10) | MC2-SS-K1 |
| Replacement Sensors | Order Number |
| Replacement MICROpeL® combustibile (LEL) sensor | SR-W-MP75C |
| Replacement oxygen (O ₂) sensor (2 year, for GasAlertMicroClip XL) | SR-X2V |
| Replacement oxygen (O ₂) sensor (3 year, for GasAlertMicroClip X3) | SR-X3P |
| Replacement MICROcel® hydrogen sulfide (H ₂ S) sensor | SR-H-MC |
| Replacement MICROcel® carbon monoxide (CO) sensor | SR-M-MC |
| Dummy sensor for combustibile (LEL) sensor location | SR-W-MC-DUM |
| Dummy sensor for the oxygen sensor location | SR-DUMM1 |
| Dummy sensor for toxic sensor locations | SR-TOX-MC-DUM |
| Calibration & Testing Equipment | Order Number |
| Quad-gas: CH ₄ (2.5%), O ₂ (18.0%), H ₂ S (25 ppm), CO (100 ppm), 34 L, balance N ₂ (requires REG-DF-1 or REG-0.5) | CG-Q34-4 |
| Quad-gas: CH ₄ (2.5%), O ₂ (18.0%), H ₂ S (25 ppm), CO (100 ppm), 58 L, balance N ₂ (requires REG-DF-1 or REG-0.5) | CG-Q58-4 |
| Demand flow regulator (for use with MicroDock II) | REG-DF-1 |
| Calibration gas regulator (0.5 LPM) | REG-0.5 |
| Calibration hose, Tygon (1 ft. / 0.3 m, 1/8 in. I.D., 1/4 in. O.D.) | C2-HOSE1-1 |
| Wall mount (adjustable) for 34, 58, 103 L gas cylinders, red | MK-CG2-58 |

For a full list of calibration and testing equipment, please refer to the full Price List or contact Honeywell Analytics.



Multi-Unit Power Adaptor

GA-PA-1-MC5-NA*
Simultaneously charges five detectors



Multi-Unit Cradle Charger

MC2-C01-MC5
Simultaneously charges five detectors



Vehicle Power Adaptor

12-24 Vdc
GA-VPA-1



Direct-Wire Power Adaptor


12-24 Vdc
GA-PA-3



IR Connectivity Kit

GA-USB1-IR
Use for data download and instrument set-up options

GasAlertMicroClip (continued)

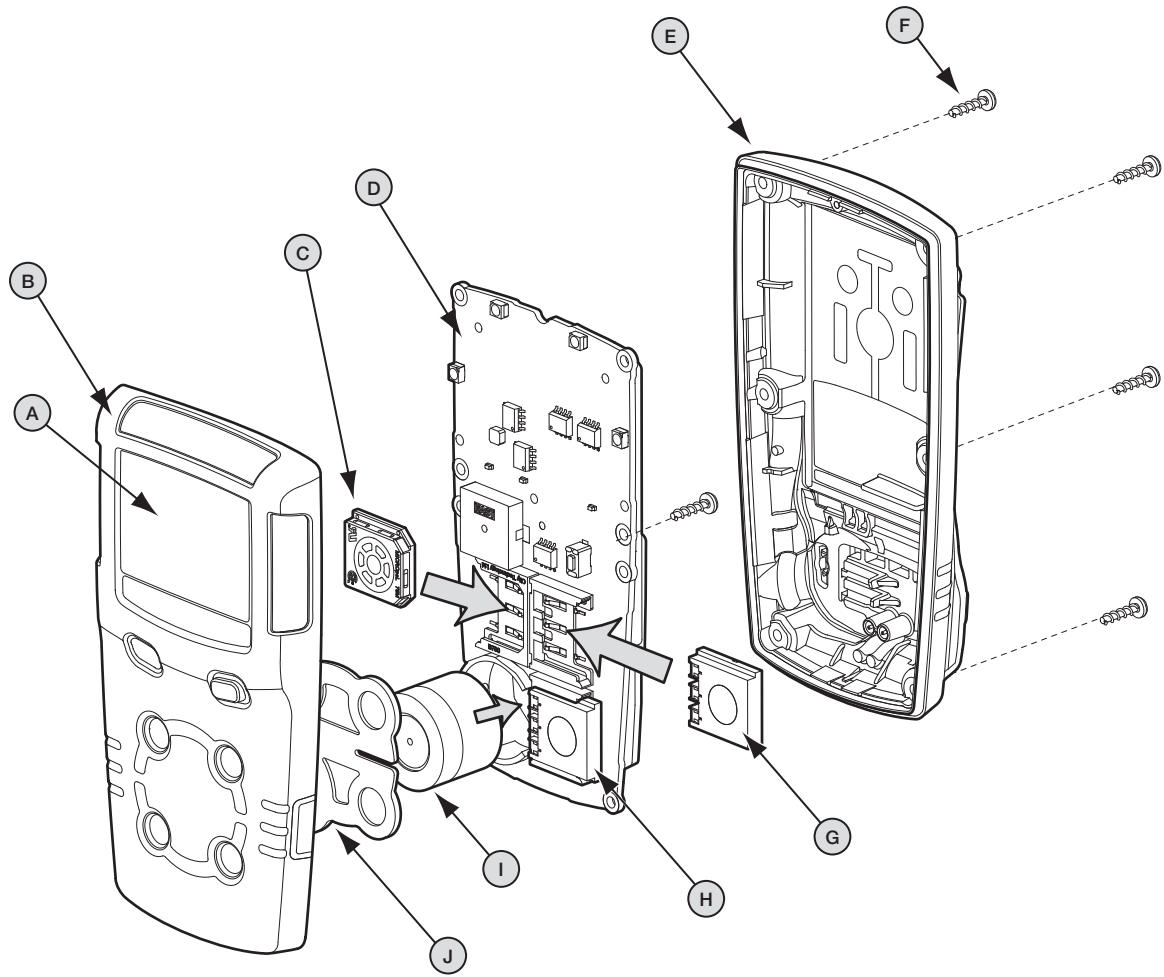

Note: Please refer to the instrument's documentation (shipped with the product or available at www.gasmonitors.com) for complete instructions on common service procedures. Improper servicing or maintenance may affect warranty eligibility. Honeywell assumes no liability for damages resulting from improper servicing or maintenance.

GasAlertMicroClip (continued)

| Legend | Service Parts | Order Number |
|---------|---|--------------|
| A | Replacement LCD kit for GasAlertMicroClip XL / X3 | MC-LCD-K1 |
| B | Replacement front enclosure (yellow) for GasAlertMicroClip XL | MCXL-FC1 |
| | Replacement front enclosure (black) for GasAlertMicroClip XL | MCXL-FC1B |
| | Replacement front enclosure (yellow) for GasAlertMicroClip X3 | MCX3-FC1 |
| | Replacement front enclosure (black) for GasAlertMicroClip X3 | MCX3-FC1B |
| C | Replacement combustible sensor, see page 4 | |
| D | Replacement main PCB with battery and screws for GasAlertMicroClip XL | MCXL-MPCB1 |
| | Replacement main PCB with battery and screws for GasAlertMicroClip X3 | MCX3-MPCB1 |
| | Replacement Flex PCB for GasAlertMicroClip XL | MC2-FPCB1 |
| | Replacement Flex PCB for GasAlertMicroClip X3 | MCX3-FPCB1 |
| E | Replacement back enclosure (yellow) with screws and alligator clip for GasAlertMicroClip XL | MCXL-BC1 |
| | Replacement back enclosure (black) with screws and alligator clip for GasAlertMicroClip XL | MCXL-BC1B |
| | Replacement back enclosure (yellow) with screws and alligator clip for GasAlertMicroClip X3 | MCX3-BC1 |
| | Replacement back enclosure (black) with screws and alligator clip for GasAlertMicroClip X3 | MCX3-BC1B |
| F | Replacement screws (kit of 20) | MC-SCREW-K1 |
| G, H, I | Replacement toxic and oxygen sensors, see page 4 | |
| J | Replacement sensor screen, see page 4 | |
| | Replacement vibration motor | GA-VM-2 |

How to Replace a Sensor

1. With detector OFF, use No. 1 Phillips screwdriver to remove 6 screws from back enclosure (E)
2. Lift back enclosure (E) straight up
3. Use No. 1 Phillips screwdriver to remove 2 screws from back of PCB (D)
4. Lift PCB (D) together with battery and sensors (C, G, H, I) straight up
5. Remove sensors (C, G, or H) by sliding out or sensor (I) by pulling straight up from PCB (D)
6. Insert new sensor (C, G, H, I) into PCB (D)
7. Replace PCB (D) and 2 screws and hand-tighten until firm
8. Replace back enclosure (E)
9. Replace 6 screws in back enclosure (E) and hand-tighten until firm

How to Replace the Sensor Screen

1. With detector OFF, use No. 1 Phillips screwdriver to remove 6 screws from back enclosure (E)
2. Lift back enclosure (E) straight up
3. Use No. 1 Phillips screwdriver to remove 2 screws from back of PCB (D)
4. Lift PCB (D) together with battery and sensors (C, G, H, I) straight up
5. Remove sensor screen (J) from front enclosure (B)
6. Insert new sensor screen (J) into front enclosure (B)
7. Replace PCB (D) and 2 screws and hand-tighten until firm
8. Replace back enclosure (E)
9. Replace 6 screws in back enclosure (E) and hand-tighten until firm

Note: Please refer to the instrument's documentation (shipped with the product or available at www.gasmonitors.com) for complete instructions on common service procedures. Improper servicing or maintenance may affect warranty eligibility. Honeywell assumes no liability for damages resulting from improper servicing or maintenance.