

The purpose of this Technical Note is to provide information about the optional diagnostic function available on both the digital and analog output versions of the TruStability™ HSC and SSC Series, Basic ABP Series Board Mount Pressure Sensors, and the FSA Series and FMA Series Force Sensors which, if desired, is selected as a part of the catalog listing.

1.0 DIGITAL OUTPUT DIAGNOSTICS

The output is sent when the sensor is given a read command and is a part of the two most significant bits (S1, S0) of data in Byte 1 (see Figure 1).

The digital output diagnostic feature consists of:

- An EEPROM signature used to validate the EEPROM contents during start-up
- Loss of sense element connection
- Short circuit of the sense element or internal interconnects inside the device (wirebonds).

If any of these three conditions is detected, an "11" on the Status Bits is shown in the first two bits of the most significant byte as shown in Table 1.

NOTICE

To view the catalog listing nomenclature, please access the product datasheets at sensing. honeywell.com.

TABL	TABLE 1. DIAGNOSTICS CONDITION								
	TUS TS SO	DESCRIPTION							
0	0	Normal operation, valid data							
0	1	Device in command mode (shown only during factory calibration)							
1	0	Stale data: Data that has already been fetched since the last measurement cycle, or data fetched before the first measurement has been completed							
1	1	Diagnostic condition							

FIGURE 1. TWO BYTE DATA READOUT

										Data byte 1							Data byte 2											
Start	A6	A5	Α4	А3	A2	A1	Α0	1	ACK	S1	S2	B13	B12	B11	B10	В9	B8	ACK	В7	В6	B5	B4	В3	B2	B1	В0	NACK	Stop
	Sensor address [6.0] Read					Status Bridgedata[13.8]							Bridgedata[7.0]															

Bits generated by Master

Bits generated by Sensor



2.0 ANALOG OUTPUT DIAGNOSTICS

If an analog diagnostic condition is detected, the output will go to either the upper or lower rail of the device and remain, as shown in Figure 2, thus preventing the sensor from outputting ambiguous data. Table 2 shows the fault condition and resulting output when the analog diagnostic function is specified.

FIGURE 2. TWO BYTE DATA READOUT

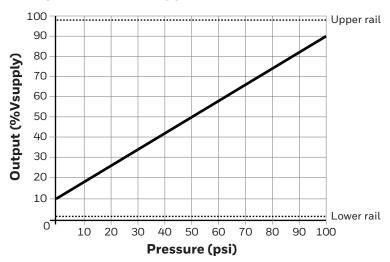


TABLE 2. FAULT CONDITION AND RESULTING OUTPUT								
FAULT CONDITION	ANALOG DIAGNOSTIC RAIL							
EEPROM Corrupt	lower rail							
Sensor bridge open (any element)	upper rail							
Sensor bridge short (any element)	upper rail							
Loss of supply voltage	lower rail							
Loss of ground connection	upper rail							

FOR MORE INFORMATION

Honeywell Advanced Sensing
Technologies services its customers
through a worldwide network of sales
offices and distributors. For application
assistance, current specifications, pricing
or the nearest Authorized Distributor,
visit our website or call:

USA/Canada +1 302 613 4491 Latin America +1 305 805 8188 Europe +44 1344 238258 Japan +81 (0) 3-6730-7152 Singapore +65 6355 2828 Greater China +86 4006396841

Honeywell Advanced Sensing Technologies

830 East Arapaho Road Richardson, TX 75081 sps.honeywell.com/ast

WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship during the applicable warranty period. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items that Honeywell, in its sole discretion, finds defective. The foregoing is buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.

While Honeywell may provide application assistance personally, through our literature and the Honeywell web site, it is buyer's sole responsibility to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this writing. However, Honeywell assumes no responsibility for its use.

THE FUTURE IS WHAT WE MAKE IT

