


# HONEYWELL 5000 SERIES – HOW TO FIT A SINGLE-USE MASK?

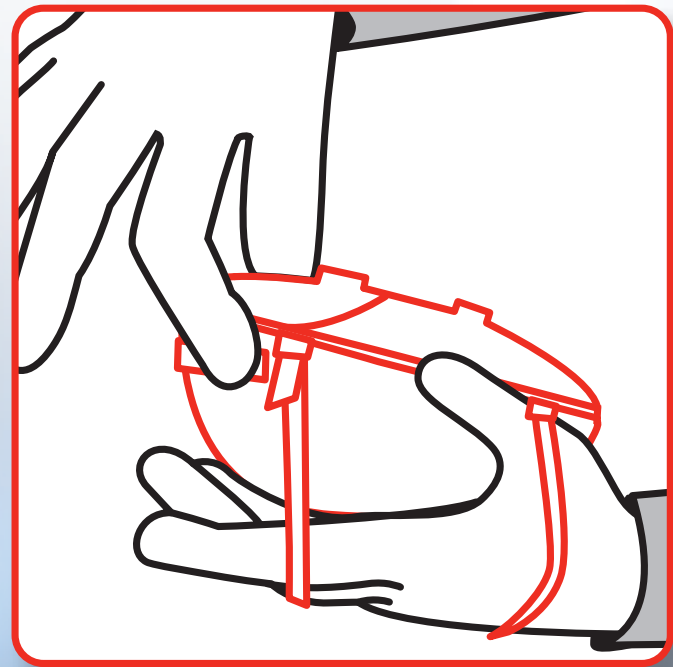

1

- Cup the mask in the hand.
- Shape the nose-bridge.




2

- Put the mask on your face starting at your chin.
- First, place the lower headstrap around the neck below the ears, then place the upper headstrap above the ears.




3

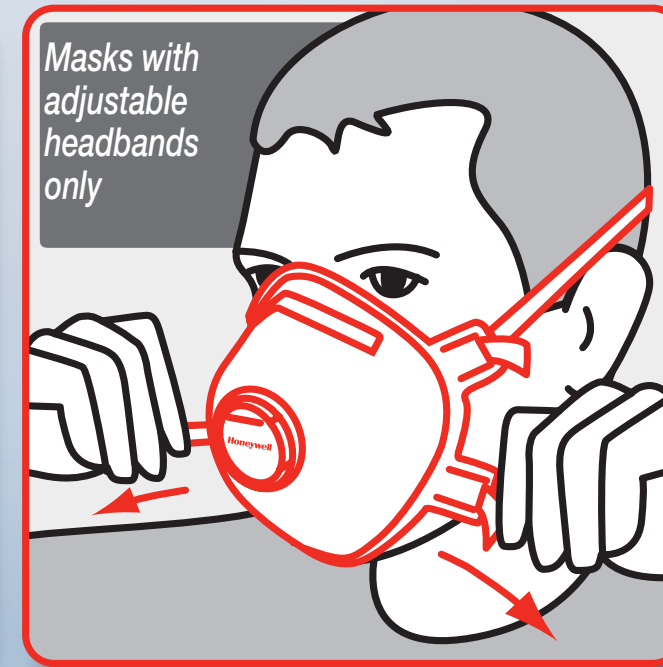

Masks with adjustable headbands only


4

- Adjust tension by pulling tab on each headband.
- Only for Honeywell 5221, 5251 and 5321.

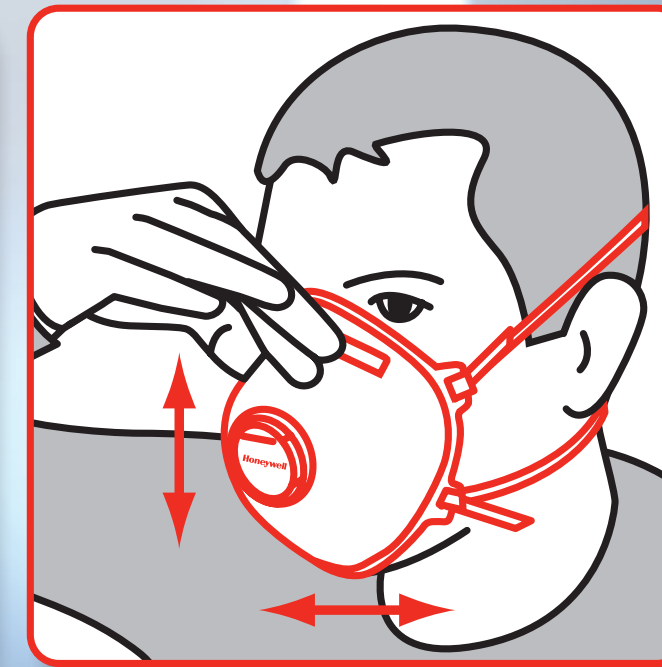

5

- Mould the nose area to the shape of the face.
- Move smoothly, right and left, up and down, in order to achieve the optimal position of the mask on the face.

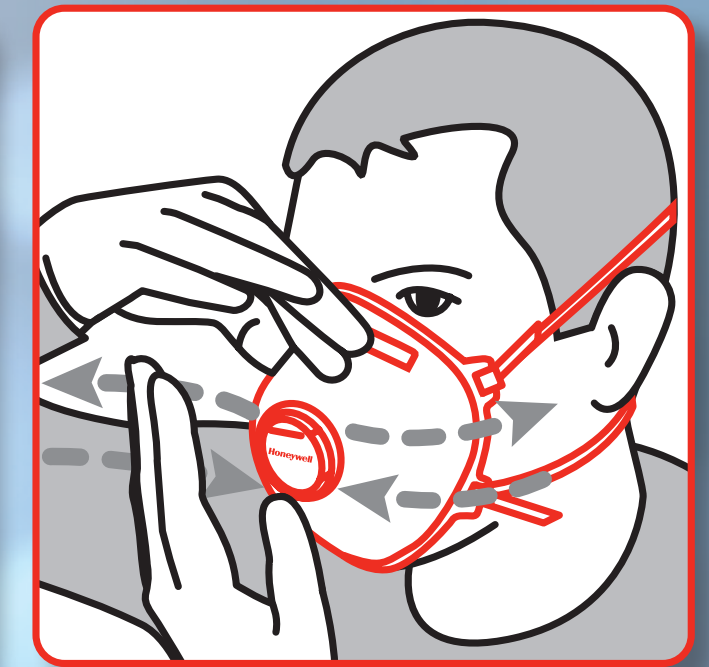


6

- Check for leaks (pre-use check) as follows:
- Place both hands over the mask and inhale sharply.
- If you feel air entering around the edges, tighten the nose-piece and/or increase tension of the headstraps.



- + Pre-shaped nose-bridge: quick and easy to adjust
- + Ultrasoft Willtech™ seal provides exceptional comfort (only for Premium and Specialty models)
- + Latex, Silicone and PVC-free
- + Highly flexible and resistant elastics for ease of use
- + Each mask meets the requirements of:
  - > EN 149: 2001 + A1:2009 standard
  - > Dolomite test

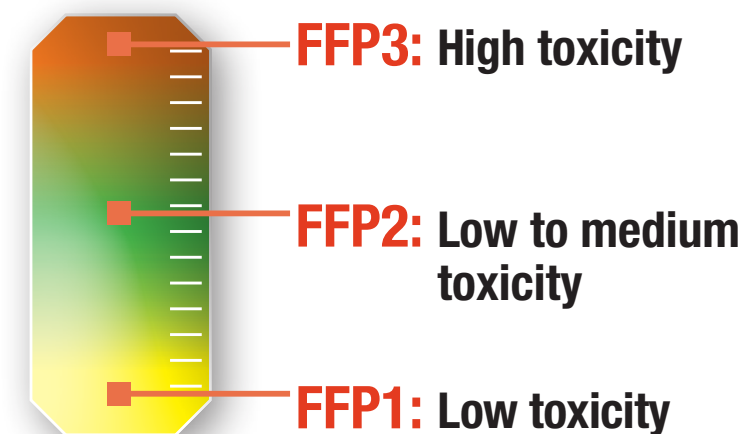

- ! WARNINGS:**
- A beard may reduce the effectiveness of single-use masks
  - The mask must be discarded after a single use (one shift maximum)
  - A well fitted single-use mask guarantees efficient protection