

# CARE AND MAINTENANCE

Ensure optimal fit and protection through proper care and maintenance of your Howard Leight® earplugs and earmuffs!  
For more information go to [www.honeywellsafety.com](http://www.honeywellsafety.com)



by Honeywell

## HEAR. FOREVER.



## Single-Use Earplugs

### Inspect

Inspect prior to fitting, examine your earplugs for dirt, damage or extreme hardness — discard immediately if compromised.

### Discard

For proper hygiene, discard Single-Use earplugs after use.

### Hygiene

To maintain hygiene standards, Single-Use earplugs should be discarded at the end of every shift.



## Multiple-Use Earplugs

### Inspect


Prior to fitting, examine your earplugs for dirt, damage, deformation or extreme hardness — discard immediately if compromised.

### Clean

Wash Multiple-Use earplugs with mild soap and warm water only. Pat dry with a towel and store in a case when not in use. Do not treat with any other substances, as the earplugs may degrade and compromise use.

### Hygiene

With proper maintenance, Multiple-Use earplugs can last for 2-4 weeks.

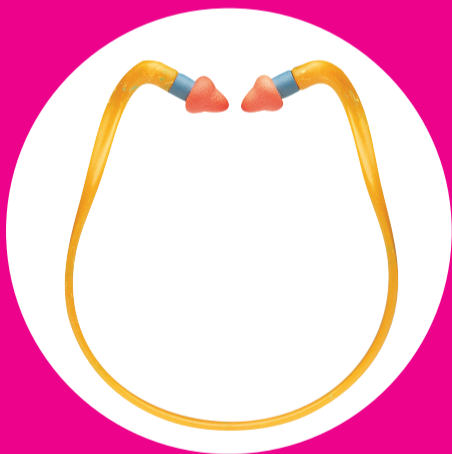

## Banded Earplugs

### Inspect

Prior to fitting, examine your earpods for dirt, damage or extreme hardness—discard immediately if compromised. Inspect band to ensure proper tension - a loose headband reduces protection levels.

### Clean

Wash Multiple-Use pods and bands with mild soap and warm water only. Pat dry with a towel. For proper hygiene, replace Single-Use pods regularly. Do not treat with any other substances, as the earpods may degrade and compromise use.

### Replace

Replace pods every 2-4 weeks to ensure optimal protection and performance.



## Earmuffs

### Inspect

Regularly examine earcups and ear cushions for cracks and leaks—discard if earcups are visibly damaged or compromised. Replace ear cushions if damaged.

### Clean

Wash earcups and ear cushions regularly with mild soap and water. They may not be dipped into water. Do not treat with any other substances, as the ear cushions may degrade and compromise use.

### Replace

As ear cushions and foam inserts can degrade over time, replace these every 6-8 months under normal wear, or every 3-4 months with heavy use or in humid/extreme climates.

POST14 © 2015 Honeywell Safety Products Australia Pty Ltd. DISCLAIMER: If the above-mentioned recommendations are not followed, the protection and function afforded by the hearing protectors may be severely impaired. This may cause consequences for the user for which Honeywell can not be held responsible. Honeywell Safety Products Australia, can not guarantee that any type of warning signals including communication with other people in the surroundings can be heard and understood by the wearer of this hearing protector. The sound level and the frequency content of the warning signals as well as of the background noise can vary in different situations. WARNING: All hearing protection affords limited protection. The user is responsible for the proper selection, use, care and maintenance of this device. Improper selection (including under/over protection), use or maintenance may lead to serious hearing loss. If there are any questions concerning this product contact your safety supervisor or Honeywell Safety Products Australia.

**Honeywell Safety Products Australia Pty Ltd**  
Australia: 1300 139 166  
New Zealand: 0800 322 200  
[www.honeywellsafety.com](http://www.honeywellsafety.com)

# Honeywell