

CMF-300-6 Six Supervised Control Module

One FireLite Place
Northford, CT 06472
Phone: 203.484.7161

SPECIFICATIONS

Normal Operating Voltage:	15-32 VDC
Stand-By Current:	2.65 mA @ 24V
Alarm Current:	35 mA (assumes all six relays have been switched once and all six LEDs solid on)
Temperature Range:	32°F to 120°F (0°C to 49°C)
Humidity:	10 to 93% Non-condensing
Dimensions:	6.8"H x 5.8"W x 1.25"D
Accessories:	CH-6 Chassis; BB-6 Cabinet; BB-2 Cabinet
Wire Gauge:	12-18 AWG
Max. NAC Circuit Line Loss:	4 VDC
Power Rating Per Circuit (Speakers):	50 W @ 70.7 VAC; 50 W @ 25 VAC
Maximum NAC Current Ratings:	For Class B wiring systems, 3A; For Class A wiring systems, 2A

RELAY CONTACT RATINGS:

CURRENT RATING	MAXIMUM VOLTAGE	LOAD DESCRIPTION	APPLICATION
2 A	25 VAC	PF = 0.35	Non-coded
3 A	30 VDC	Resistive	Non-coded
2 A	30 VDC	Resistive	Coded
0.46 A	30 VDC	(L/R = 20ms)	Non-coded
0.7 A	70.7 VAC	PF = 0.35	Non-coded
0.9 A	125 VDC	Resistive	Non-coded
0.5 A	125 VAC	PF = 0.75	Non-coded
0.3 A	125 VAC	PF = 0.35	Non-coded

TABLE 1: SHORT CIRCUIT PROTECTION - UL 864 10TH EDITION REQUIREMENTS

NOTICE TO USERS, INSTALLERS, AUTHORITIES HAVING JURISDICTION, AND OTHER INVOLVED PARTIES			
This product incorporates field-programmable software. In order for the product to comply with requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864, certain programming features or options must be limited to specific values or not used at all as indicated below.			
PROGRAM FEATURE OR OPTION	PERMITTED IN UL 864 (Y/N)	POSSIBLE SETTINGS	SETTINGS PERMITTED IN UL 864
Disabling short circuit protection when a single power supply is shared by multiple NACs	No	Enable or Disable short circuit protection	Enable short circuit protection when a single power supply is shared by multiple NACs.

BEFORE INSTALLING

This information is included as a quick reference installation guide. Refer to the appropriate Fire•Lite control panel installation manual for detailed system information. If the modules will be installed in an existing operational system, inform the operator and local authority that the system will be temporarily out of service. Disconnect the power to the control panel before installing the modules. This system contains static sensitive components. Always ground yourself with a proper wrist strap before handling any circuits so that static charges are removed from the body. The module housing should also be grounded.

NOTICE: This manual should be left with the owner/user of this equipment.

GENERAL DESCRIPTION

The CMF-300-6 Six Supervised Control Module is intended for use in an intelligent alarm system. Each module is intended for switching applications involving AC or DC which require wiring supervision. A common SLC input is used for all modules. Each module has its own address. A pair of rotary code switches is used to set the address of the first module from 01 to 154. The remaining modules are automatically assigned to the next five higher addresses. Provisions are included for disabling a maximum of three unused

modules to release the addresses to be used elsewhere. Each module also has panel controlled green LED indicators. The panel can cause the LEDs to blink, latch on, or latch off. The module also provides Class X short circuit isolators on the SLC to prevent shorts on the fire detection and alarm system loop from disabling more than one device on the intelligent loop.

In order to synchronize strobes, horn/strobes, and speaker/strobes, a SYNC-1 accessory card (sold separately) must be used with the CMF-300-6. See the SYNC-1 installation manual for details on how to install.

Each module has terminals for connection to an external supply circuit for powering devices on its NAC. Each supply must be power limited and its voltage/current limits must be at or below those specified. There is a short circuit protection monitor for each module. This is provided to protect the external power supply against short circuit conditions on the NAC.


INCLUDED:

SHIPPED ON BOARD:

- (6) Large shunts on Enabled Power Supply Monitor
- (6) Large shunts on Desable Short Circuit Protection
- (3) Large Shunts on Sync Generator

COMPATIBILITY REQUIREMENTS

To ensure proper operation, this module shall be connected to a compatible

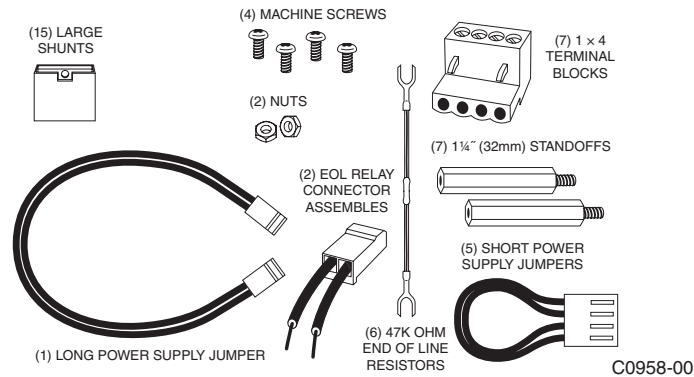

Fire•Lite system control panel (list available from Fire•Lite).

COMPONENTS


Following are descriptions of the CMF-300-6 mounting frameworks. There are two mounting options for CMF-300-6 modules:

- Up to six CMF-300-6 modules can be installed on a CH-6 in a BB-6 cabinet.
- One or two CMF-300-6 modules can be installed in a BB-2 cabinet.

CHASSIS


The CH-6 chassis is used to mount CMF-300-6 modules in a BB-6 cabinet. It accommodates up to six CMF-300-6 modules in a single cabinet row three modules wide and two modules deep.

FIGURE 1: CH-6 CHASSIS

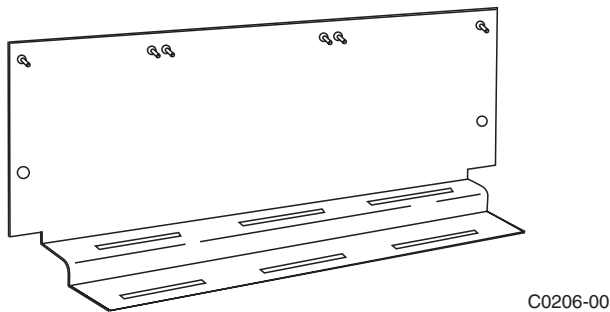

The BB-2 cabinet has a built-in chassis that will accommodate one or two CMF-300-6 modules.

FIGURE 2: BB-2 CABINET

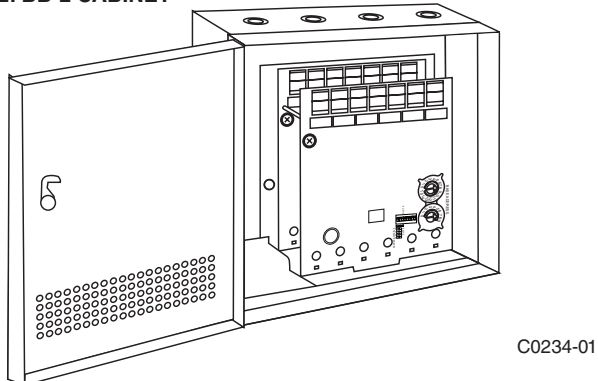

The front CMF-300-6 module positions of each chassis are offset below the rear CMF-300-6 module positions so that all of the status indicators are visible.

CABINETS

A BB-6 cabinet will house the CH-6 chassis with up to six CMF-300-6 modules installed on it. Refer to cabinet installation documents for dimensions and installation instructions.

The BB-2 cabinet houses one or two CMF-300-6 modules on the internal chassis that is part of the cabinet. Refer to cabinet installation documents for dimensions and installation instructions.

INSTALLATION STEPS

1. Cabinet Mounting

In a clean, dry area, mount the backbox using the four holes provided in the back surface of the cabinet (Figure 3).

2. Chassis Installation

The CH-6 chassis is mounted in the BB-6 cabinet. It is shipped with two self-threading screws, which are used to fasten the chassis to the back wall of the cabinet (see Figure 4).

The BB-2 cabinet comes with the chassis already installed, so no mounting is necessary.

FIGURE 3: TYPICAL MOUNTING HOLE LOCATIONS


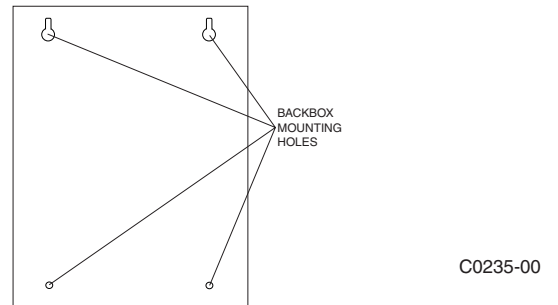



FIGURE 4: MOUNTING THE CH-6 CHASSIS

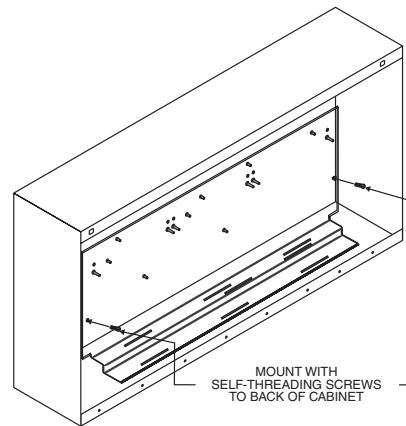

3. Module Installation

There are two methods for installing a module in the rear position of a chassis. Method one is for installation of a rear module only, when no module will be installed in front of it. Refer to Figure 5 for instructions. Method two is for installation of a rear module when another module will be installed in the chassis position in front of it. Refer to Figures 6a and 6b for method two. All necessary screws and standoffs are supplied with the modules.

FIGURE 5: INSTALLATION OF REAR MODULE ONLY, METHOD ONE

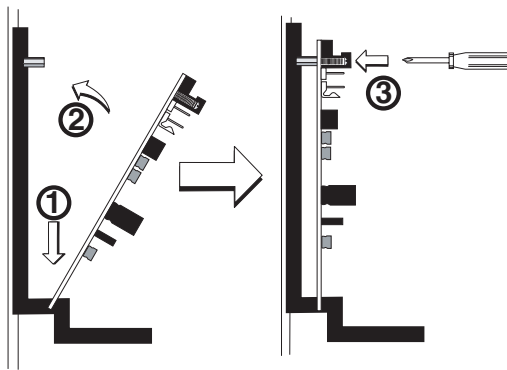

C0237-00

- Step 1: Insert the bottom of the CMF-300-6 module down into a rear slot on the chassis.
- Step 2: Carefully swing the upper edge of the board back towards the back of the chassis until it touches the two standoffs.
- Step 3: Align two 4-40 screws with the two standoffs and tighten.
- Step 4: Address and wire the modules according to the instructions in this manual.

The steps in Figures 6a and 6b describe and illustrate module installation when the rear chassis position and the position in front of it will be filled. Front position installation is possible only if the rear position is filled with a module.


FIGURE 6A: INSTALLATION OF CMF-300-6 MODULE IN A REAR CHASSIS POSITION, METHOD TWO



C0225-00

- Step 1: Insert the bottom edge of the CMF-300-6 module down into a rear slot of the chassis.
- Step 2: Carefully swing the upper edge of the board towards the back of the chassis until it touches the short stand off attached to the chassis.
- Step 3: Align the long standoff with the short standoff and tighten.

FIGURE 6B: INSTALLATION OF CMF-300-6 MODULE IN FRONT CHASSIS POSITION

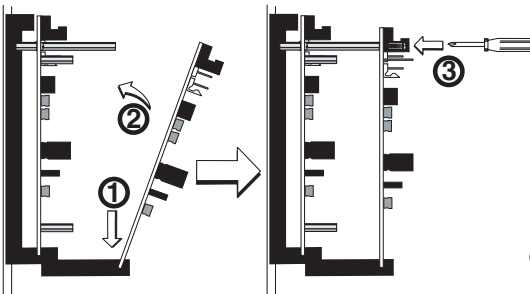

C0226-00

- Step 1: Insert the bottom edge of the CMF-300-6 module down into a front slot of the chassis.
- Step 2: Carefully swing the upper edge of the board towards the back of the chassis until it touches the 1/4" (31.75mm) standoffs installed on the rear module.
- Step 3: Align two 4-40 screws with the two standoffs and tighten.
- Step 4: Address and wire the modules according to the instructions in this manual.

WIRING

NOTE: All wiring must conform to applicable local codes, ordinances, and regulations.

1. Install module wiring in accordance with the job drawings and appropriate wiring diagrams.
2. All wiring to the CMF-300-6 is done via terminal blocks. In order to properly make electrical connections strip approximately 1/4" of insulation from the end of wire, sliding the bare end of the wire under the clamping plate screw.
3. Set the address on the modules per the job drawing. Use the rotary code switches to set the address of the first module (between 01 and 154).


In Class B operation, the remaining modules are automatically assigned to the next five higher addresses. For example, if the base address switch is set to 28, the next five modules will be addressed to 29, 30, 31, 32, and 33.

Use the DIP switch to select Class A. A maximum of three Class A. For example, if the base address switch is set to 28, 30 and 32 will be automatically assigned to the modules while 29, 31 and 33 are available to be used for other modules on the SLC. For Class A and Class B operation, DO NOT set the lowest address above 154, as the other modules will be assigned to nonexistent addresses.

NOTE: All references to power limited represent Power Limited (Class 2).

NOTE: Some panels support extended addressing. In order to set the module above address 99 on compatible systems, carefully remove the stop on the upper rotary switch (see Figure 7). If the panel does not support extended addressing, do not set the lowest address above 94.

FIGURE 7:

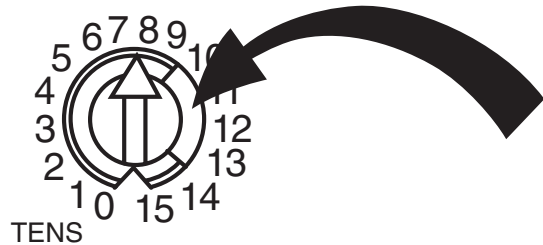

C0227-00

4. A DIP Switch is provided to disable a maximum of three unused modules (see Figure 8). Modules are disabled from the highest address and work downward. If two modules are disabled, the lowest four addresses will be functional, while the highest two will be disabled. For example, if the DIP switch for Address Disable is placed on "two" and the base address switch is set to 28, the modules will be assigned to 28, 29, 30 and 31, disabling the highest two positions.

A DIP Switch is provided to disable a maximum of three unused modules. Modules are disabled from the highest address and work downward. If two modules are disabled, the lowest four addresses will be functional, while the highest two will be disabled. For example, if the DIP Switch for Address Disable is placed on "two" and the base address switch is set to 28, the modules will be assigned to 28, 29, 30 and 31. The ICMF-300-6 must have power cycled for changes to take effect.

5. There is a short circuit protection option for each address. The board is shipped with short circuit protection disabled for each address represented by six large shunts on the "Disable Short Circuit Protection" area. To enable short circuit protection for an address, remove the corresponding pins from the "Disable Short Circuit Protection" area. When enabled, the module will not switch power supply if a short circuit condition exists on a notification appliance circuit.

NOTE: Power must not be applied to the unit when changing functionality of the DIP Switches.


NOTE: The power supply monitoring feature is currently not supported.

NOTE: SLC wiring is the top terminal block, notification appliance/power supply is the bottom.

NOTE: Whether in Class B or Class A wiring, power supply monitoring and short circuit protection must be enabled on the NAC circuits that are sharing a power supply.

NOTE: Power supply monitoring should not be used for audio applications. The short circuit protection feature is also not available for audio applications.

FIGURE 8:

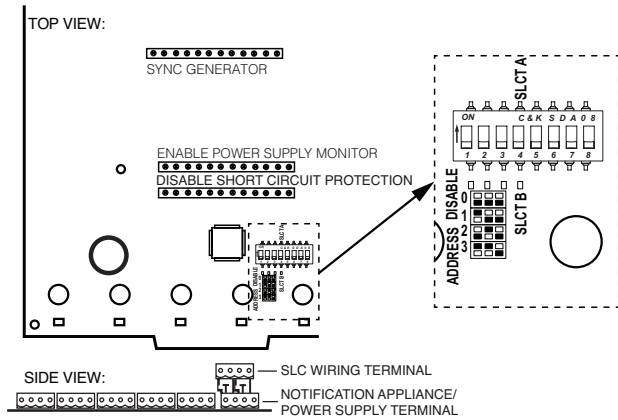

C0228-02

WIRING NOTES

- Installation and wiring requirements shall be in accordance with NFPA 70 and NFPA 72.
- For easier wiring, assign all power-limited wiring to one side rather than alternating with non power-limited.
- All references to 'power limited' represent 'Power Limited (Class 2)' for UL 2572.

PROGRAMMING

The modules are programmed as devices in each system according to the programming instructions in the appropriate FACP manual.

NAC WIRING AND SUPERVISION

For Class B applications (figures 9 & 10 are typical): connect the positive terminal of the notification appliance(s) to the NAC+ terminal and the negative device terminal to the adjacent NAC- terminal. Connect one (for each NAC) of the supplied EOL resistors across the NAC+ and NAC- wires, at the ends farthest away from the NAC terminal of the CMF-300-6.

For Class A applications (figures 11 & 12 are typical) wire the NACs per table 2. Set the DIP Switch to Class A prior to connecting the CMF-300-6 to the SLC. The EOL resistors should not be used. The CMF-300-6 is capable of supporting 3 Class A NACs. The CMF-300-6 will only respond at the base address, base address +2, and base address +4 (assuming no addresses have been disabled).

TABLE 2:

NAC#	(+) CONNECTIONS	(-) CONNECTIONS
+0	+0 NAC+, +1 NAC+, NOTIFICATION APPLIANCE+	+0 NAC-, +1 NAC-, NOTIFICATION APPLIANCE-
+2	+2 NAC+, +3 NAC+, NOTIFICATION APPLIANCE+	+2 NAC-, +3 NAC-, NOTIFICATION APPLIANCE-
+4	+4 NAC+, +5 NAC+, NOTIFICATION APPLIANCE+	+4 NAC-, +5 NAC-, NOTIFICATION APPLIANCE-

POWER SUPPLY WIRING AND SUPERVISION

Table 3 gives an overview of how the power connectors, T0–T5 and T10–T15, are interconnected by the circuit board (PCB). The external supply connection points, at T0–T5, are marked by PS- and PS+ on the PCB legend. Pin 1 is indicated by a dot next to T10–T16. The odd pins, on T10–T16, always connect to PS- pins (e.g. PS-, of the +0 NAC, is connected to T10–1 and T11–1). The even pins always connect to PS+ pins (e.g. PS+, of the +5 NAC, is connected to T15-4 and T16-2).

TABLE 3:

PS OR NAC NUMBER (TERMINAL / PINS)	TERMINAL / PINS
+0 (T0 – BOTTOM / PS- & PS+)*	T10 / 1 & 2, T11 / 1 & 2
+1 (T1 / PS- & PS+)	T11 / 3 & 4, T12 / 1 & 2
+2 (T2 / PS- & PS+)	T12 / 3 & 4, T13 / 1 & 2
+3 (T3 / PS- & PS+)	T13 / 3 & 4, T14 / 1 & 2
+4 (T4 / PS- & PS+)	T14 / 3 & 4, T15 / 1 & 2
+5 (T5 / PS- & PS+)	T15 / 3 & 4, T16 / 1 & 2

NOTE: T0–TOP is reserved for SLC connections only (see Figure 8).

All power supplies, external to the cabinet (in which the CMF-300-6 is housed), should be connected to T0–T5 which are suitable connectors for field wiring. The 1 x 4 terminal blocks, shown on page 1, should be used to make these connections.

All NACs can be wired to be powered by separate external supplies (figures 9 and 11 are typical), or a single supply (figures 10 and 12 are typical) can be shared among multiple NACs. If a supply is to be shared, between NACs wired to a common PCB, use the short power supply jumpers shown on page 1. The jumpers can be used on T11–T15. Refer to Table 4 for jumper functions.

The wiring for the power supply on NAC circuits must be in conduit and 20 feet or less from the CMF-300-6 board.

TABLE 4:

JUMPER LOCATION	NAC PAIR SHARING SUPPLY
T11*	+0 and +1
T12	+1 and +2
T13*	+2 and +3
T14	+3 and +4
T15*	+4 and +5

NOTE: Jumpers must be placed on T11, T13 and T15 for all Class A applications.

A supply can be wired to be shared among multiple PCBs in the same cabinet (figure 13 is typical). To share among multiple PCBs: use the long power supply jumpers (shown on page 1) to connect either T10 or T16, of one PCB, to either T10 or T16 of the other PCB.

An EOL relay must be used for every external power supply (figures 9–12 are typical). The EOL relay coil should always be connected at the external power supply input of the module which is connected to the ends of the wires which are farthest from the power supply. The EOL relay contacts should always be connected in series with the NAC wiring of the same module. The EOL relay coil should be connected across the PS+ (red wire) and PS- (black wire) if it is connected at T0 – T5. The EOL relay coil should be connected across adjacent pins (red – even pin#, black – odd pin#), of the same connector, if T10 – T16 are used.

All wiring must be in accordance with the NEC, NFPA 72 and all other applicable codes and standards. All external power supplies must be voltage regulated with battery back-up. All external power supplies, EOL relays, and notification appliances must be UL listed for fire protection signaling applications.

FIGURE 9: EXAMPLE OF CLASS B NAC CONFIGURATION WITH A SINGLE SUPPLY DEDICATED TO A SINGLE NAC

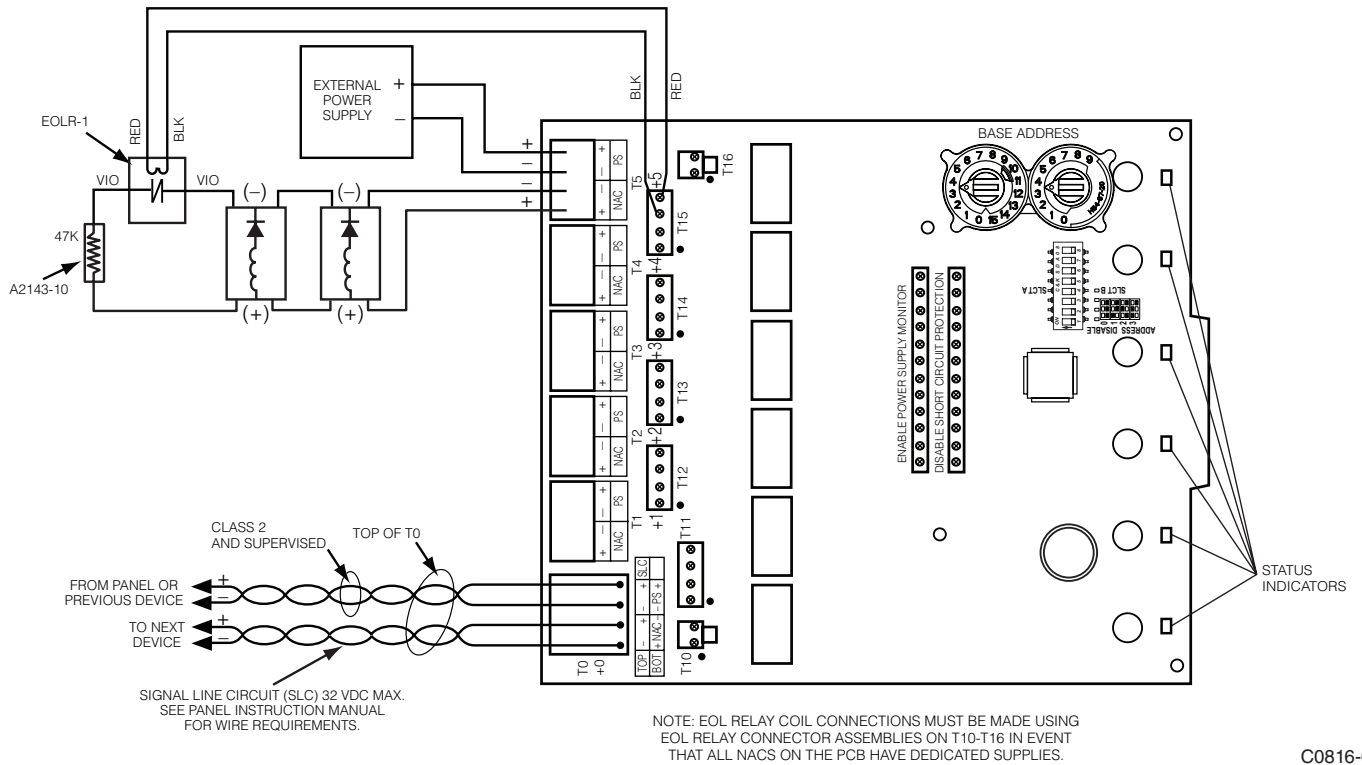


FIGURE 10: EXAMPLE OF CLASS B NAC CONFIGURATION WITH A SINGLE SUPPLY SHARED BY 2 NACS



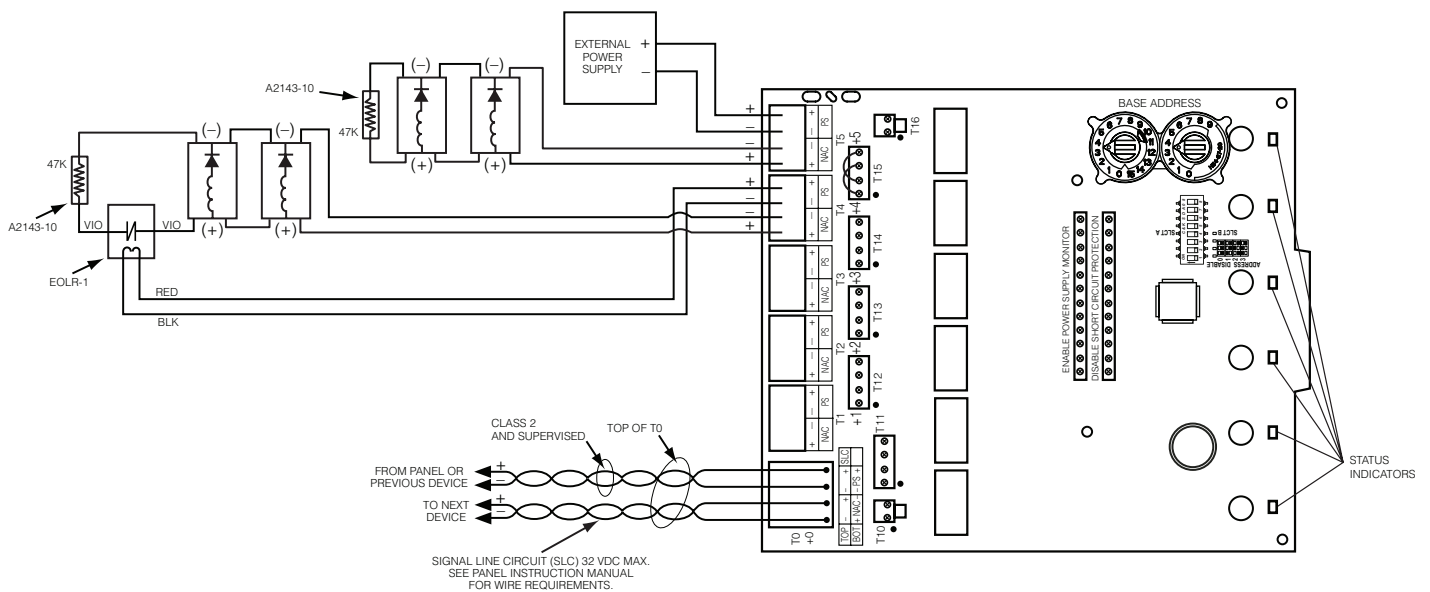


FIGURE 11: EXAMPLE OF CLASS A NAC CONFIGURATION WITH A SINGLE SUPPLY DEDICATED TO A SINGLE NAC

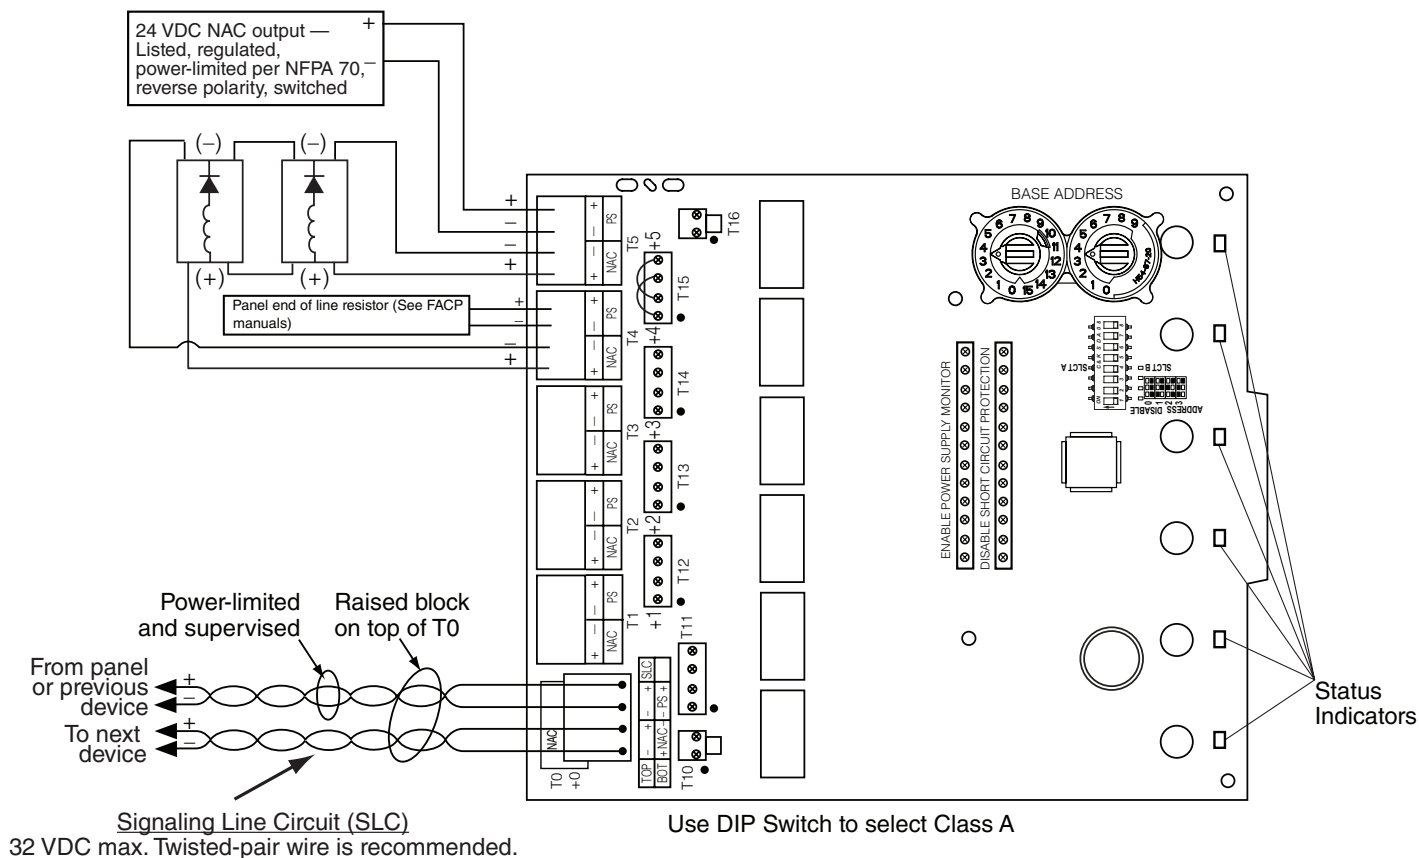


C0818-03

FIGURE 12: EXAMPLE OF CLASS A NAC CONFIGURATION WITH A SINGLE SUPPLY SHARED BY 2 NACS

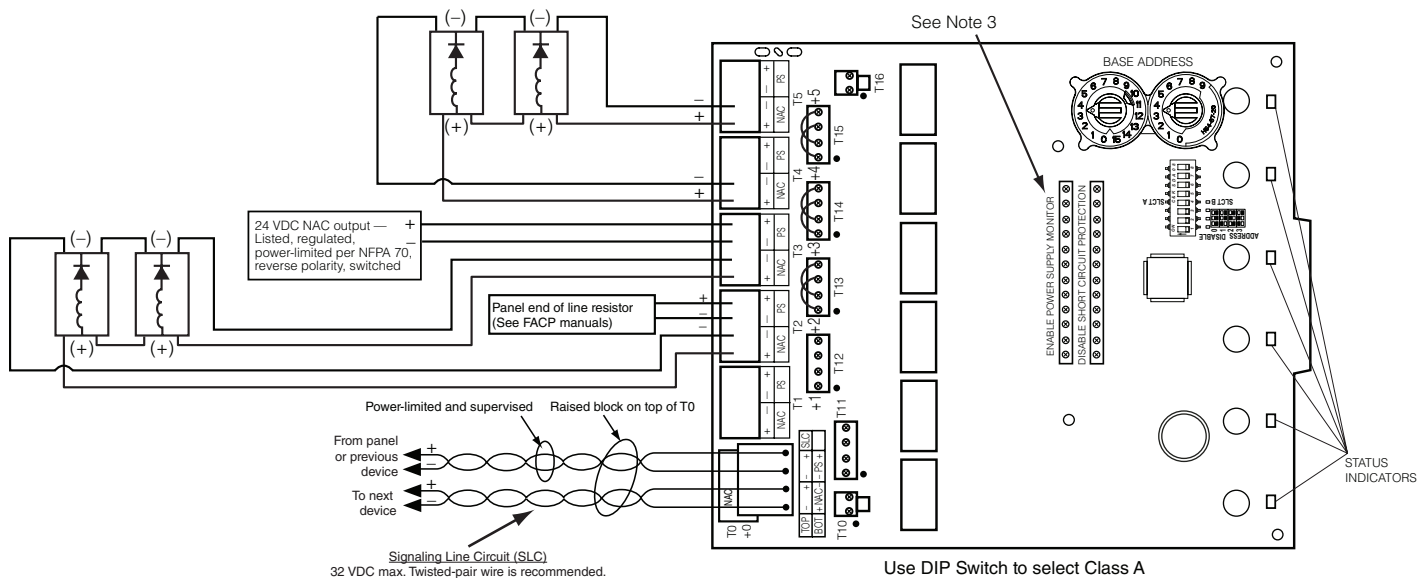

C0819-05

FIGURE 13: EXAMPLE OF MULTIPLE BOARDS SHARING SAME EXTERNAL SUPPLY. SUPPLY IS SHARED BY NACS +0 AND +1 (ON PCB 1) AS WELL AS +3, +4, AND +5 (ON PCB 2). REFER TO FIGURES 9–12 FOR TYPICAL NAC WIRING. MAKE CERTAIN LIP ON LONG POWER SUPPLY JUMPER ENGAGES RETAINING TAB ON T10 OR T16 AS SHOWN IN VIEW A-A. IF WIRING NAC IN CLASS A, BOARDS SHALL BE IN THE SAME ENCLOSURE. IF IN DIFFERENT ENCLOSURES WIRING NEEDS TO BE INSTALLED IN CONDUIT WITHIN 20 FT.

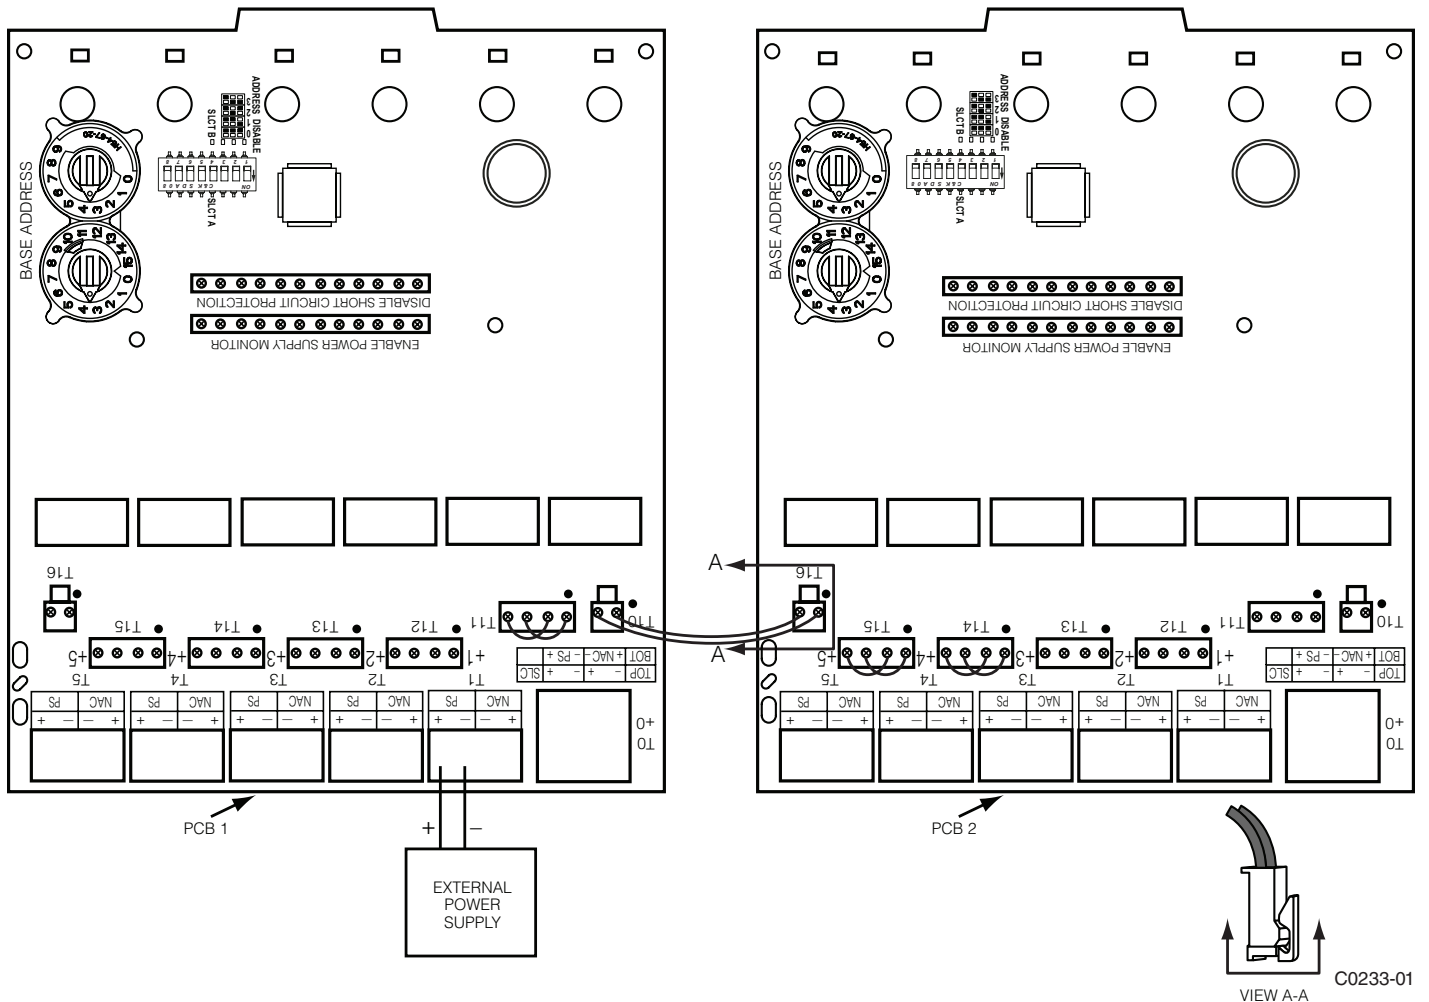

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in

a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.