



CM5780 2D Imager Module

Quick Start Guide



What is the CM5780 2D Imager Module

The CM5780 is an encased compact 2D imager module for fixed mount applications.

The CM5780 2D imager module includes the following features:

- USB interface (micro USB connector)
- Exit window
- Beeper
- Status indicator
- Mounting holes for multiple mounting positions
- Sealed enclosure

Required Accessories (not provided)

- Standard USB cable (USB-A to micro USB). Maximum recommended length is 3-5 meters.


Additional Documentation


The following document is available from your local Honeywell OEM representative:

- *N5780/CM5780 User Guide*

CM5780 2D Imager Module Views

Mounting
holes (x10)

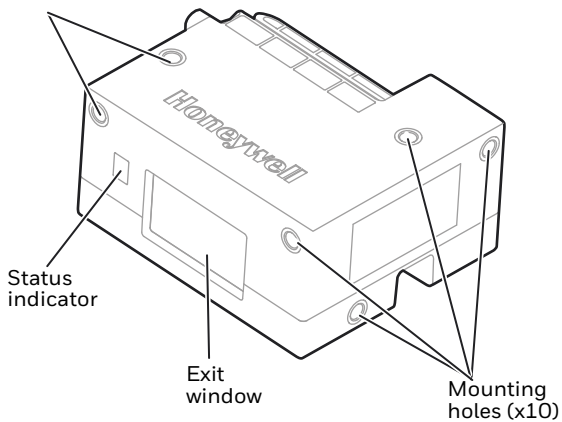


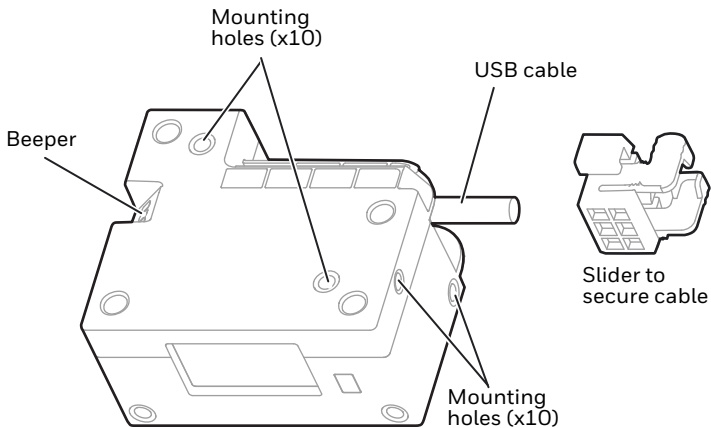


Connecting to a Host

By default, the scanner is in USB serial interface.


1. Remove slider from module by pressing the ends and sliding it off.

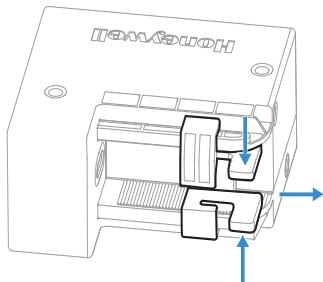

2. Connect a standard USB cable (standard USB-A to micro USB) to the module.

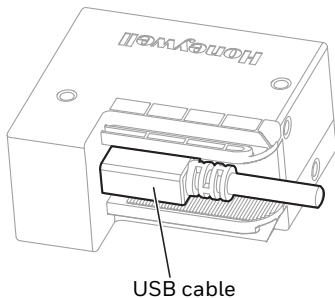

- Secure the cable to the module using the slider:
Place the cable through the center of the slider.
Press the ends of the slider and slide it back on to the module until tight.

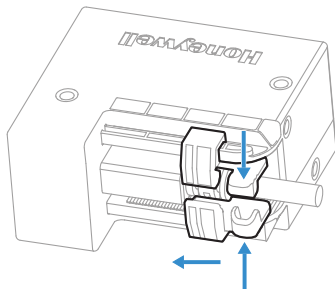

- Connect the USB cable to the host.
- Power-up the host.

The scanner powers up, emits a series of beeps from low to high, and lighting turns on.

Note: *The host does not have to be powered down before plugging in the device. It can be hot plugged.*

Configuration

You can configure your scanner two ways:

- Reading configuration bar codes
- Using the EZConfig Cloud for Scanning tool

Configuration Bar Codes

Scan configuration bar codes to set up your scanner. All available configuration bar codes are available in the *N5780/CM5780 User Guide*. Contact your local Honeywell OEM representative for more information.

EZConfig for Scanning Tool

Use the EZConfig for Scanning tool to configure your scanner Online:

1. Go to the Honeywell <https://hsmftp.honeywell.com>.
2. Register (if you haven't already), then login.
3. Browse to **Software > Barcode Scanners > Software > Tools and Utilities > EZConfig for Scanning > Current** and download the tool.
4. Open EZConfig to configure your scanner.

Basic Setup

Here are some basic menu bar codes that may be useful for testing. For more setup options see the *N5780/CM5780 User Guide* (available from your local Honeywell OEM representative).

Note: The * symbol indicates the default value.

Interface

For USB serial interface, you must install the USB driver before connecting your scanner. You can find the most current USB driver at hsmftp.honeywell.com.

USB Serial Interface *



TERMID130.

USB PC Keyboard



TERMID124.

Keyboard Country Layout

the default keyboard is United States.

United States *



KBDCTY0.

French



KBDCTY3.

German



KBDCTY4.

Italian



KBDCTY5.

Beeper Volume

Low



BEPLVL1.

Medium



BEPLVL2.

High *



BEPLVL3.

Off



BEPLVL0.

Presentation Mode

The scanner LEDs remain dim and aimed off until a movement is detected, then the aimer turns on and LEDs light up to read the bar code.

There are 2 types: **Presentation Mode** or **Presentation Mode—Extended Reading Range**.

Presentation Mode: *Optimized scan speed, limited reading range.*

Presentation Mode *



PAPTPR.

Presentation Mode—Extended Reading Range: *Optimized reading range, low scan speed.*

Presentation Mode—Extended Reading Range



PAPTPE.

Mobile Phone Read Mode

When this mode is selected, your scan engine is optimized to read barcodes from mobile phones or other LED displays.

Streaming Presentation - Mobile Phone



PAPSPC.

Streaming Presentation

The scanner LEDs and aimer are on all the time (continuous).

There are 2 types: **Normal** or **Enhanced**.

Streaming Presentation—Normal: *Fast scan speed, limited reading range.*

Streaming Presentation Mode—Normal



PAPSPN.

Streaming Presentation—Enhanced: *Fastest possible scan speed, slightly less reading range than **Normal Streaming Presentation** mode.*

Streaming Presentation—Enhanced



PAPSPE.






Reset Factory Defaults

The following bar code resets factory defaults.



DEFAULT.


Mechanical Dimensions

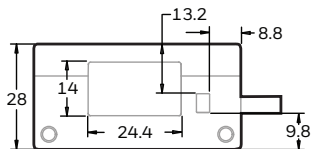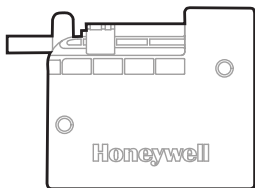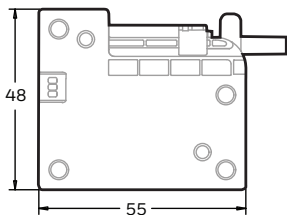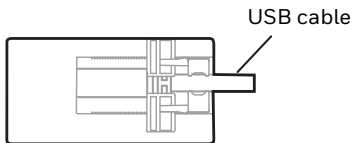

Units are in millimeters. Tolerances: ± 0.5 mm.

Mounting Holes

Use M3 screws with a maximum depth of 5.8 mm/0.23 in. Max torque 4.5kgf.cm/3.9 lbf.in and pull out resistance 736N.

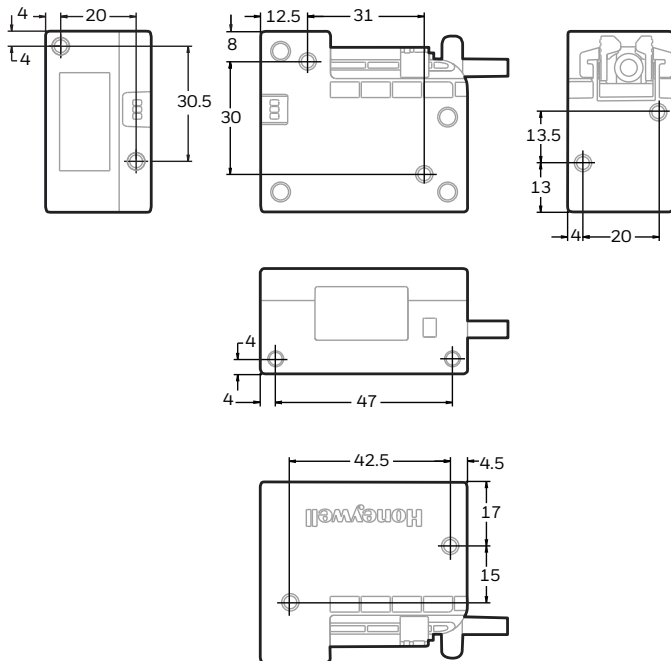

Units are in millimeters. Tolerances ± 0.5 mm.

Recommendations

- Do not add an exit window over the existing exit window.
- For best beeper performance, do not fully cover the beeper opening.
- Be sure the cable is fitted tightly in the connector using the cable slider. The cable over mold should not be more than 23 mm/0.90 in.

Technical Specifications

Mechanical	
Dimensions	28 mm x 55 mm x 48 mm (1.10 in x 2.17 in x 1.89 in)]
Weight	50 g \pm 5 g
Interface	Micro USB 2.0

Electrical	
Input Voltage	5 VDC \pm 0.25V
Standby Current	57 mA
Operating Current	190 mA

Environmental	
Operating Temperature	-30°C to 60°C / -22°F to 140°F
Storage Temperature	-40°C to 85°C / -40°F to 185°F
Humidity	5% to 95% RH, non-condensing

Scanning Performance	
Sensor	Global Shutter
Resolution	1280 x 800
Illumination	White LED Illumination
Aimer	Green cross bar LED
Motion Tolerance	6 m/s max
Field of View	Horizontal = $47^{\circ} \pm 2^{\circ}$ Vertical = $30^{\circ} \pm 2^{\circ}$
Scan Angle	Pitch = $\pm 60^{\circ}$ Skew = $\pm 60^{\circ}$ Tilt = 360°
Print Contrast	20%

Reading Distances

- Measured from the front center of the housing
- 25°C, 200 lux for typical, 0 lux for guaranteed
- Photographic barcodes
- Serial Trigger mode

Typical

Symbology	Near	Far
5 mil Code 39	5.6 cm / 2.2 in	26.8 cm / 10.6 in
5 mil Code 128	6.1 cm / 2.4 in	23.8 cm / 9.4 in
10 mil Code 39	3.1 cm / 1.2 in	46.6 cm / 18.3 in
13 mil UPC-A	3.6 cm / 1.4 in	48.1 cm / 18.9 in
20 mil Code 39	5.7 cm / 2.2 in	77.8 cm / 30.6 in
20 mil Code 128	4.0 cm / 1.6 in	68.9 cm / 27.1 in
6.67 mil PDF417	5.8 cm / 2.3 in	26.3 cm / 10.4 in
7 mil QR Code	6.9 cm / 2.7 in	18.4 cm / 7.2 in
10 mil Data Matrix	4.8 cm / 1.9 in	26.3 cm / 10.4 in
20 mil QR Code	2.3 cm / 0.9 in	43.1 cm / 17 in

Guaranteed

Symbology	Near	Far
5 mil Code 39	6.7 cm / 2.6 in	25.3 cm / 10 in
5 mil Code 128	6.7 cm / 2.6 in	22.4 cm / 8.8 in
10 mil Code 39	3.6 cm / 1.4 in	41.2 cm / 16.2 in
13 mil UPC-A	3.8 cm / 1.5 in	43.6 cm / 17.2 in
20 mil Code 39	5.9 cm / 2.3 in	62.9 cm / 24.8 in
20 mil Code 128	4.5 cm / 1.8 in	59.0 cm / 23.2 in
6.67 mil PDF417	7.1 cm / 2.8 in	25.2 cm / 9.9 in
7 mil QR Code	8.1 cm / 3.2 in	17.4 cm / 6.9 in
10 mil Data Matrix	5.6 cm / 2.2 in	24.5 cm / 9.7 in
20 mil QR Code	2.6 cm / 1 in	37.2 cm / 14.6 in

Customer Support and Technical Assistance

For customer support, contact your local Honeywell Sales Representative or fill out the support form at sps.honeywell.com/us/en/contact-us.

Limited Warranty

For warranty information, go to sps.honeywell.com/us/en/support/productivity/warranties.

Patents

For patent information, see sps.honeywell.com/us/en/support/patents.

Disclaimer

Honeywell International Inc. and its affiliates, subsidiaries, and other entities forming part of Honeywell group (“HII”) reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of HII.

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship during the applicable warranty period. Honeywell’s standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgment or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items that Honeywell, in its sole discretion, finds defective. **The foregoing is buyer’s sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.** While Honeywell may provide application assistance personally, through our literature and the Honeywell web site, it is buyer’s sole responsibility to determine the suitability of the product in the application. Specifications may change

without notice. The information we supply is believed to be accurate and reliable as of this writing. However, Honeywell assumes no responsibility for its use.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

Copyright © 2024 Honeywell International Inc. All rights reserved.

Web Address: sps.honeywell.com/us/en/products/sensing-and-iot

Other product names or marks mentioned in this document may be trademarks or registered trademarks of other companies and are the property of their respective owners.