

CONTAIN. DISPENSE. PROTECT.

Honeywell Howard Leight Earplug Dispensers



Honeywell
HOWARD
LEIGHT

DISPENSING PROTECTION ONE EARPLUG AT A TIME

Each year, about 22 million workers are exposed to hazardous noise levels at work.¹ Once Noise-Induced Hearing Loss (NIHL) occurs, it cannot be reversed. But it can be prevented.

It's critical to provide your workers with the hearing protection they need. Ensuring that it's convenient and easily accessible also makes a big difference in terms of compliance.

Earplug dispensers do just that. They readily dispense loose, uncorded earplugs, and now even corded styles. They're easy to install, and even easier to use. What's more, dispensers require far less earplug packaging, as well as offer quick refill options.


4 REASONS WHY YOU SHOULD USE EARPLUG DISPENSERS

1. Less packaging and waste
2. Reduced costs due to bulk refill options
3. Less employee waste, grab & go makes it easier to place where you need them
4. Easier to organize and supply, with less refilling throughout the day

Whether you are looking for portability or a durable, more permanent fixture, our dispensers have you covered. From construction sites to warehouses and everyone in between, having easy access to Honeywell Howard Leight hearing protection means quality where it matters most.

ADDED PROTECTION AROUND THE CLOCK

- Turn knob and catch tray treated with a silver ion antimicrobial additive*
**This product does not protect users or others against disease-causing organisms*
- Built-in antimicrobial protection to reduce cleaning costs in the workplace
- Earplugs sit in the tray, reducing waste and driving cost savings
- Can be wall-mounted or placed on tabletops
- Fits on existing wall mounts of other dispensers
- Workers can access earplugs quickly
- Available with prefilled, recyclable canister — an economical choice
- Replace the empty canister or refill with a bag of bulk earplugs

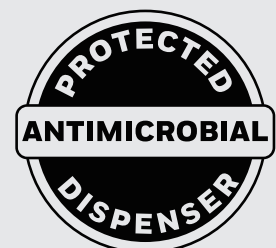

HL400-AM

1. <https://www.cdc.gov/niosh/topics/noise/default.html>

HL400-AM UNCORDED EARPLUG DISPENSER

Introducing Honeywell's HL400-AM uncorded earplug dispenser. It features built-in antimicrobial properties in the turn knob and catch tray. This helps to protect the dispenser against stains, discoloration and odors caused by mold, mildew and bacteria.



ORDERING INFORMATION

GET STARTED - DISPENSER WITH PREFILLED CANISTER

PART NO.	DESCRIPTION	NRR	CANADA CLASS	CASE QTY
HL400-MXM-INTRO-AM	HL400 Dispenser with 1 prefilled canister of 400 pairs MAXIMUM earplugs	33 dB	A(L)	1 dispenser and 1 canister per case
HL400-LPF-INTRO-AM	HL400 Dispenser with 1 prefilled canister of 400 pairs MAXIMUM Lite earplugs	30 dB	A(L)	1 dispenser and 1 canister per case
HL400-LL-INTRO-AM	HL400 Dispenser with 1 prefilled canister of 400 pairs Laser Lite earplugs	32 dB	A(L)	1 dispenser and 1 canister per case
HL400-FF-INTRO-AM	HL400 Dispenser with 1 prefilled canister of 400 pairs FirmFit earplugs	30 dB	A(L)	1 dispenser and 1 canister per case
HL400-XTR-INTRO-AM	HL400 Dispenser with 1 prefilled canister of 400 pairs X-TREME™ earplugs	32 dB	A(L)	1 dispenser and 1 canister per case

PLUG N PLAY - REFILL CANISTER

PART NO.	DESCRIPTION	NRR	CANADA CLASS	CASE QTY
HL400-MXM-REFILL	Prefilled canister of 400 pairs MAXIMUM earplugs	33 dB	A(L)	2 canisters per case
HL400-LPF-REFILL	Prefilled canister of 400 pairs MAXIMUM Lite earplugs	30 dB	A(L)	2 canisters per case
HL400-LL-REFILL	Prefilled canister of 400 pairs Laser Lite earplugs	32 dB	A(L)	2 canisters per case
HL400-FF-REFILL	Prefilled canister of 400 pairs FirmFit earplugs	30 dB	A(L)	2 canisters per case
HL400-XTR-REFILL	Prefilled canister of 400 pairs X-TREME™ earplugs	32 dB	A(L)	2 canisters per case

REFILL AS NEEDED - REFILL BAGS

PART NO.	DESCRIPTION	NRR	CANADA CLASS	CASE QTY
MXM-LS4-REFILL	1 zip top bag of 200 pairs MAXIMUM earplugs	33 dB	A(L)	10 zip top bags per case
LPF-LS4-REFILL	1 zip top bag of 200 pairs MAXIMUM Lite earplugs	30 dB	A(L)	10 zip top bags per case
LLL-LS4-REFILL	1 zip top bag of 200 pairs Laser Lite earplugs	30 dB	A(L)	10 zip top bags per case
FF-LS4-REFILL	1 zip top bag of 200 pairs FirmFit earplugs	32 dB	A(L)	10 zip top bags per case
XTR-LS4-REFILL	1 zip top bag of 200 pairs X-TREME™ earplugs	32 dB	A(L)	10 zip top bags per case


SAVE TIME AND MONEY

HL400-30 AM Corded Earplug Dispenser

Quick and convenient dispensing of your favorite corded earplugs is now a reality. New easy-refill lid allows for quick dump & go of bagged earplugs. Plus, 400 pair capacity means less time spent on resupplying.

The additive slowly releases to the surface of the catch tray and is actively working on the microbes that land on the surface from person to person regardless of time. The silver attaches to the microbe and helps prevent the microbe from surviving and multiplying. Once on the surface, the microbe will start to decline. The protected surface is a cleaner surface than an unprotected surface. *This product does not protect users or others against disease-causing organisms.

- Catch tray treated with a silver ion antimicrobial additive*
- Built-in antimicrobial protection to reduce cleaning costs in the workplace
- Earplugs sit in the tray, reducing waste and driving cost savings
- Can be wall-mounted or placed on tabletops
- Fits on existing wall mounts of other dispensers
- Workers can access earplugs quickly
- Refill with a bag of bulk earplugs

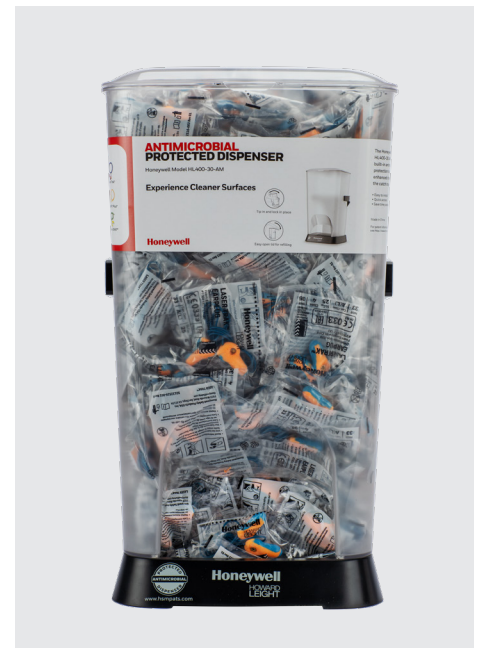

ORDERING INFORMATION

GET STARTED - DISPENSER WITH PREFILLED CANISTER OF CORDED PLUGS				
PART NO.	DESCRIPTION	NRR	CANADA CLASS	CASE QTY
HL400-LT-30-AM	HL400 Dispenser ANTIMICR, 400 pairs, LT-30, US	33 dB	A(L)	1 dispenser and 1 canister per case
HL400-MXM-30-AM	HL400 Dispenser ANTIMICR, 400 pairs, MAX-30, US	33 dB	A(L)	1 dispenser and 1 canister per case
HL400-LL-30-AM	HL400 Dispenser ANTIMICR, 400 pairs, LL-30, US	32 dB	A(L)	1 dispenser and 1 canister per case
HL400-LPF-30-AM	HL400 Dispenser ANTIMICR, 400 pairs, LPF-30, US	30 dB	A(L)	1 dispenser and 1 canister per case
HL400-DPAS-30R-AM	HL400 Dispenser ANTIMICR, 400 pairs, AS-30R, US	27 dB	A(L)	1 dispenser and 1 canister per case
HL400-QD30-AM	HL400 Dispenser ANTIMICR, 400 pairs, QD30, US	26 dB	A(L)	1 dispenser and 1 canister per case
HL400-DPAS-30W-AM	HL400 Dispenser ANTIMICR, 400 pairs, AS-30W, US	27 dB	A(L)	1 dispenser and 1 canister per case
HL400-SDT-30-AM	HL400 Dispenser ANTIMICR, 400 pairs, SDT-30, US	25 dB	A(L)	1 dispenser and 1 canister per case
HL400-TFPOD-30-AM	HL400 Dispenser ANTIMICR, 400 pairs, TF-30, US	28 dB	A(L)	1 dispenser and 1 canister per case
HL400-FF-30-AM	HL400 Dispenser ANTIMICR, 400 pairs, FF-30, US	30 dB	A(L)	1 dispenser and 1 canister per case
HL400-XTR-30-AM	HL400 Dispenser ANTIMICR, 400 pairs, XTR-30, US	32 dB	A(L)	1 dispenser and 1 canister per case
HL400-TFTPOD-30-AM	HL400 Dispenser ANTIMICR, 400 pairs, TFT-30, US	29 dB	A(L)	1 dispenser and 1 canister per case
HL400-TFPLUS-30-AM	HL400 Dispenser ANTIMICR, 400 pairs, TFP-30, US	31 dB	A(L)	1 dispenser and 1 canister per case

REFILL AS NEEDED - REFILL BAGS				
LT-30-REFILL	HL400, Refill BAG, 5x400 pairs, LT-30, US	33 dB	A(L)	5 Bags (2,000PR)
MXM-30-REFILL	HL400, Refill BAG, 5x400 pairs, MAX-30, US	33 dB	A(L)	5 Bags (2,000PR)
LL-30-REFILL	HL400, Refill BAG, 5x400 pairs, LL-30, US	32 dB	A(L)	5 Bags (2,000PR)
LPF-30-REFILL	HL400, Refill BAG, 5x400 pairs, LPF-30, US	30 dB	A(L)	5 Bags (2,000PR)
DPAS-30R-REFILL	HL400, Refill BAG, 5x400 pairs, AS-30R, US	27 dB	A(L)	5 Bags (2,000PR)

REFILL AS NEEDED - REFILL BAGS

QD30-REFILL	HL400, Refill BAG, 5x400 pairs, QD30, US	26 dB	A(L)	5 Bags (2,000PR)
DPAS-30W-REFILL	HL400, Refill BAG, 5x400 pairs, AS-30W, US	27 dB	A(L)	5 Bags (2,000PR)
SDT-30-REFILL	HL400, Refill BAG, 5x400 pairs, SDT-30, US	25 dB	A(L)	5 Bags (2,000PR)
TFPOD-30-REFILL	HL400, Refill BAG, 5x400 pairs, TF-30, US	28 dB	A(L)	5 Bags (2,000PR)
FF-30-REFILL	HL400, Refill BAG, 5x400 pairs, FF-30, US	30 dB	A(L)	5 Bags (2,000PR)
XTR-30-REFILL	HL400, Refill BAG, 5x400 pairs, XTR-30, US	32 dB	A(L)	5 Bags (2,000PR)
TFTPOD-30-REFILL	HL400, Refill BAG, 5x400 pairs, TFT-30, US	29 dB	A(L)	5 Bags (2,000PR)
TFPLUS-30-REFILL	HL400, Refill BAG, 5x400 pairs, TFP-30, US	31 dB	A(L)	5 Bags (2,000PR)

DURABILITY MEETS FUNCTIONALITY


LS-500 Uncorded Earplug Dispenser

Anodized Aluminum fixture with easy slide-in refill boxes makes for a distinct wall-mounted display that holds up to vigorous use. The dispenser helps protect earplugs from dust while keeping them readily available for use. Pull-tab on bottom of box is removed once firmly in place.

The unit dispenses earplugs with an easy turn of the handle, providing a hygienic and economical source for earplugs. The L-500 is ideal for industries that have zero tolerance for packaging waste.

FEATURES

- Heavy-duty anodized aluminum withstands constant use
- Mount on wall for easy access
- Crank handle to dispense earplugs
- Ideal for large factories and process industries
- Holds 500 pairs of earplugs (earplugs sold separately)

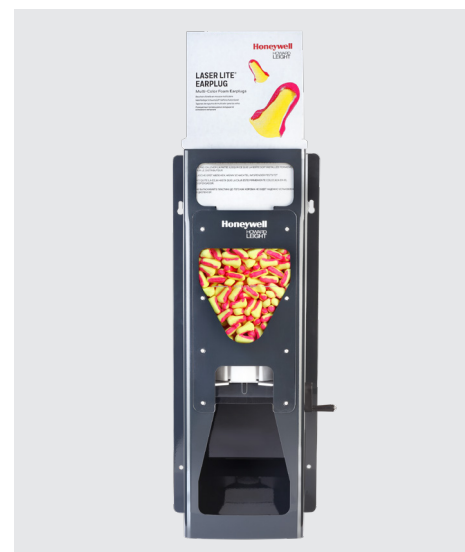

ORDERING INFORMATION

LS-500 DISPENSER & REFILL BOXES

PART NO.	DESCRIPTION	NRR	CANADA CLASS	CASE QTY
LS-500	Earplugs Dispensers, LS500 EARPLUG DISPENSER Dispenser, UOM = EA; NSN 6515-01-544-0396	N/A	N/A	1 dispenser

REFILL BOXES

PART NO.	DESCRIPTION	NRR	CANADA CLASS	CASE QTY
FF-1-D	FIRMFIT-UNCORDED EARPLUGS Uncorded, Bulk Refill, UOM = BX, 500 pairs per Box, 4 Boxes per case, 2000 pairs per case	30	N/A	4 Boxes (2,000PR)
LL-1-D	LASER LITE, low-pressure single-use foam earplug Uncorded, Bulk Refill, UOM = CS, 2000 pairs per case, 500 pairs per Box, 4 Boxes per case	32 dB	A(L)	4 Boxes (2,000PR)
LPF-1-D	MAXIMUM LITE Low-pressure single-use foam earplug Uncorded, Bulk Refill, UOM = CS, 2000 pairs per case, 500 pairs per Box, 4 Boxes per case	30	N/A	4 Boxes (2,000PR)
MXM-1-D	MAXIMUM Highest attenuating single-use earplug MAXIMUM Uncorded, Bulk Refill, UOM = CS, 2000 pairs per case, 500 pairs per Box, 4 Boxes per case	33 dB	A(L)	4 Boxes (2,000PR)
QD-1-DS	QUIET No-roll multiple-use earplug Uncorded, Bulk Refill, UOM = CS, 2000 pairs per case, 500 pairs per Box, 4 Boxes per case	26	N/A	4 Boxes (2,000PR)


PROPER FIT CRITICAL

Everyone's ear canals are unique, and that makes fitting an earplug a very personal experience. The only hearing protector that works is one that fits comfortably and gets worn.


Disposable




Roll-Down Foam MAXIMUM

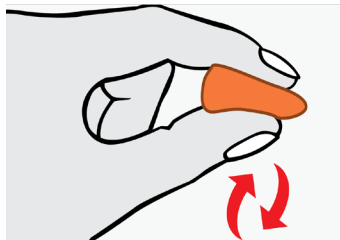

With clean hands, roll the entire earplug into narrowest possible crease-free cylinder.

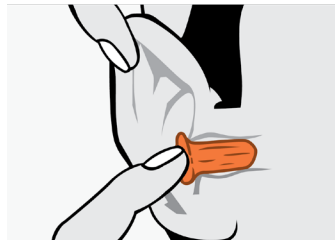

Reach over your head with a free hand, pull your ear up and back, and insert the earplug well inside your ear canal.

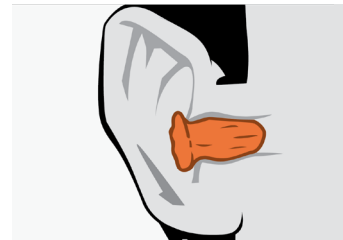


Hold for 30 – 40 seconds, until the earplug fully expands in your ear canal. If properly fitted, the end of the earplugs should not be visible to someone looking at you from the front.


Reusable




Push-In Foam Trust Fit™

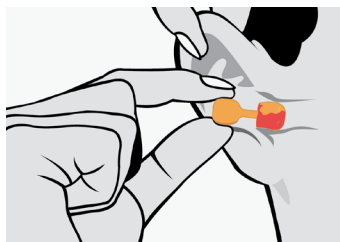

While holding the stem, reach a hand over your head and gently pull the top of your ear up and back.

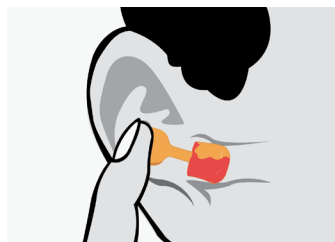

Insert earplug so foam tip is well inside the ear canal. Use a gentle rocking motion while pushing earplug into ear canal to ensure a deep fit.

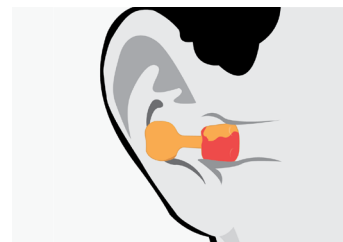


If properly fitted, the tip of the earplug stem may be visible to someone looking at you from the front.

Reusable



Pre-Molded Push-In Smart Fit®

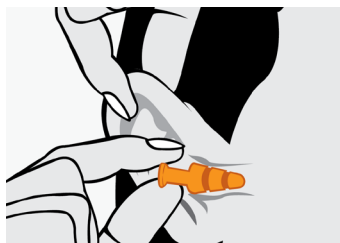

While holding the stem, reach a hand over your head and gently pull top of your ear up and back.



Insert the earplug so all flanges are well inside your ear canal.



If properly fitted, the tip of the earplug stem may be visible to someone looking at you from the front.

For more information on proper fit, contact your Honeywell seller to learn about VeriPRO Fit Testing.

For more information

sps.honeywell.com

Honeywell Safety Products USA, Inc.

855 S Mint St

Charlotte, NC 28202

1 (877) 841-2840

Email: informationssp@honeywell.com

www.honeywell.com

HPPE Hearing Earplug Dispensers Brochure | 6/23
© 2023 Honeywell International Inc.

Honeywell
HOWARD
LEIGHT