Kit #46-46128 Contains:

a.	Stand (PN 36-00454)	Qty. 1
b.	Screw, MS3 x 6 mm (PN 18-18670)	Qty. 2
C.	Washer, #5 x .5 OD (PN 18-18671)	Qty. 2
d.	Stand Anchor (PN 50-50449)	Qty. 1
e.	M3 x 20 mm Set Screw (PN 18-18672)	Qty. 1
f.	Apron (PN 50-50440)	Qty. 1

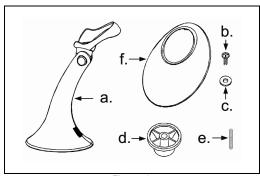


Figure 9.

Special Purchase Kit #46-46351 Contains:

- a. Wood Screw, #8 Round Head Qty. 4 (PN 18-18057)
- b. Base Qty. 1 (PN 36-36080)




Figure10.

A A A Template for use with Kit #46-46351 A = #39 Drill four (4) places A A A

MS9500

Voyager® Series

Stand Installation Guide

Honeywell Scanning & Mobility

9680 Old Bailes Road Fort Mill, SC 29707 www.honeywellaidc.com



00-02497 Rev B December 2009

Page 4 Page 5

FREE - STANDING INSTALLATION

For Kit #46-46128:

Step 1

Slide the apron (PN 50-50440) over the stand (PN 36-00454).

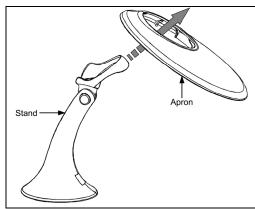


Figure 1.

Step 2

Position the stand so it sits under the tab on the apron. Then secure the apron to the stand using the M3 screws (PN 18-18670) and the #5 washers (PN 18-18671) provided.

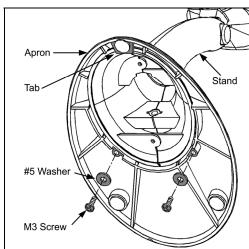


Figure 2.

HARD MOUNT INSTALLATION

Template Back

For Kit #46-46351:

Step 1

Use the template provided to drill four #39 pilot holes in the counter top.

Step 2

Secure the base (PN 36-36080) to the countertop with the four #8 wood screws (PN 18-18057).




Figure 3.

For Kit #46-46128, #46-46351, and MS951 Stand Replacements:

Step 3

Screw the stand anchor (PN 50-50449) onto the base assembly until it sits flush.





Figure 4.

HARD MOUNT INSTALLATION

Step 4

Remove the logo plate on the stand by gently using an exacto knife to release the plate hook.



Step 5

Position the stand over the anchor/base assembly.

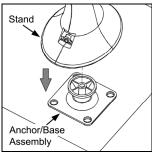


Figure 6.

Step 6

Secure the stand to the base assembly by installing and tightening the M3 hex head screw (PN 18-18672) under the logo plate as shown.




Figure 7.

Step 7

Snap the logo plate back into place.




Figure 8.