


3. Physical Connections

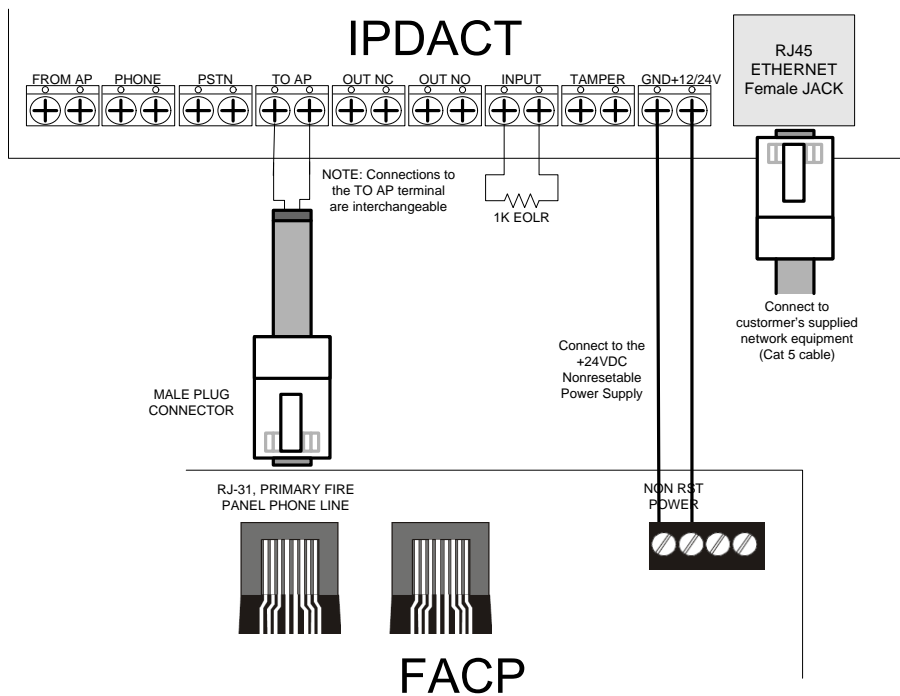

IPDACT	Connects to...
TO AP	To the PRIMARY FIRE PANEL PHONE LINE. The connections to the TO AP terminal are interchangeable.
INPUT	Connect the supplied 1K resistor
GND / +24V	To the 24 VDC power supply from the Fire Alarm Panel (or other electric supply) This should be 24 VDC from Fire Alarm Panel
Ethernet Network (RJ45)	To a broadband modem/router or a network switch/hub for internet access.

4. IPDACT Default Configuration

Through a short circuit in the IPDACT P2 jumper during the start up process, you can configure the IPDACT with the default factory settings. The process for this is as follows:

- 1) switch off the IPDACT
- 2) short circuit the jumper with the supplied berg header,
- 3) switch on the device,
- 4) maintain the jumper short circuited during the first A-D LEDs burst (the LEDs turn on and off) and undo the short circuit during the second burst.

If the process has executed successfully, the IPDACT will display a third burst indicating the default configuration has been activated.

5. Serial Port Programming

In order to use the serial port, you need to connect the cable designed to this end which must be obtained either from Firelite or from an authorized distributor. The following figures show the cable and the connection mode to the IPDACT.



RJ45
CONNECTOR

Connect the serial cable to the IPDACT as shown above, the other end to a PC serial port and use a terminal emulation program (Windows HyperTerminal for example) configuring the serial port to 9600 bps, 8 data bits, 1 stop bit, without parity and no flow control. When you connect the terminal emulation program, you will be asked for a password. The factory default value is **24680**. Enter this and the following menu will appear.

```
Password Accepted
- Main Menu -

Configuration
a) Generic MIP config
b) Transmission Parameters
c) Quick Install

Monitoring
d) General Info
e) Remote Monitor
f) Events
g) IP Connectivity

z) Exit

option: c

OK

-- Quick Install --
a) DHCP client: ON
b) IP addr: 192.168.0.100 mask: 255.255.255.0
c) Gateway IP: 192.168.0.200
d) Account Number: 0
e) Supervisory Main:
f) Supervisory Backup:
g) Maintenance:
h) Port: 80
i) Register MIP
j) Reset
k) AutoRegister MIP

z) Exit
```

This deals with an options menu where each option is represented by a letter preceding the title. Each option accesses a submenu or contains a parameter value. To select an option, enter the letter representing this and press **ENTER**.

For device installation, access the **Quick Install** menu by pressing **c** and then **ENTER**. The menu displayed in the second figure will be presented. All the parameters to install the device are found in this menu. The steps to complete the installation are as follows:

1. If in the LAN network where the IPDACT is installed, you have address assignment through DHCP, go to step 3. If this is not the case, carry out the following steps:
 - I. Press the "b" key followed by **ENTER**. You will be asked for the IP address. Enter the IP address you have been given and press **ENTER**.
 - II. You are now asked for the mask. Enter the IP mask you have been given and press **ENTER**.
 - III. **OK** should now appear on the PC display which will then show the list of parameters that appear in option **b**) the parameters that have just been entered.

2. Press the "c" key followed by the ENTER. You will be asked for the gateway IP address. Insert the value indicated for the parameter and then press ENTER. **OK** should now appear on the PC display which will then show the list of parameters that appear in option c) the value that has just been entered.
3. Press **d** followed by the **ENTER** key. You will be asked for the client subscriber number. Enter the value indicated for the parameter and then press **ENTER**. **OK** should now appear on the PC display which will then show the list of parameters that appear in option **d**) the value that has just been entered.
4. Press **e** followed by the **ENTER** key. You will be asked for the VisorALARM receiver IP address. Enter the value indicated for the parameter and then press **ENTER**. **OK** should now appear on the PC display which will then show the list of parameters that appear in option **e**) the value that has just been entered.
5. Press **h** followed by the **ENTER** key. You will be asked for the VisorALARM receiver UDP port. Enter the value indicated for the parameter and then press **ENTER**. **OK** should now appear on the PC display which will then show the list of parameters that appear in option **h**) the value that has just been entered.
6. Press **j** followed by the **ENTER** key to reboot the device so these changes activate. You will be asked for a password. Enter **24680**, which is the default factory password value. After a few second, the IPDACT will reboot.
7. After rebooting, you will be asked for a password. Enter **24680** again and the initial menu will appear in the PC display.
8. Type **c** and **ENTER** to access the **Quick Install** menu once more.
9. Type **i** and **ENTER** so the IPDACT register procedure in the VisorALARM receiver is carried out. You will be asked for a password. Enter the installer password you have been given and press **ENTER**. The **OK** message should appear after a maximum of a few seconds and the IPDACT must then switch the relays and light up the LED located next to these. This indicates that the IPDACT is active and has correct connectivity with the VisorALARM receiver.
10. Should any problem occur, an **ERROR** message will appear instead of the OK. This will be followed by a number which indicates the following:
 - a. **Error on answer**: Received data incorrect. Try again. If the error persists contact the technical service.
 - b. **VA unreachable**: There is a problem in the local network. The network cable may be disconnected or the IP address for the IPDACT or gateway is incorrectly configured.
 - c. **No answer**: There is a problem in the connection with the VisorALARM. This possibly is a problem in the client's connection to Internet, Internet or the network on the central side.