

Installation Instructions for the Model 434, 435, and 437 Wing Union/Hammer Union Pressure Sensors

Honeywell

Rev. C

008-0691-00



⚠ WARNING **PERSONAL INJURY**

DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

⚠ WARNING

The operator of this instrument is advised that if the equipment is used in a manner not specified in this manual, the protection provided by the equipment may be impaired.

Failure to comply with these instructions could result in death or serious injury.

CAUTION

Only qualified, service-trained personnel who are aware of the hazards involved should connect external wiring to these products.

CAUTION

Use supply wires suitable for 5 °C above surrounding ambient.

⚠ WARNING

Explosion Hazard - Do not disconnect equipment unless power has been switched off or the area is known as non-hazardous.

⚠ WARNING

Explosion Hazard - Substitution of components may impair suitability for Class I, Division 1.

⚠ AVERTISSEMENT RELATIF AUX RISQUES DE BLESSURE CORPORELLE

NE PAS UTILISER ces produits comme des dispositifs de sécurité ou d'arrêt d'urgence, ni dans toute autre circonstance où une défaillance du produit pourrait provoquer des blessures corporelles.

Le non-respect de ces instructions pourrait entraîner la mort ou des blessures graves.

⚠ AVERTISSEMENT

Les opérateurs en charge de cet instrument sont informés que la protection fournie par l'équipement peut devenir inopérante si ce dernier est utilisé d'une manière différente de celle décrite dans la notice d'utilisation.

Le non-respect de ces instructions pourrait entraîner la mort ou des blessures graves.

ATTENTION

Le raccordement de câbles externes à ces produits doit être effectué par du personnel qualifié, expérimenté et conscient des risques que cela comporte.

ATTENTION

Utilisez des câbles d'alimentation adaptés à une température supérieure de 5 °C à la température ambiante.

⚠ AVERTISSEMENT

Risque d'explosion : Ne pas débrancher l'équipement, à moins que l'alimentation n'ait été coupée au préalable ou que la zone soit reconnue comme non dangereuse.

⚠ AVERTISSEMENT

Risque d'explosion : Le remplacement de composants pourrait invalider la classification de l'équipement dans la Classe I, Division 1.

Models 434, 435, and 437 Wing Union/Hammer Union Pressure Sensors

Rev. C 008-0691-00

DESCRIPTION

Honeywell's Model 434, 435 and 437 Wing Union/Hammer Union Pressure Sensors are rugged devices designed for use with Weco® 1502 (Model 435 and 437) and Weco® 2002/2202 (Model 434) fittings for potential use in both offshore and land-based oil and gas applications.

GENERAL REQUIREMENTS & CAUTIONS

1. All electrical and pressure connections should be compatible with the model specifications.
2. Installation should occur only when input electrical power is off and line pressure is at zero.
3. A grounding pin is provided on the external connector. This connector ground is connected to the inside of the sensor housing. Transmitter case must be connected to supply source ground with either of the following methods:
 - A separate conductor connecting the transmitter connector shell to supply source ground.
 - Pressure transmitter mounted directly on a conductive structure which is connected to supply source ground.
4. All products should be protected from direct or continued exposure to fluids at the electrical connection in order to eliminate possible deterioration of the product's electrical connection and corrosion that will impede product performance.
5. At no time should an object be inserted into the pressure port or pressed against the sensing area to deflect the sensor (to test or simulate pressure), as this may result in permanent damage to the sensing diaphragm.
6. Do not remove the transmitter when it is under pressure, if it is hot, or if it exposes harmful gases.

NORMAL USE

Although there are variations within the series of sensors, the nominal weight of the assembly is about with 4.85 lb [2.2 kg]. This is of significant size, and a handle is available to facilitate handling. High surface temperatures can remain in place and the unit should be checked before removing the unit from service if it was operated at high temperatures. Suitable gloves are recommended for handling the unit under those conditions. There are no sharp edges associated with the instrument.

INSTALLATION REQUIREMENTS AND CAUTIONS

1. It is recommended that the connector cover be placed on the product's connector after each use. Simple cleaning and removal of foreign material in the connector will increase the life and operation of the product.
2. The carrying handle and connector cover should be used when the product is being handled or transported between locations.
3. Installation of the unit is accomplished by placing the pressure transmitter into the Hammer Union pressure fitting and securing the unit by tightening the Hammer Union Nut over both the unit and pressure fitting. Once installed, check for leaks and adjust as necessary.
4. When installing the unit to the pressure connection, care should be taken to avoid direct hits to the unit. A direct hit from a sledgehammer to the product itself could cause latent failure to the product. Direct hits can result in the failure of the electrical connector. This would be determined as a non-warranty related product failure and repair.
5. This product includes transient protection components which get activated at >60 V. Therefore, this product will not pass the 500 VRMS dielectric strength test and this must be taken into account during installation.
6. No connections shall be made to the communications "COM" port in explosive atmospheres.


INTRINSICALLY SAFE INSTALLATION

These products have been certified "Intrinsically Safe". This insures that a circuit operated under normal and specified fault conditions is not capable of causing ignition of the prescribed explosive atmosphere. The certification is valid when the sensor has been installed according to the installation drawings referenced in this section.

Models 434, 435, and 437 Wing Union/Hammer Union Pressure Sensors

Rev. C 008-0691-00


Figure 1. Wiring: Two-Wire Amp, One-Wire Shunt Cal, Intrinsically Safe

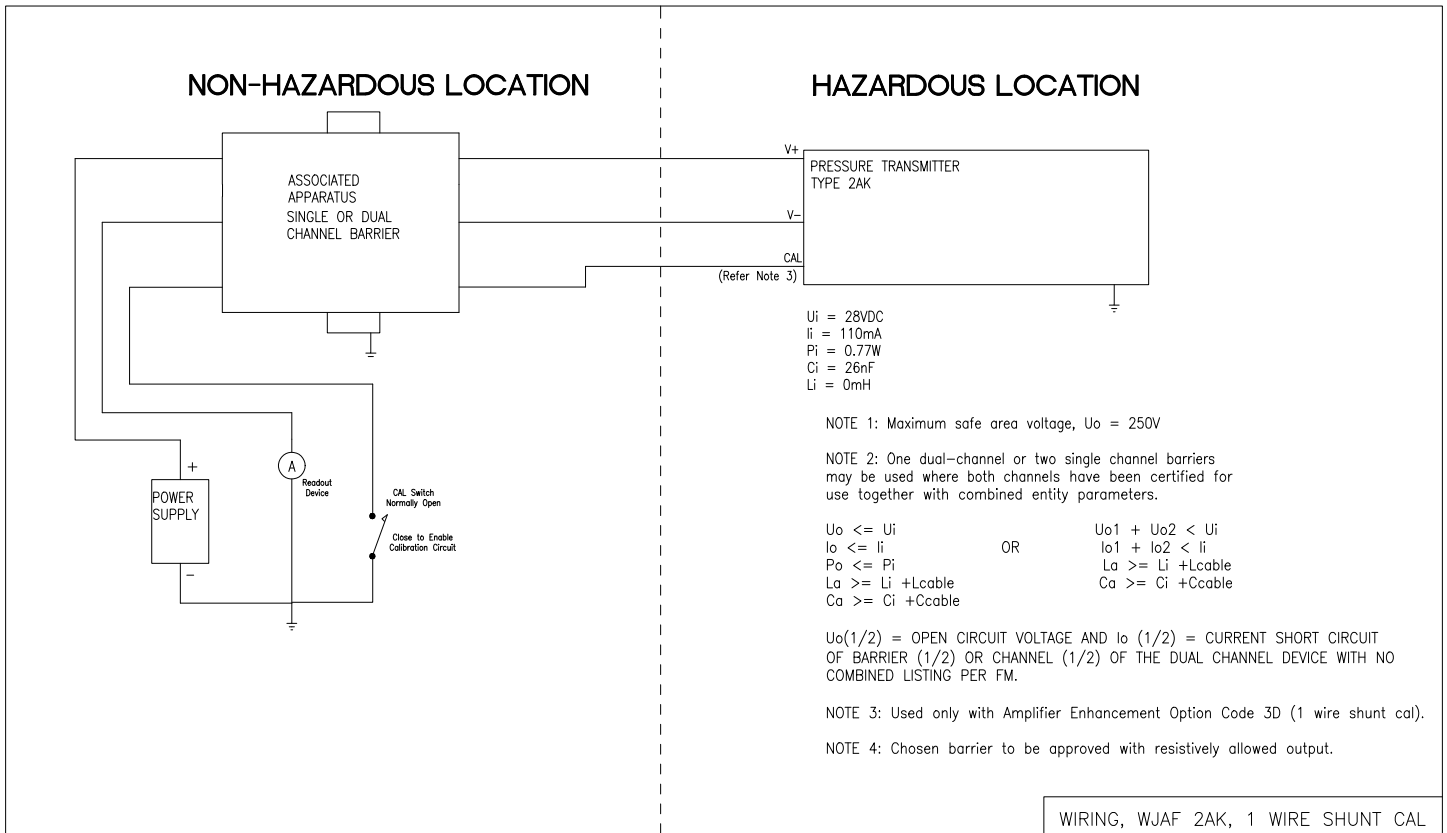

Models 434, 435, and 437 Wing Union/Hammer Union Pressure Sensors

Rev. C 008-0691-00


Figure 2. Wiring: Two-Wire Amp, Two-Wire Shunt Cal, Intrinsically Safe

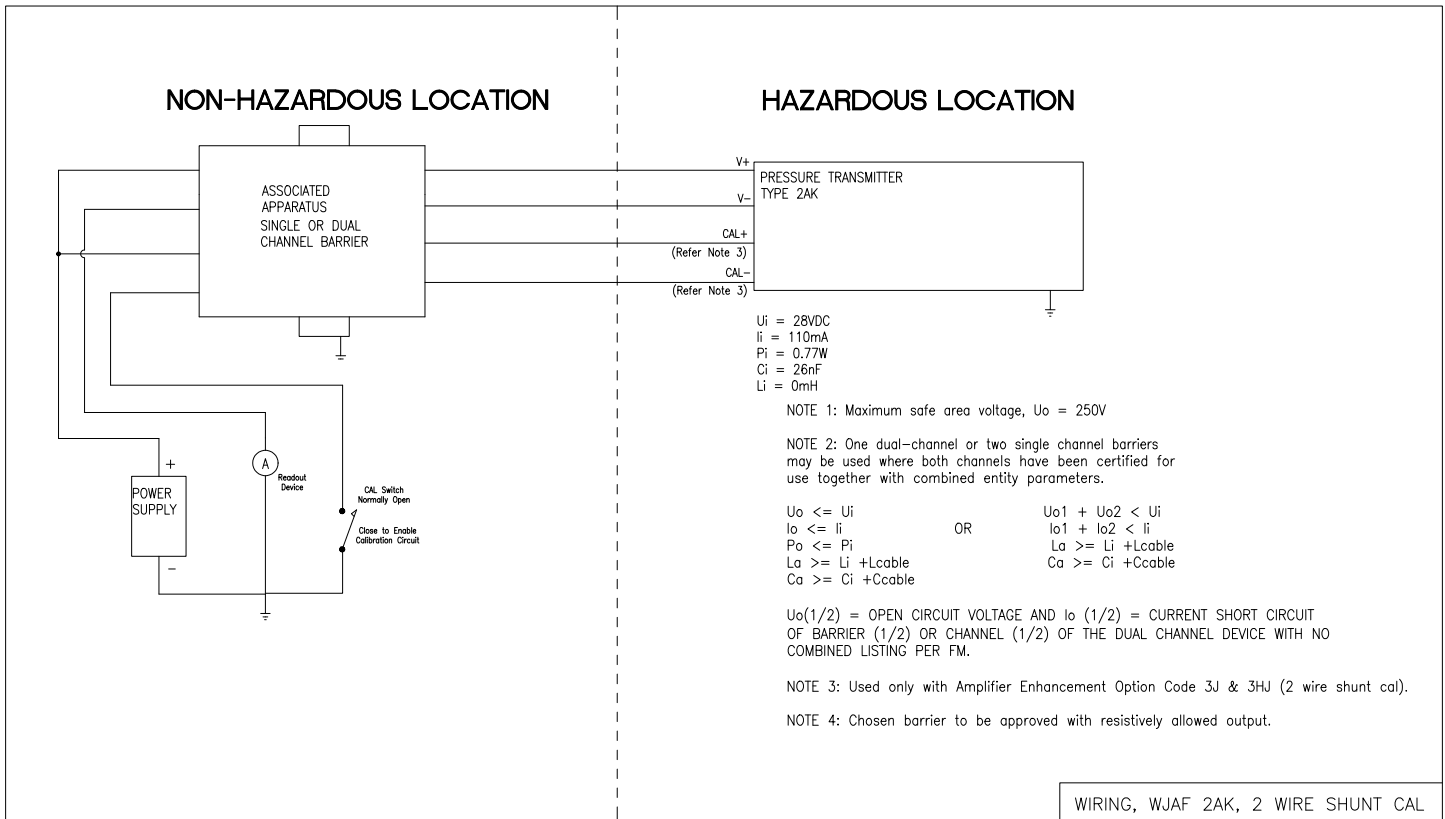

Models 434, 435, and 437 Wing Union/Hammer Union Pressure Sensors

Rev. C 008-0691-00


Figure 3. Wiring: Two-Wire Amp, No Shunt Cal, Intrinsically Safe

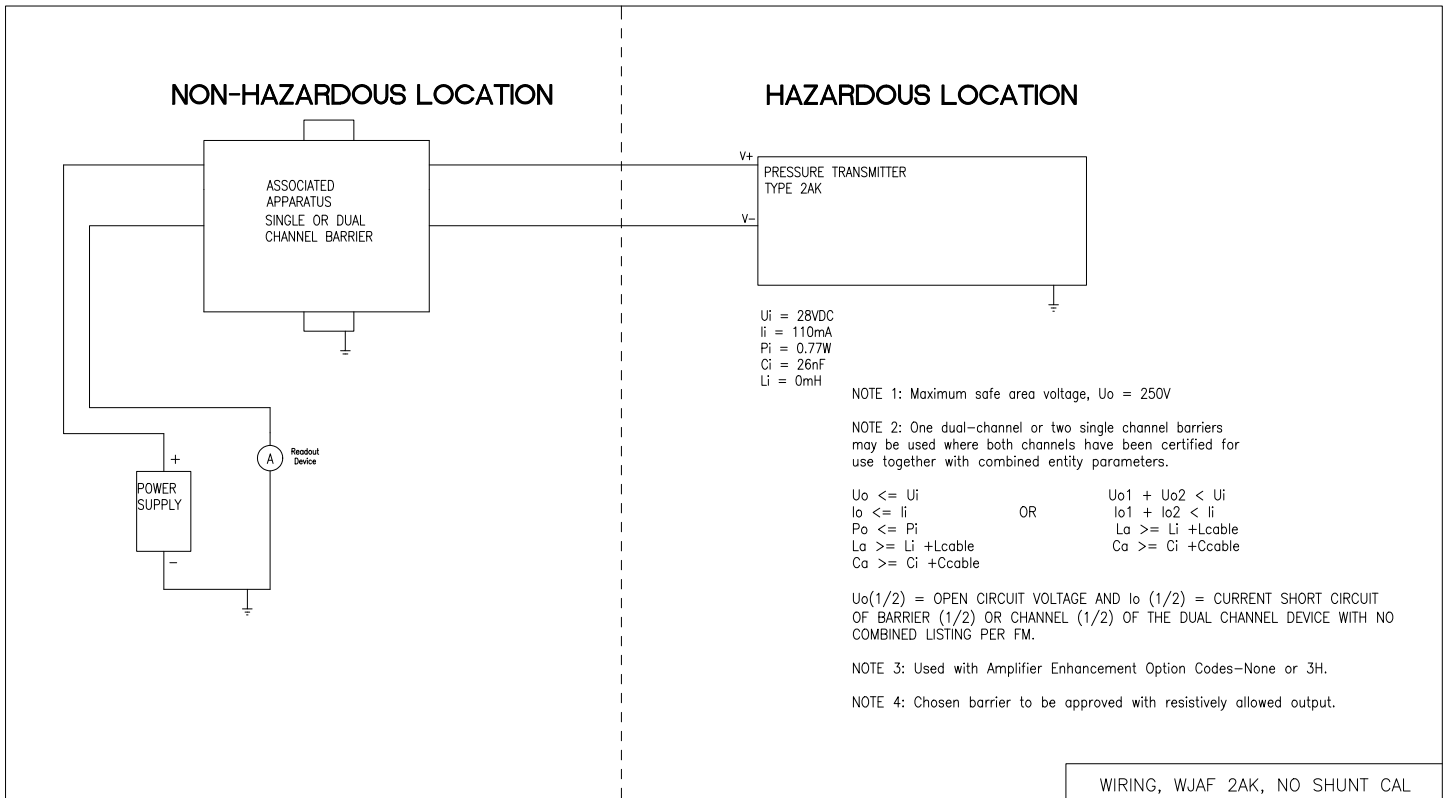

Models 434, 435, and 437 Wing Union/Hammer Union Pressure Sensors

Rev. C 008-0691-00

Figure 4. Wiring: WJAF Digital Offset/Span Trim

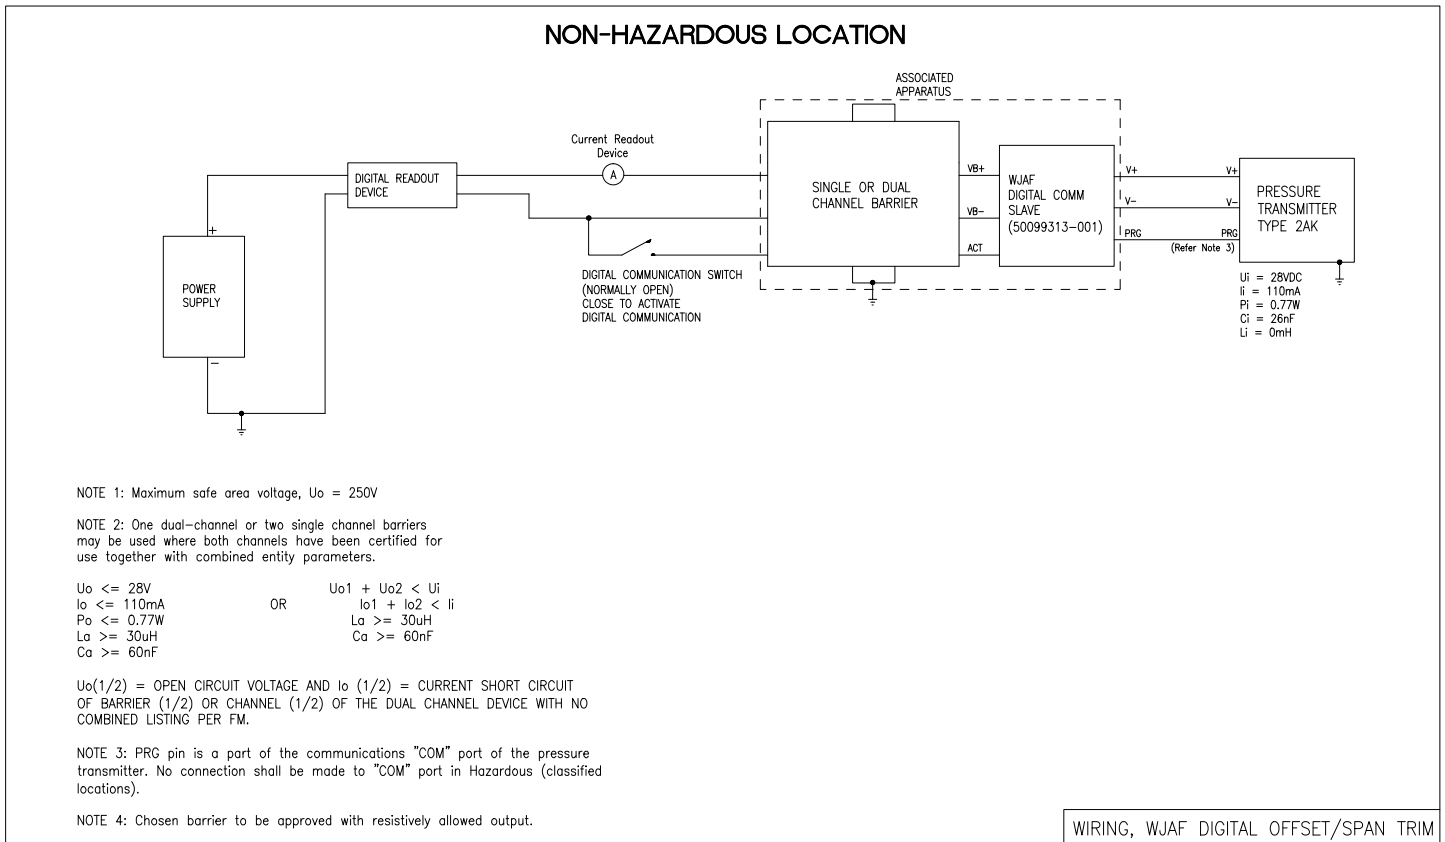

Models 434, 435, and 437 Wing Union/Hammer Union Pressure Sensors

Rev. C **008-0691-00**

LABEL MARKING

The standard product label includes the following, along with wiring details:

Honeywell

www.measurementsensors.honeywell.com
2080 ARLINGATE LANE
COLUMBUS, OH 43228

MODEL: 4XX
P/N: 060-XXXX-XX
S/N: XXXXXX

O/C CODE: BP4XXXX
RANGE: XXXXX
PROOF PRES: XXXXX
EXC/SUPPLY: 9-28 VDC
OUTPUT: 4-20 mA
MFGD: XX-XXXX
ASSEMBLED IN USA

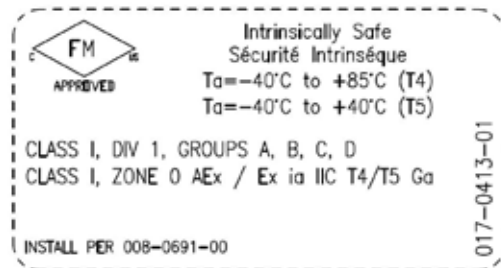


Table 1. Model Specifications

Characteristic	Parameter
Input	9 Vdc to 28 Vdc
Output	4 mA to 20 mA
Calibration Input	9 Vdc to 28 Vdc
Electrical Connector	This product is available in multiple electrical connector configurations. Refer to the product datasheet for information regarding the options available
Pressure Connection	Model 434: Weco® 2002 or Weco® 2202 wing union Models 435 and 437: Weco® 1502 wing union, 51 mm [2 in] pipe, male sub end
Pressure Ranges	5000 psi to 20000 psi; 350 bar to 1350 bar Note for Models 435 and 437: Approval limited working pressure ranges for Models 435 and 437: 5,000 psi to 15,000 psi; 350 bar to 1,000 bar. Option codes EL and NU will allow overpressure readings to 20,000 psi or 1350 bar
Maximum Surface Temperature	The product can reach maximum surface temperature of 135 °C [275 °F] under fault conditions at ambient temperature of 85 °C [185 °F]

Models 434, 435, and 437 Wing Union/Hammer Union Pressure Sensors

Rev. C **008-0691-00**

FIELD CALIBRATION

The Model 434, 435, and 437 Wing Union/Hammer Union Pressure Sensors are provided with optional one-wire or two-wire field calibration feature. Powering the calibration terminals produces a signal output equivalent to a known fraction of full scale pressure (usually 100%). The factory set calibration signal is located on the calibration certificate that is shipped with each unit. This can be used to adjust the gain on the user's meter or data acquisition equipment. The calibration signal is also an indication that the unit is working properly.

INTENDED USE AND MISUSE

Only fluids compatible with Inconel® X-750 or 718 are recommended for use with this sensor. Exposure to other corrosive fluids may result in premature failure of the diaphragm.

MAINTENANCE AND REPAIR

These sensors do not need any special scheduled maintenance. It is recommended that pressure port and electrical connector be cleaned from time to time to provide long life. Protecting the product from continued exposure to moisture or fluids at the electrical connection will eliminate premature internal failure of the product. The connector and pressure port should be cleaned and the pressure cavity flushed with an Inconel® X-750- or 718-compatible cleaner to prevent media buildup. During the cleaning process, only a soft, lint-free cloth is recommended. Never use a coarse or stiff bristle brush to clean media from the diaphragm surface.

APPLICABLE NATIONAL AND INTERNATIONAL STANDARDS

Electromagnetic Compatibility

- EMC Directive 2004/108/EC
- EN 61326-1:2013
- EN 61326-2-3: 2012
- EN 55011:2009+A1:2010
- EN 61000-4-2:2009
- EN 61000-4-3:2006+A2:2010
- EN 61000-4-4:2004+A1:2010
- EN 61000-4-5:2006
- EN 61000-4-6:2009

Hazardous Locations

Standards used for US Approval

- FM Class 3600:2011; FM Class 3610:2010; FM Class 3810:2005
- ANSI/NEMA 250:2003; ANSI/IEC 60529:2004; ANSI/ISA 60079-0:2009; ANSI/ISA 60079-11:2009

Standards used for Canada Approval

- C22.2 No.157-92:1992; C22.2 No.94-M91:1991 C22.2 60529:2005 (Reaffirmed 2010); C22.2 No. 1010.1:2004
- CAN/CSA-E60079-0:2011; CAN/CSA-E60079-11:2011

Standards used for ATEX Certification

- EN 60079-0:2012; EN 60079-11:2012 EN60079-26:2007: EN 60529:1991/Amd#1.2000

Standards used for IEC-Ex Certification

- IEC 60079-0:2011; IEC 60079-11:2012 IEC60079-26:2006: IEC60529:2001

Models 434, 435, and 437 Wing Union/Hammer Union Pressure Sensors

Rev. B **008-0691-00**

WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. **The foregoing is buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.**

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact your local sales office or:

E-mail: info.tm@honeywell.com

Internet: measurementsensors.honeywell.com

Phone and Fax:

USA/Canada +1-800-537-6945

International +1-815-235-6847; +1-815-235-6545 Fax

Sensing and Productivity Solutions

Honeywell

1985 Douglas Drive North

Golden Valley, MN 55422

honeywell.com

The Honeywell logo is displayed in a bold, red, sans-serif font.

008-0691-00, Rev. C IL50 GLO Printed in USA.

July 2015

© 2015 Honeywell International Inc. All rights reserved.

® Inconel is a registered trademark of Inco Alloys International, Inc.

® Weco is registered trademark of Fmc Corporation; ® Glenair is a registered trademark of Glenair, Inc.